

150x Barcode Scanner


Quick Start Guide

Download the user manual and CD contents using GoBetween, available at <http://ccs.cipherlab.com>.

Overview


- Open Your Box:
- ✓ 150x Barcode Scanner
 - ✓ Optional Cables (vary according to your order):
 - Dual Keyboard Wedge (10P/RJ to DIN5 & Mini-DIN6)
 - PS/2 Keyboard Wedge (10P/RJ to Female Mini-DIN6 & Male Mini-DIN6)
 - RS-232 (Female DB-9)
 - USB HID (307)
 - USB VCOM (308)
 - USB
 - ✓ Quick Start Guide

Note: Only 1500P/1504A support Cable Detection.
1504B/1504P must use the cable of certain interface depending on your order and doesn't allow users to configure the output interface.

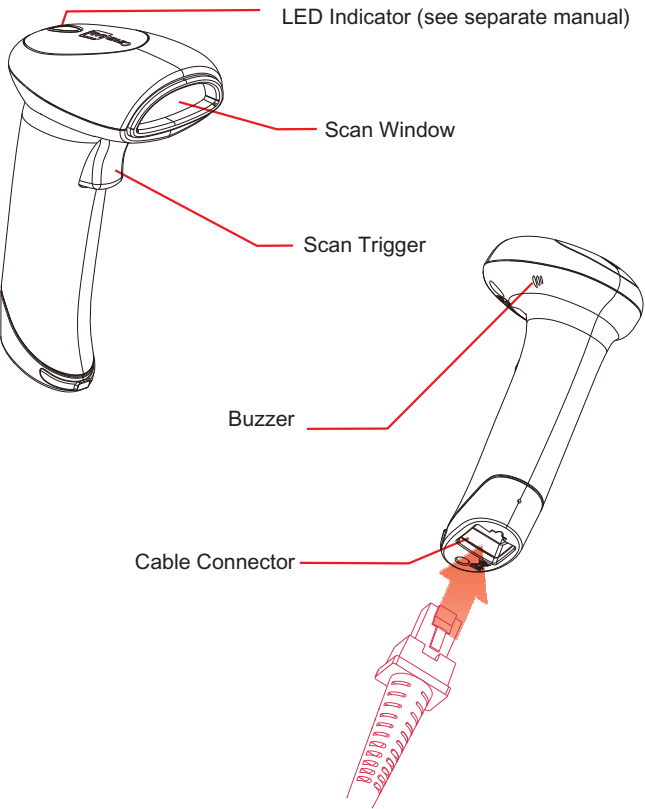


Cable Removal

STEP 1 Insert a thin piece of metal, like a clip, into the pinhole.

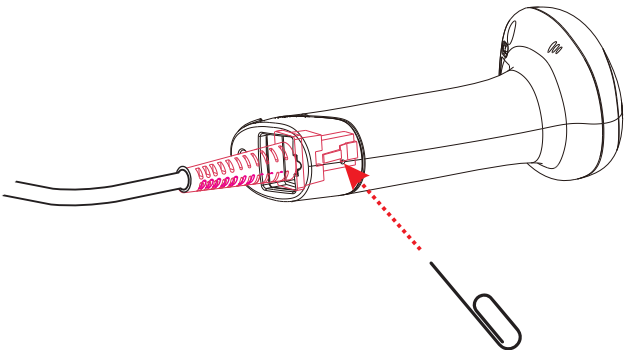


STEP 2 Press the pin tip against the connector latch to release the cable.

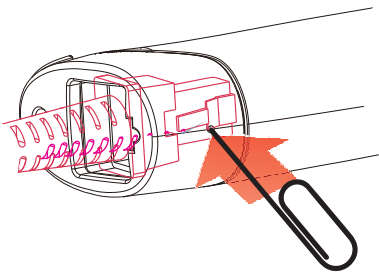


Cable Replacement

STEP 3 Remove the interface cable.

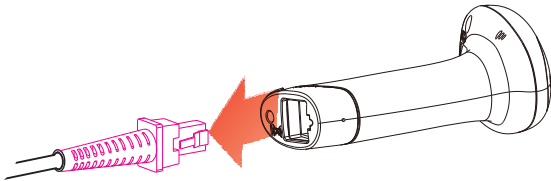

STEP 4 Insert another interface cable.

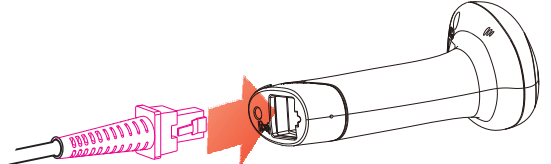

Connect with a Host Computer

STEP 5 Connect to PC for data communications.



概觀

- 檢視包裝內容物

✓ 150x 條碼掃描器

✓ 選配傳輸線：

- Dual Keyboard Wedge (10P/RJ to DIN5 & Mini-DIN6)

- PS/2 Keyboard Wedge (10P/RJ to Female Mini-DIN6 & Male Mini-DIN6)

- RS-232 (Female DB-9)

- USB HID (307)

- USB VCOM (308)

- USB

✓ 快速開始指南
- 检视包装内容物

✓ 1500x 条形码扫描仪

✓ 传输线 (选配)：

- Dual Keyboard Wedge (10P/RJ to DIN5 & Mini-DIN6)

- PS/2 Keyboard Wedge (10P/RJ to Female Mini-DIN6 & Male Mini-DIN6)

- RS-232 (Female DB-9)

- USB HID (307)


- USB VCOM (308)

- USB

✓ 快速开始指南
- 注意：僅1500P/1504A支援Cable Detection (傳輸介面偵測)。

1504B/1504P不支援使用者自行設定輸出介面，因此所使用的連接線必須與出廠時所訂購的傳輸介面相同。
- 注意：仅1500P/1504A支持Cable Detection (传输接口侦测)。

1504B/1504P不支持用户自行设定输出界面，因此所使用的连接线必须与出厂时所订购的传输接口相同。

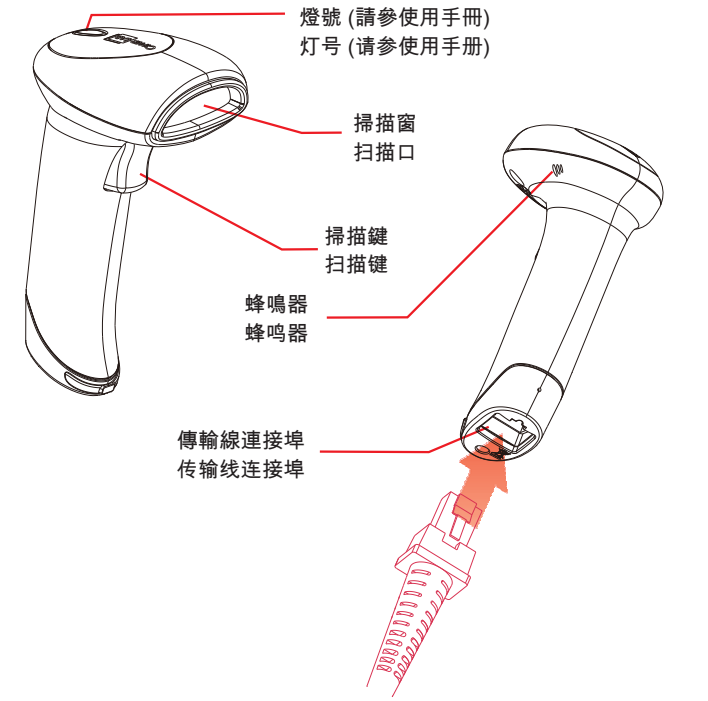

移除傳輸線

- STEP 1

插入細長尖銳的工具，例如迴紋針
插入细长尖锐的工具，例如回形针
-
- STEP 2

以工具的一端輕壓傳輸線的接頭卡榫，將傳輸線鬆開
以工具的一端轻压传输线的接头卡榫，将传输线松开
-

傳輸線替換

- STEP 3

移除傳輸線
移除传输线
-
- STEP 4

接上新的傳輸線
接上新的传输线
-

與主機連線

- STEP 5

連線到主機進行資料傳輸
连线到主机进行资料传输
-