

250x Barcode Scanner

Quick Start Guide

>


>>

Download the user manual and CD contents using GoBetween, available at <http://ccs.cipherlab.com>.

Overview

Open Your Box:


- ✓ 250x Barcode Scanner
- ✓ Optional Cables (vary according to your order):
 - PS/2 Keyboard Wedge (Female Mini-DIN6 & Male Mini-DIN6 to 10P/RJ)
 - RS-232 (Female DB-9 to 10P/RJ)
 - USB (USB to 10P/RJ)
- ✓ Quick Start Guide
- ✓ CN RoHS Declaration (region-dependent)
- ✓ ANZ Warranty Card (region-dependent)

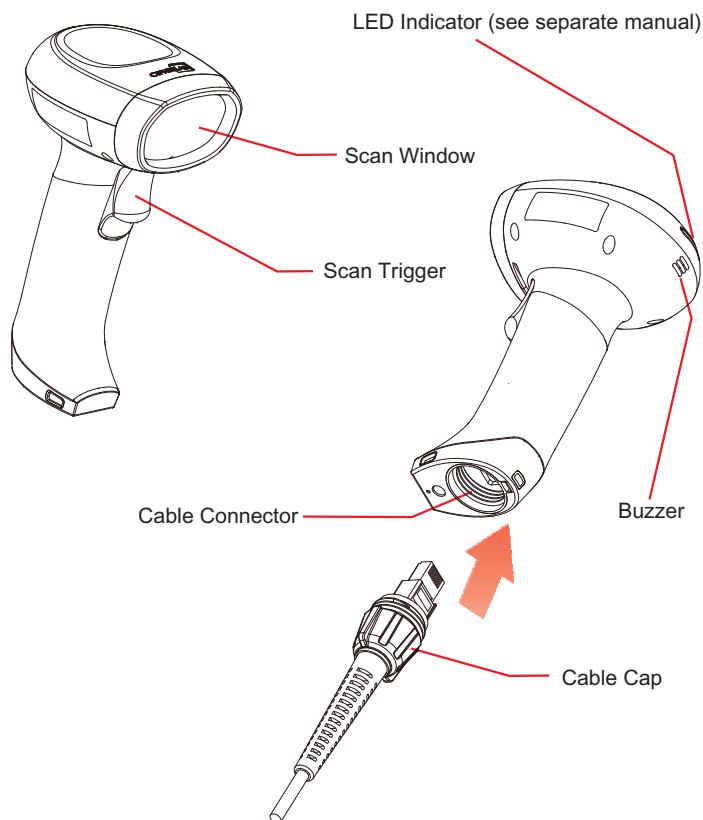


Cable Attachment

STEP 1

Insert the included interface cable into the cable connector.

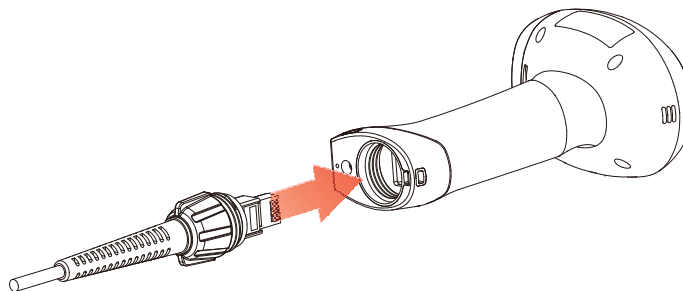**STEP 2**


After the cable is fully inserted, rotate the cable cap clockwise to secure the cable to the scanner.

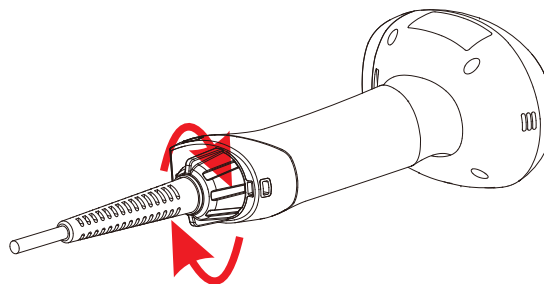


Cable Removal

STEP 3

Rotate the cable cap anticlockwise to remove the interface cable.

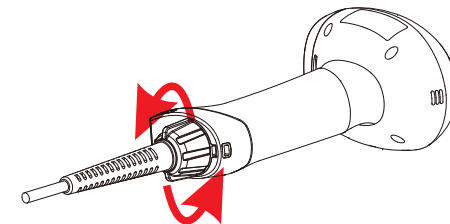**STEP 4**

Pull the interface cable off the scanner.

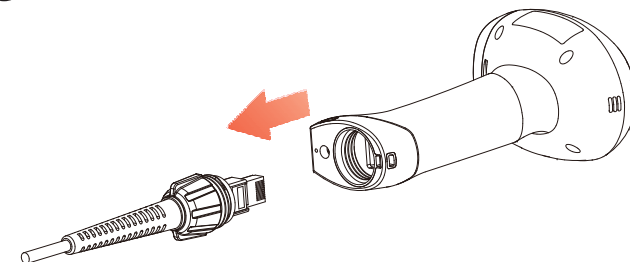

Connect with a Host Computer

STEP 5

Connect to PC for data communications.



250x條碼掃描器

快速開始指南

請透過GoBetween取得手冊與光碟資訊：<http://ccs.cipherlab.com>
请透过GoBetween取得手册与光盘信息：<http://ccs.cipherlab.com>


繁中 簡中

概觀

- 檢視包裝內容物


 - ✓ 250x 條碼掃描器
 - ✓ 選配傳輸線：
 - PS/2 Keyboard Wedge (Female Mini-DIN6 & Male Mini-DIN6 to 10P/RJ)
 - RS-232 (Female DB-9 to 10P/RJ)
 - USB (USB to 10P/RJ)
 - ✓ 快速開始指南
 - ✓ CN RoHS Declaration(視地區隨附)
 - ✓ ANZ Warranty Card(視地區隨附)
- 檢視包裝內容物

 - ✓ 250x 条形码扫描仪
 - ✓ 选配传输线：
 - PS/2 Keyboard Wedge (Female Mini-DIN6 & Male Mini-DIN6 to 10P/RJ)
 - RS-232 (Female DB-9 to 10P/RJ)
 - USB (USB to 10P/RJ)
 - ✓ 快速开始指南
 - ✓ CN RoHS Declaration(视地区随附)
 - ✓ ANZ Warranty Card(视地区随附)

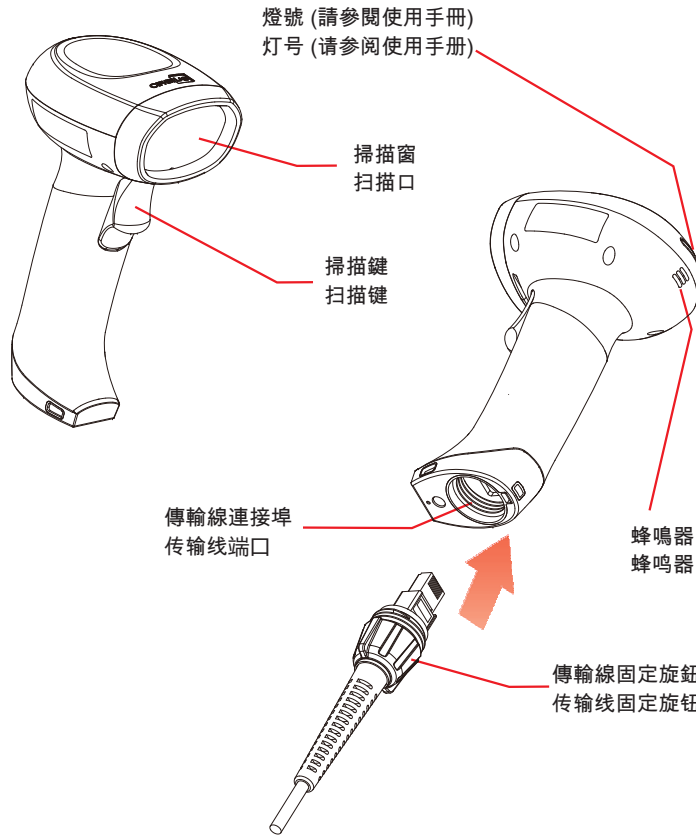


連接傳輸線

STEP 1 將傳輸線插入連接埠
将传输线插入端口

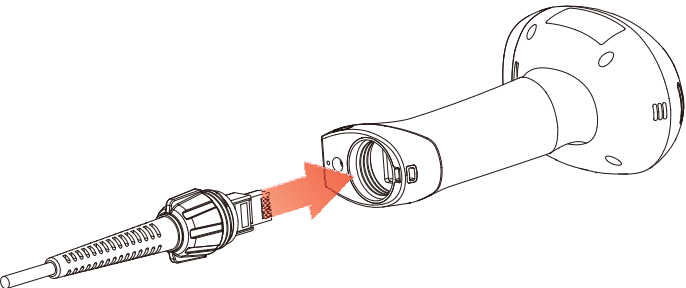


STEP 2 接受後，將傳輸線固定旋鈕順時鐘方向旋轉以固定接頭
接受后，将传输线固定旋钮顺时针方向旋转以固定接头

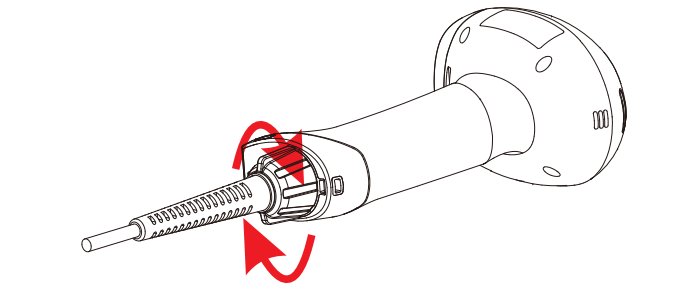


移除傳輸線

STEP 3 逆時鐘方向旋轉固定旋鈕
逆时钟方向旋转固定旋钮

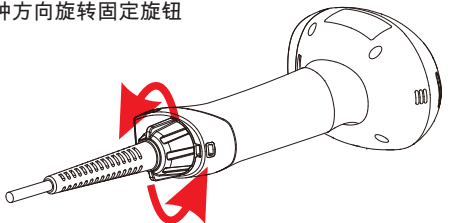

STEP 4 將傳輸線從掃描器卸下
将传输线从扫描仪卸下

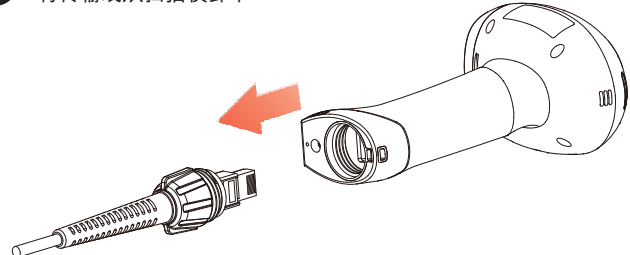

與主機連線

STEP 5 連線到主機進行資料傳輸
连线到主机进行资料传输

