



Overview

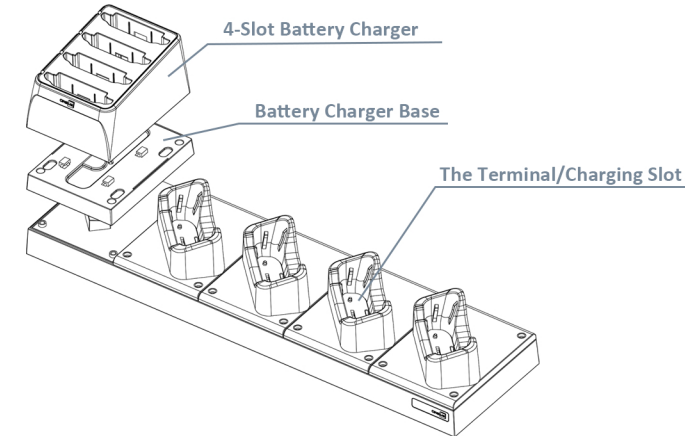



The RS50/RS51 4-Slot Battery Charger can be installed to the RS50/RS51 5-Slot Terminal/Charging Cradle by dismounting the terminal/charging slot which is right above the power jack on cradle and mounting the 4-Slot Battery Charger onto it.

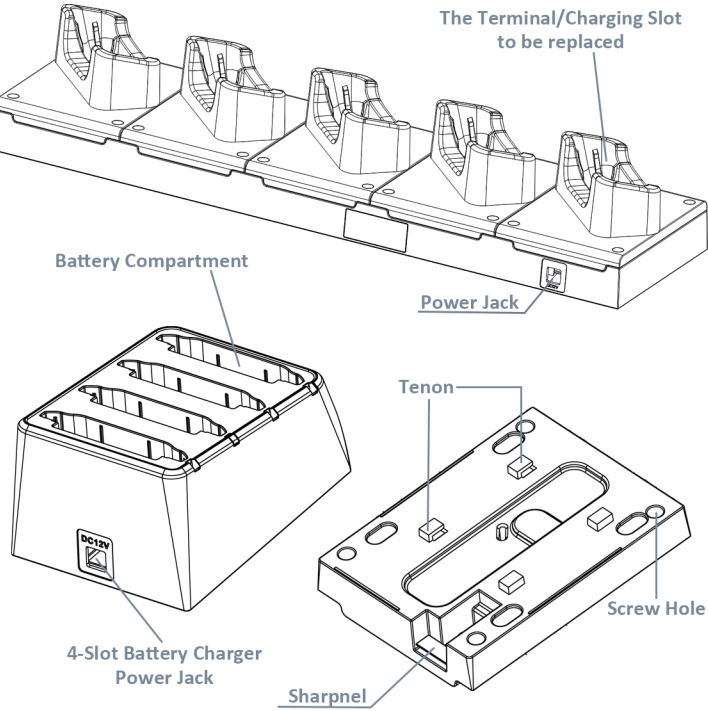


Installation

Step 1:
Remove the screw cover mylar on the 4 corners of the terminal/charging slot to be removed to reveal the screw holes.

Step 2:
Remove the 4 screws which fixed the terminal/charging slot on the cradle, and take off the terminal/charging slot.

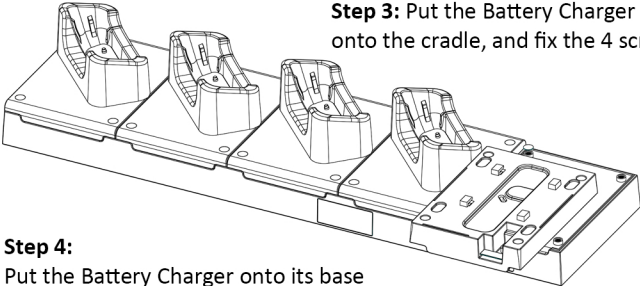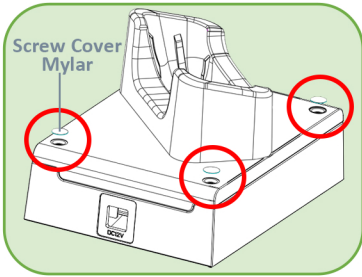


Step 3:
Put the Battery Charger onto its base with the mortises (on the bottom side of the charger) joined with the tenons (on the charger base). Please note that the 4-Slot Battery Charger power jack should be on the same side with the cradle power jack.

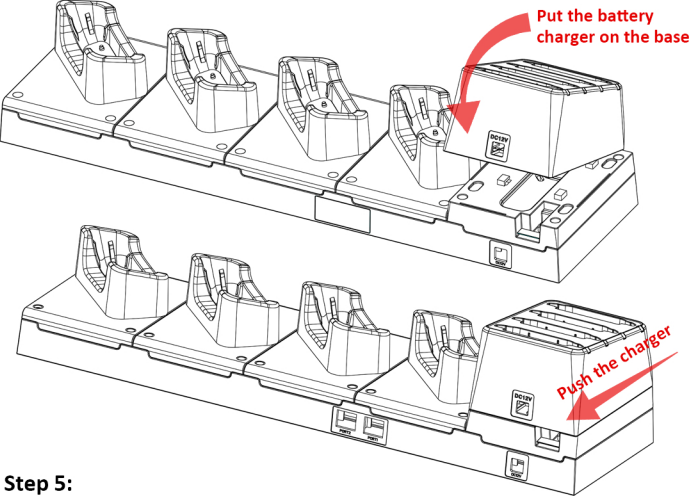


Step 4:
To fix the charger in place, push the charger toward the back side (the side where power jack is located) to make the the mortises and the tenons firmly jointed.

Remove

Step 1: Press the shrapnel and then push the charger toward the front side (the opposite direction from the power jack) to loosen the mortise and tenon joints.

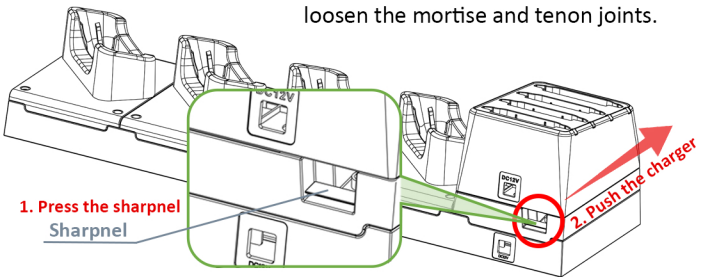


Step 2:
Remove the 4-Slot Battery Charger from the Charger Base.

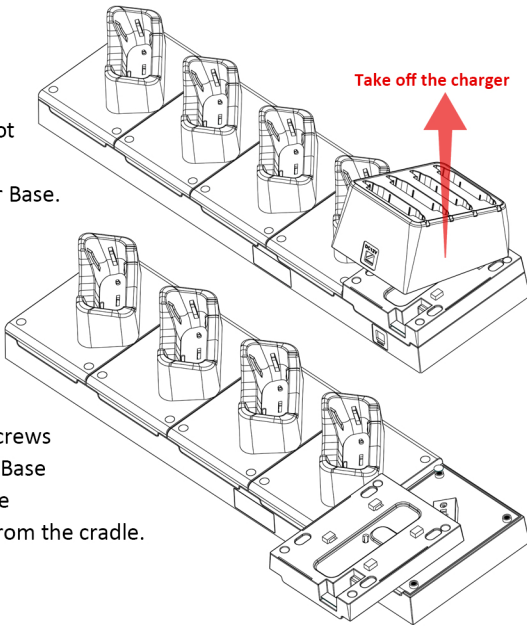

Step 3:
Loosen the 4 screws of the Charger Base and remove the Charger Base from the cradle.


Step 4:
Mount the terminal/charging slot onto the cradle, fix the 4 screws, and stick the screw cover mylar on the screw holes.

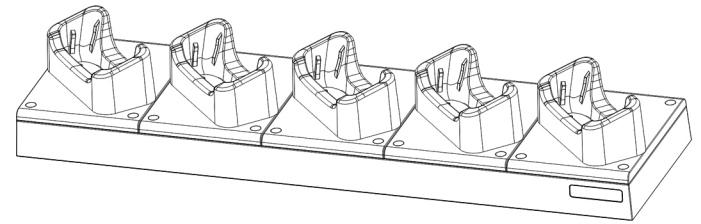

RS50/RS51 四槽電池充電座(兼容五槽傳輸充電座) 快速使用指南


繁中 簡中

概覽／概览

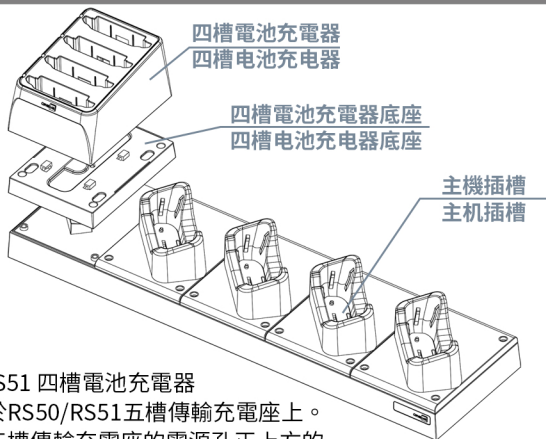

RS50/RS51 四槽電池充電器可加裝於RS50/RS51五槽傳輸充電座上。只需將五槽傳輸充電座的電源孔正上方的主機插槽拆卸下來，再將四槽電池充電器安裝上去即可。

RS50/RS51 四槽電池充電器可加裝於RS50/RS51五槽傳輸充電座上。只需將五槽傳輸充電座的電源孔正上方的主機插槽拆卸下來，再將四槽電池充電器安裝上去即可。

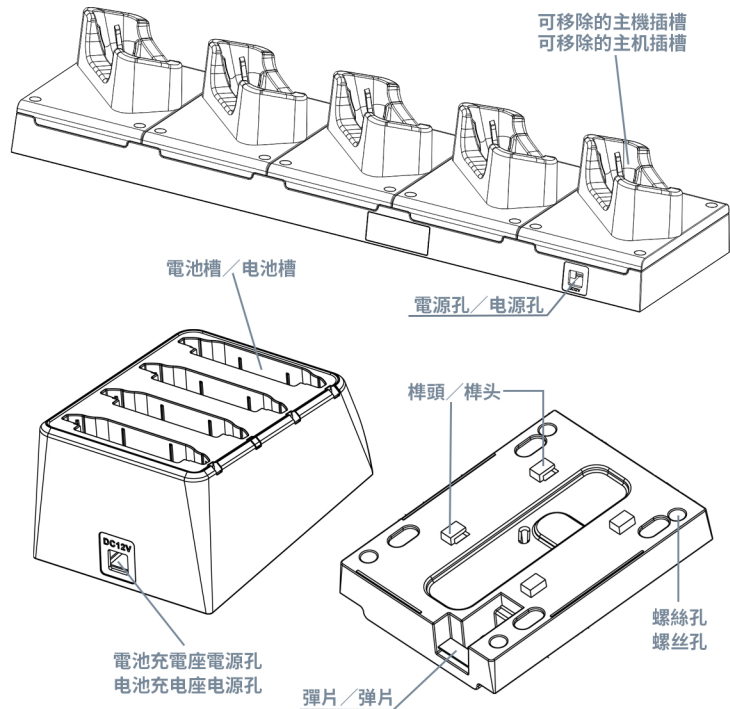


RS50/RS51 四槽電池充電座(兼容五槽傳輸充電座) 快速使用指南

繁中 簡中

安裝／安装

步驟1：移除該主機插槽四周的螺絲孔墊片，露出螺絲孔。

步驟1：移除該主機插槽四周的螺絲孔墊片，露出螺絲孔。

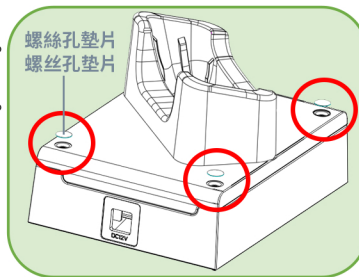


步驟2：將固定主機插槽的4顆螺絲移除。

步驟2：將固定主機插槽的4顆螺絲移除。


步驟3：將電池充電器底座放上五槽傳輸充電座，並以4顆螺絲固定住。

步驟3：將電池充電器底座放上五槽傳輸充電座，並以4顆螺絲固定住。

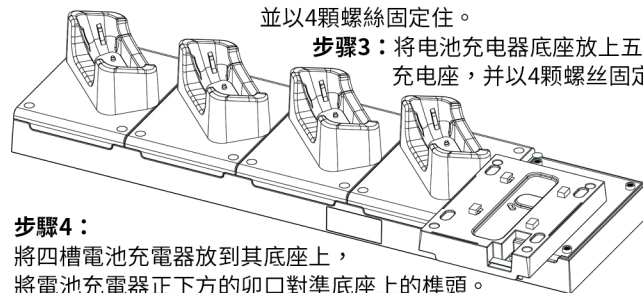

步驟4：將四槽電池充電器放到其底座上，將電池充電器正下方的卯口對準底座上的榫頭。四槽電池充電器的電源孔須和五槽傳輸充電座的電源孔位於同一側。

步驟4：將四槽電池充電器放到其底座上，將電池充電器正下方的卯口對準底座上的榫頭。四槽電池充電器的電源孔須和五槽傳輸充電座的電源孔位於同一側。

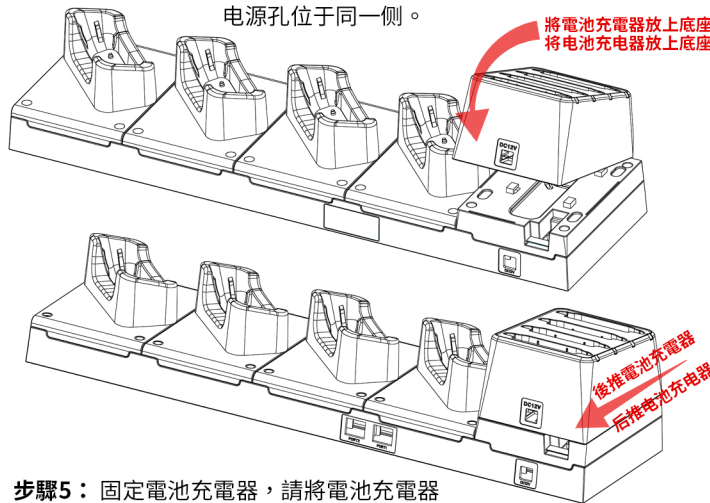


步驟5：固定電池充電器，請將電池充電器朝後方(電源孔所在方向)推，讓卯榫穩固接合。

步驟5：固定電池充電器，請將電池充電器朝後方(電源孔所在方向)推，讓卯榫穩固接合。

卸除／卸除


步驟1：下壓底座上的彈片，並將電池充電器往前推(電源孔的反方向)，讓卯榫鬆開。

步驟1：下壓底座上的彈片，並將電池充電器往前推(電源孔的反方向)，讓卯榫鬆開。

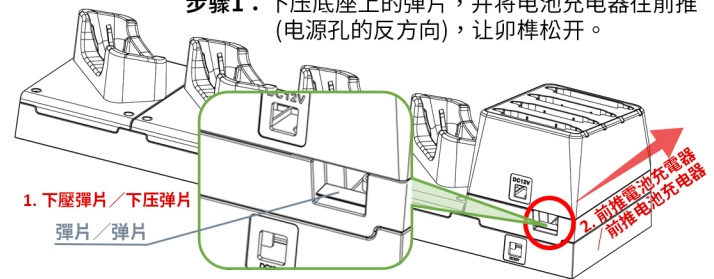

步驟2：將四槽電池充電器自底座上拿起。

步驟2：將四槽電池充電器自底座上拿起。

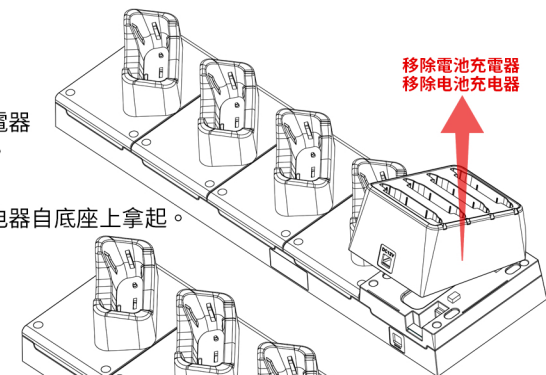

步驟3：鬆開固定充電器底座的4顆螺絲，然後將充電器底座從五槽傳輸充電座上移除。

步驟3：鬆開固定充電器底座的4顆螺絲，然後將充電器底座從五槽傳輸充電座上移除。

步驟4：將主機插槽放回五槽傳輸充電座上，鎖緊4顆螺絲，貼回螺絲孔墊片。

步驟4：將主機插槽放回五槽傳輸充電座上，鎖緊4顆螺絲，貼回螺絲孔墊片。

