

RS50 & RS51 5-Slot Charging Cradle >

Quick Start Guide

EN

 
>>

EN

Overview

Open Your Box: ☒ 5-Slot Charging Cradle
☒ Adapter plus Power Cord ☒ Quick Start Guide

The RS50/RS51 5-Slot Charging Cradle allows simultaneous charging up to five RS50 or RS51 mobile computers.

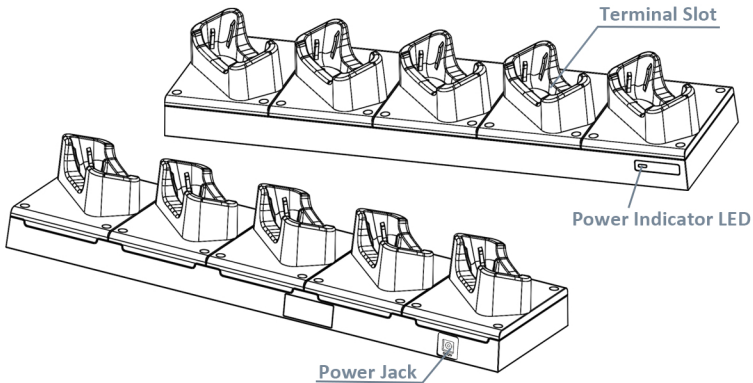

Important Charging Information


Power Supply	Input: AC 100-240V, 47-63Hz Output: DC 12V± 5%, 8-10A CipherLab approved
Battery Pack (optional)	3.8V, 4000mAh / 3.75V, 5300mAh rechargeable Li-ion, CipherLab proprietary
Charging Time	Approx. 5 hours (4000mAh) / 6 hours (5300mAh)
Charging Temperature	0°C - 45°C

LED Indicators

Charging LED: The charging LED (left) on the RS50/RS51 mobile computer shows the charging status.

Charging LED Status


Green, solid	Charging complete
Red, solid	Charging the mobile computer
Red, blinking	Charging error (for instance, battery not in place)

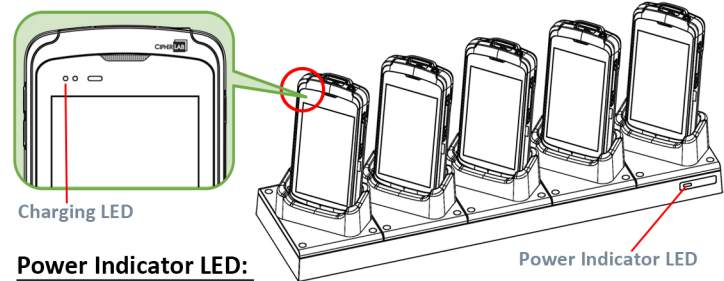 

Power Indicator LED:

The Power Indicator LED lights up in green when the unit is powered.

 Charging

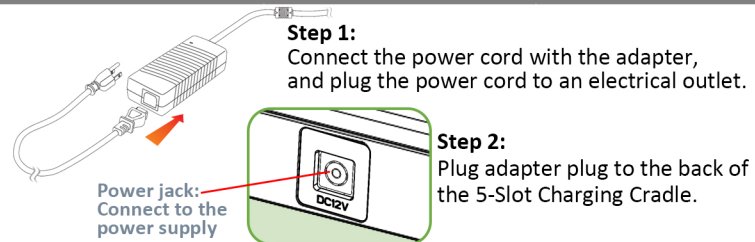

Step 1:

Connect the power cord with the adapter, and plug the power cord to an electrical outlet.

Step 2:

Plug adapter plug to the back of the 5-Slot Charging Cradle.

Step 3: Insert the devices into the charging slots of the 5-Slot Charging Cradle.

RS50/RS51 五槽主機充電座 快速使用指南

 
繁中 簡中

概覽／概览

檢視包裝內容物／检视包装内容物：

- ☑ 五槽主機充電座／五槽主机充电座
- ☑ 電源轉換器，附電源線／电源转换器，附电源线
- ☑ 快速使用指南／快速使用指南

RS50/RS51 五槽主機充電座可同時為五支RS50/RS51 行動電腦進行充電。
RS50/RS51 五槽主机充电座可同时为五支RS50/RS51 行动电脑进行充电。

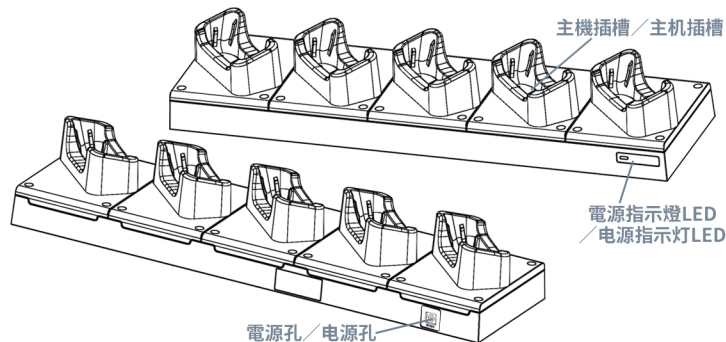

重要電源資訊／重要电源信息

電源轉換器 电源转换器	輸入／输入：AC 100-240V, 47-63Hz 輸出／输出：DC 12V± 5%, 8-10A CipherLab 專用電源供應器／专用电源供应器
電池容量（可選） 电池容量（可选）	3.8V, 4000mAh / 3.75V, 5300mAh CipherLab 專用充電式鋰電池 CipherLab 专用充电式锂电池
充電時間／充电时间	4000mAh 約 5 小時／4000mAh 约 5 小时 5300mAh 約 6 小時／5300mAh 约 6 小时
充電溫度／充电温度	0°C - 45°C

>

RS50/RS51 五槽主机充电座 快速使用指南

>>

繁中 簡中

LED 指示燈／LED 指示灯

充電LED／充电LED: 行動電腦上的充電指示燈(左側)顯示充電資訊。
行动电脑上的充电指示灯(左侧)显示充电信息。

充電LED指示燈狀態說明／充电LED指示灯状态说明

綠燈恆亮／绿灯恒亮	充電完成／充电完成
紅燈恆亮／红灯恒亮	行動電腦充電中／行动电脑充电中
紅燈閃爍／红灯闪烁	充電錯誤／充电错误（如：電池未裝好／如：电池未装好）



電源指示燈LED

／电源指示灯LED：

接上電源時綠燈亮起。／接上电源时绿灯亮起。

充電／充电

