 


Open Your Box

- 4-Slot Charging & 4-Slot Battery Cradle
- Adapter plus Power Cord
- DC Power Splitter Y Cable
- Quick Start Guide

The RK25 4-Slot Charging & 4-Slot Battery Cradle allows simultaneous charging up to four RK25 mobile computers and four batteries.

Overview

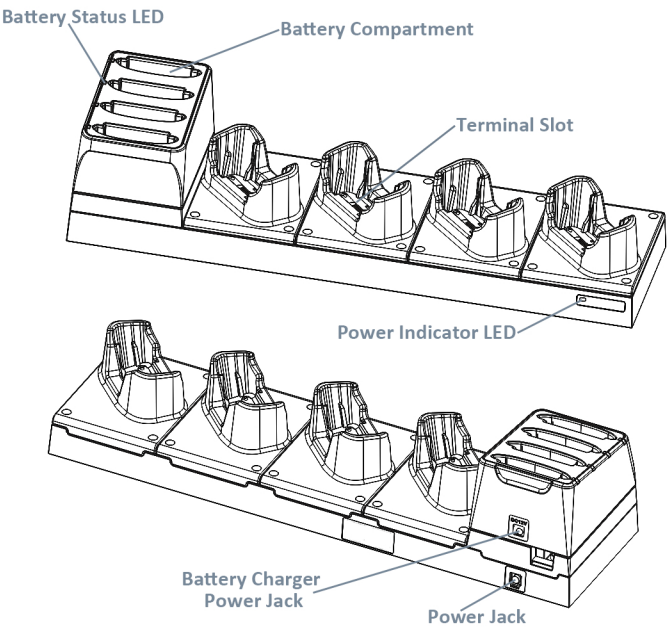


Important Charging Information

Power Supply	Input: AC 100-240V, 47-63Hz Output: DC 12V± 5%, 8-10A CipherLab approved
Battery Pack	3.8V, 4000mAh rechargeable Li-Polymer CipherLab proprietary
Charging Time	Approx. 4 hours
Charging Temperature	0°C - 45°C

LED Indicators

Charging LED: The charging LED (right) on the RK25 mobile computer shows the charging status of the main battery on the device.

Charging LED Status	
Green, solid	Charging complete
Red, solid	Charging the mobile computer
Red, blinking	Charging error (e.g. battery not in place)
No light	Not charging. It might result from the power cable which is not correctly connected.

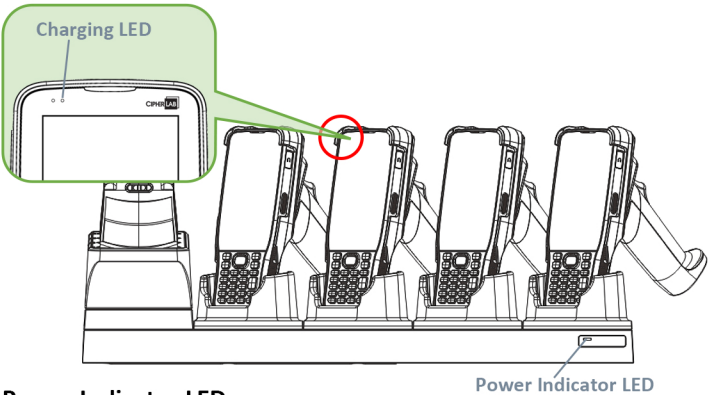 

Power Indicator LED: The Power Indicator LED lights up in green when the unit is powered.

LED Indicators on 4-Slot Battery Charger


Insert the battery into the battery compartment with the battery contact pins toward the side of the battery power jack, and the LED indicator on the charger will light up.

The status LED on the 4-slot battery charger shows the battery charging status:


Battery Charging LED Status	
Green, solid	Battery is fully charged.
Red, solid	Charging the battery.
Red, slow blinking	Battery charging error.
Red, blink once	Adapter is plugged in but there's no battery in the battery compartment.

Charging

 
Step 1: Connect the DC Power Splitter Y Cable with the adapter, and then connect the power cord with the adapter. Finally plug the power cord to an electrical outlet.

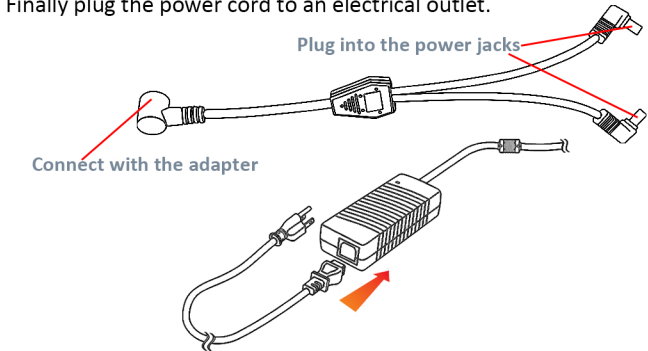

 Step 2: Plug the DC Power Splitter Y Cable to the back of the 4-Slot Terminal & 4-Slot Battery Cradle:

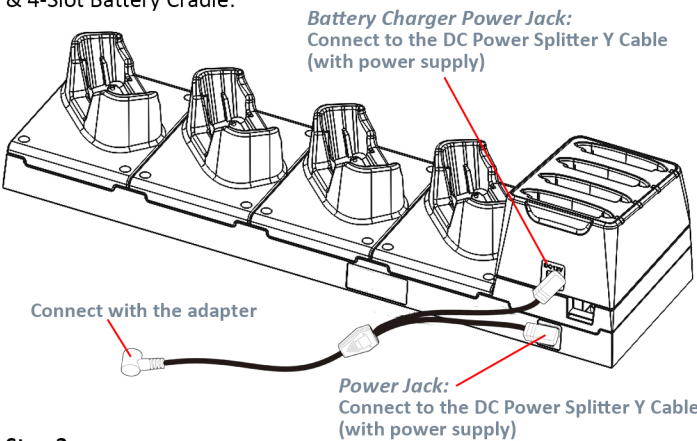

 Step 3: Insert RK25 mobile computers and batteries into the charging slots and the battery compartment of the 4-Slot Terminal & 4-Slot Battery Cradle.

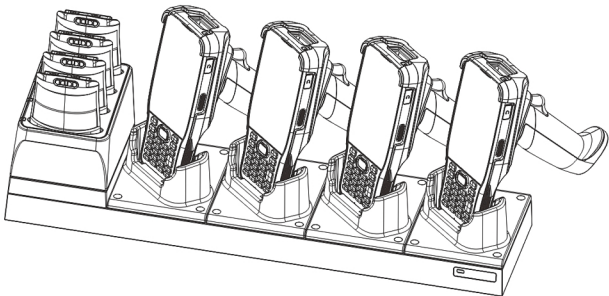


檢視包裝內容物／检视包装内容物

- 四槽充電座含四槽電池充電座／四槽充电座含四槽电池充电座
- 電源轉換器，附電源線／电源转换器，附电源线
- DC 電源線一分為二擴充線／DC 电源线一分為二扩充线
- 快速使用指南／快速使用指南

RK25 四槽充電座含四槽電池充電座可同時為四支RK25 行動電腦以及四顆電池進行充電。

RK25 四槽充电座含四槽电池充电座可同时为四支RK25 行动电脑以及四颗电池进行充电。

 概覽／概览

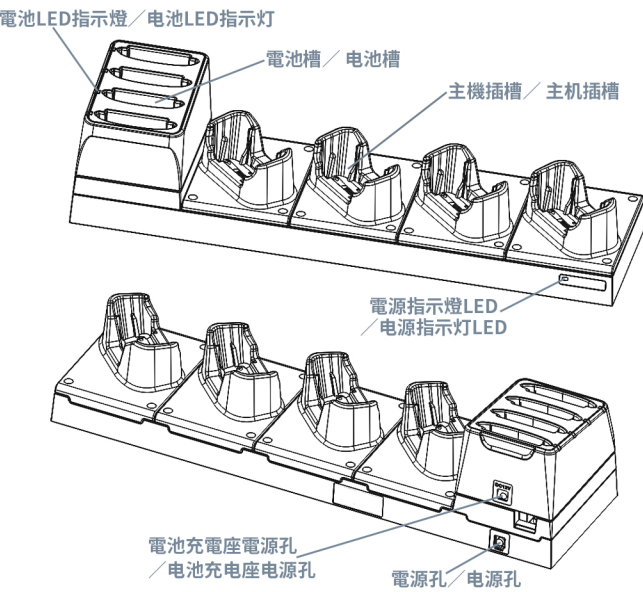

重要電源資訊／重要电源信息


電源轉換器 电源转换器	輸入／输入：AC 100-240V, 47-63Hz 輸出／输出：DC 12V± 5%, 8-10A CipherLab 專用電源供應器 ／CipherLab 专用电源供应器
電池容量 电池容量	3.8V, 4000mAh CipherLab 專用鋰聚合物電池 3.8V, 4000mAh CipherLab 专用锂聚合物电池
充電時間／充电时间	約 4 小時 约 4 小时
充電溫度／充电温度	0℃ - 45℃

LED 指示燈／LED 指示灯

充電LED：行動電腦上的充電指示燈(右側)顯示主電池充電資訊。

充电LED：行动电脑上的充电指示灯(右侧)显示主电池充电信息。

充電LED指示燈狀態說明／充电LED指示灯状态说明	
綠燈恆亮／绿灯恒亮	充電完成／充电完成
紅燈恆亮／红灯恒亮	行動電腦充電中／行动电脑充电中
紅燈閃爍／红灯闪烁	充電錯誤 (如：電池未裝好) 充电错误 (如：电池未装好)
沒有燈亮／没有灯亮	無法充電 (充電線端未正確連接本機或插座) 无法充电 (充电线端未正确连接本机或插座)

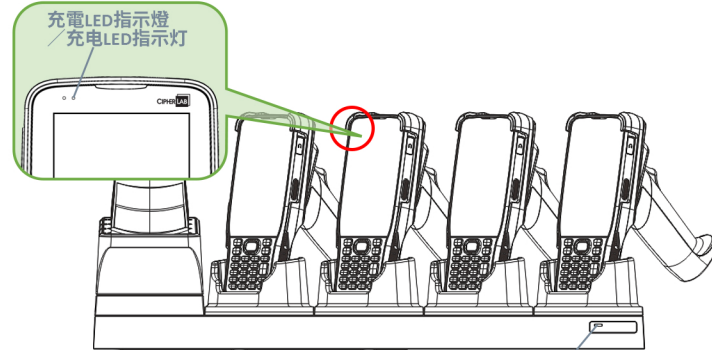 

電源指示燈LED：接上電源時綠燈亮起。

电源指示灯LED：接上电源时绿灯亮起。

電池充電座LED 指示燈／电池充电座LED 指示灯

電池金屬接點面朝電源孔方向，將電池放入充電器電池槽，充電狀態指示燈將亮起。

四槽電池充電座上的充電指示燈顯示電池充電資訊：

電池金屬接點面朝電源孔方向，將電池放入充電器電池槽，充電狀態指示燈將亮起。

四槽電池充電座上的充電指示燈顯示電池充電信息：

LED指示燈狀態說明／LED指示灯状态说明	
綠燈恆亮／绿灯恒亮	電池已充飽／电池已充饱
紅燈恆亮／红灯恒亮	電池充電中／电池充电中
紅燈慢閃／红灯慢闪	電池充電錯誤／电池充电错误
紅燈閃爍1次 红灯闪烁1次	已連接電源，但電池未裝入電池槽內 已连接电源，但电池未装入电池槽内

充電／充电

 
步驟1／步骤1：

將DC電源線一分為二擴充線接上電源轉換器。

再將電源線一端連接到電源轉換器，另一端連接到插座。

将DC电源线一分為二扩充线接上电源转换器。


再将电源线一端连接到电源转换器，另一端连接到插座。

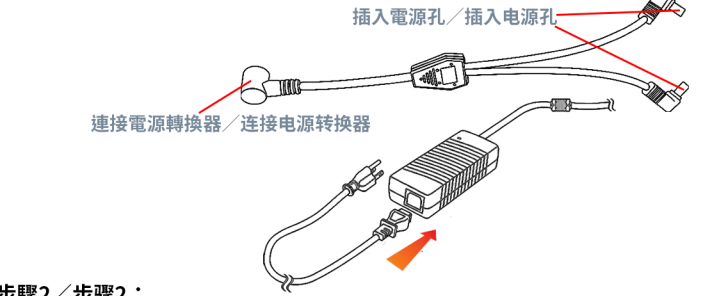

步驟2／步骤2：

將DC電源線一分為二擴充線連接到四槽充電座含四槽電池充電座後方的插孔。

 将DC电源线一分為二扩充线连接到四槽充电座含四槽电池充电座后方的插孔。

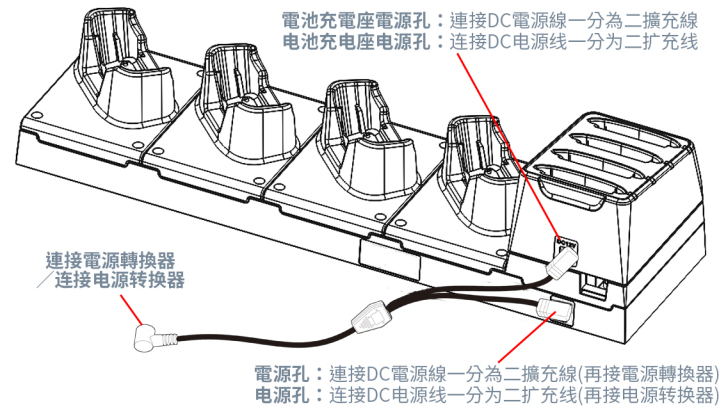

步驟3／步骤3：

將RK25 主機與電池放入四槽充電座含四槽電池充電座的插槽中。

将RK25 主机与电池放入四槽充电座含四槽电池充电座的插槽中。

