

# CipherLab User Guide

RK25 Ethernet Cradle SOP

Version 1.00



Copyright © 2020 CIPHERLAB CO., LTD.  
All rights reserved

The software contains proprietary information of its owner; it is provided under a license agreement containing restrictions on use and disclosure and is also protected by copyright law. Reverse engineering of the software is prohibited.

Due to continued product development, this information may change without notice. The information and intellectual property contained herein is confidential between the owner and the client and remains the exclusive property of the owner. If having any problems in the documentation, please report them to us in writing. The owner does not warrant that this document is error-free.

No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise without the prior written permission of the owner.

For product consultancy and technical support, please contact the local sales representative. Also, visit our website for more information.

All brand, logo, product and service, and trademark names are the property of their registered owners.

Google, Google Play, Android and other marks are trademarks of Google Inc.

The editorial use of these names is for identification as well as to the benefit of the owners, with no intention of infringement.

CIPHERLAB logo is a registered trademark of CIPHERLAB CO., LTD. All other brands, products and services, and trademark names are the property of their registered owners. The editorial use of these names is for identification as well as to the benefit of the owners, with no intention of infringement.

CIPHERLAB CO., LTD.

Website: <http://www.CipherLab.com>

# RELEASE NOTES

---

Version	Date	Notes
1.00	May 14 <sup>th</sup> , 2020	Initial release

# CONTENTS

---

- RELEASE NOTES ..... 3**
- CHARGING THE DEVICE AND THE SPARE BATTERY ..... 5**
  - 1.1 Overview ..... 6
  - 1.2 Connect the RK25 Mobile Computer with RK25 Ethernet Cradle ..... 7
  - 1.3 Charging the Spare Battery ..... 8
  - 1.4 Cradle LED Indicator ..... 10
- CONNECT TO THE INTERNET ..... 11**
  - 2.1 For the Cradle ..... 12
  - 2.2 Ethernet Settings on the Device ..... 13

## CHARGING THE DEVICE AND THE SPARE BATTERY

---


### IN THIS CHAPTER

---

1.1 Overview .....	6
1.2 Connect the RK25 Mobile Computer with RK25 Ethernet Cradle .....	7
1.3 Charging the Spare Battery .....	8
1.4 Cradle LED Indicator .....	10

## 1.1 OVERVIEW


The RK25 Charging & Communication Cradle (ENCR model) charges your mobile computer and a spare battery at the same time, and it could also be used for data communication.

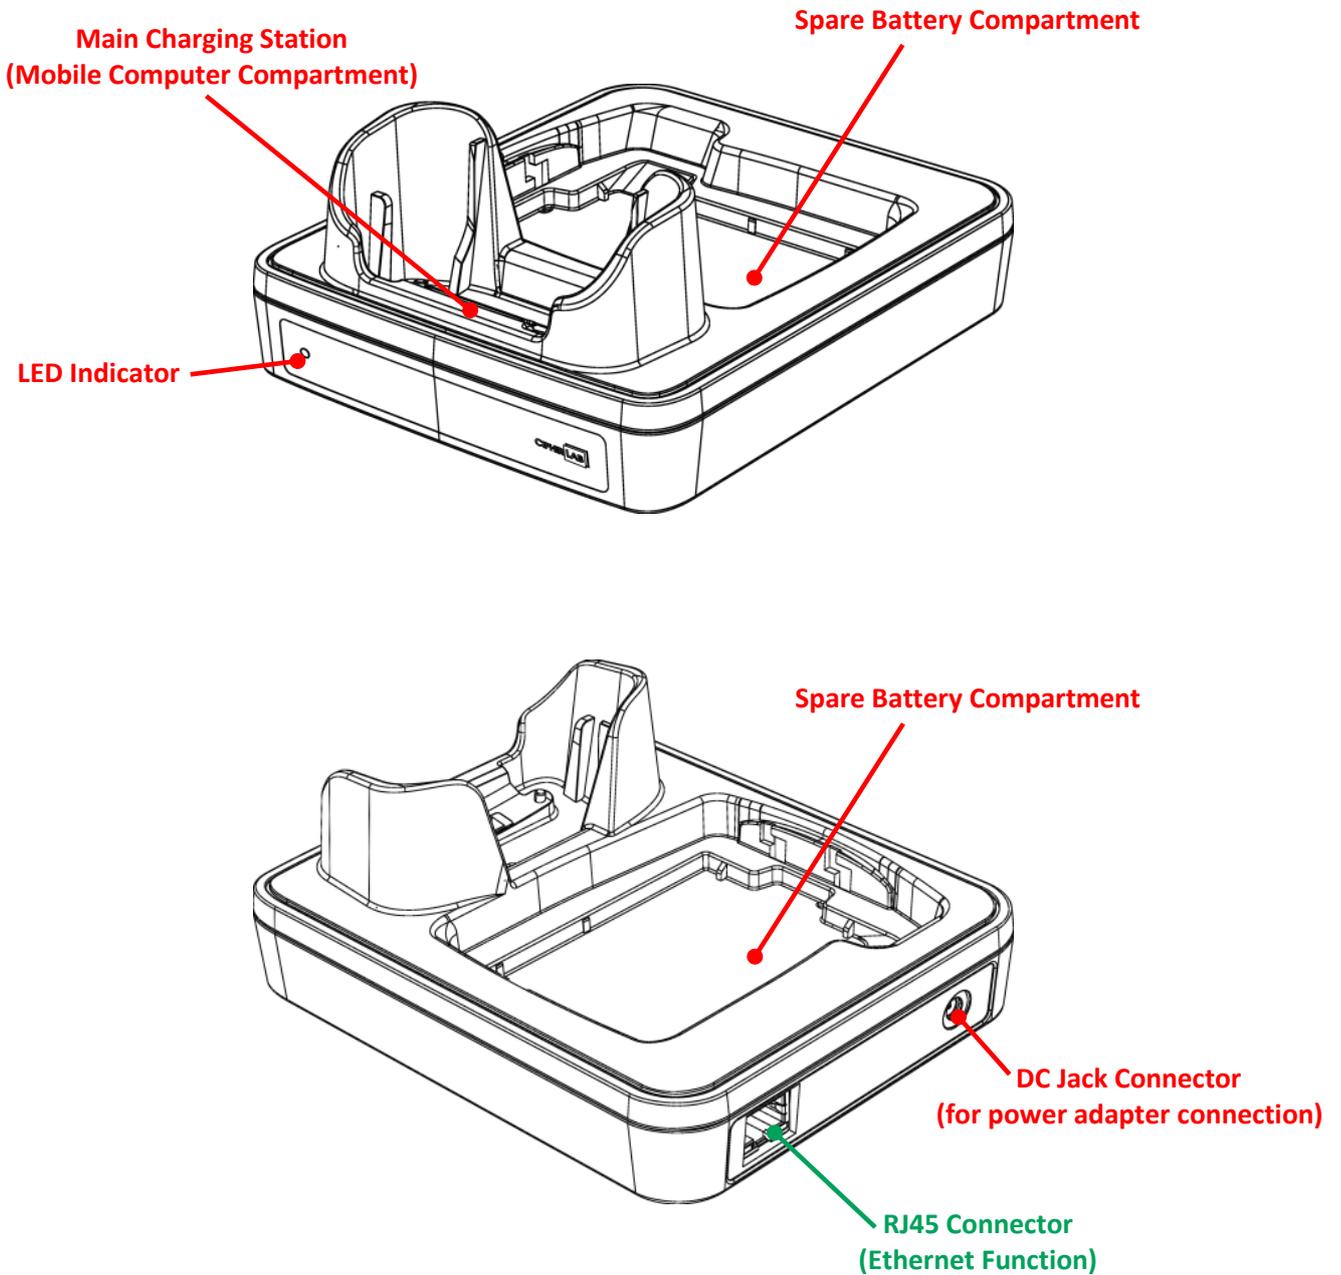


## 1.2 CONNECT THE RK25 MOBILE COMPUTER WITH RK25 ETHERNET CRADLE

To connect your mobile computer on the Charging & Communication Cradle:

- 1) Remove the micro USB cable if it is connected with the RK25 mobile computer.
- 2) Insert the RK25 mobile computer onto the Cradle. The installed hard shell or hand strap is NOT necessary to be removed in advance before inserting the mobile computer.

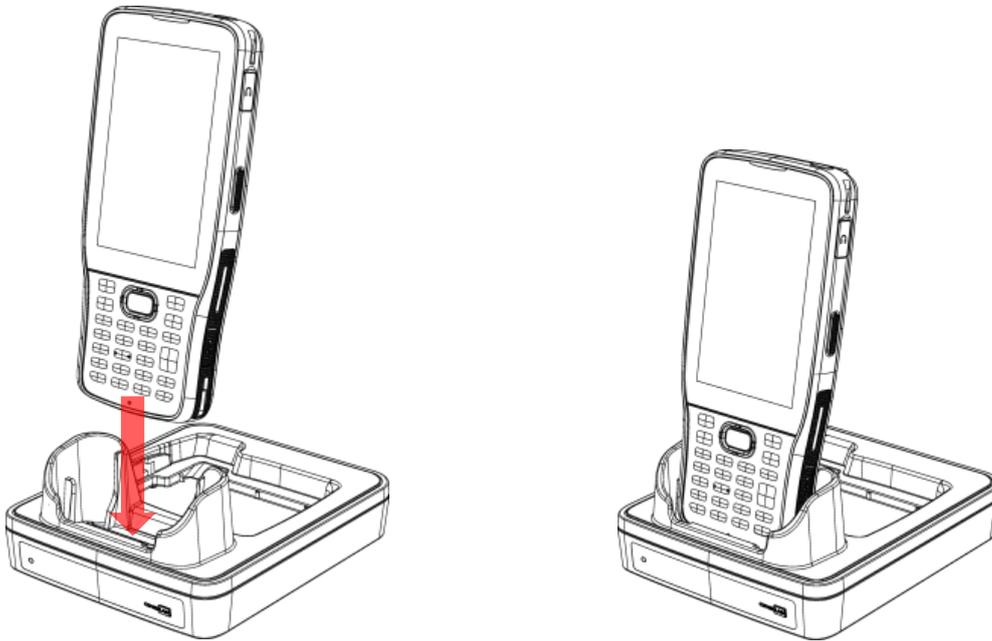


- 3) Connect the adapter to the Cradle, and plug the other end into an electrical outlet.

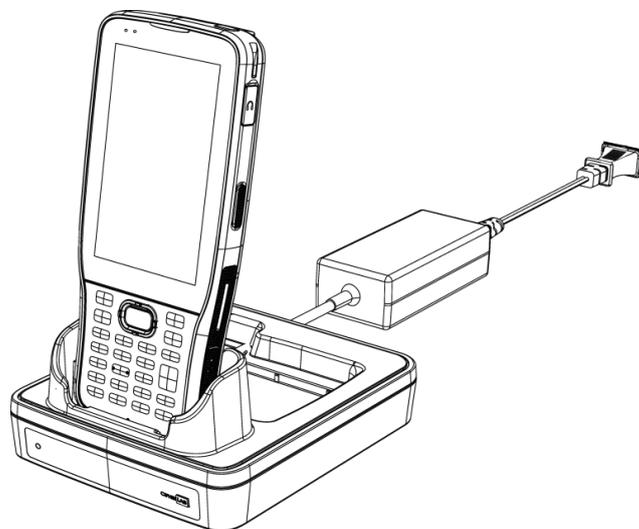

To remove, please take out the RK25 mobile computer directly.


### 1.3 CHARGING THE SPARE BATTERY

For the spare battery, please make sure the battery latch is at "**Unlock**" position, and then insert the battery from its top side (where the contact pins are located) into the spare battery compartment of the cradle with their contact pins connected. Press down the bottom side of the battery (where the battery latch is located), and slide the battery latch leftward to "**Lock**" position to fasten it.

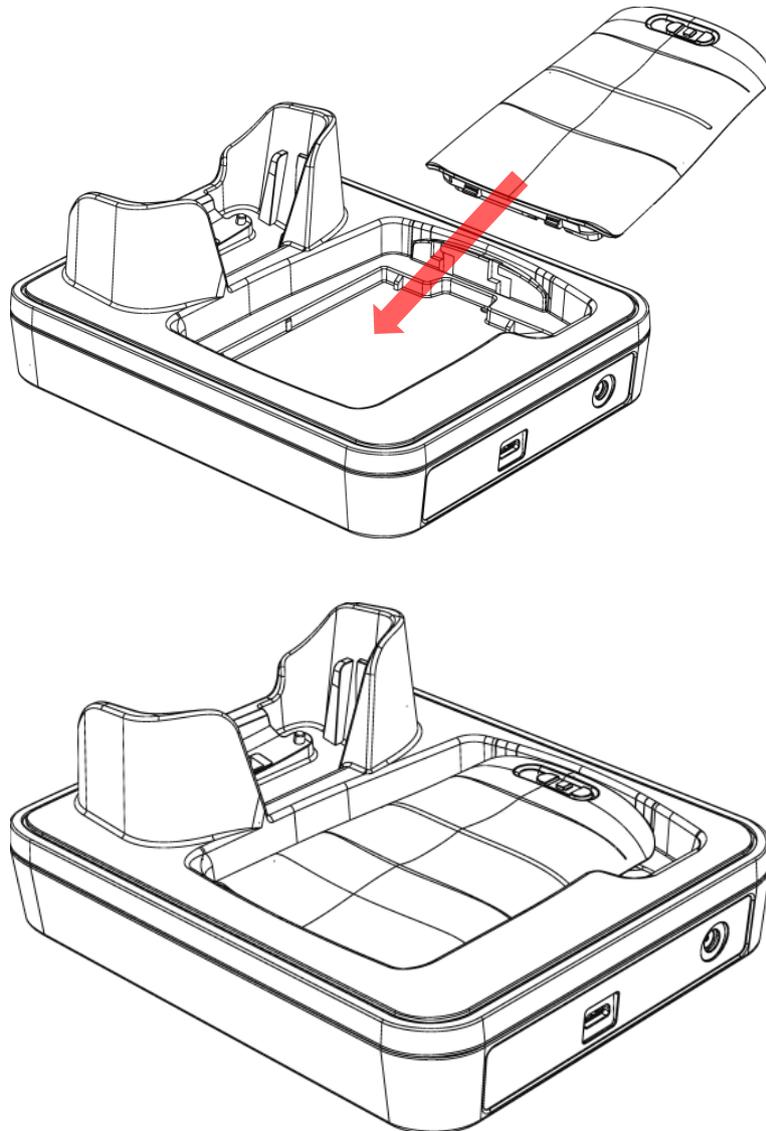


To remove, please slide the battery latch to "**Unlock**" position, and directly take the battery out.

Connect the adapter to the Cradle, and plug the other end into an electrical outlet for charging.

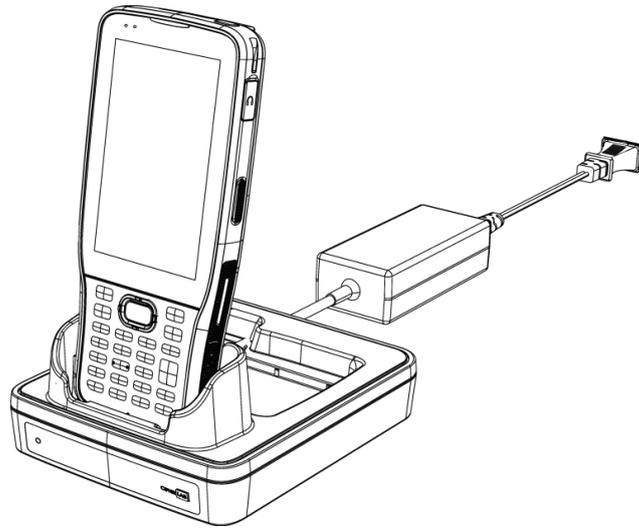

## 1.4 CRADLE LED INDICATOR

The status of the mobile computer charging is shown on the device itself, while the LED indicator on RK25 Charging & Communication Cradle shows the status of battery charging as below:

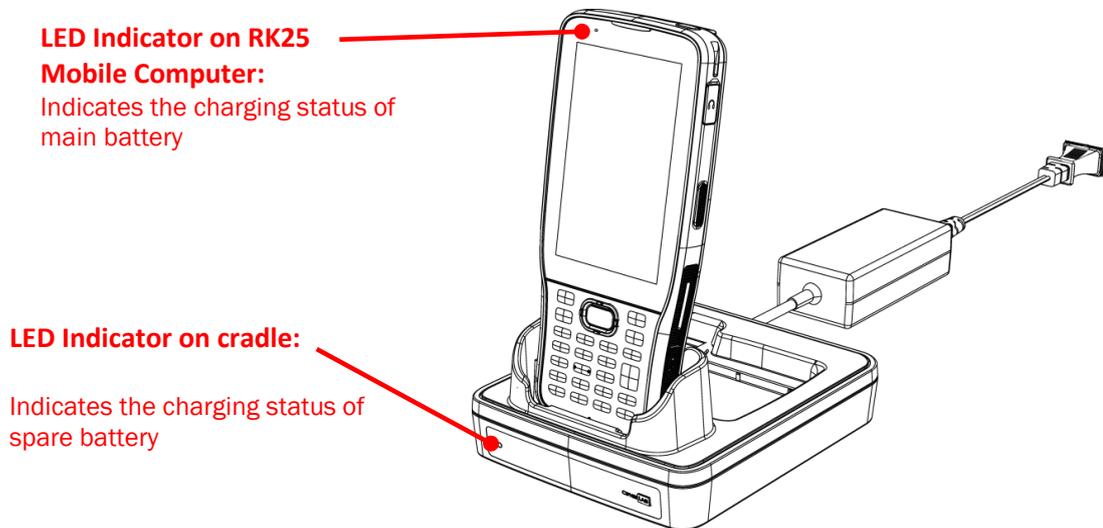

Cradle LED Indicator	Status	Description
Charging	Red, solid	Charging the battery
	Red, blink	Charging error
	Red, flash once	No battery
	Green, solid	Charging complete
	No light	Not charging

**Note:**

- (1) **Not Charging** could be the result of battery damage, battery's failure to touch the connector, or AC plug coming off.
- (2) Charging error could be due to high battery temperature.
- (3) The micro USB cable must be removed before inserting the device onto the cradle.

# CONNECT TO THE INTERNET

---

## IN THIS CHAPTER


---

2.1 For the Cradle .....	12
2.2 Ethernet Settings on the Device .....	13


## 2.1 FOR THE CRADLE

To make your RK25 mobile computer connect to the Internet through the RK25 Ethernet Cradle:

- 1) Insert your RK25 mobile computer on to the RK25 Ethernet Cradle.

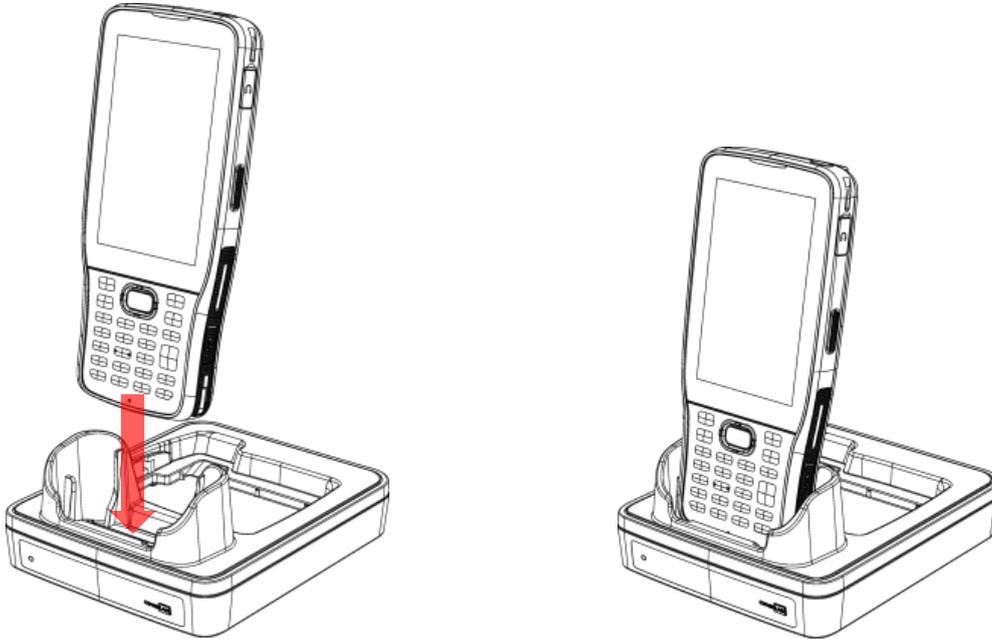


- 2) Plug the ethernet cable into the RJ45 Connector.

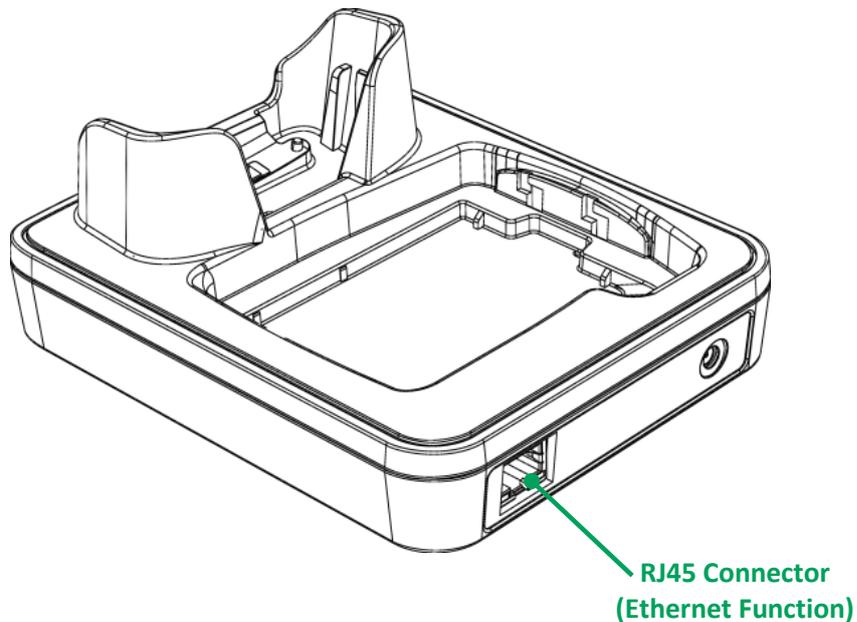


## 2.2 ETHERNET SETTINGS ON THE DEVICE

The configurable settings on RK25 mobile computer can be accessed from:


- ▶ For RK25 mobile computer with Android Nougat, please go to **App Drawer (All Apps)** | **Settings**  | **Ethernet** 

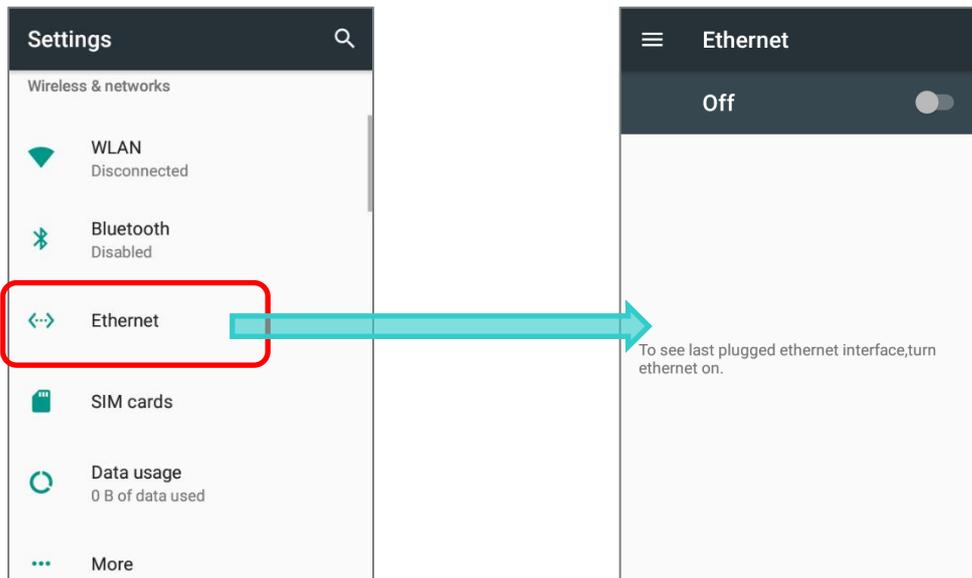

- ▶ For RK25 mobile computer with Android Pie, please go to **App Drawer (All Apps)** | **Settings**  | **Network & internet**  | **Ethernet** 

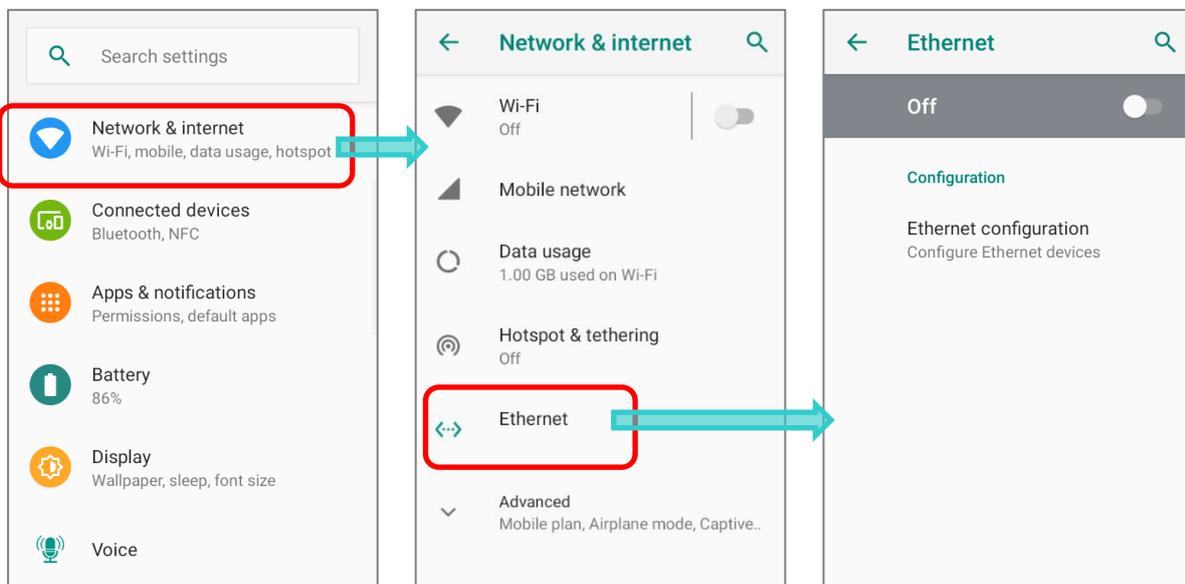

On “**Ethernet**” page, turn on the switch. Once the RK25 mobile computer is successfully connected to the Internet, the  icon will displayed on the status bar.

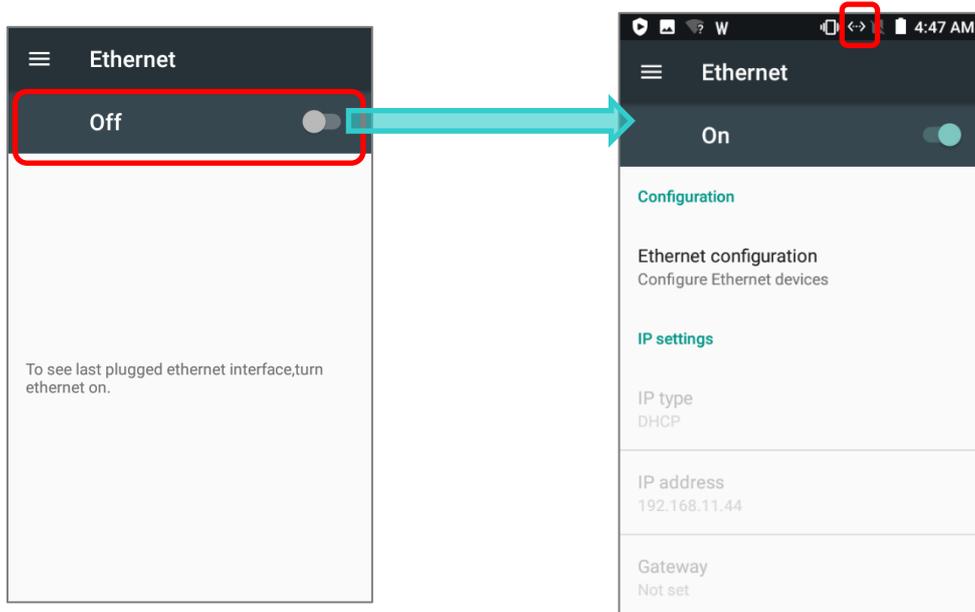

For further settings, please tap on “**Ethernet configuration**”, and then tap “**Manual**” for **Proxy** and “**Static**” for **IP Settings** to expand the detailed settings. Please fill in the necessary fields base on your network environment.

