


RS50 Mobile Computer

Quick Start Guide

Download the user manual and CD contents using GoBetween, available at:
<http://ccs.cipherlab.com>

EN

Open Your Box

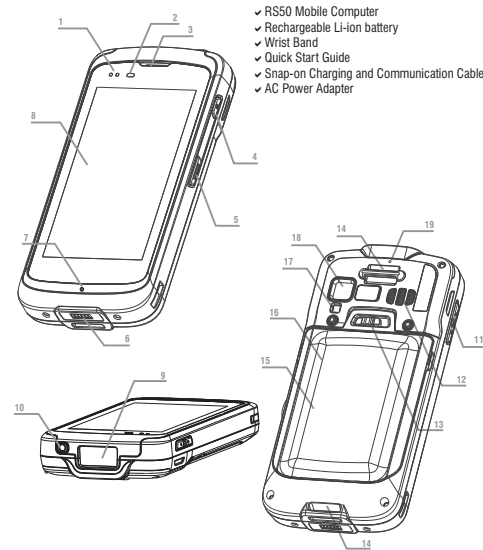

- ✓ RS50 Mobile Computer
- ✓ Rechargeable Li-ion battery
- ✓ Wrist Band
- ✓ Quick Start Guide
- ✓ Snap-on Charging and Communication Cable
- ✓ AC Power Adapter


1. Status LEDs (left: charging, right: Notifications)
2. Light sensor
3. Phone Receiver
4. Power Button
5. Side Keys
6. Charging & Communication Port
7. Microphone
8. Touch Screen
9. Scan Window
10. Headset Jack
11. Volume Keys
12. Loudspeaker
13. Battery Latch
14. Wrist Band Hole
15. NFC Detection Area
16. Battery (with Cover)
17. Camera Flash
18. Camera Lens
19. Rear Microphone

Important Charging Information


Power Supply	Input: AC 100-240V, 50/60Hz; output: 5V/2A, CipherLab approved
Battery Pack	3.8V, 4000mAh/ 3.75V, 5300mAh rechargeable Li-ion, CipherLab proprietary
Charging Time	Approx. 5/6 hours via adapter

www.cipherlab.com

Install/Remove Battery

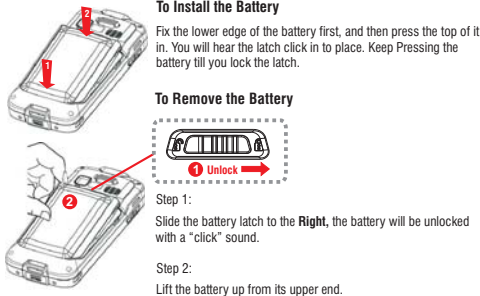

Install SIM, SAM and SD Card

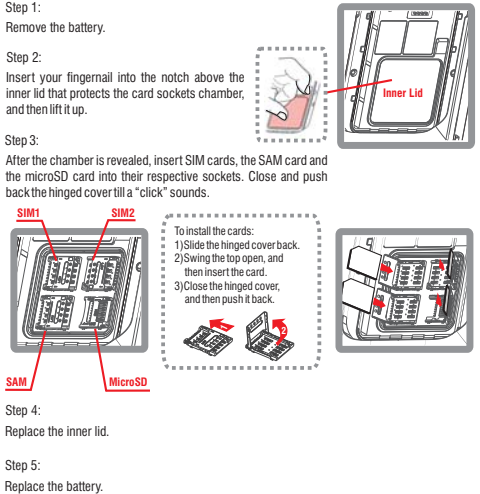

Charging & Communication

Charging and data communication of the RS50 mobile computer can be performed via Snap-on Charging & Communication Cable.

Step 1:
Attach the Snap-on Cable to the mobile computer.




To connect the Cable:
The pins on the bottom of this device serve as the sole Charging & Communication port; slightly fasten the Cable to the port, and you will hear a "click" when it is well connected.




Charging & USB Communication Port


To disconnect the Cable:
Pull the right tab of the connecting cup slightly outwards to detach the cable.

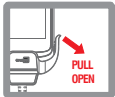

Step 2:
For data transfer, plug the opposite end of the cable to your PC.

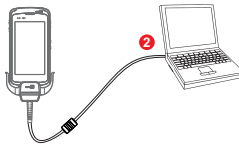

Step 3:
For battery charging, plug the opposite end of the cable into the supplied power adapter, and then plug the adapter into the electrical outlet. The charging LED on the mobile computer lights up in red (battery low, charging), and turns green to indicate charging is almost complete.

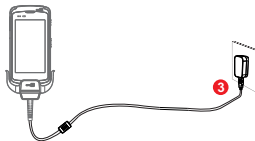

CIPHER LAB

RS50 行動電腦
快速開始指南

RS50 移动计算机
快速开始指南

請透過GoBetween取得手冊與光碟資訊：<http://ccs.cipherlab.com>

繁中 簡中

请透过GoBetween获取手册与光碟信息：<http://ccs.cipherlab.com>


繁中 簡中

繁中 簡中


檢視包裝內容物 / 检查包装内物品

安裝與移除電池 / 安装与拆下电池

充電與傳輸 / 充电与传输

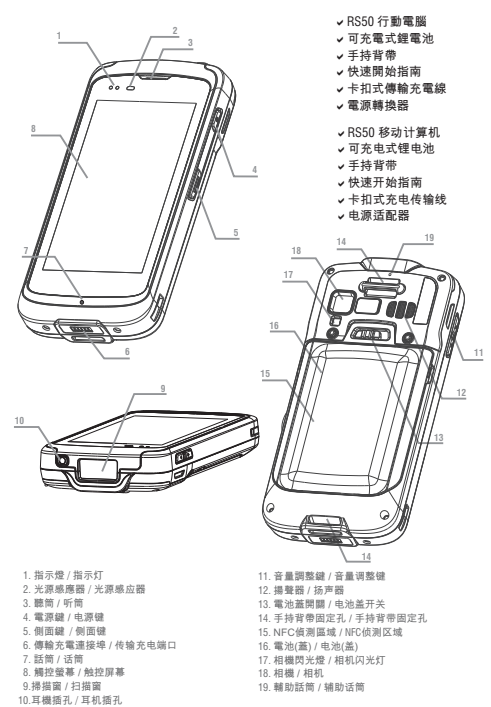

重要電源資訊 / 重要电源信息	
電源轉換器 电源适配器	輸入: AC 100-240V, 50-60Hz 輸出: 5V/2A; CipherLab 專用電源供應器 输入: AC 100-240V, 50-60Hz 输出: 5V/2A; CipherLab 专用电源适配器
電池容量 电池容量	3.8V, 4000mAh / 3.75V, 5300mAh CipherLab 專用充電式鋰電池 3.8V, 4000mAh / 3.75V, 5300mAh CipherLab 专用充电式锂电池
充電時間 充电时间	以電源轉換器充電約 5/6 小時 以电源适配器充电约 5/6 小时

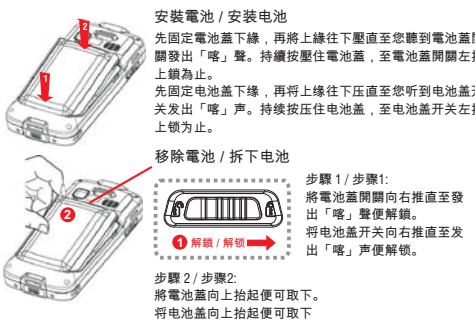

安裝 / 安装SIM、SAM、SD卡

