

RS Series Vehicle Cradle Quick Start Guide

>

>>

EN

>>>

EN

EN

Open Your Box

- Bracket or Dual T Solt to RAM Mount
- Adapter
- Fixed Seat
- Quick Start Guide


Note:
1) Please choose the "fixed seat" type based on the mobile computer you use.
2) RS Series Vehicle Cradle is equiped with either one Bracket or one Dual T Solt to RAM Mount

Important Charging Information

RS Series Vehicle Cradle Power Adapter Input: 12V - 24V; output: 5V/2A above CipherLab approved


Install/ Remove (for RAM Mount)

- Step 1:** Fix "Dual T Solt to RAM Mount" to your own RAM Mount by your screws.
Step 2: Put the T buckles of the Dual T Solt to RAM Mount into the double T buckle groove from the back side of the fixed seat.
Step 3: Pull the fixed seat downward to connect the RAM Mount and the fixed seat till a "click" sound is made.

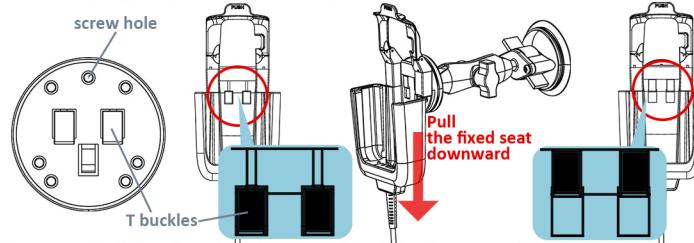


Remove: Pull the fixed seat upward to take it apart with the RAM Mount.

Install/ Remove Bracket

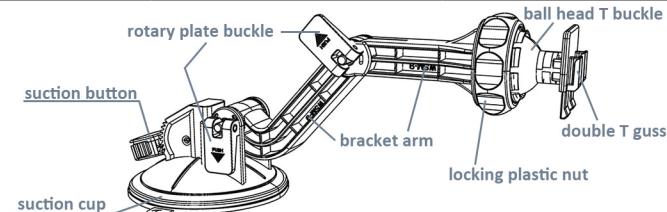


- Step 1:** Place the suction cup of the bracket to a frictionless surface and keep holding it.

Note: It is strongly suggested that attaching the suction cup to a flat glass surface (such as windshield).

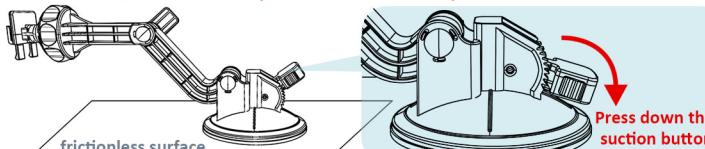

- Step 2:** Press down the suction button with a little force to attach the suction cup to the frictionless surface.

Make sure the suction cup is firmly fastened to the frictionless surface, and the installation is complete.


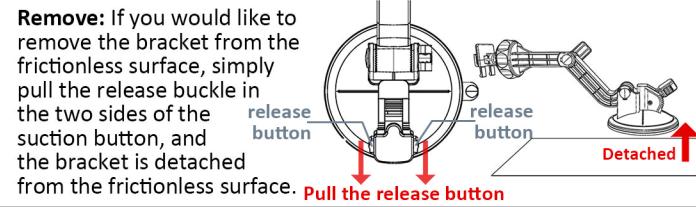


Engage/ Disengage Bracket with Fixed Seat

To engage the fixed seat with the bracket, please follow the steps:


Step 1:

Put the T buckles of the bracket into the double T buckle groove from the back side of the fixed seat. Please make sure that the protruding part of the T buckles is downward, and the fixed seat button is upward.

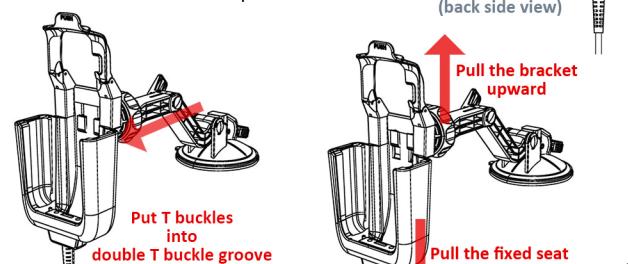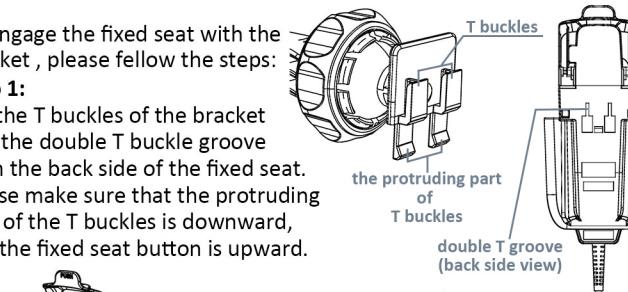

Step 2:

Pull the bracket upward while pulling the fixed seat downward. A "click" sound is made once the bracket and the fixed seat is connected in place.

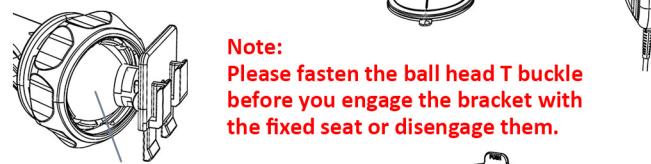

Note:
Please fasten the ball head T buckle before you engage the bracket with the fixed seat or disengage them.


To disengage the fixed seat from the bracket:

Step 1:

Please remove the bracket from the frictionless surface beforehand if it is attached on the frictionless surface.

Step 2:

Pull the fixed seat upward while pulling the bracket downward, and the fixed seat is taken apart with bracket.

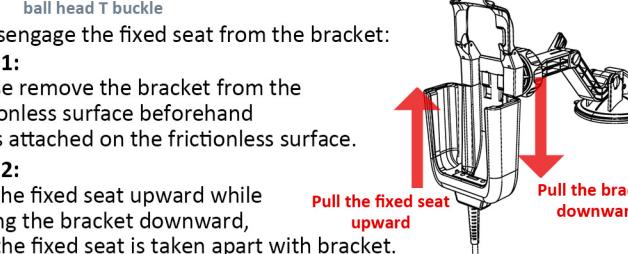


Adjust the Vehicle Cradle (for Bracket)

You can adjust the vehicle cradle for optimal viewing angles of your mobile computer:


For the bracket:

- 1) Pull the rotary plate buckle up to make it perpendicular to the bracket arm to loosen the joint.
- 2) Adjust the bracket arm up or down to suit your need.
- 3) Push the rotary plate buckle down to fasten the bracket arm.

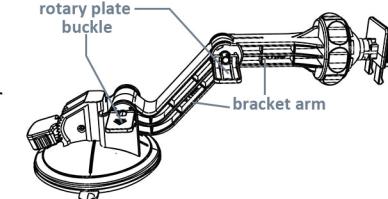

For the Double T Gusset


- 1) Twist the locking plastic nut anticlockwise to loosen the ball head T buckle, and then swivel around the ball head T buckle to your preferred position.
- 2) Twist the locking plastic nut clockwise to fasten the ball head T buckle.

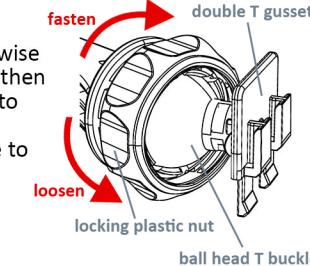

Note:
Please fasten the ball head T buckle before you engage the bracket with the fixed seat or disengage them.

Mount Mobile Computer onto Vehicle Cradle

Keep pushing the fixed seat button to make it tilt backward, and put your mobile computer into the fixed seat. Let go of the fixed seat button to complete the installation. To remove, keep pushing the fixed seat button and take out your mobile computer directly.

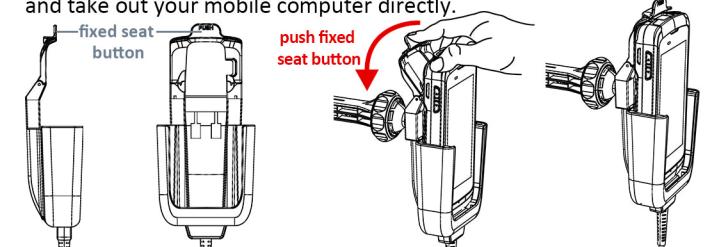

Connect to Power Source

To connect your mobile computer which has been mounted into the vehicle cradle to the external power source from the automobile, please:

Step 1:

Insert the adapter to the cigarette lighter receptacle of your automobile.

Step 2:

Connect the USB cable of the fixed seat to the adapter.

