





# Overview

RK25/RK95/RS35/RS51/HERA51/9700 Shoulder Strap is for the user to hold the aforesaid device models securely and stay hands-free at the same time.

- (1) For safety purpose, it is strongly suggested that put the safety buckle in the front body.
- (2) Please feed the strap which is near the safety buckle through the strap hole located in the device bottom to make the device reader downward to prevent the light beam emitted from the reader damage your eyes.



## Installation


### Step 1:

Feed the strap through one of the strap holes on the device.




## Step 2:


Loosen the strap from the buckle to create some space.

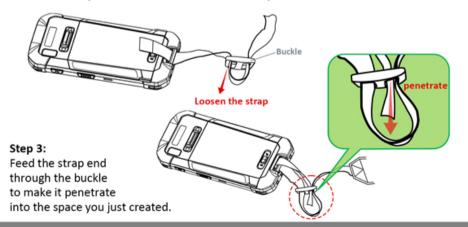

Step 4: Thread the short bit of the strap through the other opening in the buckle. In this step, it looks like a small loop inside the larger loop.

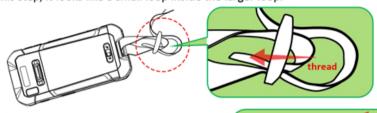

Step 5: Tighten the strap by pulling the strap.

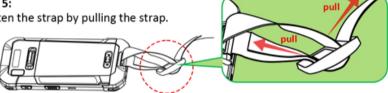


### Step 6:

Repeat the same step above to feed the other end of the strap into the other strap hole to complete installing.



Step 7: Complete attaching the shoulder strap to the device.

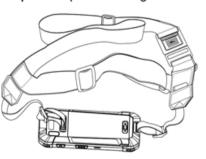

Step 8: After properly connecting the strap, adjust the shoulder strap from the shoulder strap buckleand the adjusting buckle to feed your need.



# RK25/RK95/RS35/RS51/HERA51/9700

### 快速開始指南 扃背帶

# 繁中

## 扃背带 快速开始指南





>>


# 概覽/概览

RK25/RK95/RS35/RS51/HERA51/9700 局背帶, 用於固定上述型號之行動電腦並背於身上,

方便使用者空下雙手。

RK25/RK95/RS35/RS51/HERA51/9700 肩背带, 用于固定上述型号之行动电脑并背于身上, 方便使用者空下双手。

- 警告: (1)基於安全因素,強烈建議將安全扣環置放於身體正面
- (2) 請將靠近安全扣環的一端,穿過主機底部的背帶孔, 號讀頭朝下,以避免掃描光束對眼睛的直射傷害 请将靠近安全扣环的一端,穿过主机底部的背带孔,

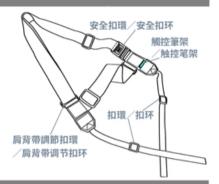

步驟 1:將唇背帶的一端 穿入主機上的背帶孔。

步骤 1:将局背带的一端 穿入主机上的背带孔。




步驟 2: 拉鬆扣環處的帶子。/步骤 2: 拉松扣环处的带子。



步驟 4:將局背帶末端剩餘部分由另一扣環孔中穿出。在此步驟扣環處的帶子會呈現一個小圈 包入大圈之中。

RK25/RK95/RS35/RS51/HERA51/9700

 步骤 4:将局背带末端剩余部分由另一扣环孔中穿出。在此步骤扣环处的带子会呈现一个小圈




步驟 5:將帶子拉緊固定。 步骤 5:将带子拉紧固定



步驟 6:重複上述步驟將局背帶另一端穿 入主機上的另一個背帶孔,即完成安裝 步骤 6: 重复上述步骤将局背带另一端穿 入主机上的另一个背带孔,即完成安装。

步驟 7: 局背帶裝設完成。 步骤 7: 局背带装设完成。

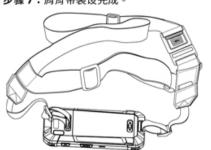

步驟 8:確切安裝好局背帶後,可依所需由局背帶 扣環處與調節扣環處進行長度調整。

步骤 8:确切安装好局背带后,可依所需由局背带 扣环处与调节扣环处进行长度调整。

