

CipherLab **User Guide**

1663 Barcode Scanner

Setup barcodes included.

Version 1.10



Copyright © 2022 CIPHERLAB CO., LTD.
All rights reserved

The software contains proprietary information of CIPHERLAB CO., LTD.; it is provided under a license agreement containing restrictions on use and disclosure and is also protected by copyright law. Reverse engineering of the software is prohibited.

Due to continued product development this information may change without notice. The information and intellectual property contained herein is confidential between CIPHERLAB and the client and remains the exclusive property of CIPHERLAB CO., LTD. If you find any problems in the documentation, please report them to us in writing. CIPHERLAB does not warrant that this document is error-free.

No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise without the prior written permission of CIPHERLAB CO., LTD.

For product consultancy and technical support, please contact your local sales representative. Also, you may visit our web site for more information.

The CipherLab logo is a registered trademark of CIPHERLAB CO., LTD.

All brand, product and service, and trademark names are the property of their registered owners.

The editorial use of these names is for identification as well as to the benefit of the owners, with no intention of infringement.

CIPHERLAB CO., LTD.

Website: <http://www.cipherlab.com>

IMPORTANT NOTICES

FOR USA

This equipment has been tested and found to comply with the limits for a **Class B** digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ▶ Reorient or relocate the receiving antenna.
- ▶ Increase the separation between the equipment and receiver.
- ▶ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ▶ Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FOR CANADA

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the interference-causing equipment standard entitled "Digital Apparatus," ICES-003 of Industry Canada. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Cet appareil numérique respecte les limites de bruits radioélectriques applicables aux appareils numériques de Classe B prescrites dans la norme sur le matériel brouilleur: "Appareils Numériques," NMB-003 édictée par l'Industrie.

FOR HAND-HELD PRODUCT WITH RF FUNCTIONS

The 1663 unit (FCC ID: Q3N-1663) complies with FCC radiation exposure limits set forth for uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65. The unit has very low level of RF energy that it is deemed to comply without testing of specific absorption ratio (SAR).

The 3610 unit (FCC ID: Q3N-3610) complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator & body. It only operated in hand-held used. If only transfer data to the host cordless, please keep the minimum distance 20 cm between machine & body.

SAFETY PRECAUTIONS

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

- ▶ The use of any batteries or charging devices, which are not originally sold or manufactured by CipherLab, will void your warranty and may cause damage to human body or the product itself.
- ▶ DO NOT disassemble, incinerate or short circuit the battery.
- ▶ DO NOT expose the scanner or the battery to any flammable sources.
- ▶ For green-environment issue, it's important that batteries should be recycled in a proper way.
- ▶ Under no circumstances, internal components are self-serviceable.

CARE & MAINTENANCE

- ▶ Use a clean cloth to wipe dust off the scanning window and the body of the scanner as well as the charging device. DO NOT use/mix any bleach or cleaner.
- ▶ If you want to put away the scanner for a period of time, download the collected data to a host computer when in the memory mode, and then take out the battery. Store the scanner and battery separately.
- ▶ When the scanner resumes its work, make sure the battery is fully charged before use.
- ▶ Keep the scanner away from any magnets and magnetic fields to prevent the laser engine from malfunctioning.
- ▶ If you shall find the scanner malfunctioning, write down the specific scenario and consult your local sales representative.

RELEASE NOTES

Version	Date	Notes
1.10	June 16, 2022	<ul style="list-style-type: none"> ▶ Modified: Introduction: Charge the Battery – LED status of charging complete
1.09	Feb. 22, 2018	<ul style="list-style-type: none"> ▶ Modified: 2.1.6/2.4.5/2.6.5 HID Character Transmit Mode – default by character ▶ New: 2.1.12 Control Character Output (Windows only) ▶ New: 2.4.8 USB Polling Interval (for USB HID via 3610) ▶ New: 2.4.9 Control Character Output (Windows only) ▶ New: 2.6.8 Control Character Output (Windows only)
1.08	Oct. 16, 2017	<ul style="list-style-type: none"> ▶ Modified : Ch. 4 – disable/enable all symbologies setting barcodes added ▶ New: 4.5.6 Asterisks (*) as Data Characters ▶ Modified: 5.4.1 Select Pre-defined Code ID – “?: No check character validation” in the modifier character table for Code 11
1.07	Jul. 19, 2017	<ul style="list-style-type: none"> ▶ Modified: Symbology Supported – Trioptic Code 39, Code 11 setting barcodes added ▶ Modified: 2.1.6 HID Character Transmit Mode - set "By Character" to default ▶ Modified: 2.1.9 BT HID Transmit Speed - set "Fast" to default ▶ Modified: 3.2.4 Secure Simple Pairing - set "Enable" to default ▶ New: 4.2.5/4.3.5/4.4.5 – Code 25 Security Level ▶ Modified: 4.5.5 – set “Normal” (Code 39 security level) to default ▶ New: 4.6 Trioptic Code 39 ▶ Modified: 4.8.1 – set “Normal” (Code 128 security level) to default ▶ Modified: 4.10.4 – set “Normal” (EAN-13 security level) to default ▶ Modified: 4.17.7 – set “Normal” (GS1 DataBar security level) to default ▶ New: 4.21 Code 11 ▶ Modified: 5.2.2 Symbologies for Character Substitution (All 3 Sets) – Trioptic Code 39, Code 11 setting barcodes added ▶ Modified: 5.4.1 Select Pre-defined Code ID – Apply AIM Code ID setting barcode and modifier character table added ▶ Modified: 5.4.2 Change Code ID – Trioptic Code 39, Code 11 setting barcodes added ▶ Modified: 5.5 Length Code – Trioptic Code 39, Code 11 setting barcodes added ▶ Modified: 6.3.1 Applicable Code Type – Trioptic Code 39, Code 11 setting barcodes added

1.06	Nov. 04, 2016	<ul style="list-style-type: none"> ▶ Modified: 2.3.1 – a single 1D barcode for connecting to a target device added ▶ New: 2.4.7 USB HID via 3610 Auto-Reconnection ▶ New: 2.5.2 Activate USB Virtual COM_CDC ▶ New: 2.5.5 USB Virtual COM/COM_CDC via 3610 Auto-Reconnection ▶ Modified: 3.1.1 – a single 1D barcode for connecting to a target device added ▶ New: 3.2.4 Secure Simple Pairing (SSP) (2.1.9 Simple Pairing for iPhone/iPad removed) ▶ New: 4.16.7 GS1 DataBar Security Level ▶ Modified: Appendix V Keyboard Type One-Scan Barcode
1.05	Jul. 24, 2015	<ul style="list-style-type: none"> ▶ New: 2.2.4 – BT SPP Slave Hardware Flow Control ▶ New: 2.3.5 – BT SPP Master Hardware Flow Control ▶ New: 2.3.6 – BT SPP Master Auto-Reconnection ▶ Modified: descriptions for CD-ROM removed
1.04	May 18, 2015	<ul style="list-style-type: none"> ▶ Modified: Appendix II – #@RDVER command added
1.03	May 19, 2014	<ul style="list-style-type: none"> ▶ Modified: Care & Maintenance – “Keep the scanner away from any magnets and magnetic fields to prevent the laser engine from malfunctioning.” added ▶ New: 1.1.2 – Enable/Disable the [Delete] key barcodes added ▶ New: 1.18 – Serial Number Stamp ▶ New: 1.18.1 – Separator between Serial Number and Data ▶ New: 2.1.11 – BT HID Slave/Master Switching ▶ New: 2.1.12 – BT HID Auto-Reconnection ▶ New: 2.6.7 – USB Polling Interval ▶ Modified: 3.2.2 – Changing device name barcode added ▶ New: 4.8.3 – Conversion format ▶ New: 4.10.3 – GS1 Formatting, Application ID Mark ▶ Modified: 4.16.2 – GS1 DataBar Omnidirectional conditions added ▶ Modified: 4.16.3 – GS1 DataBar Expanded conditions added ▶ Modified: 4.16.4 – GS1 DataBar Limited conditions added ▶ New: 4.16.5 – Field Separator (GS Character) ▶ New: 4.16.6 – GS1 Formatting, Application ID Mark ▶ Modified: Appendix II – ShowScanner, SelectScannerN added ▶ Modified: Appendix III – remove “Send” from “CR*/Send/ENTER*”
1.02	Sep. 23, 2013	<p>New: 1.17.3 Disable Hardware Reset (setting barcodes)</p> <p>New: 4.11.1 ISBT Concatenation (setting barcodes)</p> <p>New: Appendix II Host Serial Commands - #@BEEP,xx, #@RLED,xx, #@GLED,xx, #@VIBR,xx commands added</p>
1.01	Apr. 17, 2013	<p>New: 2.1.10 – Transmit Speed setup barcodes (BT HID)</p> <p>Modification: Specifications – Scan Rate (scans/second) added</p>
1.00	Dec. 25, 2012	Initial release

CONTENTS

IMPORTANT NOTICES	- 3 -
For USA.....	- 3 -
For Canada.....	- 3 -
For Hand-held Product with RF Functions.....	- 4 -
Safety Precautions	- 4 -
Care & Maintenance.....	- 4 -
RELEASE NOTES	- 5 -
INTRODUCTION.....	1
Get Familiarized with 1663 and 3610.....	2
Install the Battery into 1663.....	2
Charge the Battery	3
Charge the Battery via Charger.....	4
Use 3610.....	5
Inside the Package.....	6
Product Highlights	6
Symbolologies Supported	7
QUICK START.....	9
Enter Configuration Mode.....	11
Exit Configuration Mode.....	11
Default Settings	12
Save User Settings as Defaults.....	12
Restore User Defaults.....	12
Restore System Defaults.....	12
Read a Setup Barcode	13
Configure Parameters.....	13
List the Current Settings	17
Create One-Scan Setup Barcodes.....	19
UNDERSTANDING THE BARCODE SCANNER	21
1.1 Battery	21
1.1.1 Power Level.....	22
1.1.2 How to Operate the Scanner.....	22
1.1.3 Auto Power Off & Power-Saving	23
1.2 Memory.....	26
1.2.1 Transmit Buffer	26
1.2.2 Memory Mode.....	26
1.2.3 Free Memory	28
1.3 LED Indicator.....	29

1.3.1 Good Read LED.....	30
1.3.2 Good Read LED Duration.....	30
1.4 Beeper.....	31
1.4.1 Beeper Volume.....	32
1.4.2 Good Read Beep	33
1.4.3 Low Battery Alarm	34
1.5 Vibrator.....	34
1.5.1 Good Read Vibrator.....	34
1.5.2 Good Read Vibrator Duration.....	34
1.6 Send "NR" to Host.....	35
1.7 Scan Modes.....	36
1.7.1 Continuous Mode	37
1.7.2 Test Mode	37
1.7.3 Laser Mode.....	38
1.7.4 Auto Off Mode.....	38
1.7.5 Auto Power Off Mode	38
1.7.6 Alternate Mode	39
1.7.7 Aiming Mode.....	39
1.7.8 Multi-Barcode Mode.....	40
1.8 Scanning Timeout.....	41
1.9 Delay between Re-read.....	42
1.10 Read Redundancy for All Symbologies.....	43
1.11 Addon Security for UPC/EAN Barcodes.....	44
1.12 Negative Barcodes.....	44
1.13 Effective Decoding Area.....	45
1.13.1 Positioning Window	45
1.13.2 Adjusting Window	46
1.14 Use Direct USB Cable	47
1.14.1 Direct USB Interface.....	47
1.14.2 Disable Direct USB Interface.....	47
1.15 Pager Beep Duration.....	48
1.16 Time Stamp.....	49
1.16.1 Date and Time Settings.....	49
1.16.2 Separator for Date and Time.....	51
1.16.3 Date Format.....	52
1.17 Hardware Reset	53
1.17.1 Restore System Defaults.....	53
1.17.2 Reset Connection	53
1.17.3 Disable Hardware Reset	53
1.18 Serial Number Stamp	54
1.18.1 Separator between Serial Number Stamp and Data.....	54
SELECTING OUTPUT INTERFACE	55
2.1 <i>Bluetooth</i> [®] HID	56
2.1.1 Activate <i>Bluetooth</i> [®] HID & Select Keyboard Type.....	57

2.1.2 Reset Connection.....	58
2.1.3 Keyboard Settings.....	59
2.1.4 Inter-Character Delay.....	64
2.1.5 Inter-Function Delay	65
2.1.6 HID Character Transmit Mode.....	65
2.1.7 Special Keyboard Feature	66
2.1.8 Keypad Support for iPhone/iPad.....	66
2.1.9 Transmit Speed	67
2.1.10 BT HID Slave/Master Switching	68
2.1.11 BT HID Auto-Reconnection.....	68
2.1.12 Control Character Output (Windows only)	68
2.2 <i>Bluetooth</i> [®] SPP Slave.....	69
2.2.1 Activate <i>Bluetooth</i> [®] SPP Slave Mode	69
2.2.2 Inter-Function Delay	69
2.2.3 ACK/NAK Timeout	70
2.2.4 BT SPP Slave Hardware Flow Control.....	70
2.3 <i>Bluetooth</i> [®] SPP Master	71
2.3.1 Activate <i>Bluetooth</i> [®] SPP Master Mode	71
2.3.2 Inter-Function Delay	72
2.3.3 ACK/NAK Timeout	73
2.3.4 Switch between Master/Slave Mode	74
2.3.5 BT SPP Master Hardware Flow Control.....	74
2.3.6 BT SPP Master Auto-Reconnection	74
2.4 USB HID via 3610	75
2.4.1 Activate USB HID & Select Keyboard Type	76
2.4.2 Keyboard Settings.....	77
2.4.3 Inter-Character Delay.....	82
2.4.4 Inter-Function Delay	83
2.4.5 HID Character Transmit Mode.....	83
2.4.6 Special Keyboard Feature	83
2.4.7 USB HID via 3610 Auto-Reconnection	84
2.4.8 USB Polling Interval.....	84
2.4.9 Control Character Output (Windows only)	84
2.5 USB Virtual COM via 3610	85
2.5.1 Activate USB Virtual COM.....	85
2.5.2 Activate USB Virtual COM_CDC	85
2.5.3 Inter-Function Delay	85
2.5.4 ACK/NAK Timeout	86
2.5.5 USB Virtual COM/COM_CDC via 3610 Auto-Reconnection.....	87
2.6 Direct USB HID	88
2.6.1 Activate USB HID & Select Keyboard Type	89
2.6.2 Keyboard Settings.....	90
2.6.3 Inter-Character Delay.....	95
2.6.4 Inter-Function Delay	96
2.6.5 HID Character Transmit Mode.....	96
2.6.6 Special Keyboard Feature	97
2.6.7 USB polling Interval.....	97
2.6.8 Control Character Output (Windows only)	98

2.7 Direct USB Virtual COM	99
2.7.1 Activate USB Virtual COM	99
2.7.2 Activate USB Virtual COM_CDC	99
2.7.3 Inter-Function Delay	99
2.7.3 ACK/NAK Timeout	100
SET UP A WPAN CONNECTION	101
3.1 Connecting via 3610	102
3.1.1 Connect to 3610	102
3.1.2 Change Interface	103
3.2 Connecting via <i>Bluetooth</i> [®] Dongle	104
3.2.1 Change Interface	104
3.2.2 Configure Related Settings	105
3.2.3 Connect to Dongle	109
3.2.4 Secure Simple Pairing (SSP)	116
CHANGE SYMBOLOGY SETTINGS	117
4.1 Codabar	118
4.1.1 Codabar Security Level	118
4.1.2 Start/Stop Characters Selection	118
4.1.3 Start/Stop Transmission	119
4.1.4 CLSI Conversion	119
4.2 Code 25 – Industrial 25	120
4.2.1 Start/Stop Pattern Selection	120
4.2.2 Verify Check Digit	121
4.2.3 Transmit Check Digit	121
4.2.4 Code Length Qualification	122
4.2.5 Security Level	123
4.3 Code 25 – Interleaved 25	123
4.3.1 Start/Stop Pattern Selection	123
4.3.2 Verify Check Digit	124
4.3.3 Transmit Check Digit	124
4.3.4 Code Length Qualification	125
4.3.5 Security Level	125
4.4 Code 25 – Matrix 25	126
4.4.1 Start/Stop Pattern Selection	126
4.4.2 Verify Check Digit	127
4.4.3 Transmit Check Digit	127
4.4.4 Code Length Qualification	128
4.4.5 Security Level	128
4.5 Code 39	129
4.5.1 Start/Stop Transmission	129
4.5.2 Verify Check Digit	129
4.5.3 Transmit Check Digit	129
4.5.4 Standard/Full ASCII Code 39	130
4.5.5 Code 39 Security Level	130
4.5.6 Asterisks (*) as Data Characters	130
4.6 Trioptic Code 39	131

4.7 Code 93	131
4.8 Code 128.....	131
4.8.1 Code 128 Security Level	131
4.9 EAN-8	132
4.9.1 Convert to EAN-13	133
4.9.2 Transmit Check Digit.....	133
4.9.3 Conversion Format.....	133
4.10 EAN-13	134
4.10.1 ISBN Conversion	135
4.10.2 ISSN Conversion	135
4.10.3 Transmit Check Digit	135
4.10.4 EAN-13 Security Level	136
4.11 GS1-128 (EAN-128).....	137
4.11.1 Code ID Transmission	137
4.11.2 Field Separator (GS Character)	137
4.11.3 GS1 Formatting	138
4.12 ISBT 128.....	139
4.12.1 ISBT Concatenation	139
4.13 MSI	140
4.13.1 Verify Check Digit	140
4.13.2 Transmit Check Digit	140
4.13.3 Code Length Qualification	141
4.14 French Pharmacode.....	142
4.14.1 Transmit Check Digit	142
4.15 Italian Pharmacode	143
4.15.1 Transmit Check Digit	143
4.16 Plessey	144
4.16.1 Convert to UK Plessey	144
4.16.2 Transmit Check Digit	144
4.17 GS1 DataBar (RSS Family)	145
4.17.1 Code ID Selection	145
4.17.2 GS1 DataBar Omnidirectional (RSS-14)	146
4.17.3 GS1 DataBar Expanded (RSS Expanded).....	147
4.17.4 GS1 DataBar Limited (RSS Limited).....	148
4.17.5 Field Separator (GS Character).....	149
4.17.6 GS1 Formatting	149
4.17.7 GS1 DataBar Security Level	150
4.18 Telepen.....	151
4.18.1 Telepen Output – Full ASCII/Numeric	151
4.19 UPC-A.....	152
4.19.1 Convert to EAN-13	153
4.19.2 System Number Transmission	153
4.19.3 Transmit Check Digit	153
4.20 UPC-E.....	154
4.20.1 System Number Selection	155

4.20.2 Convert to UPC-A.....	155
4.20.3 System Number Transmission	156
4.20.4 Transmit Check Digit	156
4.21 Code 11.....	157
4.21.1 Verification Check Digit	157
4.21.2 Transmit Check Digit	158
4.21.2 Security Level.....	158
DEFINING OUTPUT FORMAT	159
5.1 Letter Case.....	159
5.2 Character Substitution.....	160
5.2.1 Select a Set for Character Substituion.....	161
5.2.2 Symbolologies for Character Substitution (All 3 Sets).....	162
5.3 Prefix/Suffix Code.....	168
5.4 Code ID.....	169
5.4.1 Select Pre-defined Code ID	169
5.4.2 Change Code ID	172
5.4.3 Clear Code ID Settings.....	173
5.5 Length Code.....	174
5.6 Multi-Barcode Editor	178
5.6.1 Edit a Concatenation of Barcodes	179
5.6.2 Activate the Concatenation of Barcodes.....	181
5.7 Removal of Special Character.....	182
APPLYING FORMATS FOR DATA EDITING	183
6.1 Activating Editing Formats.....	184
6.1.1 Activate Editing Formats.....	184
6.1.2 Exclusive Data Editing	185
6.2 How to Configure Editing Formats	186
6.2.1 Select Format to Configure.....	187
6.2.2 Restore Default Format.....	188
6.3 Configure Format — Define Data Criteria	189
6.3.1 Applicable Code Type.....	189
6.3.2 Data Length	196
6.3.3 Matching String & Location.....	197
6.4 Configure Format — Define Data Field.....	198
6.4.1 Start Position.....	198
6.4.2 Field Adjustment.....	198
6.4.3 Total Number of Fields	199
6.4.4 Field Settings.....	200
6.4.5 Pause Field Setting	206
6.5 Configure Format — Define Transmission Sequence.....	207
6.6 Programming Examples	209
6.6.1 Example I	209
6.6.2 Example II.....	210

SPECIFICATIONS	211
FIRMWARE UPGRADE	213
How to Upgrade 1663 Firmware	213
Using 3610	213
Use Direct USB Virtual COM	215
Use <i>Bluetooth</i> [®] Dongle	216
How to Upgrade 3610 Firmware	218
Upgrade 3610 CPU Firmware	218
Upgrade 3610 USB Bridge Firmware	219
HOST SERIAL COMMANDS	221
Serial Commands	221
Example	223
3610 Setup Barcodes & Serial Commands	225
3610 Serial Commands and Equivalent Setup Barcodes	226
Example	228
KEYBOARD WEDGE TABLE	229
Key Type & Status	230
Key Type	230
Key Status	230
Example	231
NUMERAL SYSTEMS	233
Decimal System	233
Hexadecimal System	234
ASCII Table	235
Entering PIN Code for Authentication	236
Use Preset PIN	236
Disable Authentication or Use Random PIN	237
KEYBOARD TYPE ONE-SCAN BARCODE	239
Bluetooth HID	239
Remote USB HID	241

INTRODUCTION

CipherLab's small-form-factor 1600 Series Barcode Scanners are specifically designed to answer the mobile demands. The palm-sized scanners are designed to help accelerate productivity while lowering the total cost of ownership. Intensive data collection jobs are made easier with fast, accurate barcode scanning in various working environments, especially in small businesses. Integrated with short-distance cordless technology, the small-form-factor scanners are ideal for carrying in pocket, and thus give workers tether-free mobility anytime anywhere and get job done more efficiently. This line of scanners deliver data over a cordless personal network at a range of up to 10 meters and a prolonged battery life to keep business running.

Owing to the compact design, extremely low power consumption, and powerful decoding capability, the 1600 Series Barcode Scanners are the best choice for the following applications –

- ▶ Receiving in Retail
- ▶ Product labeling & Tracking
- ▶ Shelf Product Replenishment
- ▶ Mobile Point of Sale (POS)
- ▶ Mobile Inventory Management
- ▶ Order Picking & Staging
- ▶ Work-In-Process Tracking
- ▶ Material Flow Control
- ▶ Transportation & Distribution
- ▶ Warehousing
- ▶ Asset Management

This manual contains information on operating the scanner and using its features. We recommend you keep one copy of the manual at hand for quick reference or maintenance purposes. To avoid any improper disposal or operation, please read the manual thoroughly before use.


Thank you for choosing CipherLab products!



GET FAMILIARIZED WITH 1663 AND 3610

INSTALL THE BATTERY INTO 1663

- 1) Hold the scanner face down in one hand, press the battery cover, and slide the battery cover.
- 2) Remove the battery cover.
- 3) Push battery lock to unlocked position.

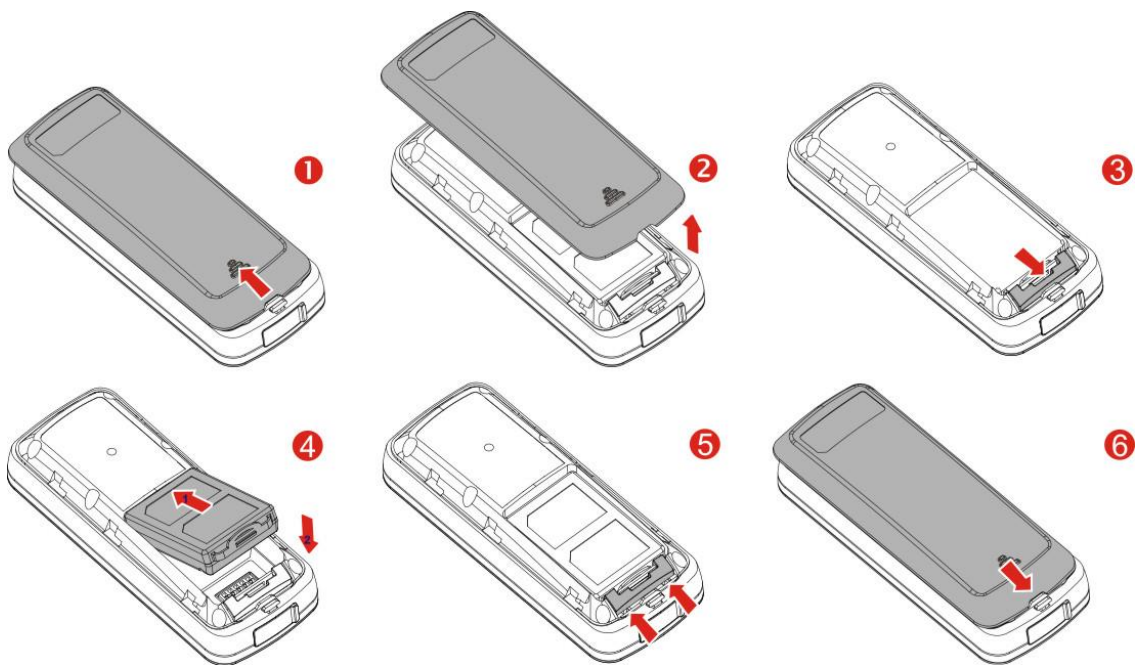

- 4) Insert the battery into the battery compartment.
 - ▶ Install the supplied 3.7V/850mAh Li-ion battery into the battery compartment.
- 5) Push battery lock to lock the battery firmly.
- 6) Replace the battery cover.
- 7) Hold down the [Power/Delete] key for about 2 seconds to turn on the scanner.

The scanner will respond with a long beep (high tone) and its LED indicator will become solid red and go off.





Note: (1) To turn off the scanner, press the [Power/Delete] key for 2 seconds. The scanner will respond with two short beeps (high tone) and the LED will become solid red. Release the key. Otherwise, let the scanner turn off automatically in specific circumstances. Refer to settings of "[Auto Power Off](#)".
(2) For shipping and storage purposes, remove the battery from the scanner. This will keep the batteries in good condition for future use.

CHARGE THE BATTERY

The battery may not be fully charged for shipment. For initial use, it is recommended to fully charge the battery before using the scanner. You can use the Direct USB cable to connect the scanner to PC for charging. It takes approximately 4 hours to fully charge the battery. Refer to [1.14 Use Direct USB Cable](#).

Note: Battery charging stops when the temperature drops below 0°C or exceeds 40°C. It is recommended to charge the battery at room temperature (18°C to 25°C) for optimal performance.

- 1) Install the battery to 1663.
- 2) Connect 1663 to host computer or notebook via the USB cable.
- 3) The scanner LED will flash red during charging.
When the charging is complete, the LED will flash green.
When charging errors occur, the LED will turn solid red.




CHARGE THE BATTERY VIA CHARGER

The battery charger is provided for charging the battery outside of the scanner. You may purchase the charger separately. It takes approximately 3 hours to charge the battery to full.

Note: Battery charging stops when the temperature drops below 0°C or exceeds 40°C. It is recommended to charge the battery at room temperature (18°C to 25°C) for optimal performance.

- 1) Insert the battery.
- 2) Connect the power supply cord to the charger.
- 3) Connect the other end of the power cord to a suitable power outlet.

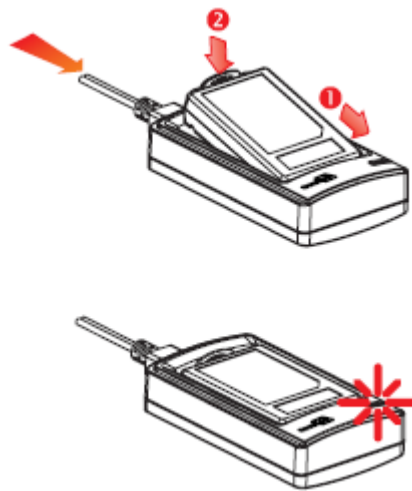


Status LED		Meaning
Red, solid	---	Charger power ON (LED on for 0.5 second)
Red, solid	---	Charging battery
---	Green, solid	Charging done
---	---	Power or battery not ready



USE 3610

The CipherLab Dongle (3610) is specifically designed for the scanner to communicate with a host computer cordless. The connection between the scanners and 3610 is made easy and reliable. Refer to [3.1.1 Connect to 3610](#).

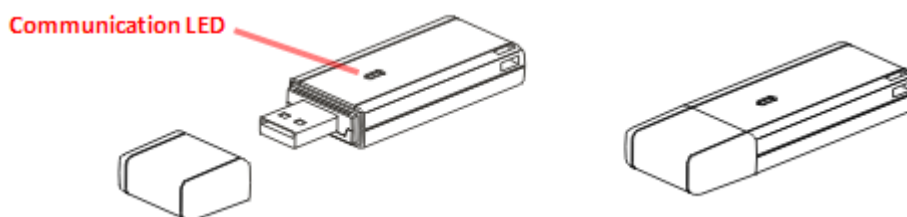

There is one LED indicator provided for communications status.

Communication LED		Meaning
---	Blue, solid	Initialize
Red, solid	---	Failed to establish a USB connection
Red, solid	Blue, flashing	Serial command mode with USB Virtual COM: wait 3 seconds for starting a serial command
Red, flashing	Blue, flashing	Serial command mode with USB HID: wait 3 seconds for pressing [Num Lock] or [Caps Lock] 5 times via keyboard
---	Blue, flashing	Wait for connection request from the scanner (Slow flash at 0.5 Hz)
---	Blue, flashing	Connected with the scanner (Fast flash at 1 Hz)
Red, solid	Blue, flashing	Failed to send data to host via USB Virtual COM (Fast flash at 1 Hz)
Red, flashing	---	Enter Download Mode



INSIDE THE PACKAGE

The items included in the package may be different, depending on your order. Save the box and packaging material for future use in case you need to store or ship the scanner.

- ▶ 1663 Scanner
- ▶ CipherLab Dongle (3610) Optional
- ▶ Rechargeable Li-ion Battery Pack
- ▶ Direct USB Cable
- ▶ Wristband
- ▶ Setup Cards
- ▶ Quick Start Guide

PRODUCT HIGHLIGHTS

- ▶ Small-form-factor and built tough to survive drop test.
- ▶ Extremely low power consumption.
- ▶ Firmware upgradeable.
- ▶ Support most popular barcode symbologies, including GS1-128 (EAN-128), GS1 DataBar (RSS) etc.
- ▶ Support Time Stamp and Paging functions.
- ▶ Support negative barcodes.
- ▶ Support different scan modes, including Aiming Mode and Multi-Barcode Mode.
- ▶ LED indicator, beeper and vibrator for status verification or warning.
- ▶ Beeping tone and duration programmable for Good Read.
- ▶ 4MB flash memory for Memory Mode operation, storing over 240,000 scans based on EAN-13 barcodes.
- ▶ Provides up to 2 KB SDRAM for reserve buffer while getting out of range over a wireless personal area network (WPAN), storing up to 128 scans based on EAN-13 barcodes.
- ▶ Capable of transmitting scanned data, emulating a serial cable (*Bluetooth*® SPP) or as keyboard input (*Bluetooth*® HID), to a notebook computer or PDA with *Bluetooth*® wireless technology.
- ▶ Programmable parameters including data output format, editing format, symbologies.
- ▶ Easy configuration through ScanMaster.
- ▶ Easy connection through CipherConnect, readily available via online marketplace for mobile devices running on Android 2.x, BlackBerry 5.x, or Windows Mobile 6.x.



SYMBOLOGIES SUPPORTED

Most of the popular barcode symbologies are supported, as listed below. Each can be individually enabled or disabled. The scanner will automatically discriminate and recognize all the symbologies that are enabled. Refer to [Chapter 4 Change Symbology Settings](#) for details of each symbology.

Symbologies Supported: Enable/Disable		Default	
Codabar		Enabled	
Code 93		Enabled	
MSI			Disabled
Plessey			Disabled
Telepen			Disabled
Code 128	Code 128	Enabled	
	GS1-128 (EAN-128)	Enabled	
	ISBT 128	Enabled	
Code 2 of 5	Industrial 25	Enabled	
	Interleaved 25	Enabled	
	Matrix 25		Disabled
Code 3 of 9	Code 39	Enabled	
	Italian Pharmacode		Disabled
	French Pharmacode		Disabled
	Trioptic Code 39		Disabled
EAN/UPC	EAN-8	Enabled	
	EAN-8 Addon 2		Disabled
	EAN-8 Addon 5		Disabled
	EAN-13	Enabled	
	EAN-13 & UPC-A Addon 2		Disabled
	EAN-13 & UPC-A Addon 5		Disabled
	ISBN		Disabled
	UPC-E0	Enabled	
	UPC-E1		Disabled
	UPC-E Addon 2		Disabled
	UPC-E Addon 5		Disabled
	UPC-A	Enabled	



GS1 DataBar (RSS)	GS1 DataBar Omnidirectional (RSS-14)		Disabled
	GS1 DataBar Truncated		Disabled
	GS1 DataBar Stacked		Disabled
	GS1 DataBar Stacked Omnidirectional		Disabled
	GS1 DataBar Limited (RSS Limited)		Disabled
	GS1 DataBar Expanded (RSS Expanded)		Disabled
	GS1 DataBar Expanded Stacked		Disabled
Code 11			Disabled



QUICK START

The configuration of the scanner can be done by reading the setup barcodes contained in this manual or via the *ScanMaster* software.

This section describes the procedure of configuring the scanner by reading the setup barcodes and provides some examples for demonstration.

Configuration Mode

- 1) Hold down the [Power/Delete] key for 2 seconds to turn on the scanner. It will respond with a long beep and its LED will come on-off.
- 2) Read the "Enter Setup" barcode. It will respond with six beeps and its LED indicator will become flashing red after reading the barcode.
- 3) Read more setup barcodes... Most of the setup barcodes are normal, and the scanner will respond with two beeps (low-high tone). For special setup barcodes, it requires reading more than one setup barcode to complete the setting.
- 4) Read the "Update" or "Abort" barcode. It will respond with six beeps and its LED indicator will become flashing red after reading the barcode.
- 5) The scanner will restart automatically upon reading the "Update" or "Abort" barcode. It will respond with a long beep and its LED will come on-off.




Note: Refer to [Appendix II Host Serial Commands](#) for how to configure the 3610 dongle by having the scanner read 3610-related setup barcodes or using serial commands.



Working Mode

Upon powering up, the scanner will try to establish a connection with 3610 or a computer with *Bluetooth*® wireless technology. Refer to [Chapter 3 - Set up a WPAN Connection](#) for details. The connection between the scanners and 3610 is made easy and reliable. Now, it also supports *Bluetooth*® SPP Master Mode as an alternative. Refer to [2.3 Bluetooth® SPP Master](#).

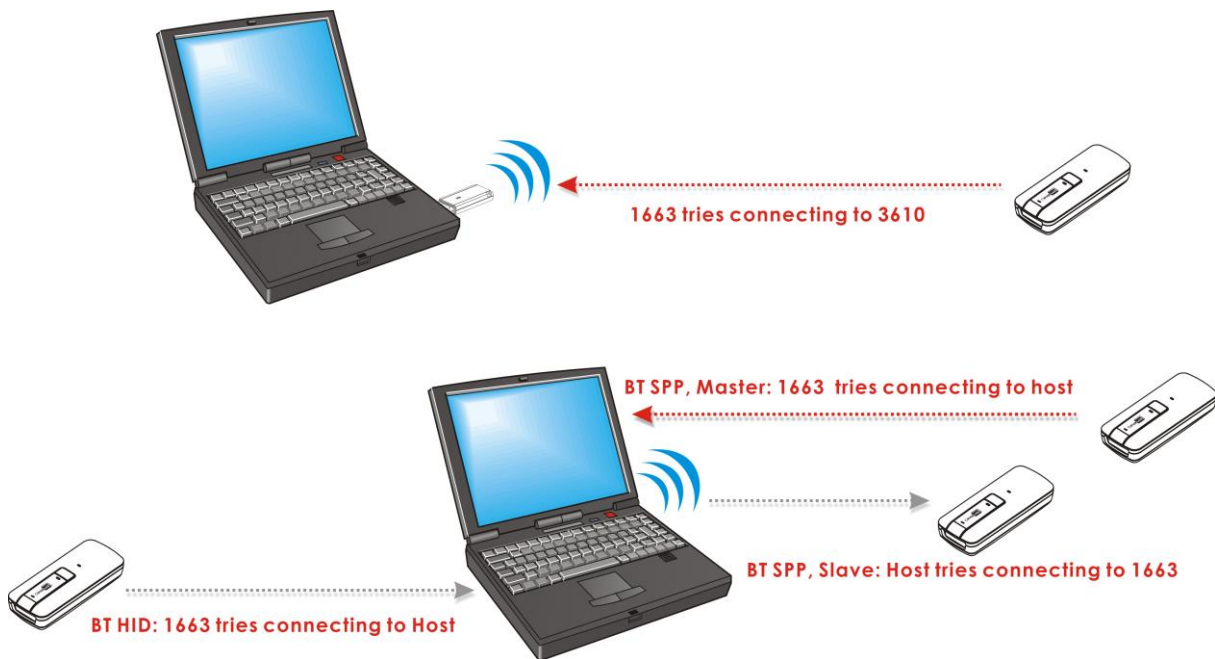

Note: If USB Virtual COM or *Bluetooth*® SPP is selected for output interface, the host can directly send serial commands to configure the scanner. For example, run HyperTerminal.exe and type the 6-digit command located under each setup barcode. Refer to [Appendix II Host Serial Commands](#).



ENTER CONFIGURATION MODE

For the scanner to enter the configuration mode, read the "Enter Setup" barcode, which can be located at the bottom of almost every even page of this manual.

- ▶ The scanner will respond with six beeps and its LED indicator will become flashing red after reading the barcode.

Enter Setup



For configuring scanner parameters, see "Read a Setup Barcode" below.

EXIT CONFIGURATION MODE

For the scanner to save settings and exit the configuration mode, read the "Update" barcode, which can be located at the bottom of almost every odd page of this manual. Exit the configuration mode without saving any changes; read the "Abort" barcode instead.

- ▶ Just like reading the "Enter Setup" barcode, the scanner will respond with six beeps and its LED indicator will become flashing red after reading the barcode. Wait for a few seconds for the scanner to restart itself.

Update



109999

Abort



109998



DEFAULT SETTINGS

SAVE USER SETTINGS AS DEFAULTS

For the scanner to keep the customized settings as user defaults, you must read the "Save as User Defaults" barcode. This is a normal setup barcode, and the scanner will respond with two beeps (low-high tone).

- ▶ After reading the "Update" barcode, the current settings will be saved as user defaults.

Save as User
Defaults



RESTORE USER DEFAULTS

For the scanner to restore the user defaults, which you have saved earlier, you must read the "Restore User Defaults" barcode. This is a normal setup barcode, and the scanner will respond with two beeps (low-high tone).

- ▶ After reading the "Update" barcode, all the parameters of the scanner will return to their customized values.

Restore User
Defaults



RESTORE SYSTEM DEFAULTS

For the scanner to restore the factory defaults, read the "Restore System Defaults" barcode. This is a normal setup barcode, and the scanner will respond with two beeps (low-high tone). After reading the "Update" barcode, all the parameters of the scanner will return to their default values. The current connection record will be cleared as well. Refer to [1.17.1 Restore System Defaults](#) for the key combination used to restore defaults during operation.

For 3610 to restore factory defaults, refer to [3610 Setup Barcodes](#) & Serial Commands.

Restore System
Defaults



Note: The system default value (if there is one) for each setting is indicated by an asterisk "*".



READ A SETUP BARCODE


CONFIGURE PARAMETERS

For most of the scanner parameters, only one read is required to set them to new values. The scanner will respond with two beeps (low-high tone) when each parameter is set successfully. Refer to [Create One-Scan Setup Barcodes](#).




But for a number of special parameters, multiple reads are required to complete the setting. In this case, the scanner will respond with a short beep to indicate it needs to read more setup barcodes. These special parameters may require reading one or more setup barcodes, such as:

- ▶ Numeric barcodes, say, for keyboard type, inter-character delay, length qualification
- ▶ Hexadecimal barcodes, say, for character strings as prefix, suffix, etc.
- ▶ When “Bluetooth® HID” or “USB HID” is configured for interface, Key Type and Key Status will then become applicable. Decide whether to change key status when “Normal Key” is selected for Key Type.

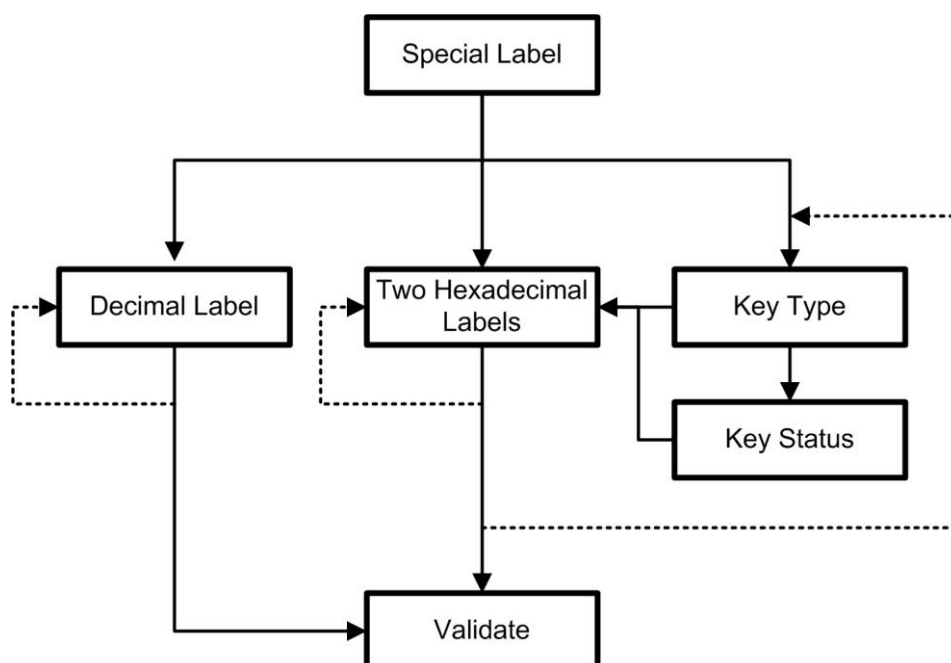To complete the configuration of these special parameters, it requires reading the “Validate” barcode, and the scanner will respond with two beeps (low-high tone) to indicate the input values are validated.



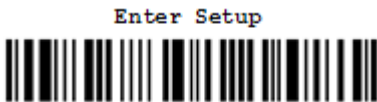







The example below shows how to save your settings as "User Default" so that you may restore user defaults at a later time:

Steps	Action	LED/Beeper Response when Successful
1)	Power on the scanner...	The scanner will respond with a long beep (high tone) and its LED indicator will become solid red and go off.
2)	Enter the Configuration Mode...	The scanner will respond with six beeps (high-low tone repeats three times), and its LED indicator will be flashing red.
3)	Read a Setup barcode... For example,  *Enable Industrial 25  100307 Save as User Default  109986	The scanner will respond with two beeps (low-high tone) if reading a normal setup barcode.
4)	Exit the Configuration Mode...	Same as for <i>Enter the Configuration Mode</i> .
5)	The scanner will automatically restart itself...	Same as for <i>Power on the scanner</i> .
*	When any configuration error occurs...	The scanner will respond with one long beep (low tone).









The example below shows how to set numeric parameters:

Steps	Action	LED/Beeper Response when Successful
1)	Power on the scanner...	The scanner will respond with a long beep (high tone) and its LED indicator will become solid red and go off.
2)	Enter the Configuration Mode...	The scanner will respond with six beeps (high-low tone repeats three times), and its LED indicator will become flashing red.
3)	Read a Setup barcode...	The scanner will respond with two beeps (low-high tone) if reading a normal setup barcode.
	For example,	
	<div>Normal setup barcode</div> <div>*Enable Interleaved 25</div>  <div>100309</div>	
	<div>Normal setup barcode</div> <div>Enable Fixed Length(s) ...</div>  <div>100604</div>	
	<div>Special setup barcode</div> <div>Max. Length (*126) Or Fixed Length 1</div>  <div>100606</div>	The scanner will respond with one short beep if reading a special setup barcode such as "Max. Length", indicating the setup requires reading more barcodes.
	<div>Decimal barcodes</div> <div>1</div>  <div>109901</div> <div>5</div>  <div>109905</div> <div>Validate</div>  <div>109994</div>	<p>Read the "Decimal Value" barcode(s).</p> <p>► Refer to Appendix IV "Decimal System"</p>
4)	Exit the Configuration Mode...	The scanner will respond with two beeps (low-high tone) when the input values are validated.
	<div>Update</div>  <div>109999</div> <div>OR</div> <div>Abort</div>  <div>109998</div>	Same as for <i>Enter the Configuration Mode</i> .
5)	The scanner will automatically restart itself...	Same as for <i>Power on the scanner</i> .



The example below shows how to set string parameters:

Steps	Action	LED/Beeper Response when Successful
1)	Power on the scanner...	The scanner will respond with a long beep (high tone) and its LED indicator will become solid red and go off.
2)	Enter the Configuration Mode...	The scanner will respond with six beeps (high-low tone repeats three times), and its LED indicator will become flashing red.
3)	Read a Setup barcode...	The scanner will respond with one short beep if reading a special setup barcode such as "Prefix Code", indicating the setup requires reading more barcodes.
	For example,	
	<div>Special setup barcodes</div> <div> <p>Configure Prefix</p>  <p>101230</p> <p>*Normal</p>  <p>109926</p> <p>Add Left Alt</p>  <p>109932</p> </div>	<p>When "Bluetooth® HID" or "USB HID" is configured for interface, Key Type and Key Status will then become applicable. You may decide whether or not to change key status when "Normal Key" is selected for Key Type.</p> <p>▶ Refer to Appendix III</p>
	<div>Hexadecimal barcodes</div> <div> <p>2</p>  <p>109902</p> <p>B</p>  <p>109911</p> <p>Validate</p>  <p>109994</p> </div>	<p>Read the "Hexadecimal Value" barcodes for the desired character string. For example, read "2" and "B" for the scanner to prefix the character "+".</p> <p>▶ Refer to Appendix IV "Hexadecimal System"</p>
4)	Exit the Configuration Mode...	The scanner will respond with two beeps (low-high tone) when the input values are validated.
	<div> <p>Update</p>  <p>109999</p> <p>OR</p> <p>Abort</p>  <p>109998</p> </div>	Same as for <i>Enter the Configuration Mode</i> .
5)	The scanner will automatically restart itself...	Same as for <i>Power on the scanner</i> .



LIST THE CURRENT SETTINGS

The current settings of all scanner parameters can be sent to the host computer for user inspection. The listing includes pages as shown below. You can select the page of interest by having the scanner read the "List Page x" barcode. The scanner will respond with two beeps (low-high tone) and send the selected page to the host immediately.

List settings regarding Firmware Version, Serial Number, Interface, Buzzer, Simple Pairing Status and Other Scanner Parameters

List Page 1



List settings regarding Prefix, Suffix, Code Type and Length Code Setting

List Page 2



List settings regarding Code ID

List Page 3



List settings regarding Readable Symbologies

List Page 4



List settings regarding Symbology Parameters (1/3)

List Page 5



List settings regarding Symbology Parameters (2/3)

List Page 6



List settings regarding Symbology Parameters (3/3)

List Page 7



List settings regarding Editing Format 1

List Page 8



List settings regarding Editing Format 2

List Page 9



List settings regarding Editing Format 3

List Page 10



List settings regarding Editing Format 4

List Page 11



109937

List settings regarding Editing Format 5

List Page 12



109938

List settings regarding Power and Time

List Page 13



109939




CREATE ONE-SCAN SETUP BARCODES

The fact is most of the scanner parameters require only one read for setting new values. To facilitate configuring the scanner, you may create One-Scan setup barcodes for use.

The requirements of a One-Scan setup barcode are:

- ▶ a prefix of the “#@” characters
- ▶ the six digits of command parameters
- ▶ a suffix of the “#” character

For example, the scanner needs the reading of three setup barcodes for the command parameter “109952” to take effect:

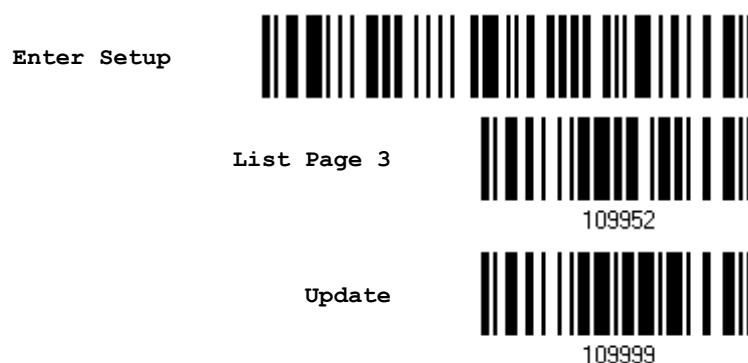

Now, it requires only one read:



Note: The scanner will restart automatically upon reading the One-Scan setup barcode for (1) changing the interface or (2) setting memory mode, enable or disable. It will respond with a long beep and its LED will come on-off.





UNDERSTANDING THE BARCODE SCANNER

This chapter explains the features and usage of the barcode scanner.

IN THIS CHAPTER

1.1 Battery	21
1.2 Memory	26
1.3 LED Indicator	29
1.4 Beeper.....	31
1.5 Vibrator	34
1.6 Send "NR" to Host.....	35
1.7 Scan Modes.....	36
1.8 Scanning Timeout	41
1.9 Delay between Re-read.....	42
1.10 Read Redundancy for All Symbologies	43
1.11 Addon Security for UPC/EAN Barcodes	44
1.12 Negative Barcodes.....	44
1.13 Effective Decoding Area	45
1.14 Use Direct USB Cable.....	47
1.15 Pager Beep Duration.....	48
1.16 Time Stamp.....	49
1.17 Hardware Reset	53
1.18 Serial Number Stamp	54

1.1 BATTERY

The scanner is battery-powered: Use a rechargeable 3.7 V/850 mAh Li-ion battery. For intensive data collection, please prepare spare battery or batteries for non-stop operation.

Note: (1) The rechargeable battery for 1663 may not be fully charged when shipped. We suggest charging it to full before use.

(2) The scanner can be configured to save battery power. Refer to settings of "[Auto Power Off & Power-Saving](#)", "[Sniff Mode](#)", as well as "[Low Battery Alarm](#)".



1.1.1 POWER LEVEL

Scan the barcode below to get the battery capacity information with each increment of 20 in percentage terms.

Remaining Battery
Capacity



1.1.2 HOW TO OPERATE THE SCANNER

Turn on the scanner...

Press the [Power/Delete] key for 2 seconds. The scanner will respond with a long beep (high tone), and its LED indicator will become solid red and go off.

Turn off the scanner...

Press the [Power/Delete] key for 2 seconds. The scanner will respond with two short beeps (high tone) and the LED will become solid red. Release the key then. Otherwise, let the scanner turn off automatically in specific circumstances.

Delete the last collected data when in memory mode ...

Press the [Power/Delete] key. The scanner will respond with two short beeps (high tone) and the LED will become solid red. Before the LED goes off (within 1 second), press the [Power/Delete] key again to confirm the deletion.

Enable/Disable the [Delete] key function

Scan the barcode below to enable/disable the [Delete] key. By default, users can press the [Power/Delete] key to delete data. If the function is disabled, pressing the key to delete data is not allowed.

*Enable



Disable



1.1.3 AUTO POWER OFF & POWER-SAVING

The scanner will stay active at power-on, which may be followed by a transition from full CPU speed to low CPU speed (Power-Saving) to auto shutdown (Auto Power Off).

- ▶ Power-Saving (1~254 min.; 0= Disable): By default, it is set to stand by at full-speed for 2 minutes before it enters low-speed mode. If this feature is not desired, set it to 0.
- ▶ Auto Power Off (1~254 min.; 0= Disable): By default, it is set to automatically shut down after 10 minutes. If this feature is not desired, set it to 0.

Note: 1. The Power-Saving setting will still take effect once a connection has been established successfully, via *Bluetooth*® HID or SPP.

Before establishing a WPAN connection successfully...

- 1) The scanner will stay active for a specified period of time (2 minutes by default) for the following scenarios. Its CPU is running at full speed, and the LED is flashing blue (On/Off ratio 0.5 s: 0.5 s).
 - (a) waiting for a connection request from the host (*Bluetooth*® SPP Slave Mode)
 - (b) trying to connect to the host (*Bluetooth*® HID or *Bluetooth*® SPP Master Mode)
 - (c) trying to connect to 3610
- 2) If it fails to connect within 2 minutes, the scanner will become inactive to save power for the remaining period of time (the specified value minus 2 minutes). Its CPU is running at low speed, and the LED is flashing red (On/Off ratio 0.3 s: 2.5 s).

Press the [Trigger] key to wake up the scanner when it becomes inactive, and the scanner will stay active again.
- 3) If it fails to connect again and again, and finally stays inactive until the specified time interval for Auto Power Off has elapsed, the scanner will automatically turn off in order to conserve battery power.

Hold down the [Power/Delete] key for 2 seconds to turn it on.

Note: For scenarios (a) and (b) in step 1, on your computer you may need to search for the scanner again.



After establishing a WPAN connection successfully...

- 1) Once a WPAN connection is established successfully, the scanner will stay active for a specified period of time (2 minutes by default) for data transmission. Its CPU is running at full speed, and the LED is flashing blue (On/Off ratio 0.02 s: 3 s).
- 2) If it is idle within 2 minutes, the scanner will become inactive to save power for the remaining period of time (the specified value minus 2 minutes). Its CPU is running at low speed, and the LED is flashing red (On/Off ratio 0.3 s: 2.5 s).

Press the [Trigger] key to wake up the scanner when it becomes inactive, and the scanner will stay active again.

- 3) If it is idle and finally stays inactive until the specified time interval for Auto Power Off has elapsed, the scanner will automatically turn off in order to conserve battery power. The three short beeps will ring out, tone descending from high to low.

Hold down the [Power/Delete] key for 2 seconds to turn it on.

- ▶ For *Bluetooth*® HID, the scanner will resume connection with the host upon powering on again, as long as the host application is running. The three short beeps will ring out, tone ascending from low to high. If the scanner fails to resume connection, it will try every 5 seconds to re-connect to the host unless the "Reset Connection" barcode has been scanned.
- ▶ For *Bluetooth*® SPP Slave Mode, the scanner must wait for the host to re-connect.
- ▶ For *Bluetooth*® SPP Master Mode, the scanner will resume connection with the host upon powering on again, as long as the host application is running. The three short beeps will ring out, tone ascending from low to high. If the scanner fails to resume connection, it will try every 5 seconds to re-connect to the host unless the "Reset Connection" or "Restore System Defaults" barcode has been scanned.
- ▶ With the use of 3610, the scanner will try re-connecting to 3610 whilst the scanner is active.



Auto Off after
0~254 min. (*10)



- 1) Read the barcode above to specify the time interval in minutes before the scanner automatically turns off.
- 2) Read the "[Decimal Value](#)" barcode on page 233. For example, read "1" and "5" for the scanner to automatically turn off after being idle for 15 minutes.
- 3) Read the "Validate" barcode on the same page to complete this setting.

Note: Auto Power Off will not take effect when the scanner is in the configuration mode.

Power-Saving after
0~254 min. (*2)



- 1) Read the barcode above to specify the time interval in minutes before the scanner enters low-speed mode.
- 2) Read the "[Decimal Value](#)" barcode on page 233. For example, read "5" for the scanner to enter low-speed mode after being idle for 5 minutes.
- 3) Read the "Validate" barcode on the same page to complete this setting.

Note: Power-Saving will not take effect when one of the following conditions is met:

- (1) The scanner has already established a BT HID/SPP connection.
 - (2) The scanner is in the configuration mode.
 - (3) The scan mode is set to Test, Continuous or Alternate Mode.
 - (4) The setting value of Power-Saving is greater than that of Auto Power Off.
-



1.2 MEMORY

The scanned data can be sent to a host computer immediately via the WPAN connection or stored in flash memory when the scanner is set to Memory mode.

1.2.1 TRANSMIT BUFFER

By default, the transmit buffer is enabled and ready for use when the scanner is out of range. Upon reading a barcode successfully within range, the scanner responds with one short beep (high tone) and its LED indicator becomes solid green and goes off. However, the host computer may not receive the data immediately if the scanner is out of range. With the 2 KB transmit buffer, the scanner can ignore the transmission status and keep on reading barcodes until the buffer is full.

When transmit buffer is enabled...

If the scanner is out of range, it will respond with two short beeps, high-low tone, upon reading a barcode successfully.

When transmit buffer is full, the scanner will respond with one long beep (low tone) and its LED indicator will become solid red and go off. You are advised to get back into range.

When transmit buffer is disabled...

If the scanner is out of range, it will respond with one long beep (low tone) and its LED indicator will become solid red and go off. You are advised to get back into range.

***Enable**



Disable



Note: The 2 KB transmit buffer on the scanner can hold as many as 128 scans based on EAN-13 barcodes. Data will be cleared out once the scanner is turned off or running out of battery power!

1.2.2 MEMORY MODE

When the scanner is in memory mode, it means any real-time connection established with the host is disabled. 1663 scanner keeps 4MB flash memory for memory mode operation, which can store over 240,000 scans based on EAN-13 barcodes.





Warning: No real-time connection is allowed unless the memory mode is disabled.

Memory Data Delay

You may set a delay between each data record while transmitting data back to the host.



Send Data

When the memory is used up, the scanner will respond with two short beeps (high-low tone) as a warning. It is advised to send data to the host immediately by having the scanner read the "Send



Data" barcode below.

1663 can send data via "Direct USB" interface once the computer has found the USB connection. Refer to [1.14 Use Direct USB Cable](#). Because the time-out value is set to 0 by default, connect the cable before having the scanner read the "Send Data" barcode. Otherwise, the scanner will try to temporarily resume the previous WPAN connection with the host, if there is any.

During transmission of data collected in memory mode, if the transmission fails, the scanner will flash red (On/Off ratio 0.2 s: 0.2 s) after responding with two short beeps (high-low tone) and go back to previous working mode. Press trigger or power key to stop flashing.

Send Data



Send Data Time-out

If a time-out value other than zero is given, it will first try to send data via "Direct USB" interface within the specified period of time. Connect the cable before it times out. When the attempt fails, it will try to temporarily resume the previous WPAN connection with the host, if there is any.

If 1663 has never been connected to the host cordless, it will not be able to send data until it is connected using the Direct USB cable!

Send Data Time-Out
after 0~15 sec.
(*0)



Clear Data & Confirm

Even though data has been sent to the host, the flash memory is still occupied unless you erase the memory by reading two barcodes – "Clear Data" and "Confirm".

- 1) Read the "Clear Data" barcode to clear the flash memory.
- 2) Read the "Confirm" barcode to confirm the action.

Clear Data



Confirm



1.2.3 FREE MEMORY

Upon memory mode, you can scan the barcode below to show the available capacity of the flash memory in percentage terms.

Spare memory



1.3 LED INDICATOR

The triple-color LED on top of the scanner is used to provide user feedback. For example, the LED becomes solid red and goes off upon powering on or running out of transmit buffer. You may tell the difference by the beeps – you will hear a long beep of high tone when powering on the scanner, and a long beep of low tone when the transmit buffer becomes full.

Scanner LED			Meaning
Red, on-off	---	---	<ul style="list-style-type: none"> ▶ Power on, with one long beep (high tone, LED on for 1 second) ▶ Data saved to buffer when transmit buffer is enabled and the scanner is out of range, with two short beeps (high-low tone) ▶ Transmit buffer full, with one long beep (low tone) ▶ Transmit buffer disabled, with one long beep (low tone) ▶ Delete the last collected data in memory mode, with two short beeps (high tone, LED on for 1 second) ▶ Memory full in memory mode, with two short beeps (high-low tone)
Red, flashing	---	---	<ul style="list-style-type: none"> ▶ Flashing red (On/Off ratio 0.3 s: 2.5 s) indicates the scanner is inactive and its CPU running at low speed to save power (because no WPAN connection is established after waiting for two minutes) ▶ Configuration Mode (On/Off ratio 0.5 s: 0.5 s)
---	---	Green, on-off	Good Read, with one short beep (high tone) and beeper pitch and duration programmable
---	Blue, flashing	---	<p>First, flashing blue (On/Off ratio 0.5 s: 0.5 s) for two minutes indicates the scanner is waiting for connection, and goes off if no connection is established, then flashing red (On/Off ratio 0.3 s: 2.5 s) indicates the scanner is inactive.</p> <p>It is ready for connection only while the LED is flashing blue —</p> <ul style="list-style-type: none"> ▶ SPP Slave: waiting host to connect ▶ HID or SPP Master: trying to connect to host ▶ Using 3610: trying to connect to 3610
---	Blue, flashing	---	Flashing blue (On/Off ratio 0.1 s: 0.1 s) indicates the scanner receives a PIN code request from host (flashing more quickly than waiting connection).
---	Blue, flashing	---	Flashing blue (On/Off ratio 0.02 s: 3 s) indicates the scanner has established a WPAN connection successfully.
---	Blue, flashing	Green, flashing	Flashing blue and green (On/Off ratio 0.1 s: 0.1 s) indicates an error occurs while entering the PIN code. Press the [Trigger] key to get ready for re-connecting.



1.3.1 GOOD READ LED

*Enable
Good Read LED



Disable
Good Read LED



1.3.2 GOOD READ LED DURATION

By default, the Good Read LED stays on for 40 milliseconds. Specify a value, ranging from 1 to 254 in units of 10 milliseconds.

Good Read LED
Time-out after
0.01~2.54 sec.
(*40 ms)



- 1) Read the barcode above to specify the time interval before the Good Read LED goes off.
- 2) Read the "[Decimal Value](#)" barcode on page 233. For example, read "1" and "5" for the LED to go off after 150 milliseconds.
- 3) Read the "Validate" barcode on the same page to complete this setting.







1.4 BEEPER

The scanner has a buzzer to provide user feedback in various operating conditions.

Beeping	Meaning
One long beep, high tone	Power on, with red LED on (1 second) and off quickly
two short beeps, high tone	<ul style="list-style-type: none"> ▶ Power off, with red LED on (until the key is released) ▶ Delete the last collected data in memory mode, with red LED on (1 second) and off quickly
One short beep, high tone ▶ Programmable, default to 4 KHz	Good Read, with green LED on-off quickly
Six short beeps ▶ High-low tone repeats three times	<ul style="list-style-type: none"> ▶ Enter Configuration Mode, with red LED flashing ▶ Exit Configuration Mode
Two short beeps, low-high tone	Setup barcode read successfully
One short beep, high tone	<ul style="list-style-type: none"> ▶ More setup barcode required ▶ Input PIN code ▶ Clear PIN code
One short beep, low tone	More barcodes required to complete the "output sequence" requirements of Multi-Barcode Editor, with green LED on-off quickly (Upon completion, same as Good Read.)
One long beep, low tone	<ul style="list-style-type: none"> ▶ Transmit buffer full, with red LED on-off quickly ▶ Transmit buffer disabled, with red LED on-off quickly ▶ Configuration error (Wrong barcode...) ▶ PIN code input error ▶ Reject random PIN request ▶ Fail to send data in memory mode
Two short beeps, high-low tone	<ul style="list-style-type: none"> ▶ Data saved to buffer when transmit buffer is enabled and the scanner is out of range, with red LED on-off quickly ▶ Memory Mode – Memory full, with red LED on-off quickly
Two short beeps, high tone	Low Battery Alarm
Two long beeps, high-low tone	Multi-Barcode Mode – Buffer full
Three short beeps, tone ascending from low to high	<ul style="list-style-type: none"> ▶ WPAN connection established, with blue LED flashing ▶ WPAN connection resumed, with blue LED flashing
Three short beeps, tone ascending from high to low	WPAN connection out of range or suspended



1.4.1 BEEPER VOLUME

Mute	 101009
Minimum Volume	 101010
Medium Volume	 101011
*Maximum Volume	 101012




1.4.2 GOOD READ BEEP

Frequency



Duration

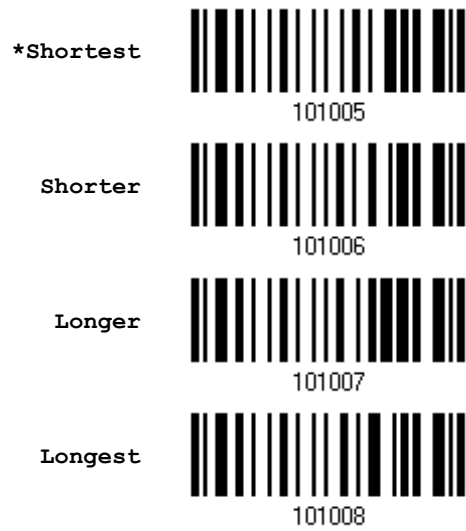

1.4.3 LOW BATTERY ALARM

By default, the built-in battery alarm will sound when the battery charge gets low. In order to prevent data loss, it is advised to replace the battery immediately when hearing two short beeps (high tone).

Disable



101017

*Enable



101018

1.5 VIBRATOR

1.5.1 GOOD READ VIBRATOR

Enable
Good Read Vibrator



102242

*Disable
Good Read Vibrator



102241

1.5.2 GOOD READ VIBRATOR DURATION

By default, the Good Read Vibrator stays on for 1 second. Specify a value, ranging from 1 to 254 in units of 100 milliseconds.

Good Read Vibrator
Time-out after
0.1~25.4 sec.
(*1 s)



102253

- 1) Read the barcode above to specify the time interval, in tenths of seconds before the Good Read Vibrator goes off.
- 2) Read the "[Decimal Value](#)" barcode on page 233. For example, read "1" and "5" for the vibrator to vibrate after 1.5 seconds good read.
- 3) Read the "Validate" barcode on the same page to complete this setting.



1.6 SEND "NR" TO HOST

The scanner can send an "NR" string to the host to notify a No Read event.

Enable



100267

*Disable



100266



Update

1.7 SCAN MODES

Different scan modes are supported – select the scan mode that best suits the requirements of a specific application. Refer to the comparison table below.

Scan Mode	Start to Scan				Stop Scanning			
	Always	Press trigger once	Hold trigger	Press trigger twice	Release trigger	Press trigger once	Barcode being read	Timeout
Continuous mode	✓							
Test mode	✓							
Laser mode			✓		✓		✓	✓
Auto Off mode		✓					✓	✓
Auto Power Off mode		✓						✓
Alternate mode		✓				✓		
Aiming mode				✓			✓	✓
Multi-Barcode mode			✓		✓			

Note: By default, the scan mode is set to Laser mode.



1.7.1 CONTINUOUS MODE

The scanner is always scanning.

- ▶ After a successful decoding, the removal of barcode is required. It is not allowed to proceed to decode until the decoding delay time has passed.
- ▶ To decode the same barcode repeatedly, move away the barcode and put it back again and again for scanning.

Note: Refer to "Delay between Re-read".

Continuous Mode



Decoding Delay

Set the time interval between each decoding.

*Disable



0.5 sec



1 sec



2 sec



1.7.2 TEST MODE

The scanner is always scanning.

- ▶ Capable of decoding the same barcode repeatedly without removing it, for testing purpose.

Test Mode



1.7.3 LASER MODE

The scanner will start scanning once the trigger is held down.

- ▶ The scanning won't stop until (1) a barcode is decoded, (2) the pre-set timeout expires, or (3) you release the trigger.

Note: Refer to "Scanning Timeout".

*Laser Mode



1.7.4 AUTO OFF MODE

The scanner will start scanning once the trigger is pressed.

- ▶ The scanning won't stop until (1) a barcode is decoded, and (2) the pre-set timeout expires.

Note: Refer to "Scanning Timeout".

Auto Off Mode



1.7.5 AUTO POWER OFF MODE

The scanner will start scanning once the trigger is pressed.

- ▶ The scanning won't stop until the pre-set timeout expires, and, the pre-set timeout period re-counts after each successful decoding.

Note: Refer to "Delay between Re-read" and "Scanning Timeout".

Auto Power Off Mode



1.7.6 ALTERNATE MODE

The scanner will start scanning once the trigger is pressed

- ▶ The scanning won't stop until you press the trigger again.

Alternate Mode



1.7.7 AIMING MODE

The scanner will aim at a barcode once the trigger is pressed, and start scanning when the trigger is pressed again within one second.

- ▶ The scanning won't stop until (1) a barcode is decoded, and (2) the pre-set timeout expires.

Aiming Mode



Aiming Timeout

You can limit the aiming time interval (1~15). By default, the scanner time-out is set to 1 second.

Aiming Time-out
after 1~15 sec.
(*1)



1. Read the barcode above to specify the time interval before aiming ends. (It is set to 1 by default.)
2. Read the "[Decimal Value](#)" barcode on page 233. For example, read "1" and "0" for the scanner to automatically shut down after being idle for 10 seconds.
3. Read the "Validate" barcode on the same page to complete this setting.



1.7.8 MULTI-BARCODE MODE

The scanner will be scanning as long as the trigger is held down, capable of decoding one single barcode, as well as multiple unique barcodes one at a time. While decoding a bunch of unique barcodes, if a barcode is decoded twice, its subsequent decoding will be ignored and the scanner is expecting another unique barcode.

- ▶ The scanning won't stop until you release the trigger.

Multi-Barcode Mode



Note: (1) A barcode is considered unique when its Code Type or data is different from others.
(2) Multi-Barcode Mode has nothing to do with the [Multi-Barcode Editor](#).



1.8 SCANNING TIMEOUT

Specify the scanning time interval (1~254 sec.; 0= Disable) when the scan mode is set to any of the following –

- ▶ Laser mode
- ▶ Auto Off mode
- ▶ Auto Power Off mode
- ▶ Aiming mode

Scanner Time-out
after 0~254 sec.
(*10)



- 1) Read the barcode above to specify the time interval in seconds before the scan engine times out.
- 2) Read the "[Decimal Value](#)" barcode on page 233. For example, read "1" and "5" for the scanner to shut down automatically after being idle for 15 seconds.
- 3) Read the "Validate" barcode on the same page to complete this setting.



1.9 DELAY BETWEEN RE-READ

This is also referred to as the “Blocking Time”, which is used to prevent the scanner from accidentally reading the same barcode twice when the scan mode is set to any of the following –

- ▶ Auto Power Off mode
- ▶ Continuous mode
- ▶ Alternate mode

100 ms	 100216
200 ms	 100217
*400 ms	 100218
800 ms	 100219
1 sec	 100220
2 sec	 100221
3 sec	 100222
5 sec	 100223



1.10 READ REDUNDANCY FOR ALL SYMBLOGIES

Select the level of reading security. For example,

- ▶ If "No Redundancy" is selected, one successful decoding will make the reading valid and induce the "READER Event".
- ▶ If "Two Times" is selected, it will take a total of three consecutive successful decoding of the same barcode to make the reading valid. The higher the reading security is (that is, the more redundancy the user selects), the slower the reading speed gets.

It is obvious that the more redundancy selected, the higher the reading security is, and thus, the slower the reading speed becomes. It has to compromise between reading security and decoding speed.

***No Redundancy**



100262

One Time



100263

Two Times



100264

Three Times



100265



1.11 ADDON SECURITY FOR UPC/EAN BARCODES

The scanner is capable of decoding a mix of UPC/EAN barcodes with and without addons. The read redundancy (0~30 times) allows changing the number of times to decode a UPC/EAN barcode before transmission. The more redundancy selected, the higher the reading security is, and thus, the slower the reading speed becomes.

Note: UPC/EAN Addon 2 and Addon 5 must be enabled individually for this setting to take effect.

Addon Security Level
(*0~30)



- 1) Read the barcode above to specify the read redundancy for UPC/EAN barcodes. (It is set to 0 by default.)
- 2) Read the "[Decimal Value](#)" barcode on page 233. For example, read "1" and "2" for the scanner to re-read the barcode for 12 times.
- 3) Read the "Validate" barcode on the same page to complete this setting.

1.12 NEGATIVE BARCODES

Normally, barcodes are printed with the color of the bars darker than that of the spaces. But for negative barcodes, they are printed in the opposite sense just like negative films. The spaces of negative barcodes are printed with a color darker than that of the bars. Configure the scanner to be able to read negative barcodes if required.

Enable



100225

*Disable




100224



1.13 EFFECTIVE DECODING AREA

By default, the effective decoding area is 100% covered by the scanned area. However, you may narrow down the decoding area to prevent reading the wrong barcode when a number of barcodes are printed closely. The scanner will only read barcodes that appear in the effective decoding area.

Read the barcode "Centering On" and specify the percentage to narrow down the decoding area. For example, read "Left 10%" and then "Right 30%" for the scanner to decode barcode "A" only.

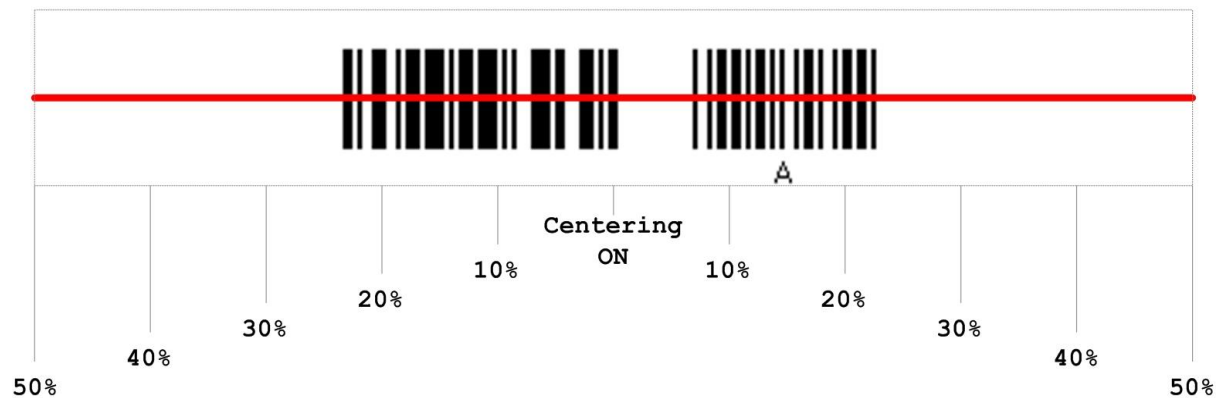

1.13.1 POSITIONING WINDOW

Centering On



*Centering Off



1.13.2 ADJUSTING WINDOW

Percentage for Left Half

***Left 50%**



Left 40%



Left 30%



Left 20%



Left 10%



Percentage for Right Half

Right 10%



Right 20%



Right 30%



Right 40%



***Right 50%**



1.14 USE DIRECT USB CABLE

1663 supports Direct USB interface for charging the battery and/or sending data to the host in memory mode. Refer to [1.2.2 Memory Mode](#).

Note: The scanner will not function when it is solely on USB power and without a battery loaded.

1.14.1 DIRECT USB INTERFACE

When it is set to Memory Mode and connected to computer via the Direct USB cable, the default output interface becomes "Direct USB Virtual COM", change it to "Direct USB HID" if required.

For details on configuring the interface settings, refer to the following sections:

- ▶ [2.6 Direct USB HID](#)
- ▶ [2.7 Direct USB Virtual COM](#)

*Activate Direct
USB Virtual COM



Activate Direct
USB HID



1.14.2 DISABLE DIRECT USB INTERFACE

When connecting the USB cable to the scanner for charging the battery, ensure the "Disable Direct USB" barcode has been scanned to avoid sending data to the host in memory mode. In this mode the USB cable function will be charging the battery only.

Disable Direct USB



1.15 PAGER BEEP DURATION

Paging function is only activated when 1663 is in Power-Saving mode. 1663 can be woken up via receiving any *Bluetooth*® status command by pressing a key on the host keyboard. The buzzer will continuously sound two short high tone beeps until the power key is pressed on the scanner or the timeout is reached, and the scanner re-enters power saving mode.

By default, the pager beep duration is 5 seconds. Specify a value, ranging from 0 to 15. (0~15 sec.; 0= Disable)

- ▶ *Bluetooth*® HID profile: Press any one of the following keys "Scroll Lock", "Number Lock" or "Caps Lock" on the host computer to trigger the waking up of 1663.
- ▶ *Bluetooth*® SPP Profile: Any command sent using *Bluetooth*® SPP will trigger the waking up of 1663.

Pager Beep Duration
0~15 sec.
(*5 s)



- 1) Read the barcode above to specify the desired beep active time.
- 2) Read the "[Decimal Value](#)" barcode on page 233. For example, read "1" and "5" for the pager beep function to be activated each 15 seconds after entering Power-Saving mode.
- 3) Read the "Validate" barcode on the same page to complete this setting.






1.16 TIME STAMP

Specify time stamp format added to the prefix or suffix of a data. Up to three settings can be configured:

- ▶ No Time Stamp
- ▶ Add Time Stamp in front of data
- ▶ Add Time Stamp to the end of data

If added in front of data, it means prior to the prefix field. Alternatively, to the end of data.

No Time Stamp *Disable	
	101315
Add Time Stamp in front of Data	
	101316
Add Time Stamp to the end of Data	
	101317

1.16.1 DATE AND TIME SETTINGS

Read the barcode below to enable/disable Date and Time function.

Year Output *Enable	
	101321
Year Output Disable	
	101322
Month Output *Enable	
	101323
Month Output Disable	
	101324



Date Output *Enable	 101325
Date Output Disable	 101326
Hour Output *Enable	 101327
Hour Output Disable	 101328
Minute Output *Enable	 101329
Minute Output Disable	 101330
Second Output *Enable	 101331
Second Output Disable	 101332



Decoding Data and Time

Year Setup



109970

Date Setup



109971

Time Setup



109972

- 1) Read the barcode above to apply time or date code separately, and follow steps 2~3.
- 2) Read the "[Decimal Value](#)" barcode on page 233 for the desired character string. For example:
 Year: Read "2", "0", "1", "1" for the year setting as year=2011.
 Date: Read "1", "1", "2", "0" for the date setting as date=Nov.20.
 Time: Read "1", "8", "5", "9" for the time setting as time=18:59.
- 3) Read the "Validate" barcode for each setting on the same page.

1.16.2 SEPARATOR FOR DATE AND TIME

The Date and Time can be split with a pre-selected separator, for example, "/" as YYYY/MM/DD or ":" as HH:MM:SS

Separator for
Date/Time
*"-"



101310

Separator for
Month/Date
*" / "



101311

Separator for
Hour/Minute
*": "



101312

- 1) Read the barcode above to apply separator to date or time separately, and follow steps 2~3.
- 2) Read the "[Hexadecimal Value](#)" barcode on page 234 for the desired character string. For example, read "3" and "A" for the separator to split the data with character [:].
- 3) Read the "Validate" barcode on the same page to complete this setting.



1.16.3 DATE FORMAT

The date format includes year, month and day. There are three kinds of combinations can be configured to specify Year, Month and Day:

- ▶ Year/Month/Day (YYYY/MM/DD) or (YY/MM/DD)
- ▶ Month/Day/Year (MM/DD/YYYY) or (MM/DD/YY)
- ▶ Day/Month/Year (DD/MM/YYYY) or (DD/MM/YY)



About Year Format:

Year format can be pre-selected as 2-digit or 4-digit. For example, if year format is YYYY, the output year is 2011 for 4-digit, alternatively is 11 for 2-digit.



1.17 HARDWARE RESET

1.17.1 RESTORE SYSTEM DEFAULTS

In addition to using the "Restore System Defaults" barcode, the following procedure using key combinations can be used to restore the system defaults during operation.

- 1) Hold down the [Power/Delete] key.
- 2) When the scanner responds with two short beeps (high tone), press the [Trigger] key for 5 seconds. The scanner LED indicator becomes solid red and then goes off.
- 3) When the scanner responds with a long beep (high tone), release the keys. Its LED indicator becomes solid red and goes off.

Note: The scanner will restart itself automatically.

1.17.2 RESET CONNECTION

When the output interface is *Bluetooth®* HID or *Bluetooth®* SPP Master, the scanner will attempt to maintain an established connection. To stop such re-connection, read the "Reset Connection" or "Restore System Defaults" barcode to clear the current connection record. Alternatively, use the key combination as described below to reset connection during operation.

- 1) Hold down the [Trigger] key, and then press the [Power/Delete] key for at least 5 seconds.
- 2) The scanner will respond with two short beeps (high tone). Wait until the scanner responds with a long beep (high tone), release the keys.

Note: After resetting connection by hardware, the scanner will not restart itself automatically. It will resume to its previous operation except no connection.

1.17.3 DISABLE HARDWARE RESET

By default, the key combination for hardware reset (including system default restoration and connection reset) is enabled. Users can decide whether to enable/disable the key combination.

***Enable**



Disable



1.18 SERIAL NUMBER STAMP

Decide whether to add the device serial number in front of the data transmitted.

Add serial number in
front of data



101365

*Disable



101364

1.18.1 SEPARATOR BETWEEN SERIAL NUMBER STAMP AND DATA

Scan the barcode below to specify the separator character between device serial number and the accompanying data. By default, the separator is a comma symbol.

Specify the
separator character



101380

- 1) Read the barcode above to specify a separator character.
- 2) Read the "[Hexadecimal Value](#)" barcode on page 234 for the desired character.
- 3) Read the "Validate" barcode to complete this setting.



SELECTING OUTPUT INTERFACE

In order to establish a proper connection between host computer and the scanner, we suggest following these instructions –

- 1) Install battery and hold down the [Power/Delete] key for 2 seconds to turn on the scanner.
- 2) Read the “Enter Setup” barcode to enter the configuration mode.
- 3) Read the associated barcodes to activate the desired interface.
See the following sections for output interfaces supported.
- 4) Read the barcodes for related settings.
- 5) Read the “Update” barcode to exit the configuration mode.
- 6) Turn on host computer or laptop and establish a WPAN connection with the scanner.

Refer to [Chapter 3 – Setting up a WPAN Connection](#).

Note: (1) By default, the output interface is set to “*Bluetooth®* HID”.
(2) When set to Memory Mode and connected to computer via the Direct USB cable, the default output interface becomes “Direct USB Virtual COM”.

IN THIS CHAPTER

2.1 <i>Bluetooth®</i> HID	56
2.2 <i>Bluetooth®</i> SPP Slave	69
2.3 <i>Bluetooth®</i> SPP Master	71
2.4 USB HID via 3610	75
2.5 USB Virtual COM via 3610	85
2.6 Direct USB HID	88
2.7 Direct USB Virtual COM	99



2.1 BLUETOOTH® HID

For *Bluetooth*® HID, refer to [Chapter 3 – Setting up a WPAN Connection](#) for related connection settings. The scanned data will be transmitted to the computer. To capture the data run any text editor on your computer.

HID Settings	Defaults
Keyboard Type	PCAT (US)
Alphabet Layout	Normal
Numeric Layout	Normal
Capital Lock Type	Normal
Capital Lock State	Off
Alphabet Transmission	Case-sensitive
Numeric Transmission	Alphanumeric keypad
Inter-Character Delay	0 (ms)
Inter-Function Delay	0 (ms)



2.1.1 ACTIVATE *BLUETOOTH*® HID & SELECT KEYBOARD TYPE

When *Bluetooth*® HID interface is activated, you will have to select a keyboard type to complete this setting. By default, *Bluetooth*® HID is activated on the scanner, and the keyboard type is set to PCAT (US).

Activate *Bluetooth*®
HID & Select Keyboard
Type...



- 1) Read the barcode above to activate *Bluetooth*® HID and select a keyboard type.
- 2) Read the "[Decimal Value](#)" barcode on page 233. Refer to the table below for the number of desired keyboard type.
- 3) Read the "Validate" barcode on the same page to complete this setting.

Bluetooth® HID

The following keyboard types are supported —

No.	Keyboard Type	No.	Keyboard Type
64	PCAT (US)	72	PCAT (Spanish)
65	PCAT (French)	73	PCAT (Portuguese)
66	PCAT (German)	74	PS55 A01-2 (Japanese)
67	PCAT (Italy)	75	User-defined table
68	PCAT (Swedish)	76	PCAT (Turkish)
69	PCAT (Norwegian)	77	PCAT (Hungarian)
70	PCAT (UK)	78	PCAT (Swiss German)
71	PCAT (Belgium)	79	PCAT (Danish)



2.1.2 RESET CONNECTION

For *Bluetooth*® HID, you can only have the scanner connected to one computer at a time. If you want to connect the scanner to another host, you must read the “Reset Connection” barcode so that the current connection record will be cleared. Then, the scanner will restart itself automatically. Go through the process in [1.17 Hardware Reset](#) and [3.2.3 Connect to Dongle](#) to establish a new connection.

Reset Connection



109919

Note: The “Restore System Defaults” barcode will also clear the current connection record.



2.1.3 KEYBOARD SETTINGS

- ▶ Alphabet Layout
- ▶ Numeric Layout
- ▶ Capital Lock Type
- ▶ Capital Lock Setting
- ▶ Alphabet Transmission
- ▶ Numeric Transmission

Note: *Bluetooth*® HID does not support these functions on PDAs – (1) Capital Lock Setting: Auto Detection (2) Numeric Transmission: Numeric Keys

Alphabet Layout

By default, the alphabet layout is set to normal mode, also known as the standard English layout. Select French or German keyboard layout if necessary. The scanner will make adjustments when sending the "A", "Q", "W", "Z", "Y", and "M" characters according to this setting.




Note: This setting only works when the keyboard type selected is US keyboard, such as PCAT (US). The Alphabet Layout and Numeric Layout setting must match your keyboard.



US Keyboard Style – Normal

QWERTY layout, which is normally used in western countries.

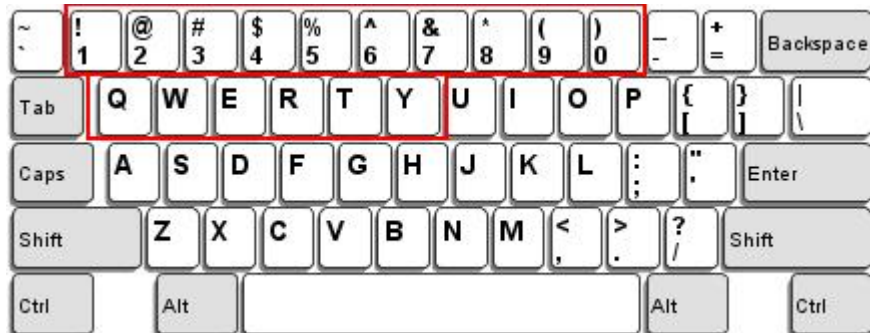

- ▶ Select "Lower Row" for the "Numeric Layout" setting for the upper row is for special characters.

French Keyboard Style – AZERTY

French layout; see below for French Keyboard Style.



- ▶ Select "Upper Row" for the "Numeric Layout" setting for the lower row is for special characters.

German Keyboard Layout – QWERTZ

German layout; see below for German Keyboard Style.



- ▶ Select "Lower Row" for the "Numeric Layout" setting for the upper row is for special characters.



Numeric Layout

Select a proper layout that matches the alphabet layout. The scanner will make adjustments according to this setting.

Options	Description
Normal	Depends on the [Shift] key or [Shift Lock] setting
Lower Row	For QWERTY or QWERTZ keyboard
Upper Row	For AZERTY keyboard

***Normal**



Upper Row



Lower Row



Note: This setting is to be used with the Character Substitution setting when support for certain keyboard types (languages) is unavailable but required.

Capital Lock Type & Setting

In order to send the alphabet with correct case, the scanner needs to know the status of Caps Lock on the keyboard. Incorrect settings may result in reversed case of the alphabet being transmitted.

Cap Lock Type	Description
Normal	Normal type
Capital Lock	When enabled, the keys of alphabetic characters will be interpreted as capital letters. However, this does not affect the number or punctuation keys.
Shift Lock	When enabled, the keys of alphabetic characters will be interpreted as capital letters. In addition, this affects the number or punctuation keys.

***Normal**



Shift Lock



Capital Lock



100044

Capital Lock State	Description
Capital Lock OFF	Assuming that the status of Caps Lock on the keyboard is OFF, transmitted characters are exactly the same as in the barcode (when "case-sensitive" is selected for Alphabet Transmission).
Capital Lock ON	Assuming that the status of Caps Lock on the keyboard is ON, transmitted characters are exactly the same as in the barcode (when "case-sensitive" is selected for Alphabet Transmission). ▶ Refer to the Capital Lock Type above.
Auto Detection (Suggested use for most applications)	The scanner will automatically detect the status of Caps Lock on the keyboard before data is transmitted; transmitted characters are exactly the same as in the barcode (when "case-sensitive" is selected for Alphabet Transmission). ▶ This setting is not supported on PDAs.

Auto Detect



100054

Capital Lock ON



100053

*Capital Lock OFF




100052




Alphabet Transmission

By default, the alphabet transmission is case-sensitive, meaning that the alphabet will be transmitted according to the original case, the status of Caps Lock on the keyboard, as well as the Capital Lock setting. Select [Ignore Case] to have alphabet transmitted according to the status of Caps Lock on the keyboard only.

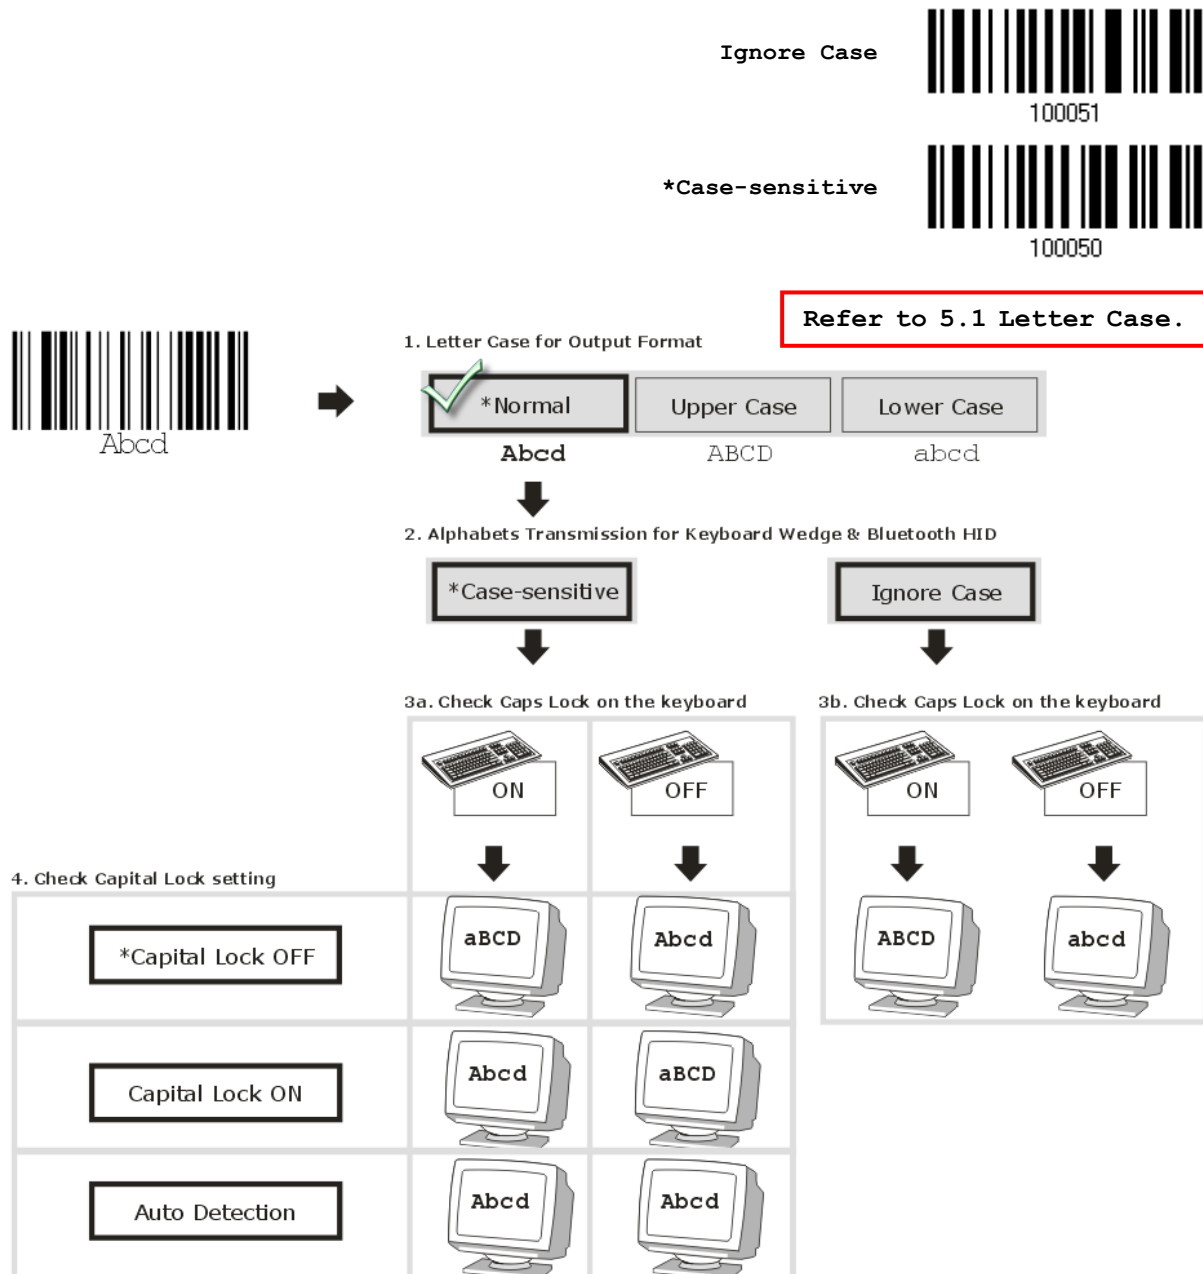

Numeric Transmission

By default, the alphanumeric keypad is used for transmitting digits. Select "Numeric Keypad" if you wish to use the keys on the numeric keypad.

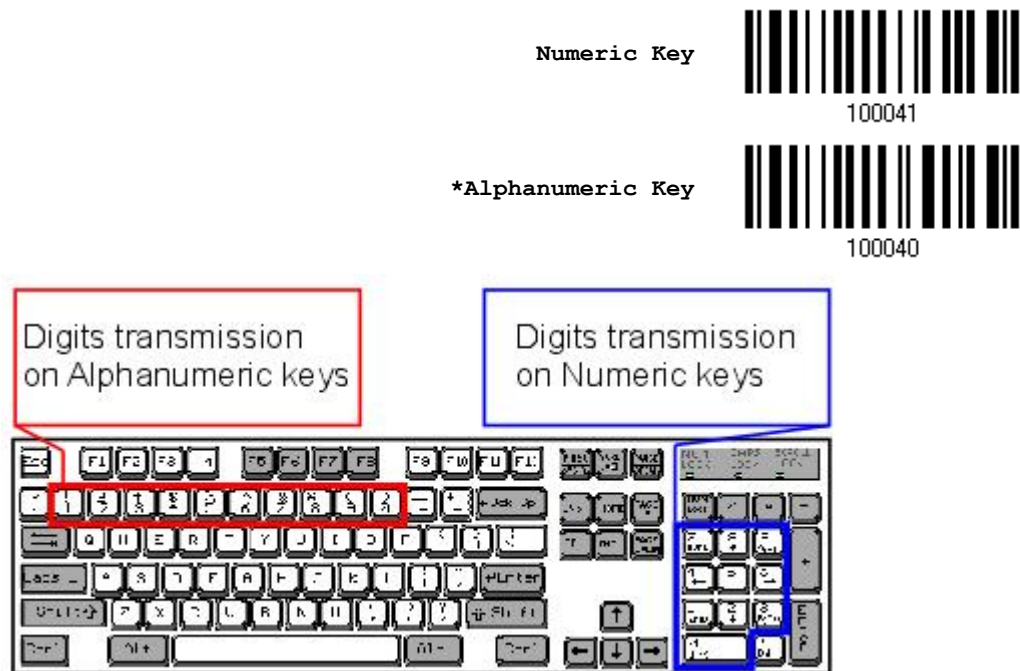

Note: If you select "Numeric Keypad", the Num Lock status of the physical keyboard should be "ON". This setting is not supported on PDAs.

2.1.4 INTER-CHARACTER DELAY

By default, the inter-character delay is set to zero. Specify a value, ranging from 0 to 254 in units of milliseconds, to match the computer response time of the keyboard interface. Such delay time is inserted between every character being transmitted. The longer the delay time is, the slower the transmission speed will be.

Inter-Character
Delay... (*0~254)



- 1) Read the barcode above to specify the inter-character delay.
- 2) Read the "[Decimal Value](#)" barcode on page 233 for the desired inter-character delay (in milliseconds).
- 3) Read the "Validate" barcode on the same page to complete this setting.



2.1.5 INTER-FUNCTION DELAY

By default, the inter-function delay is set to zero. Specify a value, ranging from 0 to 254 in units of milliseconds, to match the computer response time of the keyboard interface. Such delay time is inserted between every function code (0x01 ~ 0x1F) being transmitted. The longer the delay time is, the slower the transmission speed will be.

Inter-Function
Delay... (*0~254)



- 1) Read the barcode above to specify the inter-function delay.
- 2) Read the "[Decimal Value](#)" barcode on page 233 for the desired inter-function delay (in milliseconds).
- 3) Read the "Validate" barcode on the same page to complete this setting.

2.1.6 HID CHARACTER TRANSMIT MODE

By default, HID interface sends data to the host character by character. You may have the scanner read the "Batch Processing" barcode to process data in batch.

Batch Processing



*By Character



Note: "By Character" transmit mode is required when working with iPhone or iPad.




2.1.7 SPECIAL KEYBOARD FEATURE

By default, the special keyboard feature is based on the factory definition. You can decide whether to apply the special keyboard feature. Refer to [Keyboard Wedge Table](#).



2.1.8 KEYPAD SUPPORT FOR IPHONE/IPAD

When the scanner has been successfully connected to iPhone or iPad for data collection, the onscreen keypad of iPhone or iPad will disappear. Read the "Use POWER Key to Show or Hide Keypad" barcode in advance. Then, it will allow pressing the [Power/Delete] key to show or hide the onscreen keypad.

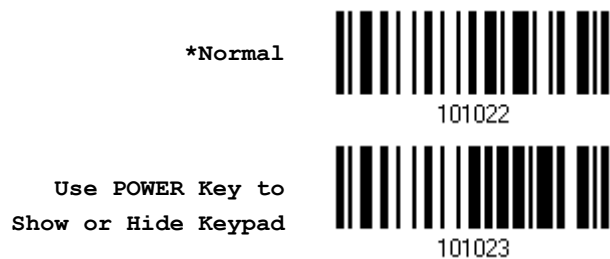

In addition to using the [Power/Delete] key, you may also show or hide the keypad by reading the following barcode.



Note: This function only works for
(1) iPhone 4 and 3GS version 4.1 or later, and (2) iPad version 4.2 or later.



2.1.9 TRANSMIT SPEED

By default, the BT HID transmit speed is set to normal. Users can have the scanner work in quicker transmit speed by reading the Fast barcode.



Note: Data loss may occur while transmitting data continuously with Fast mode enabled in the Android platform. Therefore, it's recommended to employ the Normal mode for Android-based devices.




2.1.10 BT HID SLAVE/MASTER SWITCHING

By default, the BT HID role is set to slave. Users can have the scanner switch between slave and master by reading the barcodes below.




2.1.11 BT HID AUTO-RECONNECTION

Users can decide whether to have the scanner automatically reconnect to a paired device after disconnection, and the occasion for reconnecting.

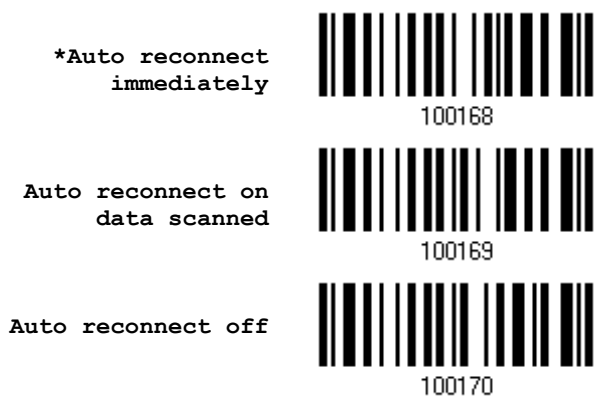

2.1.12 CONTROL CHARACTER OUTPUT (WINDOWS ONLY)

Enable this function to output control characters ranging from 0x01 to 0x1F in text form. For instance, [BS] (the backspace) is output rather than 0x08 when this function is enabled.

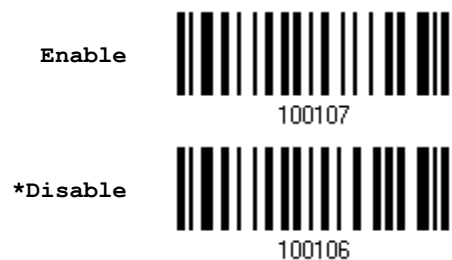

2.2 BLUETOOTH® SPP SLAVE

For *Bluetooth*® SPP Slave, refer to [Chapter 3 – Setting up a WPAN Connection](#) for related connection settings.

2.2.1 ACTIVATE BLUETOOTH® SPP SLAVE MODE

This is SPP Slave Mode.

Activate *Bluetooth*®
SPP, Slave Mode



2.2.2 INTER-FUNCTION DELAY

By default, the inter-function delay is set to zero. Specify a value, ranging from 0 to 254 in units of milliseconds, to match the computer response time of the keyboard interface. Such delay time is inserted between every function code (0x01 ~ 0x1F) being transmitted. The longer the delay time is, the slower the transmission speed will be.

Inter-Function
Delay... (*0~254)



- 1) Read the barcode above to specify the inter-function delay.
- 2) Read the "[Decimal Value](#)" barcode on page 233 for the desired inter-function delay (in milliseconds).
- 3) Read the "Validate" barcode on the same page to complete this setting.



2.2.3 ACK/NAK TIMEOUT

By default, the scanner sends data to the host without waiting for an ACK/NAK response before sending more data. Specify a value, ranging from 1 to 99 in units of 0.1 second. If no response within the specified period of time, the scanner will attempt to send the same data two more times. If all attempts fail without any notification, data loss will occur.

ACK/NAK Time-out
after ... (*0~99)



- 1) Read the barcode above to specify the time interval for the scanner to send data and wait for a response from the host.
- 2) Read the "[Decimal Value](#)" barcode on page 233. For example, read "1" and "0" for the scanner to automatically shut down after being idle for 1 second.
- 3) Read the "Validate" barcode on the same page to complete this setting.

ACK/NAK Error Beep

Enable Error Beep



*Disable Error Beep



Note: We suggest enabling the error beep so that you will be notified of such data loss and have the scanner re-read data.

2.2.4 BT SPP SLAVE HARDWARE FLOW CONTROL

By default, the data sending via Bluetooth SPP doesn't employ hardware flow control. In some cases users may want to enable hardware flow control to prevent data loss during transmission. Please scan the barcode below to enable/disable it.

*Disable



Enable



2.3 BLUETOOTH® SPP MASTER

As a SPP master device, the scanner will be able to resume connection with the host upon powering on again, as long as the host application is running. If the scanner fails to resume connection, it will try every 5 seconds to re-connect to the host unless you read the “Reset Connection” or “Restore System Defaults” barcode.

For *Bluetooth*® SPP Master, refer [3.2.2 Configure Related Settings](#) for related connection settings.

Note: In SPP Master Mode, scanner has to connect within the specified period of time (2 minutes by default). During the connection, the scanner will enter into idle mode to save power. It will automatically turn off when the time is up. Refer to [1.1.3 Auto Power Off & Power-Saving](#).

2.3.1 ACTIVATE *BLUETOOTH*® SPP MASTER MODE

This is SPP Master Mode.

Activate *Bluetooth*®
SPP, Master Mode



How to connect with the target device?

Produce two setup barcodes for the target SPP slave device, just like what we do for 3610.

- ▶ “Set Connection”
- ▶ “MAC ID”

Note: The “MAC ID” barcode must have a prefix of two characters, either “0x” or “0X”, followed by the real MAC address of the target device.

Usage:

- 1) Read the “Activate *Bluetooth*® SPP, Master Mode” barcode above and barcodes for connection settings, such as authentication and preset PIN. Skip this step if no connection settings are desired.
- 2) Read the “Set Connection” and “MAC ID” barcodes. The scanner will respond with one beep upon reading each of the barcodes.

Set Connection



Note: Read the "Set Connection" barcode first, and then the "MAC ID" barcode within 10 seconds.

Instead of producing the "MAC ID" barcode, you may read the setup barcodes for entering the MAC address.

- ▶ Read the "Abort" barcode to cancel the operation at any time while reading setup barcodes for the MAC address. If the MAC address has not been completed yet, reading the "Validate" barcode can cancel the operation as well.

Enter MAC ID in
Hexadecimal...



Usage:

- 1) Read the barcode above.
- 2) Read the "[Hexadecimal Value](#)" barcode on page 234 for the desired MAC address.
- 3) Read the "Validate" barcode on the same page to complete this setting.

Connect with the target device by scanning a single 1D setting barcode

Users can produce a single 1D setup barcode that combines the "Set Connection" and "MAC ID" setup barcodes to connect with the target device. While producing the barcode, be aware the letter upper/lower case "SeTcOn" and the barcode must be the Code 128 symbology.

Usage:

Read the "SeTcOnxxxxxxxxxxxx" 1D single barcode ('xxxxxxxxxxxx' represents the MAC ID, see the example below). The scanner will respond with one beep upon reading the barcode.



Exit SPP Master Mode

To stop such re-connection, read "Reset Connection" or "Restore System Defaults" barcode so that the current connection record (= MAC ID) will be cleared. Then, the scanner will restart itself automatically. Go through the process in [3.2.3 Connect to Dongle](#) to establish a new WPAN connection.

Reset Connection



2.3.2 INTER-FUNCTION DELAY

By default, the inter-function delay is set to zero. Specify a value, ranging from 0 to 254 in units of milliseconds, to match the computer response time of the keyboard interface. Such delay time is inserted between every function code (0x01 ~ 0x1F) being transmitted. The longer the delay time is, the slower the transmission speed will be.



Inter-Function
Delay... (*0~254)



- 1) Read the barcode above to specify the inter-function delay.
- 2) Read the "[Decimal Value](#)" barcode on page 233 for the desired inter-function delay (in milliseconds).
- 3) Read the "Validate" barcode on the same page to complete this setting.

2.3.3 ACK/NAK TIMEOUT

By default, the scanner sends data to the host without waiting for an ACK/NAK response before sending more data. Specify a value, ranging from 1 to 99 in units of 0.1 second. If no response within the specified period of time, the scanner will attempt to send the same data two more times. If all attempts fail without any notification, data loss will occur.

ACK/NAK Time-out
after ... (*0~99)



- 1) Read the barcode above to specify the time interval for the scanner to send data and wait for a response from the host.
- 2) Read the "[Decimal Value](#)" barcode on page 233. For example, read "1" and "0" for the scanner to automatically shut down after being idle for 1 second.
- 3) Read the "Validate" barcode on the same page to complete this setting.

ACK/NAK Error Beep

Enable Error Beep



*Disable Error Beep



Note: We suggest enabling the error beep so that you will be notified of such data loss and have the scanner re-read data.



2.3.4 SWITCH BETWEEN MASTER/SLAVE MODE

After the scanner has established a connection as a SPP slave device, you may read the "Activate *Bluetooth*® SPP, Master Mode" setup barcode to switch to SPP Master Mode. This will result in easy and reliable re-connection, just like connecting with 3610.

2.3.5 BT SPP MASTER HARDWARE FLOW CONTROL

By default, the data sending via Bluetooth SPP doesn't employ hardware flow control. In some cases users may want to enable hardware flow control to prevent data loss during transmission. Please scan the barcode below to enable/disable it.

***Disable**



100173

Enable



100174

2.3.6 BT SPP MASTER AUTO-RECONNECTION

Users can decide whether to have the scanner automatically reconnect to a paired device after disconnection, and the occasion for reconnecting.

***Auto reconnect
immediately**



100168

**Auto reconnect on
data scanned**



100169

Auto reconnect off



100170



2.4 USB HID VIA 3610

For USB HID, connect 3610 to the USB port of PC, and then connect the scanner to 3610. The scanned data will be transmitted to the computer. To capture the data run any text editor on your computer.

HID Settings	Defaults
Keyboard Type	PCAT (US)
Numeric Layout	Normal
Capital Lock Type	Normal
Capital Lock State	Off
Alphabet Transmission	Case-sensitive
Numeric Transmission	Alphanumeric keypad
Inter-Character Delay	0 (ms)
Inter-Function Delay	0 (ms)



2.4.1 ACTIVATE USB HID & SELECT KEYBOARD TYPE

When USB HID interface is activated, you will have to select a keyboard type to complete this setting.

Activate
3610 USB HID & Select
Keyboard Type...



- 1) Read the barcode above to activate USB HID and select a keyboard type.
- 2) Read the "[Decimal Value](#)" barcode on page 233. Refer to the table below for the number of desired keyboard type.
- 3) Read the "Validate" barcode on the same page to complete this setting.

USB HID

The following keyboard types are supported —

No.	Keyboard Type	No.	Keyboard Type
64	PCAT (US)	72	PCAT (Spanish)
65	PCAT (French)	73	PCAT (Portuguese)
66	PCAT (German)	74	PS55 A01-2 (Japanese)
67	PCAT (Italy)	75	User-defined table
68	PCAT (Swedish)	76	PCAT (Turkish)
69	PCAT (Norwegian)	77	PCAT (Hungarian)
70	PCAT (UK)	78	PCAT (Swiss German)
71	PCAT (Belgium)	79	PCAT (Danish)



2.4.2 KEYBOARD SETTINGS

- ▶ Alphabet Layout
- ▶ Numeric Layout
- ▶ Capital Lock Type
- ▶ Capital Lock Setting
- ▶ Alphabet Transmission
- ▶ Numeric Transmission

Alphabet Layout

By default, the alphabet layout is set to normal mode, also known as the standard English layout. Select French or German keyboard layout if necessary. The scanner will make adjustments when sending the "A", "Q", "W", "Z", "Y", and "M" characters according to this setting.




Note: This setting only works when the keyboard type selected is US keyboard, such as PCAT (US). The Alphabet Layout and Numeric Layout setting must match your keyboard.



US Keyboard Style – Normal

QWERTY layout, which is normally used in western countries.

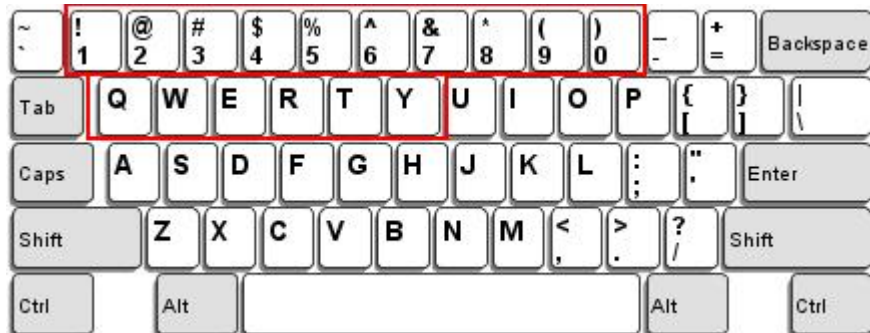

- ▶ Select "Lower Row" for the "Numeric Layout" setting for the upper row is for special characters.

French Keyboard Style – AZERTY

French layout; see below for French Keyboard Style.



- ▶ Select "Upper Row" for the "Numeric Layout" setting for the lower row is for special characters.

German Keyboard Layout – QWERTZ

German layout; see below for German Keyboard Style.



- ▶ Select "Lower Row" for the "Numeric Layout" setting for the upper row is for special characters.



Numeric Layout

Select a proper layout that matches the alphabet layout. The scanner will make adjustments according to this setting.

Options	Description
Normal	Depends on the [Shift] key or [Shift Lock] setting
Lower Row	For QWERTY or QWERTZ keyboard
Upper Row	For AZERTY keyboard

***Normal**



Upper Row



Lower Row



Note: This setting is to be used with the Character Substitution setting when support for certain keyboard types (languages) is unavailable but required.



Capital Lock Type & Setting

In order to send the alphabet with correct case, the scanner needs to know the status of Caps Lock on the keyboard. Incorrect settings may result in reversed case of the alphabet being transmitted.

Cap Lock Type	Description
Normal	Normal type
Capital Lock	When enabled, the keys of alphabetic characters will be interpreted as capital letters. However, this does not affect the number or punctuation keys.
Shift Lock	When enabled, the keys of alphabetic characters will be interpreted as capital letters. In addition, this affects the number or punctuation keys.

*Normal



100042

Shift Lock



100045

Capital Lock



100044

Capital Lock State	Description
Capital Lock OFF	Assuming that the status of Caps Lock on the keyboard is OFF, transmitted characters are exactly the same as in the barcode (when "case-sensitive" is selected for Alphabet Transmission).
Capital Lock ON	Assuming that the status of Caps Lock on the keyboard is ON, transmitted characters are exactly the same as in the barcode (when "case-sensitive" is selected for Alphabet Transmission). ▶ Refer to the Capital Lock Type above.
Auto Detection (suggested use for most applications)	The scanner will automatically detect the status of Caps Lock on the keyboard before data is transmitted; transmitted characters are exactly the same as in the barcode (when "case-sensitive" is selected for Alphabet Transmission).

Auto Detect



100054

Capital Lock ON



100053



*Capital Lock OFF



Alphabet Transmission

By default, the alphabet transmission is case-sensitive, meaning that the alphabet will be transmitted according to the original case, the status of Caps Lock on the keyboard, as well as the Capital Lock setting. Select [Ignore Case] to have alphabet transmitted according to the status of Caps Lock on the keyboard only.

Ignore Case

 


*Case-sensitive



1. Letter Case for Output Format

Refer to 5.1 Letter Case.



2. Alphabets Transmission for Keyboard Wedge & Bluetooth HID




3a. Check Caps Lock on the keyboard



3b. Check Caps Lock on the keyboard




4. Check Capital Lock setting

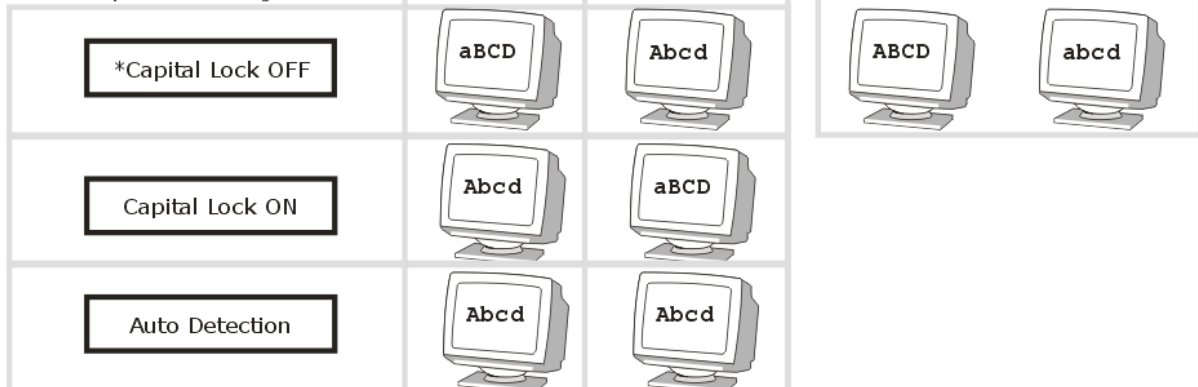

Numeric Transmission

By default, the alphanumeric keypad is used for transmitting digits. Select "Numeric Keypad" if you wish to use the keys on the numeric keypad.

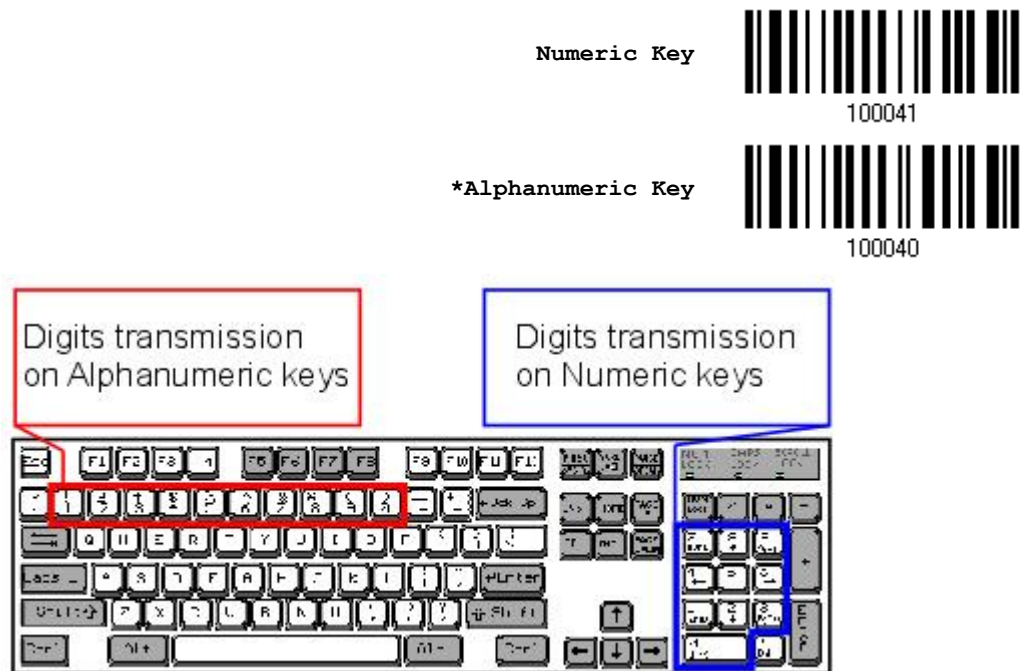

Note: If you select "Numeric Keypad", the Num Lock status of the physical keyboard should be "ON".

2.4.3 INTER-CHARACTER DELAY

By default, the inter-character delay is set to zero. Specify a value, ranging from 0 to 254 in units of milliseconds, to match the computer response time of the keyboard interface. Such delay time is inserted between every character being transmitted. The longer the delay time is, the slower the transmission speed will be.

Inter-Character
Delay... (*0~254)



- 1) Read the barcode above to specify the inter-character delay.
- 2) Read the "[Decimal Value](#)" barcode on page 233 for the desired inter-character delay (in milliseconds).
- 3) Read the "Validate" barcode on the same page to complete this setting.



2.4.4 INTER-FUNCTION DELAY

By default, the inter-function delay is set to zero. Specify a value, ranging from 0 to 254 in units of milliseconds, to match the computer response time of the keyboard interface. Such delay time is inserted between every function code (0x01 ~ 0x1F) being transmitted. The longer the delay time is, the slower the transmission speed will be.

Inter-Function
Delay... (*0~254)



- 1) Read the barcode above to specify the inter-function delay.
- 2) Read the "[Decimal Value](#)" barcode on page 233 for the desired inter-function delay (in milliseconds).
- 3) Read the "Validate" barcode on the same page to complete this setting.

2.4.5 HID CHARACTER TRANSMIT MODE

By default, HID interface sends data to the host character by character. You may have the scanner read the "Batch Processing" barcode to process data in batch.

Batch Processing



*By Character



Note: "By Character" transmit mode is required when working with iPhone or iPad.

2.4.6 SPECIAL KEYBOARD FEATURE

By default, the special keyboard feature is based on the factory definition. You can decide whether to apply the special keyboard feature. Refer to [Keyboard Wedge Table](#).

*Apply




Bypass



2.4.7 USB HID VIA 3610 AUTO-RECONNECTION

Users can decide whether to have the scanner automatically reconnect to a paired device after disconnection, and the occasion for reconnecting.

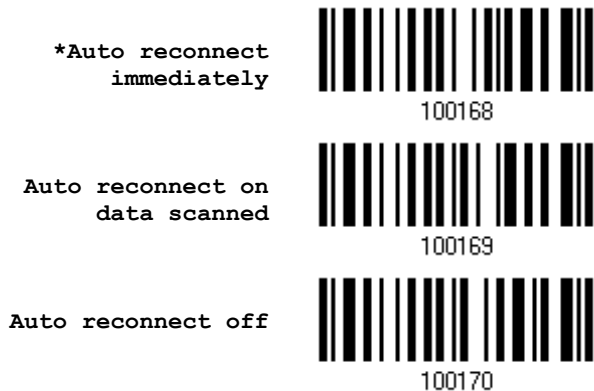

2.4.8 USB POLLING INTERVAL


Scan the barcodes below to specify the USB polling interval ranging from 1 to 15ms. It's set to 10ms by default.



- 1) Read the barcode above to specify the USB polling interval.
- 2) Read the "[Decimal Value](#)" barcode on page 233 for the desired time period (in milliseconds).
- 3) Read the "Validate" barcode on the same page to complete this setting.

2.4.9 CONTROL CHARACTER OUTPUT (WINDOWS ONLY)

Enable this function to output control characters ranging from 0x01 to 0x1F in text form. For instance, [BS] (the backspace) is output rather than 0x08 when this function is enabled.

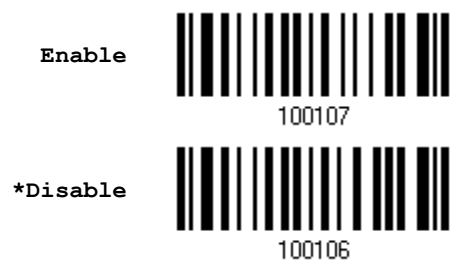

2.5 USB VIRTUAL COM VIA 3610

Connect 3610 to the USB port of PC, and then connect the scanner to 3610. You may run HyperTerminal.exe on the computer to view and capture the data transmission from the scanner.

2.5.1 ACTIVATE USB VIRTUAL COM

Activate 3610
USB Virtual COM



Note: If you are using USB Virtual COM for the first time, you must install its driver beforehand. Driver version 5.4 or later is required. Please remove older versions before installing new ones!

2.5.2 ACTIVATE USB VIRTUAL COM_CDC

Activate 3610
USB Virtual COM_CDC



Note: 3610 with firmware version 2.0 or later supports this function.

2.5.3 INTER-FUNCTION DELAY

By default, the inter-function delay is set to zero. Specify a value, ranging from 0 to 254 in units of milliseconds, to match the computer response time of the keyboard interface. Such delay time is inserted between every function code (0x01 ~ 0x1F) being transmitted. The longer the delay time is, the slower the transmission speed will be.

Inter-Function
Delay... (*0~254)



- 1) Read the barcode above to specify the inter-function delay.
- 2) Read the "[Decimal Value](#)" barcode on page 233 for the desired inter-function delay (in milliseconds).
- 3) Read the "Validate" barcode on the same page to complete this setting.



2.5.4 ACK/NAK TIMEOUT

By default, the scanner sends data to the host without waiting for an ACK/NAK response before sending more data. Specify a value, ranging from 1 to 99 in units of 0.1 second. If no response within the specified period of time, the scanner will attempt to send the same data two more times. If all attempts fail without any notification, data loss will occur.

ACK/NAK Time-out
after ... (*0~99)



- 1) Read the barcode above to specify the time interval for the scanner to send data and wait for a response from the host.
- 2) Read the "[Decimal Value](#)" barcode on page 233. For example, read "1" and "0" for the scanner to automatically shut down after being idle for 1 second.
- 3) Read the "Validate" barcode on the same page to complete this setting.

ACK/NAK Error Beep

Enable Error Beep



*Disable Error Beep



Note: We suggest enabling the error beep so that you will be notified of such data loss and have the scanner re-read data.



2.5.5 USB VIRTUAL COM/COM_CDC VIA 3610 AUTO-RECONNECTION

Users can decide whether to have the scanner automatically reconnect to a paired device after disconnection, and the occasion for reconnecting.

*Auto reconnect
immediately



100168

Auto reconnect on
data scanned



100169

Auto reconnect off



100170



2.6 DIRECT USB HID

1663 supports “Direct” USB HID interface for memory mode. Use the provided USB cable to connect 1663 to the USB port of PC. Run any text editor on a computer to view and capture the scanned data being transmitted to the computer. Refer to [1.2.2 Memory Mode](#).

HID Settings	Defaults
Keyboard Type	HID PCAT (US)
Numeric Layout	Normal
Capital Lock Type	Normal
Capital Lock State	OFF
Alphabet Transmission	Case Sensitive
Numeric Transmission	Alphanumeric Keypad
Inter-Character Delay	0 (ms)
Inter-Function Delay	0 (ms)



2.6.1 ACTIVATE USB HID & SELECT KEYBOARD TYPE

When USB HID interface is activated, please select a keyboard type to complete this setting.

Activate
Direct USB HID &
Select Keyboard
Type...



- 1) Read the barcode above to activate USB HID and select a keyboard type.
- 2) Read the "[Decimal Value](#)" barcode page 233 . Refer to the table below for the number of desired keyboard type.
- 3) Read the "Validate" barcode on the same page to complete this setting.

USB HID

By default, the keyboard type is set to PCAT (US). The following keyboard types are supported —

No.	Keyboard Type	No.	Keyboard Type
64	PCAT (US)	72	PCAT (Spanish)
65	PCAT (French)	73	PCAT (Portuguese)
66	PCAT (German)	74	PS55 A01-2 (Japanese)
67	PCAT (Italy)	75	User-defined table
68	PCAT (Swedish)	76	PCAT (Turkish)
69	PCAT (Norwegian)	77	PCAT (Hungarian)
70	PCAT (UK)	78	PCAT (Swiss German)
71	PCAT (Belgium)	79	PCAT (Danish)



2.6.2 KEYBOARD SETTINGS

- ▶ Alphabet Layout
- ▶ Numeric Layout
- ▶ Capital Lock Type
- ▶ Capital Lock Setting
- ▶ Alphabet Transmission
- ▶ Numeric Transmission

Alphabet Layout

By default, the alphabet layout is set to normal mode, also known as the standard English layout. Select French or German keyboard layout if necessary. The scanner will make adjustments when sending the "A", "Q", "W", "Z", "Y", and "M" characters according to this setting.




Note: This setting only works when the keyboard type selected is US keyboard, such as PCAT (US). The Alphabet Layout and Numeric Layout setting must match using keyboard.



US Keyboard Style – Normal

QWERTY layout, which is normally used in western countries.

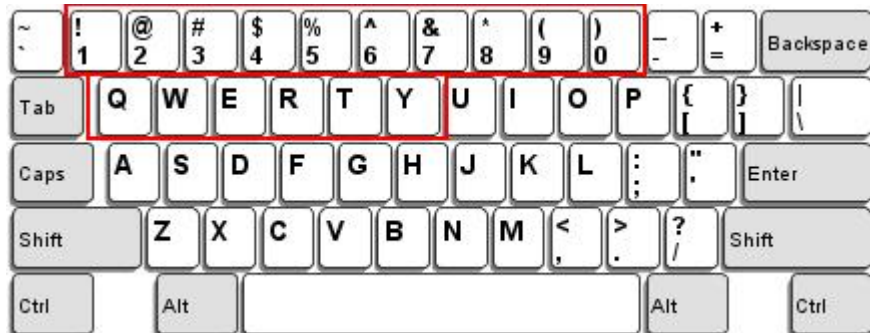

- ▶ Select "Lower Row" for the "Numeric Layout" setting for the upper row is for special characters.

French Keyboard Style – AZERTY

French layout; see below for French Keyboard Style.



- ▶ Select "Upper Row" for the "Numeric Layout" setting for the lower row is for special characters.

German Keyboard Layout – QWERTZ

German layout; see below for German Keyboard Style.



- ▶ Select "Lower Row" for the "Numeric Layout" setting for the upper row is for special characters.



Numeric Layout

Select a proper layout that matches the alphabet layout. The scanner will make adjustments according to this setting.

Options	Description
Normal	Depends on the [Shift] key or [Shift Lock] setting
Lower Row	For QWERTY or QWERTZ keyboard
Upper Row	For AZERTY keyboard

***Normal****Upper Row****Lower Row**

Note: This setting is to be used with the Character Substitution setting when support for certain keyboard types (languages) is unavailable but required.



Capital Lock Type & Setting

In order to send the alphabet with correct case, the scanner needs to know the status of Caps Lock on the keyboard. Incorrect settings may result in reversed case of the alphabet being transmitted.

Cap Lock Type	Description
Normal	Normal type
Capital Lock	When enabled, the keys of alphabetic characters will be interpreted as capital letters. However, this does not affect the number or punctuation keys.
Shift Lock	When enabled, the keys of alphabetic characters will be interpreted as capital letters. In addition, this affects the number or punctuation keys.

*Normal



100042

Shift Lock



100045

Capital Lock



100044

Capital Lock State	Description
Capital Lock OFF	Assuming that the status of Caps Lock on the keyboard is OFF, transmitted characters are exactly the same as in the barcode (when "case-sensitive" is selected for Alphabet Transmission).
Capital Lock ON	Assuming that the status of Caps Lock on the keyboard is ON, transmitted characters are exactly the same as in the barcode (when "case-sensitive" is selected for Alphabet Transmission). ▶ Refer to the Capital Lock Type above.
Auto Detection (suggested use for most applications)	The scanner will automatically detect the status of Caps Lock on the keyboard before data is transmitted; transmitted characters are exactly the same as in the barcode (when "case-sensitive" is selected for Alphabet Transmission).

Auto Detect



100054

Capital Lock ON



100053



*Capital Lock OFF



Alphabet Transmission

By default, the alphabet transmission is case-sensitive, meaning that the alphabet will be transmitted according to the original case, the status of Caps Lock on the keyboard, as well as the Capital Lock setting. Select [Ignore Case] to have alphabet transmitted according to the status of Caps Lock on the keyboard only.

Ignore Case

 


*Case-sensitive



1. Letter Case for Output Format

Refer to 5.1 Letter Case.




2. Alphabets Transmission for Keyboard Wedge & Bluetooth HID



3a. Check Caps Lock on the keyboard


3b. Check Caps Lock on the keyboard

4. Check Capital Lock setting

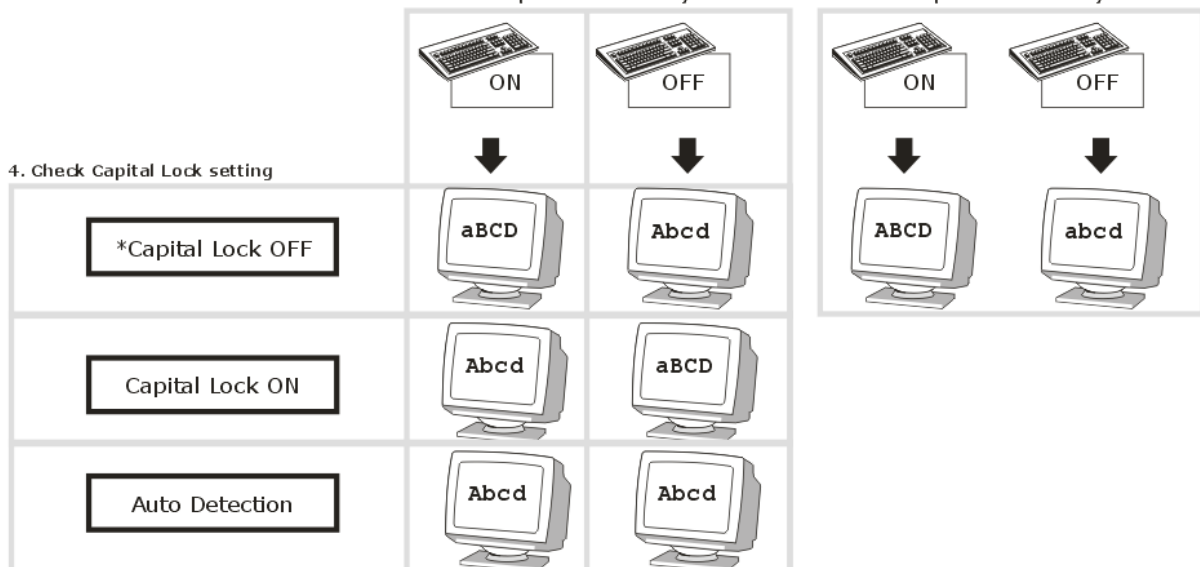

Numeric Transmission

By default, the alphanumeric keypad is used for transmitting numerics. Select "Numeric Keypad" if you want to use the keys on the numeric keypad.

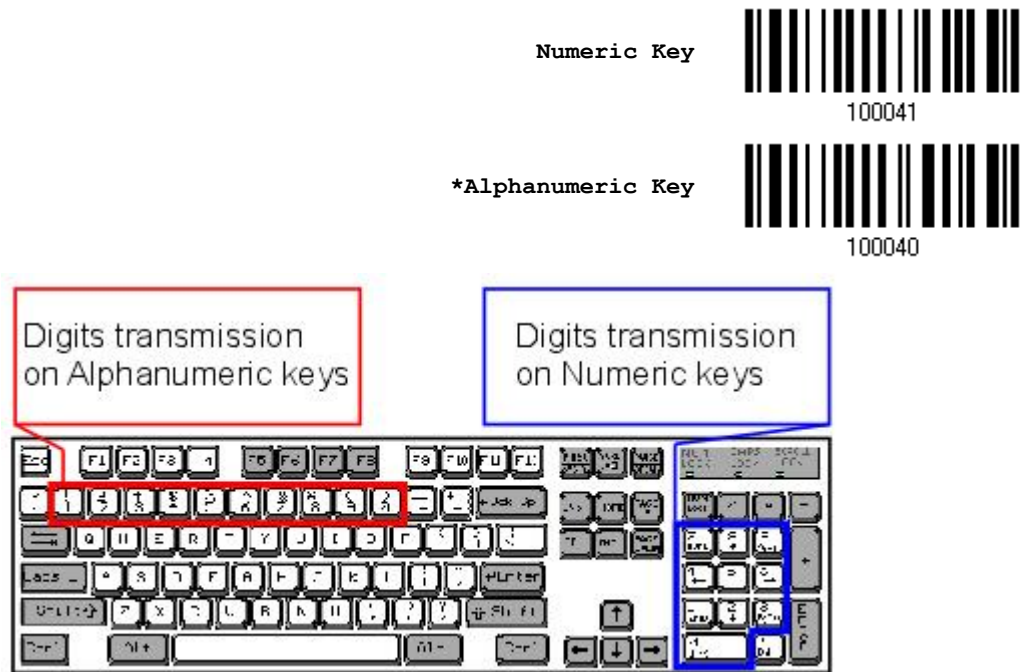

Note: If selecting "Numeric Keypad", the Num Lock status of the physical keyboard should be "ON".

2.6.3 INTER-CHARACTER DELAY

By default, the inter-character delay is set to zero. Specify a value, ranging from 0 to 254 in units of milliseconds, to match the computer response time of the keyboard interface. Such delay time is inserted between every character being transmitted. The longer the delay time is, the slower the transmission speed will be.

Inter-Character
Delay... (*0~254)



- 1) Read the barcode above to specify the inter-character delay.
- 2) Read the "[Decimal Value](#)" barcode on page 233 for the desired inter-character delay (in milliseconds).
- 3) Read the "Validate" barcode on the same page to complete this setting.



2.6.4 INTER-FUNCTION DELAY

By default, the inter-function delay is set to zero. Specify a value, ranging from 0 to 254 in units of milliseconds, to match the computer response time of the keyboard interface. Such delay time is inserted between every function code (0x01 ~ 0x1F) being transmitted. The longer the delay time is, the slower the transmission speed will be.

Inter-Function
Delay... (*0~254)



- 1) Read the barcode above to specify the inter-function delay.
- 2) Read the "[Decimal Value](#)" barcode on page 233 for the desired inter-function delay (in milliseconds).
- 3) Read the "Validate" barcode on the same page to complete this setting.

2.6.5 HID CHARACTER TRANSMIT MODE

By default, HID interface sends data to the host character by character. You may have the scanner read the "Batch Processing" barcode to process data in batch.

Batch Processing



*By Character



Note: "By Character" transmit mode is required when working with iPhone or iPad.



2.6.6 SPECIAL KEYBOARD FEATURE

By default, the special keyboard feature is based on the factory definition. You can decide whether to apply the special keyboard feature. Refer to [Keyboard Wedge Table](#).



2.6.7 USB POLLING INTERVAL

Scan the barcodes below to specify the USB polling interval ranging from 1 to 15ms. It's set to 10ms by default.



- 1) Read the barcode above to specify the USB polling interval.
- 2) Read the "[Decimal Value](#)" barcode on page 233 for the desired time period (in milliseconds).
- 3) Read the "Validate" barcode on the same page to complete this setting.



2.6.8 CONTROL CHARACTER OUTPUT (WINDOWS ONLY)

Enable this function to output control characters ranging from 0x01 to 0x1F in text form. For instance, [BS] (the backspace) is output rather than 0x08 when this function is enabled.

Enable



100107

*Disable



100106



2.7 DIRECT USB VIRTUAL COM

1663 supports "Direct" USB Virtual COM interface for memory mode. Use the provided USB cable to connect 1663 to the USB port of PC. You may run HyperTerminal.exe on a computer to view and capture the scanned data being transmitted to the computer. Refer to [1.2.2 Memory Mode](#).

2.7.1 ACTIVATE USB VIRTUAL COM

*Activate Direct USB
Virtual COM



Note: If using USB Virtual COM for the first time, install its driver beforehand. Driver version 5.4 or later is required. Please remove older versions before installing new ones!

2.7.2 AVTIVATE USB VIRTUAL COM_CDC

*Activate Direct USB
Virtual COM_CDC



Note: If using USB Virtual COM for the first time, install its driver beforehand.

2.7.3 INTER-FUNCTION DELAY

By default, the inter-function delay is set to zero. Specify a value, ranging from 0 to 254 in units of milliseconds, to match the computer response time of the keyboard interface. Such delay time is inserted between every function code (0x01 ~ 0x1F) being transmitted. The longer the delay time is, the slower the transmission speed will be.

Inter-Function
Delay... (*0~254)



- 1) Read the barcode above to specify the inter-function delay.
- 2) Read the "[Decimal Value](#)" barcode on page 233 for the desired inter-function delay (in milliseconds).
- 3) Read the "Validate" barcode on the same page to complete this setting.



2.7.3 ACK/NAK TIMEOUT

By default, the scanner sends data to the host without waiting for an ACK/NAK response before sending more data. Specify a value, ranging from 1 to 99 in units of 0.1 second. If no response within the specified period of time, the scanner will attempt to send the same data two more times. If all attempts fail without any notification, data loss will occur.

ACK/NAK Time-out
after ... (*0~99)



100013

- 1) Read the barcode above to specify the time interval for the scanner to send data and wait for a response from the host.
- 2) Read the "[Decimal Value](#)" barcode on page 233. For example, read "1" and "0" for the scanner to automatically shut down after being idle for 1 second.
- 3) Read the "Validate" barcode on the same page to complete this setting.

ACK/NAK Error Beep

Enable Error Beep



100015

*Disable Error Beep



100014


Note: We suggest enabling the error beep so that data loss is notified and the scanner re-read data.



SET UP A WPAN CONNECTION

The scanner can be configured to send data to a host computer wirelessly via the 3610 dongle, or to a notebook computer or PDA with *Bluetooth*® wireless technology. Upon powering up, the scanner will be ready to establish a WPAN connection.

To establish a connection via 3610 after reading “Set Connection” and “Serial No.” barcodes ...

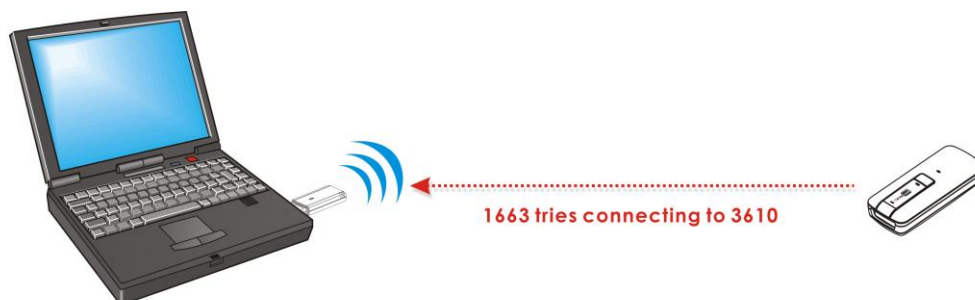

Interface Option	Reference
USB HID	2.4 USB HID via 3610
USB Virtual COM	2.5 USB Virtual COM via 3610

To establish a connection via *Bluetooth*® dongle after pairing...



Interface Option	Reference
Bluetooth® HID	2.1 Bluetooth® HID
Bluetooth® SPP	2.2 Bluetooth® SPP Slave, 2.3 Bluetooth® SPP Master

IN THIS CHAPTER

3.1 Connecting via 3610.....	102
3.2 Connecting via <i>Bluetooth</i> ® Dongle.....	104



3.1 CONNECTING VIA 3610

By default, the interface of 3610 is set to "USB HID". You can have up to seven scanners connected to one computer at the same time.

Note: If using USB Virtual COM for the first time, you must install its driver beforehand. Driver version 5.4 or later is required. Please remove older versions!

3.1.1 CONNECT TO 3610

The scanner can connect to 3610 by scanning either two setting barcodes or a single 1D setting barcode.

By scanning two setting barcodes in sequence

Connect any scanner to 3610 by reading the two labels at the back of 3610. The scanner will respond with one beep upon reading each of the labels.

- ▶ "Set Connection" label
- ▶ "Serial Number" label

After reading these labels, the scanner will stay active for a specified period of time (2 minutes by default) trying to connect to the 3610 while its LED is flashing blue (On/Off ratio 0.5 s: 0.5 s). Once connected, the scanner will respond with three beeps (tone ascending from low to high), and the LED flashes blue (On/Off ratio 0.02 s: 3 s). When out of range, the scanner will respond with three short beeps (tone descending from high to low).

Usage:

Read the "Set Connection" barcode first, and then the "Serial Number" barcode. If the "Set Connection" barcode on 3610 is illegible, try this one —

Set Connection



Note: The 3610 settings will overwrite the interface-related settings on the scanners that are currently connected to 3610.

By scanning a single 1D setting barcode

Users can produce a single 1D setup barcode that combines the "Set Connection" and "3610 Serial Number" setup barcodes to connect with the target device. While producing the barcode, be aware the letter upper/lower case "SeTcOn" and the barcode must be the Code 128 symbology.

Usage:


Read the "SeTcOnxxxxxxxx" 1D single barcode. The scanner will respond with one beep upon reading the barcode.



3.1.2 CHANGE INTERFACE

If you want to change the communication interface of 3610, use one of the connected scanners to configure the interface-related settings and the scanner will pass the new settings to 3610, which will then initialize and pass the settings to other connected scanners.

- 1) Read the "Set Connection" and "Serial Number" barcodes at the back of 3610.
- 2) Within two minutes, connect 3610 to the USB port of PC. For USB Virtual COM, you will need to install its driver first!
- 3) Scanners will connect to the computer via 3610.
- 4) Read the "Enter Setup" barcode to enter the configuration mode.
- 5) Read the desired interface barcode and configure its related settings –
 - ▶ "Activate USB HID & Select Keyboard Type"
 - ▶ "Activate USB Virtual COM"
- 6) Read the "Update" barcode to exit the configuration mode.
- 7) After the scanner resumes connection with 3610, it will pass the interface-related settings to 3610.
- 8) Upon receipt of the new settings, 3610 will initialize itself.
- 9) Updated with new settings, 3610 will pass the settings to other connected scanners.

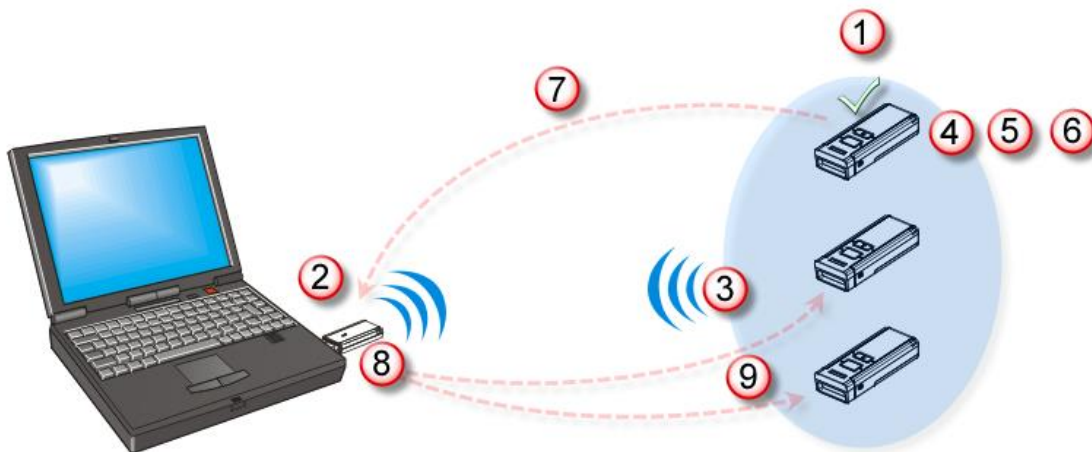

3.2 CONNECTING VIA *BLUETOOTH*® DONGLE

3.2.1 CHANGE INTERFACE

Below is the procedure to configure the scanner before establishing a WPAN connection via *Bluetooth*® dongle.

- 1) Read the "Enter Setup" barcode to enter the configuration mode.
- 2) Read the desired interface barcode –
 - ▶ "Activate *Bluetooth*® HID & Select Keyboard Type"
 - ▶ "Activate *Bluetooth*® SPP Slave Mode"
 - ▶ "Activate *Bluetooth*® SPP Master Mode"
- 3) Read the barcodes related to WPAN settings, such as Device Name Broadcasting, Authentication & PIN Code, etc.
- 4) Read the "Update" barcode to exit the configuration mode.
- 5) The scanner will stay active for a specified period of time (2 minutes by default) waiting for a connection request from the host (SPP Slave Mode) or trying to connect to the host (HID or SPP Master Mode). Its CPU is running at full speed, and the LED is flashing blue (On/Off ratio 0.5 s: 0.5 s).

Once connected, when out of range, the scanner will respond with three short beeps (tone descending from high to low).



3.2.2 CONFIGURE RELATED SETTINGS

Sniff Mode (Power-saving)

By default, this feature is enabled, meaning the scanner will listen to the wireless network at a reduced rate.

*Enable



100153

Disable



100152

Note: When connecting more than two scanners to a notebook computer or PDA with *Bluetooth*[®] wireless technology, we suggest that you disable the power-saving setting for a more reliable connection.

Device Name Broadcasting

The scanner can be configured to hide itself from other devices equipped with *Bluetooth*[®] wireless technology. Simply disable the device name broadcasting setting so that it won't be discovered by any other computer or PDA. However, broadcasting must be enabled for establishing an initial connection with the scanner. For example, disable device name broadcasting after successfully connecting the scanner to WorkStation1. Such connection will be maintained automatically unless the scanner is removed from the paired device list (called unpairing) by WorkStation1 or any changes made to authentication and PIN code. If you want WorkStation2 to connect to the scanner, you have to enable device name broadcasting first.

*Enable



100157

Disable



100156

Note: By default, device name broadcasting is enabled (which is required for initial connection).

Changing Device Name

By default, the device name (local hostname) combines the model name with serial number (for example, 1663AS2000001). Users are allowed to configure the device name with length up to 13 bytes.

Change Bluetooth
Local Hostname



100140



- 1) Read the barcode above to configure the device name.
- 2) Read the "[Hexadecimal Value](#)" barcode on page 234 for the desired character string.
- 3) Read the "Validate" barcode to complete this setting.



Authentication

When any changes are made to authentication and PIN code on the scanner side, you will have to remove the scanner from the paired device list (called unpairing) and go through the whole process to re-establish the connection.

The scanner allows up to 16 characters for a PIN code and provides two options for authentication:

Enable Authentication with Preset PIN

Read the "Use preset PIN" barcode, and change the preset PIN if necessary. This means you will have to enter exactly the same string for your computer or PDA to connect to the scanner. If the PIN or passkey is incorrect, any connection attempt will be turned down by the scanner. See step 8 in [3.2.3 Connect to Dongle](#).

- 1) Read the "Use preset PIN" barcode to enable authentication with a preset PIN.



- 2) Read one of the barcodes to specify the PIN code, in decimal or hexadecimal.
By default, the PIN code is set to "0000". Maximum 16 characters are allowed.



- 3) Read the "[Decimal Value](#)" barcode on page 233 or the "[Hexadecimal Value](#)" barcode on page 234 for the desired digits or character string.
Read the "Clear PIN Code" barcode first if you need to re-input the PIN code.




- 4) Read the "Validate" barcode to complete this setting.

Enable Authentication with Random PIN or No Authentication

By default, it is set to "No PIN or use random PIN", which depends on the setting of the target device. (No PIN = No authentication.)



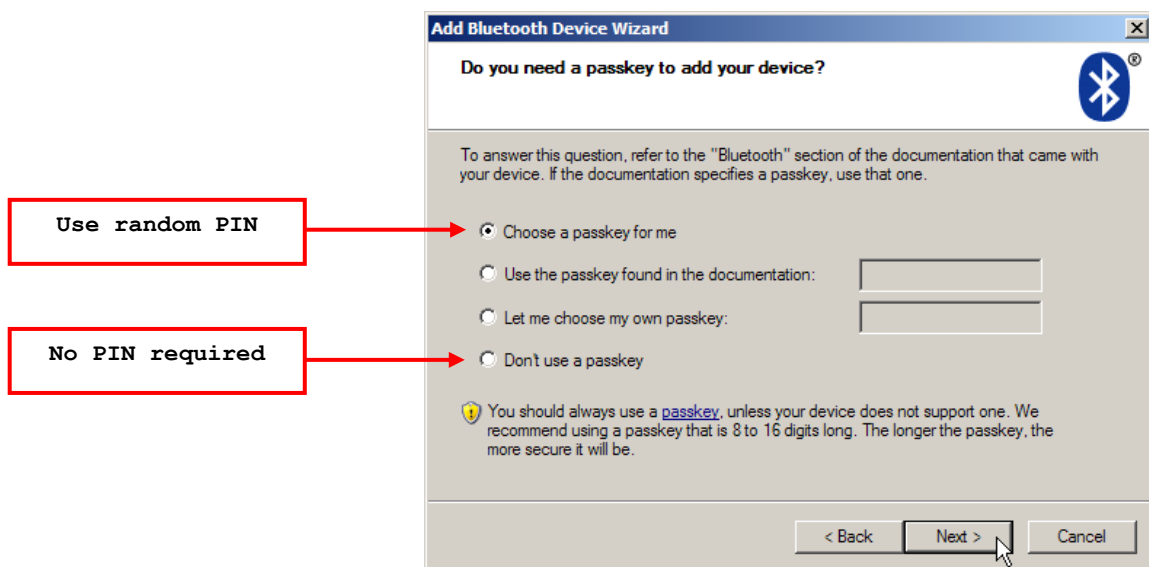

Note: When using *Bluetooth*® HID, some device driver may not support pre-defined PIN code for authentication. In this case, make sure you have the scanner set to "No PIN or use random PIN" before pairing. While pairing, the host PIN code will be displayed on the computer screen. Have the scanner read the setup barcode "Enter PIN Code in Decimal" or "Enter PIN Code in Hexadecimal" to input the matching PIN code. Refer to [Disable Authentication or Use Random PIN](#).



3.2.3 CONNECT TO DONGLE


The procedure goes through associating devices for establishing a WPAN connection, which is pretty much the same except for the software you are using. If your computer is running Microsoft® Windows® XP (SP1 to SP3), Windows Vista® Service Pack 1 (SP1) and Windows 7, you can use the software support that Windows® includes, or you can use the driver that the device manufacturer provides. Now, let's try using the software support that Windows® XP Service Pack 2 includes.


Bluetooth® HID Procedure

By default, *Bluetooth*® HID is activated on the scanner, and the keyboard type is set to PCAT (US). When *Bluetooth*® HID is re-activated, you will have to select a keyboard type to complete this setting.

The procedure is the same as for *Bluetooth*® SPP. Refer to steps 1~11 below.

Bluetooth® SPP Procedure

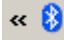- 1) Turn on the *Bluetooth*® function on your computer, running Windows XP SP2.
- 2) Double-click the *Bluetooth*® icon from the lower right of the taskbar.  14:14 PM
Alternatively, you may go to **Control Panel > Bluetooth Devices**.
- 3) Click [Add] to search devices nearby.

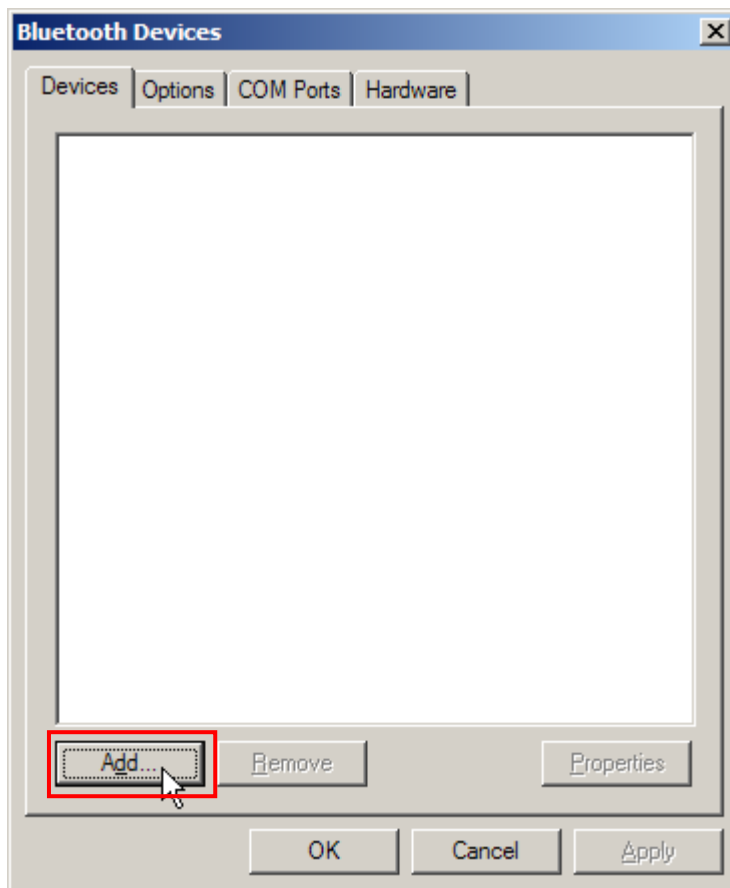

- 4) Turn on the scanner with correct WPAN settings, such as select *Bluetooth®* SPP or *Bluetooth®* HID, broadcasting enabled, authentication enabled, and PIN code specified, etc. Select the check box of [My device is set up and ready to be found] on your computer.
- 5) Click [Next].




- 6) Wait for a few seconds for the Wizard to search available devices nearby.

The scanner will appear with its "serial number" as the device name. You may double-check the "Serial Number" label on the scanner to ensure connecting with the correct scanner. Select the target scanner. If the target scanner does not appear on the list, click [Search Again] to refresh the list. The scanner might enter Suspend Mode now, and you can press the trigger to have it active again (=discoverable). It will then stay active for a specified period of time (2 minutes by default) and wait for PC to establish a connection.



- 7) Click [Next].

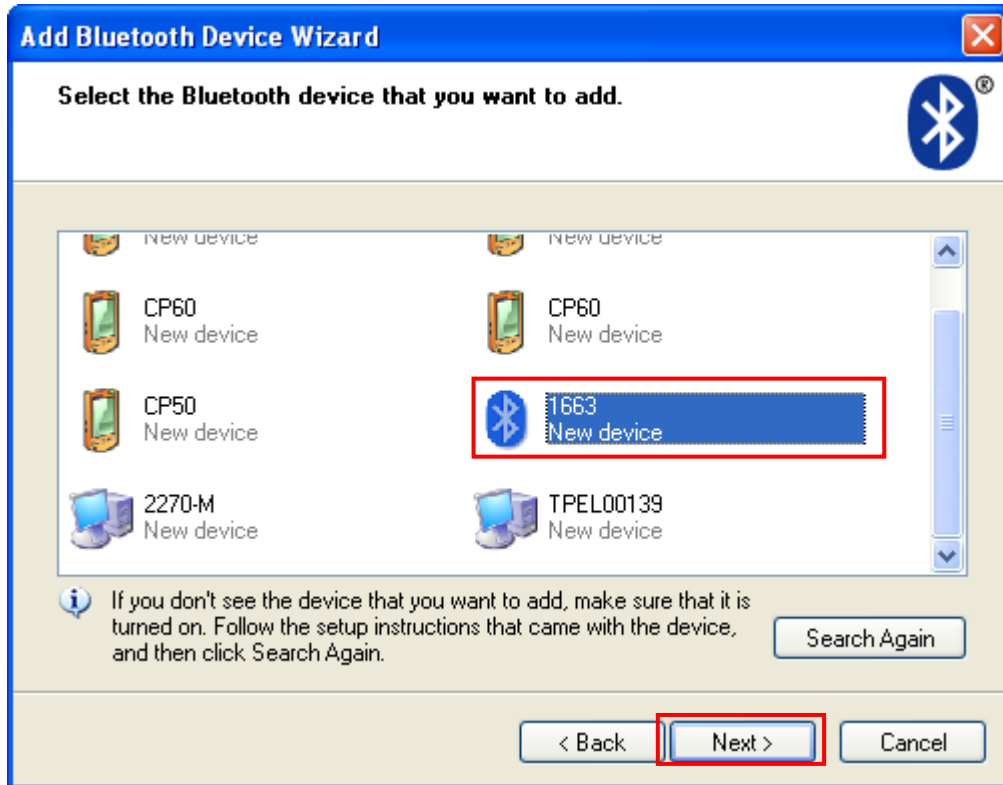

- 8) Enter the passkey for authentication, which must be exactly the same as configured for the scanner.



- 9) Click [Next]. Wait for a few seconds for Windows to exchange passkeys.

Add Bluetooth Device Wizard

Do you need a passkey to add your device?

To answer this question, refer to the "Bluetooth" section of the documentation that came with your device. If the documentation specifies a passkey, use that one.

☐ Choose a passkey for me

☒ Use the passkey found in the documentation: 1

☐ Let me choose my own passkey:

☐ Don't use a passkey

You should always use a passkey, unless your device does not support one. We recommend using a passkey that is 8 to 16 digits long. The longer the passkey, the more secure it will be.

< Back Next > Cancel

Add Bluetooth Device Wizard

Windows is exchanging passkeys.

When instructed below, enter the passkey using your Bluetooth device.

For more information about entering a passkey, see the documentation that came with your device.

✓ Connecting...

► **Please enter the passkey on your Bluetooth device now.**

Passkey: 1

Installing Bluetooth device...


Note: You might need to press ENTER after typing the passkey on a Bluetooth keyboard.

< Back Next > Cancel




Note: When *Bluetooth* security is enabled without providing a pre-set PIN code, dynamic input of PIN code is supported.

10) Click [Finish].

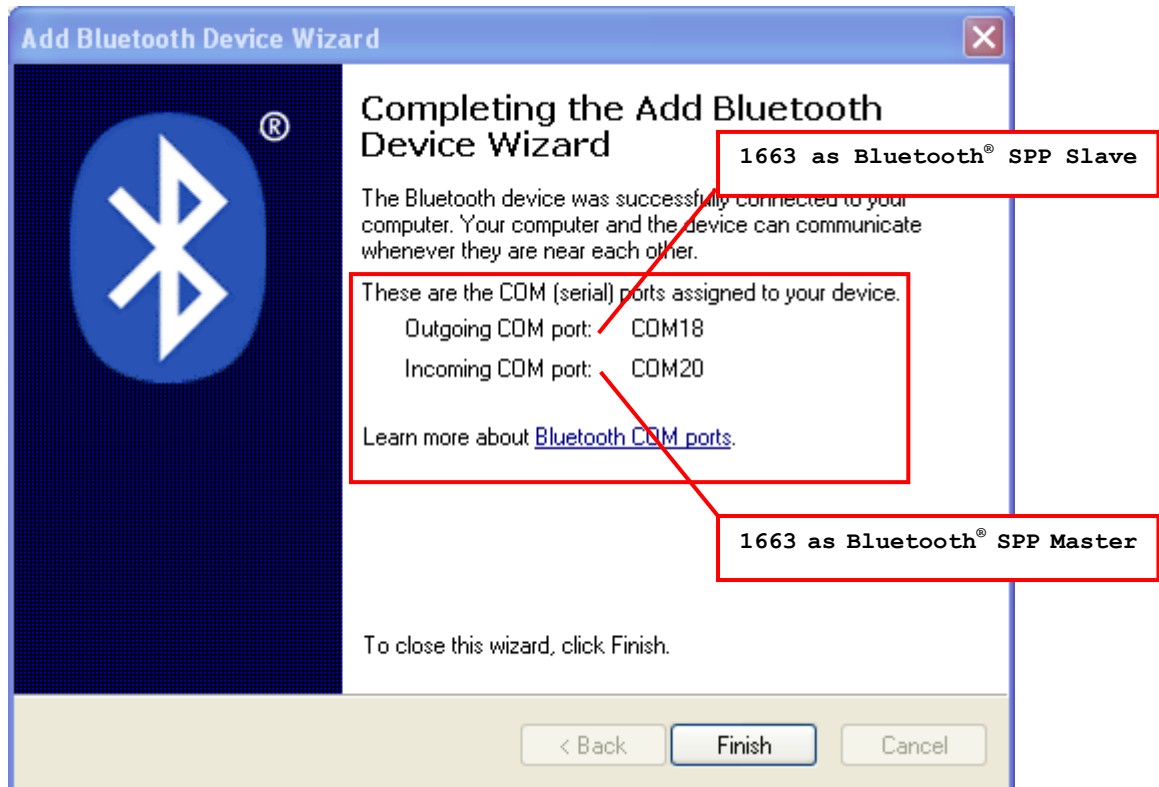

- 11) Now the target scanner will be listed as below.

You can have up to seven scanners connected to one computer at the same time.

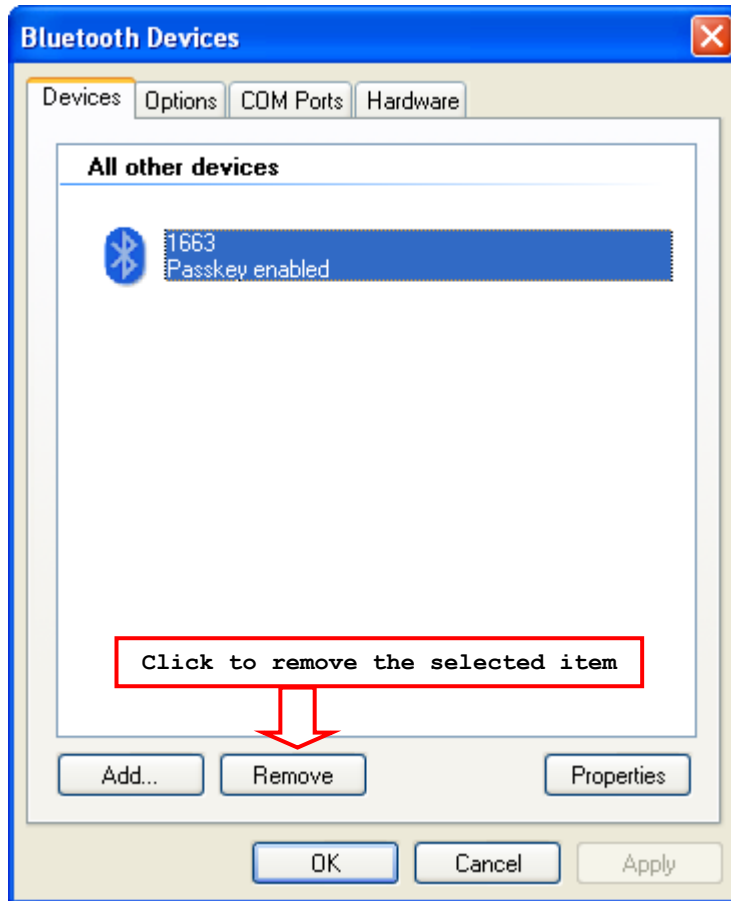



Note: When any changes are made to authentication and PIN code on the scanner side, or you want to change to use *Bluetooth*® HID, it is suggested that you remove the scanner from the paired device list (called unpairing) and go through the whole process to re-establish the connection.

- 12) Run the desired application on your computer, such as HyperTerminal.exe if using *Bluetooth*® SPP or Notepad.exe if using *Bluetooth*® HID.

The status of the scanner listed on the device list will be updated to "Connected", indicating the WPAN connection is established successfully via the outgoing COM port if using *Bluetooth*® SPP.

Note: Even though the scanner is connected to the host with authentication disabled (= no PIN code required), the host may still request a PIN code while the application is opening COM port. Dynamic input of PIN code is supported so that you may input a matching PIN code on the scanner. Refer to [Disable Authentication or Use Random PIN](#).



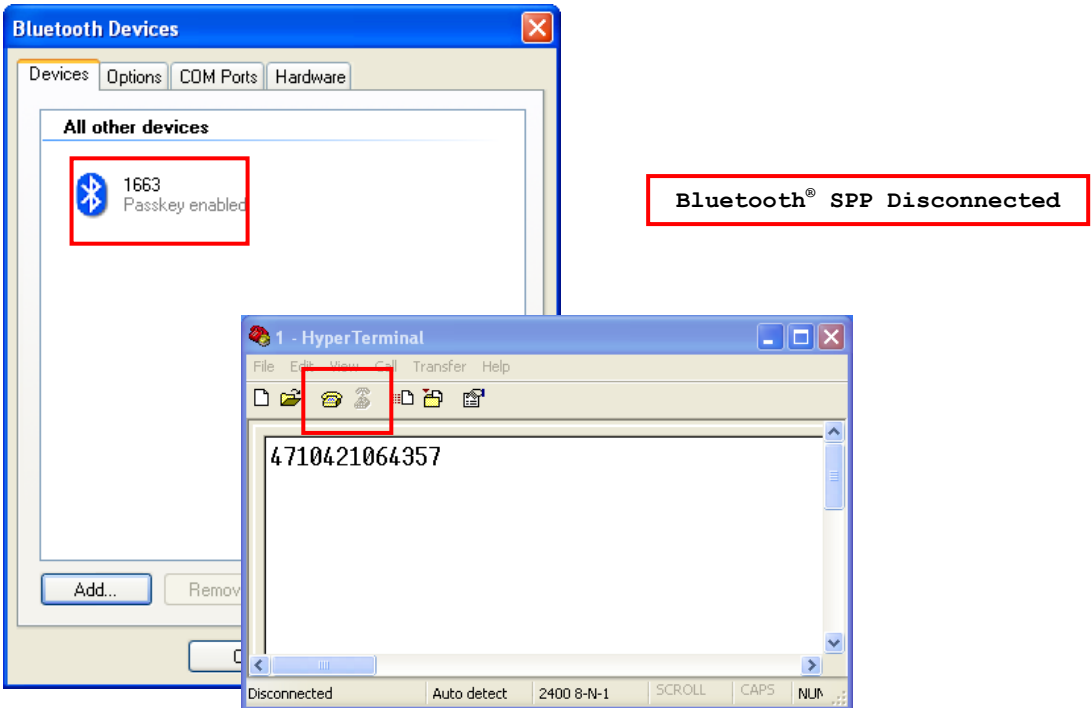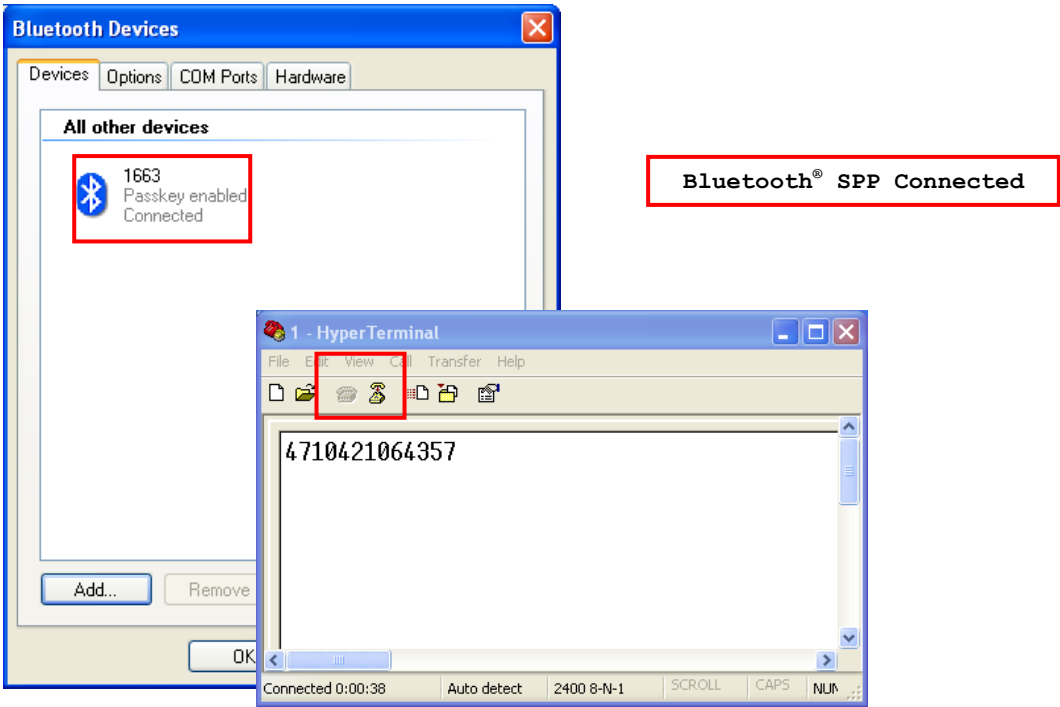

3.2.4 SECURE SIMPLE PAIRING (SSP)

Secure Simple Pairing (SSP), introduced in Bluetooth® Core Specification 2.1 + EDR, is a new feature designed to ease the pairing process while keeping up the communication security level. This function is disabled by default. When connecting to a Bluetooth® host that supports Bluetooth® HID or Bluetooth® SPP profile, you can implement the secure simple pairing process. By scanning the Enable barcode below, the password dialog box won't show up during the pairing process.



Note: Simple pairing only supports to the device with *Bluetooth®* v2.1 or later.



CHANGE SYMBOLOGY SETTINGS

In this chapter, a brief on the symbology settings is provided for your reference.

Users can simply scan the setting barcodes below to disable/enable all symbologies.

Enable



109805

Disable



109804

Settings for each particular symbology will be depicted as follows.

IN THIS CHAPTER

4.1 Codabar.....	118
4.2 Code 25 – Industrial 25	120
4.3 Code 25 – Interleaved 25.....	123
4.4 Code 25 – Matrix 25.....	126
4.5 Code 39.....	129
4.6 Trioptic Code 39	131
4.7 Code 93	131
4.8 Code 128	131
4.9 EAN-8.....	132
4.10 EAN-13	134
4.11 GS1-128 (EAN-128)	137
4.12 ISBT 128	139
4.13 MSI	140
4.14 French Pharmacode	142
4.15 Italian Pharmacode	143
4.16 Plessey	144
4.17 GS1 DataBar (RSS Family)	145
4.18 Telepen.....	151
4.19 UPC-A.....	152
4.20 UPC-E.....	154
4.21 Code 11	157



4.1 CODABAR

***Enable**



Disable



4.1.1 CODABAR SECURITY LEVEL

Security Level renders more decoding accuracy giving consideration to barcodes' print quality. Decide the security level for reading CodaBar barcodes.

*** High**



Normal



4.1.2 START/STOP CHARACTERS SELECTION

Select one of the four different start/stop character pairs –

*** abcd/abcd**



abcd/tn*e



ABCD/ABCD



ABCD/TN*E




4.1.3 START/STOP TRANSMISSION

Decide whether to include the start/stop characters in the data being transmitted.



4.1.4 CLSI CONVERSION

When enabled, the CLSI editing strips the start/stop characters and inserts a space after the first, fifth, and tenth characters of a 14-character Codabar barcode.

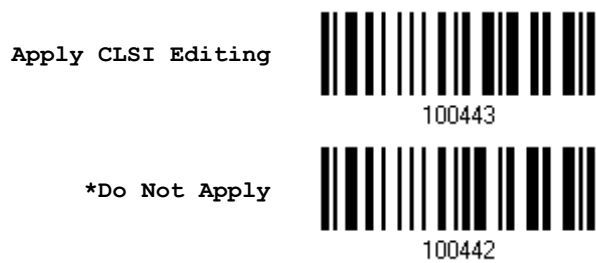

Note: The 14-character barcode length does not include start/stop characters.



4.2 CODE 25 – INDUSTRIAL 25

***Enable**



100307

Disable



100306

4.2.1 START/STOP PATTERN SELECTION

This decides the readability of all 2 of 5 symbology variants. For example, flight tickets actually use an Industrial 2 of 5 barcode but with Interleaved 2 of 5 start/stop pattern. In order to read this barcode, the start/stop pattern selection parameter of Industrial 2 of 5 should be set to "Interleaved 25".

***Industrial 25
Start/Stop Pattern**



100412

**Interleaved 25
Start/Stop Pattern**



100413

**Matrix 25
Start/Stop Pattern**



100414



4.2.2 VERIFY CHECK DIGIT

Decide whether to verify the check digit. If incorrect, the barcode will not be accepted.

Verify Industrial 25
Check Digit



100425

*Do Not Verify



100424

4.2.3 TRANSMIT CHECK DIGIT

Decide whether to include the check digit in the data being transmitted.

*Transmit
Industrial 25
Check Digit



100427

Do Not Transmit



100426



4.2.4 CODE LENGTH QUALIFICATION

To prevent the "short scan" error, define the "Length Qualification" settings to ensure that the correct barcode is read by qualifying the allowable code length.

- ▶ If "Max/Min Length" is selected, the maximum length and the minimum length must be specified. It only accepts those barcodes with lengths that fall between max/min lengths specified.
- ▶ If "Fixed Length" is selected, up to 2 fixed lengths can be specified.

- 1) Read the barcode to enable either Max. /Min. Length qualification or Fixed Length(s) qualification.

*Enable Max./Min.
Length (0~127)...



Enable Fixed
Length(s)...



- 2) Read the barcode for Max. Length or Fixed Length 1, and follow steps 3~4.
Repeat steps 2~4 for Min. Length or Fixed Length 2.

Max. Length (*127) or
Fixed Length 1



Min. Length (*4) or
Fixed Length 2




- 3) Read the "[Decimal Value](#)" barcode on page 233 for the desired length.
- 4) Read the "Validate" barcode on the same page to complete this setting.



4.2.5 SECURITY LEVEL

Security Level renders more decoding accuracy giving consideration to barcodes' print quality. Decide the security level for reading Code 25 barcodes.

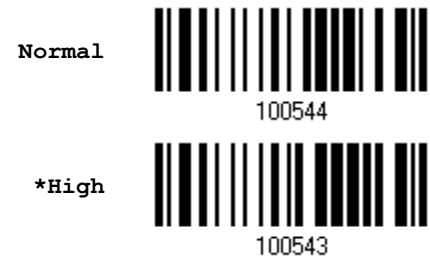

4.3 CODE 25 – INTERLEAVED 25



4.3.1 START/STOP PATTERN SELECTION

This decides the readability of all 2 of 5 symbology variants. For example, flight tickets actually use an Industrial 2 of 5 barcode but with Interleaved 2 of 5 start/stop pattern. In order to read this barcode, the start/stop pattern selection parameter of Industrial 2 of 5 should set to "Interleaved 25".



4.3.2 VERIFY CHECK DIGIT

Decide whether to verify the check digit. If incorrect, the barcode will not be accepted.

Verify
Interleaved 25
Check Digit



*Do Not Verify



4.3.3 TRANSMIT CHECK DIGIT

Decide whether to include the check digit in the data being transmitted.

*Transmit
Interleaved 25
Check Digit



Do Not Transmit



4.3.4 CODE LENGTH QUALIFICATION

To prevent the "short scan" error, define the "Length Qualification" settings to ensure that the correct barcode is read by qualifying the allowable code length.

- ▶ If "Max/Min Length" is selected, the maximum length and the minimum length must be specified. It only accepts those barcodes with lengths that fall between max/min lengths specified.
- ▶ If "Fixed Length" is selected, up to 2 fixed lengths can be specified.

- 1) Read the barcode to enable either Max. /Min. Length qualification or Fixed Length(s) qualification.

*Enable Max./Min.
Length (0~127)...



Enable Fixed
Length(s)...



- 2) Read the barcode for Max. Length or Fixed Length 1, and follow steps 3~4.
Repeat steps 2~4 for Min. Length or Fixed Length 2.

Max. Length (*126) or
Fixed Length 1



Min. Length (*4) or
Fixed Length 2



- 3) Read the "[Decimal Value](#)" barcode on page 233 for the desired length.
- 4) Read the "Validate" barcode on the same page to complete this setting.

4.3.5 SECURITY LEVEL

Security Level renders more decoding accuracy giving consideration to barcodes' print quality. Decide the security level for reading Code 25 barcodes. Please refer to [4.2.5 Security Level](#).



4.4 CODE 25 – MATRIX 25

Enable



100311

*Disable



100310

4.4.1 START/STOP PATTERN SELECTION

This decides the readability of all 2 of 5 symbology variants. For example, flight tickets actually use an Industrial 2 of 5 barcode but with Interleaved 2 of 5 start/stop pattern. In order to read this barcode, the start/stop pattern selection parameter of Industrial 2 of 5 should set to "Interleaved 25".

Industrial 25
Start/Stop Pattern



100420

Interleaved 25
Start/Stop Pattern



100421

*Matrix 25
Start/Stop Pattern



100422



4.4.2 VERIFY CHECK DIGIT

Decide whether to verify the check digit. If incorrect, the barcode will not be accepted.

Verify Matrix 25
Check Digit



100433

*Do Not Verify



100432

4.4.3 TRANSMIT CHECK DIGIT

Decide whether to include the check digit in the data being transmitted.

*Transmit Matrix 25
Check Digit



100435

Do Not Transmit



100434



4.4.4 CODE LENGTH QUALIFICATION

To prevent the "short scan" error, define the "Length Qualification" settings to ensure that the correct barcode is read by qualifying the allowable code length.

- ▶ If "Max/Min Length" is selected, the maximum length and the minimum length must be specified. It only accepts those barcodes with lengths that fall between max/min lengths specified.
- ▶ If "Fixed Length" is selected, up to 2 fixed lengths can be specified.

- 1) Read the barcode to enable either Max. /Min. Length qualification or Fixed Length(s) qualification.

*Enable Max./Min.
Length (0~127)...



Enable Fixed
Length(s)...



- 2) Read the barcode for Max. Length or Fixed Length 1, and follow steps 3~4.
Repeat steps 2~4 for Min. Length or Fixed Length 2.

Max. Length (*127) or
Fixed Length 1



Min. Length (*4) or
Fixed Length 2



- 3) Read the "[Decimal Value](#)" barcode on page 233 for the desired length.
- 4) Read the "Validate" barcode on the same page to complete this setting.

4.4.5 SECURITY LEVEL

Security Level renders more decoding accuracy giving consideration to barcodes' print quality. Decide the security level for reading Code 25 barcodes. Please refer to [4.2.5 Security Level](#).



4.5 CODE 39

***Enable**



100301

Disable



100300

4.5.1 START/STOP TRANSMISSION

Decide whether to include the start/stop characters in the data being transmitted.

**Transmit Code 39
Start/Stop
Characters**



100403

***Do Not Transmit**



100402

4.5.2 VERIFY CHECK DIGIT

Decide whether to verify check digit. If incorrect, the barcode will not be accepted.

**Verify Code 39
Check Digit**



100405

***Do Not Verify**



100404

4.5.3 TRANSMIT CHECK DIGIT

Decide whether to include the check digit in the data being transmitted.

***Transmit Code 39
Check Digit**



100407



Do Not Transmit



100406

4.5.4 STANDARD/FULL ASCII CODE 39

Decide whether to support Code 39 Full ASCII that includes all the alphanumeric and special characters.

Code 39 Full ASCII



100401

*Standard Code 39



100400

4.5.5 CODE 39 SECURITY LEVEL

Security Level renders more decoding accuracy giving consideration to barcodes' print quality. Decide the security level for reading Code 39 barcodes.

*Normal



100489

High



100488

4.5.6 ASTERISKS (*) AS DATA CHARACTERS

Decide whether to take asterisk (*) as part of the data.

Enable



100513

*Disable



100512



4.6 TRIOPTIC CODE 39

Enable



100361

*Disable



100360

4.7 CODE 93

*Enable



100315

Disable



100314

4.8 CODE 128

*Enable



100317

Disable



100316

4.8.1 CODE 128 SECURITY LEVEL

Security Level renders more decoding accuracy giving consideration to barcodes' print quality. Decide the security level for reading Code 128 barcodes.

*Normal



100493

High



100492



4.9 EAN-8

EAN-8

***Enable EAN-8
(No Addon)**



100327

Disable



100326

EAN-8 Addon 2

Enable EAN-8 Addon 2



100329

***Disable**



100328

EAN-8 Addon 5

Enable EAN-8 Addon 5



100331

***Disable**



100330



4.9.1 CONVERT TO EAN-13

Decide whether to expand the read EAN-8 barcode, as well as its addons, into EAN-13.

- ▶ After conversion, the data follows EAN-13 format and is affected by EAN-13 programming selections (e.g. Check Digit).

Convert EAN-8 to
EAN-13



*Do Not Convert



4.9.2 TRANSMIT CHECK DIGIT

Decide whether to include the check digit in the data being transmitted.

*Transmit EAN-8
Check Digit



Do Not Transmit



4.9.3 CONVERSION FORMAT

When converting EAN-8 to EAN-13, you can scan the barcode below to decide conversion in default or GTIN-13 format.

*Default Format



GTIN-13 Format



4.10 EAN-13

EAN-13

***Enable EAN-13
(No Addon)**



Disable



EAN-13 Addon 2

Enable EAN-13 Addon 2



***Disable**



EAN-13 Addon 5

Enable EAN-13 Addon 5



***Disable**



4.10.1 ISBN CONVERSION

Decide whether to convert the EAN-13 barcode, starting with 978 and 979, to ISBN.

Convert EAN-13 to
ISBN



*Do Not Convert



4.10.2 ISSN CONVERSION

Decide whether to convert the EAN-13 barcode, starting with 977 to ISSN.

Convert EAN-13 to
ISSN



*Do Not Convert



4.10.3 TRANSMIT CHECK DIGIT

Decide whether to include the check digit in the data being transmitted.

*Transmit EAN-13
Check Digit



Do Not Transmit



4.10.4 EAN-13 SECURITY LEVEL

Security Level renders more decoding accuracy giving consideration to barcodes' print quality. Decide the security level for reading EAN-13 barcodes.



4.11 GS1-128 (EAN-128)

***Enable**



Disable



Note: GS1-128 barcodes can be decoded only when this setting is enabled. However, for 1660 with firmware version no later than 1.30, GS1-128 barcodes are taken as Code 128 when this setting is disabled.

4.11.1 CODE ID TRANSMISSION

Decide whether to include the Code ID ("`␣C1`") in the data being transmitted.

Transmit Code ID



***Do Not Transmit**



4.11.2 FIELD SEPARATOR (GS CHARACTER)

Decide whether to apply a field separator (to convert the `␣C1` control character to human readable character).

**Enable Field
Separator...**



- 1) Read the barcode above to enable field separator.
- 2) Read the "[Hexadecimal Value](#)" barcode on page 234 for the desired character string.
- 3) Read the "Validate" barcode to complete this setting.



Note: GS1-128 barcodes start with the `FNC1` control character to distinguish themselves from other uses of Code 128. `FNC1` is also used to separate data fields in the GS1-128 barcodes.

4.11.3 GS1 FORMATTING

Decide whether to enable GS1 formatting for GS1-128. When enabled, code ID transmission will be disabled; however, the field separator and application ID mark characters will be automatically added to the output data.



You may want to add an application ID mark (1 character long) to the left (AIMark1) or right (AIMark2) of an application ID (AI) for the purpose of labeling it when formatting the GS1 data.



- 1) Read the barcode above to add a mark to the left (AIMark1)/right (AIMark2) of an application ID.
- 2) Read the "[Hexadecimal Value](#)" barcode on page 234 for the desired character. Read '00' if you want to remove the AI mark.
- 3) Read the "Validate" barcode to complete this setting.



4.12 ISBT 128

***Enable**



100355

Disable



100354

Note: When enabled, it not only can decode single ISBT barcode, but also decode and concatenates pairs of ISBT barcodes.

4.12.1 ISBT CONCATENATION

Decide whether to decode and concatenate pairs of ISBT barcodes.

▶ **Disable ISBT Concatenation**

It will not concatenate pairs of ISBT barcodes it encounters. Only one single ISBT 128 barcode outputs.

▶ **Enable ISBT Concatenation**

There must be two ISBT barcodes in order for the scanner to decode and perform concatenation. It does not decode single ISBT barcodes.

▶ **Auto-discriminate ISBT Concatenation**

It decodes and concatenates pairs of ISBT barcodes immediately. If only a single ISBT barcode is present, the scanner must decode 10 times before transmitting its data to confirm that there is no additional ISBT barcode.

Disable



100534

Enable



100533

***Auto-discriminate**



100532



4.13 MSI

Enable



100345

*Disable



100344

4.13.1 VERIFY CHECK DIGIT

Select one of the three calculations to verify check digit when decoding barcodes. If incorrect, the barcode will not be accepted.

*Single Modulo 10



100448

Double Modulo 10



100449

Modulo 10 & 11



100450

4.13.2 TRANSMIT CHECK DIGIT

Decide whether to include the check digit in the data being transmitted.

*Last Digit Not
Transmitted



100452

Both Digits
Transmitted



100453

Both Digits
Not Transmitted



100454



4.13.3 CODE LENGTH QUALIFICATION

To prevent the "short scan" error, define the "Length Qualification" settings to ensure that the correct barcode is read by qualifying the allowable code length.

- ▶ If "Max/Min Length" is selected, the maximum length and the minimum length must be specified. It only accepts those barcodes with lengths that fall between max/min lengths specified.
- ▶ If "Fixed Length" is selected, up to 2 fixed lengths can be specified.

- 1) Read the barcode to enable either Max. /Min. Length qualification or Fixed Length(s) qualification.

*Enable Max./Min.
Length (0~127)...



Enable Fixed
Length(s)...



- 2) Read the barcode for Max. Length or Fixed Length 1, and follow steps 3~4.
Repeat steps 2~4 for Min. Length or Fixed Length 2.

Max. Length (*127) or
Fixed Length 1



Min. Length (*4) or
Fixed Length 2



- 3) Read the "[Decimal Value](#)" barcode on page 233 for the desired length.
- 4) Read the "Validate" barcode on the same page to complete this setting.



4.14 FRENCH PHARMACODE

Enable



100305

*Disable



100304

4.14.1 TRANSMIT CHECK DIGIT

Decide whether to include the check digit in the data being transmitted.

*Transmit
French Pharmacode
Check Digit



100411

Do Not Transmit



100410



4.15 ITALIAN PHARMACODE

Enable



100303

*Disable



100302

4.15.1 TRANSMIT CHECK DIGIT

Decide whether to include the check digit in the data being transmitted.

*Transmit
Italian Pharmacode
Check Digit



100409

Do Not Transmit



100408



4.16 PLESSEY

Enable



100347

*Disable



100346

4.16.1 CONVERT TO UK PLESSEY

Decide whether to change each occurrence of the character 'A' to character 'X' in the decoded data.

Convert to UK Plessey



100447

*Do Not Convert



100446

4.16.2 TRANSMIT CHECK DIGIT

Decide whether to include the two check digits in the data being transmitted.

*Transmit Plessey
Check Digits



100445

Do Not Transmit



100444



4.17 GS1 DATABAR (RSS FAMILY)

It is categorized into three groups:

Group I – GS1 DataBar Omnidirectional (RSS-14)

- | | |
|---------------------------------------|--|
| This group consists of the following: | <ul style="list-style-type: none"> ▶ GS1 DataBar Omnidirectional ▶ GS1 DataBar Truncated ▶ GS1 DataBar Stacked ▶ GS1 DataBar Stacked Omnidirectional |
|---------------------------------------|--|

Group II – GS1 DataBar Expanded (RSS Expanded)

- | | |
|---------------------------------------|--|
| This group consists of the following: | <ul style="list-style-type: none"> ▶ GS1 DataBar Expanded ▶ GS1 DataBar Expanded Stacked |
|---------------------------------------|--|

Group III – GS1 DataBar Limited (RSS Limited)

- | | |
|---------------------------------------|---|
| This group consists of the following: | <ul style="list-style-type: none"> ▶ GS1 DataBar Limited |
|---------------------------------------|---|

4.17.1 CODE ID SELECTION

Select a desired Code ID to use:

- ▶ "]"e0" (GS1 DataBar Code ID)
- ▶ "]"c1" (GS1-128 Code ID)



4.17.2 GS1 DATABAR OMNIDIRECTIONAL (RSS-14)

Enable RSS-14 &
RSS Expanded
(Groups I, II)



*Disable



When GS1 formatting for GS1 DataBar (RSS Family) is enabled, code ID transmitting will be disabled; however, the application ID and check digit transmitting will be enabled automatically.

The settings below apply to Group I symbologies only:

- ▶ GS1 DataBar Omnidirectional
- ▶ GS1 DataBar Truncated
- ▶ GS1 DataBar Stacked
- ▶ GS1 DataBar Stacked Omnidirectional

Transmit Code ID

Decide whether to include the Code ID in the data being transmitted.

*Transmit RSS-14
Code ID



Do Not Transmit



Transmit Application ID

Decide whether to include the Application ID ("01") in the data being transmitted.

*Transmit RSS-14
Application ID



Do Not Transmit



Transmit Check Digit

Decide whether to include the check digit in the data being transmitted.

***Transmit RSS-14
Check Digit**



Do Not Transmit

**4.17.3 GS1 DATABAR EXPANDED (RSS EXPANDED)**

**Enable RSS-14 &
RSS Expanded
(Groups I, II)**



***Disable**



When GS1 formatting for GS1 DataBar (RSS Family) is enabled, code ID transmitting will be disabled automatically.

The settings below apply to Group II symbologies only:

- ▶ GS1 DataBar Expanded
- ▶ GS1 DataBar Expanded Stacked

Transmit Code ID

Decide whether to include the Code ID in the data being transmitted.

***Transmit
RSS Expanded Code ID**



Do Not Transmit



4.17.4 GS1 DATABAR LIMITED (RSS LIMITED)

Enable RSS Limited
(Group III)



100351

*Disable



100350

When GS1 formatting for GS1 DataBar (RSS Family) is enabled, code ID transmitting will be disabled; however, the application ID and check digit transmitting will be enabled automatically.

Transmit Code ID

Decide whether to include the Code ID in the data being transmitted.

*Transmit
RSS Limited Code ID



100525

Do Not Transmit



100524

Transmit Application ID

Decide whether to include the Application ID ("01") in the data being transmitted.

*Transmit
RSS Limited
Application ID



100531

Do Not Transmit



100530

Transmit Check Digit

Decide whether to include the check digit in the data being transmitted.

*Transmit
RSS Limited
Check Digit



100483

Do Not Transmit



100482



4.17.5 FIELD SEPARATOR (GS CHARACTER)

Decide whether to apply a field separator (to convert the GS control character to human readable character).

Specify Field
Separator...



- 1) Read the barcode above to specify field separator.
- 2) Read the "[Hexadecimal Value](#)" barcode on page 234 for the desired character string.
- 3) Read the "Validate" barcode to complete this setting.

4.17.6 GS1 FORMATTING

Decide whether to enable GS1 formatting for GS1 DataBar (RSS family). When enabled, the field separator and application ID mark characters will be automatically added to the output data.

Enable



*Disable



You may want to add an application ID mark (1 character long) to the left (AIMark1) or right (AIMark2) of an application ID (AI) for the purpose of labeling it when formatting the GS1 data.

AIMark1



AIMark2



- 1) Read the barcode above to add a mark to the left (AIMark1)/right (AIMark2) of an application ID.
- 2) Read the "[Hexadecimal Value](#)" barcode on page 234 for the desired character. Read '00' if you want to remove the AI mark.
- 3) Read the "Validate" barcode to complete this setting.



4.17.7 GS1 DATABAR SECURITY LEVEL

Security Level renders more decoding accuracy giving consideration to barcodes' print quality. Decide the security level for reading GS1 DataBar barcodes.

***Normal**



High



4.18 TELEPEN

Enable Telepen



*Disable



4.18.1 TELEPEN OUTPUT – FULL ASCII/NUMERIC

Decide whether to support Telepen in full ASCII code. By default, it supports ASCII mode.

- ▶ AIM Telepen (Full ASCII) includes all the alphanumeric and special characters.

Original Telepen
(Numeric)



*AIM Telepen



4.19 UPC-A

UPC-A

***Enable UPC-A
(No Addon)**



100339

Disable



100338

UPC-A Addon 2

Enable UPC-A Addon 2



100341

***Disable**



100340

UPC-A Addon 5

Enable UPC-A Addon 5



100343

***Disable**




100342



4.19.1 CONVERT TO EAN-13


Decide whether to expand the read UPC-A barcode, as well as its addons, into EAN-13.

- ▶ After conversion, the data follows EAN-13 format and is affected by EAN-13 programming selections (e.g. Check Digit).

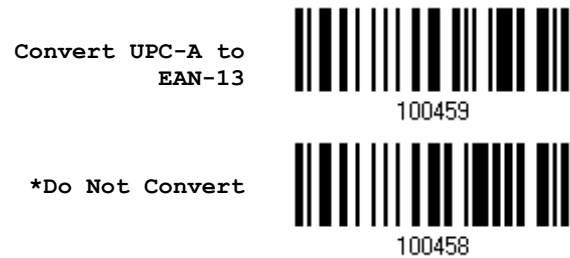


4.19.2 SYSTEM NUMBER TRANSMISSION

Decide whether to include the system number in the data being transmitted.

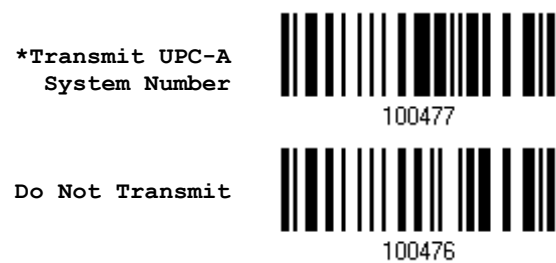

4.19.3 TRANSMIT CHECK DIGIT

Decide whether to include the check digit in the data being transmitted.

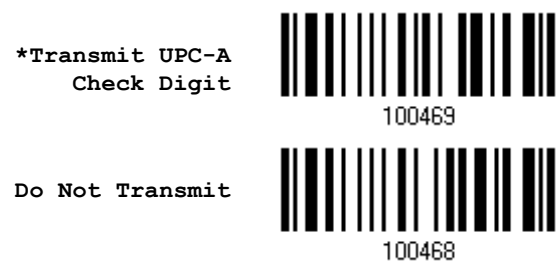

4.20 UPC-E

UPC-E

***Enable UPC-E
(No Addon)**



100321

Disable



100320

UPC-E Addon 2

Enable UPC-E Addon 2



100323

***Disable**



100322

UPC-E Addon 5

Enable UPC-E Addon 5



100325

***Disable**



100324



4.20.1 SYSTEM NUMBER SELECTION

Decide whether to decode the ordinary UPC-E barcodes only or both UPC-E0 and UPC-E1 barcodes.

- ▶ System number 0 enabled for decoding UPC-E0 barcodes.
- ▶ System number 1 enabled for decoding UPC-E1 barcodes.

System Number 0 & 1



100479

*System Number 0 Only



100478

Warning: Because of the way system number 1 is encoded, if both system numbers are enabled, the user might suffer from short scanning UPC-A or EAN-13 barcodes into UPC-E1 barcodes.

4.20.2 CONVERT TO UPC-A

Decide whether to expand the read UPC-E barcode, as well as its addons, into UPC-A.

- ▶ After conversion, the data follows UPC-A format and is affected by UPC-A programming selections (e.g. System Number, Check Digit).

Convert UPC-E to
UPC-A



100457

*Do Not Convert



100456



4.20.3 SYSTEM NUMBER TRANSMISSION

Decide whether to include the system number in the data being transmitted.

Transmit UPC-E
System Number



*Do Not Transmit



4.20.4 TRANSMIT CHECK DIGIT

Decide whether to include the check digit in the data being transmitted.

*Transmit UPC-E
Check Digit



Do Not Transmit



4.21 CODE 11

Enable



100359

***Disable**



100358

4.21.1 VERIFICATION CHECK DIGIT

Select one of the verification when decoding barcodes. If incorrect, the barcode will not be accepted.

None



100538

Double



100537

Single



100536

***Auto**



100535



4.21.2 TRANSMIT CHECK DIGIT

Decide whether to include the check digit in the data being transmitted.

***Transmit Check
Digit**



Do Not Transmit



4.21.2 SECURITY LEVEL

Security Level renders more decoding accuracy giving consideration to barcodes' print quality. Decide the security level for reading Code 11 barcodes.

Normal



***High**



DEFINING OUTPUT FORMAT

You may configure the format of the collected data output to the host computer. Barcodes read by the scanner will be processed in the following sequence –

- 1) Perform character substitution on the data scanned.
- 2) Add [Code ID](#) and [Length Code](#) to the front of the data: [Code ID] [Length Code] [Data]
- 3) Process the whole data in step 2 with user formats. Data is now divided into fields by user specified rules. Refer to [Chapter 6 Applying Formats for Data Editing](#).
- 4) Add [Prefix Code](#) and [Suffix Code](#) before transmission: [Prefix Code] [Processed Data] [Suffix Code]


IN THIS CHAPTER

5.1 Letter Case	159
5.2 Character Substitution	160
5.3 Prefix/Suffix Code	168
5.4 Code ID	169
5.5 Length Code.....	174
5.6 Multi-Barcode Editor.....	178
5.7 Removal of Special Character	182


5.1 LETTER CASE

By default, the alphabetics transmission is case-sensitive, meaning that the alphabet will be transmitted according to their original case. Ignoring the original letter case, select [Upper Case] to output data in upper case only; otherwise, select [Lower Case] to output data in lower case only.


*Normal


101202

Upper Case


101203

Lower Case


101204



5.2 CHARACTER SUBSTITUTION

Character substitution is performed on every occurrence of the first character specified. If only one character is specified, every occurrence of that character in the barcode will be taken away.


- ▶ The first character will be replaced by the second character(s).
- ▶ Up to three sets of character substitution can be configured.
- ▶ If “Bluetooth® HID” or “USB HID” is configured for interface, [Key Type](#) and [Key Status](#) will then become applicable. You may decide whether or not to apply Key Status when “Normal Key” is selected for Key Type.

Key Type		Key Status
Scan Code	Only 1 scan code value is allowed. Refer to 5.2.1 Select a Set for Character Substitution .	N/A
Normal Key	Up to 3 character strings are allowed.	<ul style="list-style-type: none"> ▶ Add Shift ▶ Add Left Ctrl ▶ Add Left Alt ▶ Add Right Ctrl ▶ Add Right Alt Refer to Keyboard Wedge Table .

Note: The character substitution is performed only on the barcode itself and before the processing of editing formats. It is not applicable to the Prefix/Suffix Code, Code ID, Length Code, or any Additional Field.



5.2.1 SELECT A SET FOR CHARACTER SUBSTITUTION

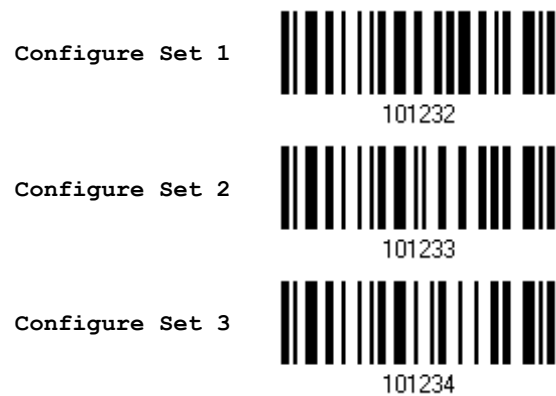

- 1) Read the barcode above to enable character substitution by set.
For example, read the "Set 1" barcode to configure the first set of character substitution. The scanner will respond with one short beep, high tone, to indicate more setup barcodes are required.
- 2) Read the "[Hexadecimal Value](#)" barcode on page 234 for the desired character substitution. For example,

KEY TYPE = NORMAL

- ▶ Read "3", "0", "2", and "D" to replace the character "0" with a dash "-".
- ▶ Read "3", "0", "2", "D", "3", and "0" to replace the character "0" with a dash "-0".

KEY TYPE = SCAN CODE

If you want to replace the character "0" with "a" (= "1C" on the scan code table):

1. Read "3" and "0".
2. Read the "Scan Code" barcode.
3. Read "1" and "C".

KEY TYPE = NORMAL + KEY STATUS = SHIFT

If you want to replace the character "0" with "!" (= "Shift" + "1" on keyboard):

1. Read "3" and "0".
2. Read the "Add Shift" barcode.
3. Read "3" and "1".

- 3) Read the "Validate" barcode to complete this setting. (The defined set or sets will be applied to all symbologies by default.)



5.2.2 SYBBOLOGIES FOR CHARACTER SUBSTITUTION (ALL 3 SETS)

By default character substitution will be performed on all symbologies. If the character substitution is not desired with one or more symbologies, read the "Do Not Apply" barcode for each undesired symbologies and all the three sets will be ignored for them.

Character Substitution for Codabar

***Apply**



101253

Do Not Apply



101252

Character Substitution for Code 39

***Apply**



101241

Do Not Apply



101240

Character Substitution for Trioptic Code 39

***Apply**



101299

Do Not Apply



101298

Character Substitution for Code 93

***Apply**



101255

Do Not Apply



101254

Character Substitution for Code 128



***Apply**

101257

Do Not Apply

101256

Character Substitution for GS1-128

***Apply**

101259

Do Not Apply

101258

Character Substitution for ISBT 128

***Apply**

101293

Do Not Apply

101292

Character Substitution for EAN-8 (No Addon)

***Apply**

101267

Do Not Apply

101266

Character Substitution for EAN-8 Addon 2

***Apply**

101269

Do Not Apply

101268



Character Substitution for EAN-8 Addon 5

***Apply**



101271

Do Not Apply



101270

Character Substitution for EAN-13 (No Addon)

***Apply**



101273

Do Not Apply



101272

Character Substitution for EAN-13 Addon 2

***Apply**



101275

Do Not Apply



101274

Character Substitution for EAN-13 Addon 5

***Apply**



101277

Do Not Apply



101276

Character Substitution for French Pharmacode

***Apply**



101245

Do Not Apply



101244



Character Substitution for Italian Pharmacode

***Apply**

101243

Do Not Apply

101242

Character Substitution for Industrial 25

***Apply**

101247

Do Not Apply

101246

Character Substitution for Interleaved 25

***Apply**

101249

Do Not Apply

101248

Character Substitution for Matrix 25

***Apply**

101251

Do Not Apply

101250

Character Substitution for MSI

***Apply**



101285

Do Not Apply


101284




Character Substitution for Plessey

*Apply	 101287
Do Not Apply	 101286



Character Substitution for GS1 DataBar

*Apply	 101291
Do Not Apply	 101290



Character Substitution for Telepen

*Apply	 101289
Do Not Apply	 101288

Character Substitution for UPC-A (No Addon)

*Apply	 101279
Do Not Apply	 101278

Character Substitution for UPC-A Addon 2

*Apply	 101281
Do Not Apply	 101280



Character Substitution for UPC-A Addon 5

***Apply**

101283

Do Not Apply

101282

Character Substitution for UPC-E (No Addon)

***Apply**

101261

Do Not Apply

101260

Character Substitution for UPC-E Addon 2

***Apply**

101263

Do Not Apply

101262

Character Substitution for UPC-E Addon 5

***Apply**

101265

Do Not Apply

101264

Character Substitution for Code 11

***Apply**

101297

Do Not Apply

101296



5.3 PREFIX/SUFFIX CODE

By default, there is no prefix code, and [ENTER] or [CR] (Carriage Return) is configured to be suffix code. Up to 8 characters can be configured, for example, "Barcode_", and you will have the string appear in front of the barcode read, like this – "Barcode_1234567890".

- ▶ If "Bluetooth® HID" or "USB HID" is configured for interface, [Key Type](#) and [Key Status](#) will then become applicable. You may decide whether or not to apply Key Status when "Normal Key" is selected for Key Type.

Key Type		Key Status
Scan Code	Up to 4 scan code values are allowed.	N/A
Normal Key	Up to 8 character strings are allowed.	<ul style="list-style-type: none"> ▶ Add Shift ▶ Add Left Ctrl ▶ Add Left Alt ▶ Add Right Ctrl ▶ Add Right Alt Refer to Keyboard Wedge Table .

Configure Prefix



Configure Suffix



- 1) Read the barcode above to apply prefix code or suffix code separately, and follow steps 2~3. (Max. 8 characters each)
- 2) Read the "[Hexadecimal Value](#)" barcode on page 234 for the desired character string. For example, read "2" and "B" for the scanner to prefix or suffix the character [+].
- 3) Read the "Validate" barcode to complete this setting.



5.4 CODE ID

Up to two characters for Code ID can be configured for each symbology. To make the Code ID configuration easier, the scanner provides five pre-defined Code ID sets that you can select one and make necessary changes on it.

- ▶ If “Bluetooth® HID” or “USB HID” is configured for interface, [Key Type](#) and [Key Status](#) will then become applicable. You may decide whether or not to apply Key Status when “Normal Key” is selected for Key Type.

Key Type		Key Status
Scan Code	Only 1 scan code value is allowed.	N/A
Normal Key	Up to 2 character strings are allowed.	<ul style="list-style-type: none"> ▶ Add Shift ▶ Add Left Ctrl ▶ Add Left Alt ▶ Add Right Ctrl ▶ Add Right Alt Refer to Keyboard Wedge Table .

Note: “]C1” is the Code ID of GS1-128 (EAN-128) barcodes; “]e0” is the default Code ID of GS1 DataBar (RSS) barcodes.

5.4.1 SELECT PRE-DEFINED CODE ID

Apply Code ID Set 1



Apply Code ID Set 2



Apply Code ID Set 3



Apply Code ID Set 4



Apply Code ID Set 5



Code ID options	Set 1	Set 2	Set 3	Set 4	Set 5
Code 39	A	C	Y	M	A
Trioptic Code 39	A	C	Y	M	X
Italian Pharmacode	A	C	Y	M	A
French Pharmacode	A	C	Y	M	A
Industrial 25	C	H	H	H	S
Interleaved 25	D	I	Z	I	S
Matrix 25	E	G	G	G	S
Codabar	F	N	X	N	F
Code 93	I	L	L	L	G
Code 128	H	K	K	K	C
ISBT 128	H	K	K	K	C
UPC-E	S	E	C	E	E
EAN-8	P	B	B	FF	E
EAN-13	M	A	A	F	E
UPC-A	J	A	A	A	E
MSI	V	V	D	P	M
Plessey	W	W	E	Q	P
Telepen	Z	---	---	---	---
Code 11	K	J	J	D	H

Besides Set 1 ~ 5 of Code ID options, you can also scan the barcode below to apply AIM Code ID as the Code ID option.

Apply AIM Code ID



After applying AIM Code ID, three characters are added in front of the output data. "J" is always the first character. The second (Character) and third (Modifier Character) may vary depending on symbologies. Please refer to the table below.

Symbology	Character	Modifier Character
Codabar	F	0: Standard Codabar symbol. No special processing.
Code 11	H	0: Single modulo 11 check character validated and transmitted 1: Two modulo 11 check characters validated and transmitted 3: Check characters validated but not transmitted ?: No check character validation



Code 39	A	<p>0: No check character validation nor full ASCII processing. All data transmitted as decoded.</p> <p>1: Modulo 43 check character validated and transmitted</p> <p>3: Modulo 43 check character validated but not transmitted</p> <p>4: Full ASCII character conversion performed. No check character validation.</p> <p>5: Full ASCII character conversion performed. Modulo 43 check character validated and transmitted.</p> <p>7: Full ASCII character conversion performed. Modulo 43 check character validated but not transmitted.</p>
Code 93	G	No options specified. Always transmit 0.
Code 128	C	<p>0: Standard data packet. No FNC1 in first or second symbol character position after start character.</p> <p>1: EAN/UCC-128 data packet. FNC1 in first symbol character position after start character.</p> <p>2: FNC1 in second symbol character position after start character.</p> <p>4: Concatenation according to International Society for Blood Transfusion specifications has been performed. Concatenated data follows.</p>
GS1 DataBar Family	e	No option specified at this time. Always transmit 0. GS1 DataBar and GS1 DataBar Limited transmit with an Application Identifier "01".
Interleaved 25	I	<p>0: No check character validation</p> <p>1: Modulo 10 symbol check character validated and transmitted</p> <p>3: Modulo 10 symbol check character validated but not transmitted</p>
MSI	M	<p>0: Modulo 10 symbol check character validated and transmitted</p> <p>1: Modulo 10 symbol check character validated but not transmitted</p>
Matrix 25	X	No options specified. Always transmit 0.
Plessey	P	No options specified. Always transmit 0.
Industrial 25	S	No options specified. Always transmit 0.
Telepen	B	No options specified. Always transmit 0.
UPC/EAN	E	<p>0: Standard data packet in full EAN format (13 digits for EAN-13, UPC-A, and UPC-E; does not include add-on data)</p> <p>3: Combined data packet comprising 13 digits from EAN-13, UPC-A, or UPC-E symbol and 2 or 5 digits from add-on symbol</p> <p>4: EAN-8 data packet</p>



5.4.2 CHANGE CODE ID

- 1) Read the barcode below to change code ID of a specific symbology.
- 2) Read the "[Hexadecimal Value](#)" barcode on page 234 for the desired character string. For example, read "4" and "4" for applying the character [D] for Code ID.
- 3) Read the "Validate" barcode to complete this setting.

Configure Code ID for
Codabar



101456

Configure Code ID for
Code 39



101450

Configure Code ID for
Trioptic Code 39



101484

Configure Code ID for
Code 93



101457

Configure Code ID for
Code 128



101458

Configure Code ID for
ISBT 128



101466

Configure Code ID for
EAN-8



101460

Configure Code ID for
EAN-13



101461

Configure Code ID for
French Pharmacode



101452

Configure Code ID for
Italian Pharmacode



101451



Configure Code ID
for Industrial 25



101453

Configure Code ID
for Interleaved 25



101454

Configure Code ID
for Matrix 25



101455

Configure Code ID
for MSI



101463

Configure Code ID
for Plessey



101464

Configure Code ID
for Telepen



101465

Configure Code ID
for UPC-A



101462

Configure Code
ID for UPC-E



101459

Configure Code ID
for Code 11



101499

5.4.3 CLEAR CODE ID SETTINGS

Clear All Code ID
Settings



109960



5.5 LENGTH CODE

A 4-digit code representing the length of barcode data (character count) can be inserted in front of data being transmitted. Such "Length" code can be individually enabled or disabled for each symbology.

Length Code for Codabar

Apply



*Do Not Apply



Length Code for Code 39

Apply



*Do Not Apply



Length Code for Trioptic Code 39

Apply



*Do Not Apply



Length Code for Code 93

Apply



*Do Not Apply



Length Code for Code 128

Apply



101417

*Do Not Apply



101416

Length Code for GS1-128 & GS1 DataBar

Apply



101419

*Do Not Apply



101418

Length Code for ISBT 128

Apply



101435

*Do Not Apply



101434

Length Code for EAN-8

Apply



101423

*Do Not Apply



101422

Length Code for EAN-13

Apply



101425

*Do Not Apply



101424



Length Code for French Pharmacode

Apply



101405

*Do Not Apply



101404

Length Code for Italian Pharmacode

Apply



101403

*Do Not Apply



101402

Length Code for Industrial 25

Apply



101407

*Do Not Apply



101406

Length Code for Interleaved 25

Apply



101409

*Do Not Apply



101408

Length Code for Matrix 25

Apply



101411

*Do Not Apply



101410



Length Code for MSI

Apply



101429

*Do Not Apply



101428

Length Code for Plessey

Apply



101431

*Do Not Apply



101430

Length Code for Telepen

Apply



101433

*Do Not Apply



101432

Length Code for UPC-A

Apply



101427

*Do Not Apply



101426

Length Code for UPC-E

Apply



101421

*Do Not Apply



101420



Length Code for Code 11

Apply



101439

*Do Not Apply



101438

5.6 MULTI-BARCODE EDITOR


The Multi-Barcode Editor allows deciding the output sequence of a concatenation of barcodes. Up to five barcodes can be specified. Enabling this function will force the scanner to apply Laser mode as the scan mode.

Note: The Multi-Barcode Editor has nothing to do with [Multi-Barcode Mode](#).

The barcodes that are found meeting the specified criteria below will be arranged in the desired sequence.

- ▶ Code Type
- ▶ 4-digit barcode length, excluding prefix, suffix, length code, etc.
- ▶ Matching the first character of barcode data



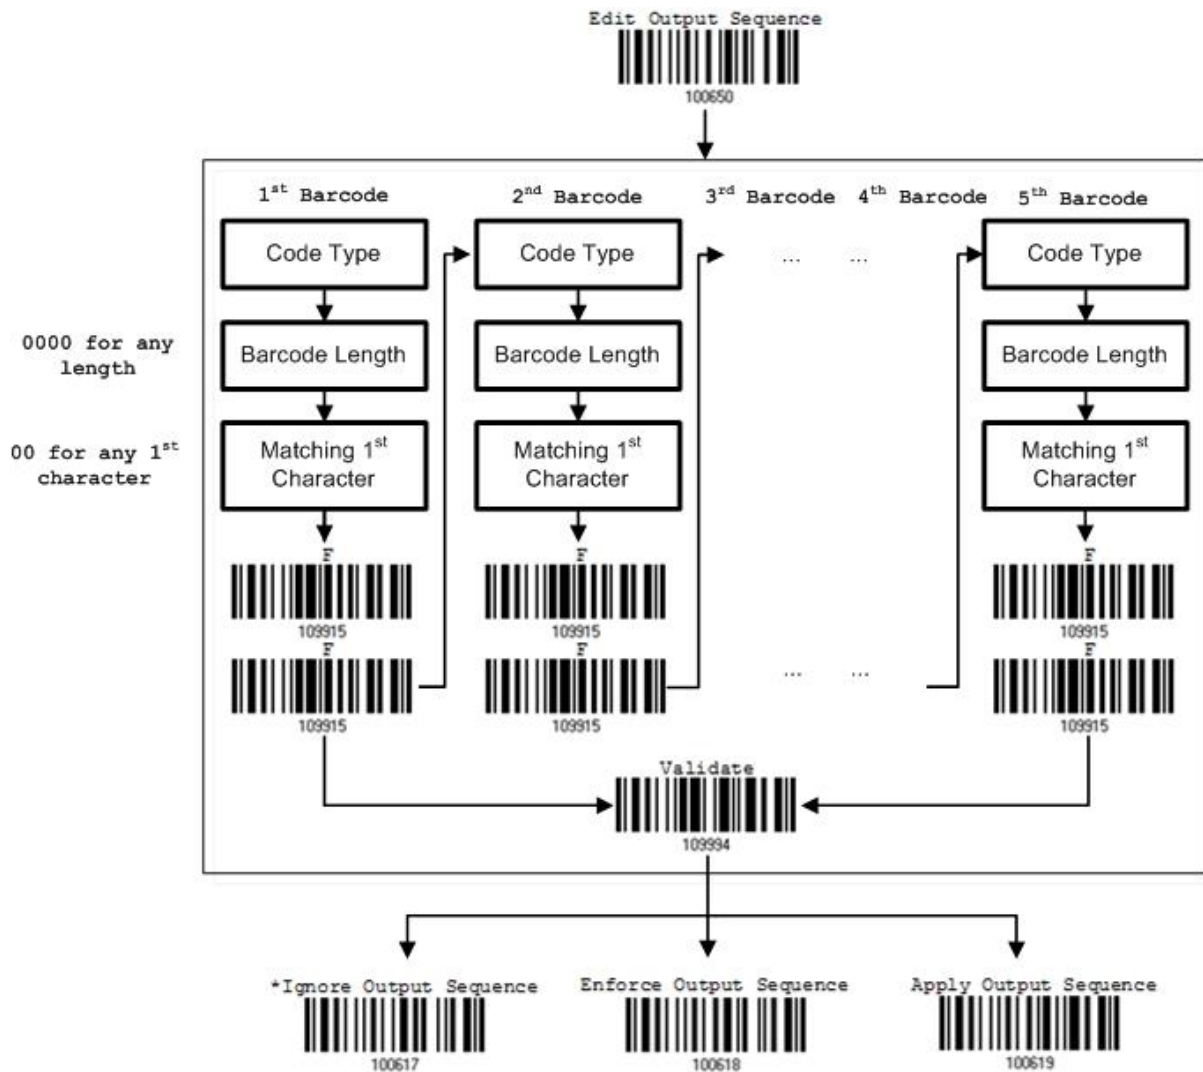

5.6.1 EDIT A CONCATENATION OF BARCODES

Edit Output Sequence



- 1) Read the barcode above to start editing a concatenation of barcodes.
- 2) Code Type setting – read the [Hexadecimal Value](#) barcode on page 234 for Code Type of the (first) barcode. For example, read “4” and “1” for Code 39.



Code Type	Symbology	Code Type	Symbology
40 (@)	ISBT 128	4F (O)	EAN-8 with Addon 5
41 (A)	Code 39	50 (P)	EAN-13
42 (B)	Italian Pharmacode	51 (Q)	EAN-13 with Addon 2
43 (C)	French Pharmacode	52 (R)	EAN-13 with Addon 5
44 (D)	Industrial 25	53 (S)	MSI
45 (E)	Interleaved 25	54 (T)	Plessey
46 (F)	Matrix 25	55 (U)	GS1-128 (EAN-128)
47 (G)	Codabar (NW7)	56 (V)	UPC-A
48 (H)	Code 93	57 (W)	UPC-A with Addon 2
49 (I)	Code 128	58 (X)	UPC-A with Addon 5
4A (J)	UPC-E0 / UPC-E1		
4B (K)	UPC-E with Addon 2	5A (Z)	Telepen
4C (L)	UPC-E with Addon 5	5B ([)	GS1 DataBar (RSS)
4D (M)	EAN-8		
4E (N)	EAN-8 with Addon 2		

- 3) Barcode Length setting – read the “[Decimal Value](#)” barcode on page 233 for the 4-digit length of the (first) barcode. For example, read “0065” for barcode length of 65 characters or read “0000” for any length.

Note: If not reading 0000 for any length, the 4-digit length must exclude prefix, suffix (0x0d by default), length code, etc.

- 4) Matching Character setting – read the “[Hexadecimal Value](#)” barcode on page 234 for the 1st character that must be found matching in the (first) barcode. For example, read “4” and “1” for matching character “A” as the first character in the barcode or read “00” for any character.
- 5) Read twice the “F” barcode on page 234 (“FF”) to complete the setting of each barcode.
- 6) Read the “Validate” barcode to end the editing of the barcode set.



5.6.2 ACTIVATE THE CONCATENATION OF BARCODES


By default, the output sequence editing of the concatenation of barcodes is not applied.

When "Enforce Output Sequence" is enabled, all barcodes read by the scanner must meet with the criteria for the concatenation. If data is found excluded from all output sequence sets (= not meeting with the criteria), the scanner will not accept the reading, and therefore, data will not be transmitted.

When "Apply Output Sequence" is enabled, only barcodes found meeting with the criteria are counted for the concatenation. Those found not meeting with the criteria are processed normally and individually.

Note: When it requires reading more barcodes to complete the "output sequence" requirements, the scanner will respond with one short beep (low tone). After reading an acceptable barcode, its LED indicator will become solid green and go off (= Good Read).

Upon completion of reading acceptable barcodes, the scanner will respond with one short beep (high tone) and its LED indicator will become solid green and go off (= Good Read).

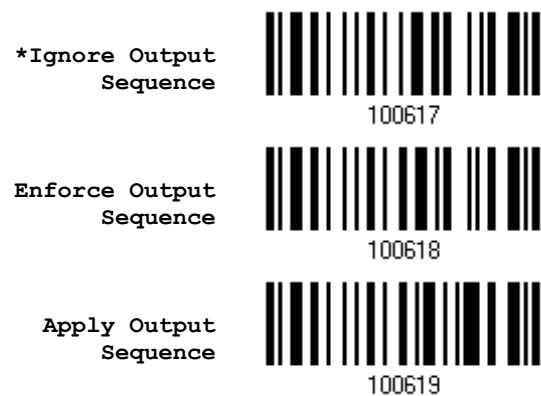

Warning: When you disable the Multi-Barcode Editor later, the scan mode remains unchanged. If Laser mode is not desired, proceed to select a scan mode that best suits your application.



5.7 REMOVAL OF SPECIAL CHARACTER

You can only specify 1 character, but it will remove every matching character encountered from the starting position of barcode data until a different character is met. For example, if it is configured to remove the character "0" (hex value is "30"), one or more zeros will be stripped off the barcode data "012345" and "00012345". However, for barcode data "010333", only the first zero will be stripped off.

Remove Special
Character



101470

- 1) Read the barcode above to remove the specified character.
- 2) Read the "[Hexadecimal Value](#)" barcode on page 234 for the desired character string.
For example, read "3" and "0" for the scanner to remove the character "0".
- 3) Read the "Validate" barcode to complete this setting.



APPLYING FORMATS FOR DATA EDITING

The scanner allows advanced data editing by applying user-configured editing formats. The whole processed data can be divided into fields by user-specified rules. The data actually sent to the host computer comprises those fields together with the user-configurable additional fields.

[Time Stamp]	[Prefix Code]	[Code ID]	[Length Code]	[Data]	Additional Field(s)	[Time Stamp]	[Suffix Code]
None by default	None by default	None by default	None by default	Barcode itself	None by default	None by default	0x0d by default

IN THIS CHAPTER

6.1 Activating Editing Formats.....	184
6.2 How to Configure Editing Formats	186
6.3 Configure Format — Define Data Criteria	189
6.4 Configure Format — Define Data Field	198
6.5 Configure Format — Define Transmission Sequence	207
6.6 Programming Examples	209



6.1 ACTIVATING EDITING FORMATS

6.1.1 ACTIVATE EDITING FORMATS

If you have already configured any editing format before, you may directly apply the editing format. If not, you must start with configuring an editing format first, and then, activate the editing format when it is desired in use.

Editing Format 1

Enable



101301

*Disable



101300

Editing Format 2

Enable



101303

*Disable



101302

Editing Format 3

Enable



101305

*Disable



101304

Editing Format 4

Enable



101307

*Disable



101306



Editing Format 5




6.1.2 EXCLUSIVE DATA EDITING

By default, only barcodes found meeting with the criteria are processed by the editing formats. Those found not meeting with the criteria are processed normally.

When “Exclusive Data Editing” is enabled, all barcodes read by the scanner must be processed by the editing formats. If data is found excluded from all enabled editing formats (= not meeting with the specified criteria), the scanner will not accept the reading, and therefore, data will not be transmitted.



6.2 HOW TO CONFIGURE EDITING FORMATS

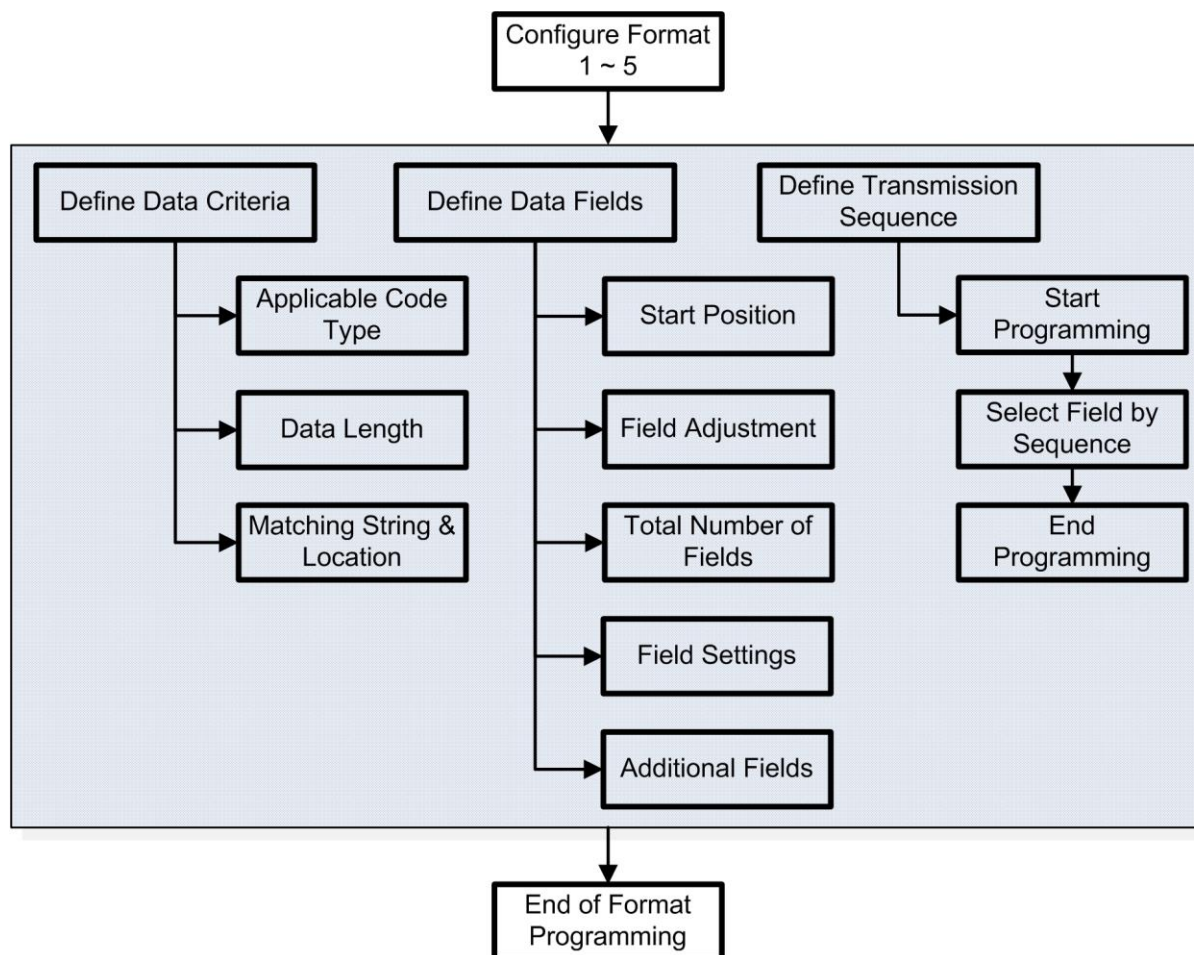


6.2.1 SELECT FORMAT TO CONFIGURE

Start Programming Format


Select one editing format (Format 1~5) and the parameters pertaining to the editing format can then be configured – applicable code type, data length, matching string & location, start position, field adjustment, total number of fields, field settings (field-dividing rule), additional fields, and field transmission sequence.

- ▶ Up to five different formats can be specified.


Configure Format 1


109981


Configure Format 2


109982


Configure Format 3


109983

Configure Format 4


109984

Configure Format 5


109985

Note: Before completing the programming of an editing format, if any barcode for parameters other than those pertaining to the editing format is read, the programming process will be automatically aborted.

End Programming Format

After having configured all the desired parameters, you must read the “End Programming Format” barcode, which can be located at the bottom of every even page in this chapter.

End Programming
Format


109980



6.2.2 RESTORE DEFAULT FORMAT

You may select an existing editing format and have the defaults restored. The default settings of an editing format are listed below.

Editing format	Defaults
Applicable Code Type	All
Data Length	0 (No qualification)
Matching String	Disable
Matching String Location	None
Start Position	From head
Field Adjustment	No adjustment
Total Number of Fields	1
Field Setting – field-dividing rule	Not configured
Additional Fields	None
Field Transmission Sequence	F1

Restore Default
Format



109990



6.3 CONFIGURE FORMAT — DEFINE DATA CRITERIA

Three applicable conditions can be configured to check whether the data read by the scanner can be processed by the particular editing format.

Note: Data editing cannot be performed unless the three conditions are all met.

6.3.1 APPLICABLE CODE TYPE

By default, barcodes of all the supported symbologies will be processed by any editing format, if having been configured and enabled. For quick configuration, you may first clear all, and then select the desired symbologies.

Note: You must have at least one symbology selected.

*Apply to All



Clear All



Editing Format for Codabar

***Apply**



101513

Do Not Apply



101512

Editing Format for Code 39

***Apply**



101501

Do Not Apply



101500

Editing Format for Trioptic Code 39

***Apply**



101559

Do Not Apply



101558

Editing Format for Code 93

***Apply**



101515

Do Not Apply



101514

Editing Format for Code 128

***Apply**



101517

Do Not Apply




101516





Editing Format for GS1-128 & GS1 DataBar

*Apply	 101519
Do Not Apply	 101518

Editing Format for ISBT 128

*Apply	 101553
Do Not Apply	 101552

Editing Format for EAN-8

*Apply	 101527
Do Not Apply	 101526

Editing Format for EAN-8 Addon 2

*Apply	 101529
Do Not Apply	 101528

Editing Format for EAN-8 Addon 5

*Apply	 101531
Do Not Apply	 101530



Editing Format for EAN-13

***Apply**



101533

Do Not Apply



101532

Editing Format for EAN-13 Addon 2

***Apply**



101535

Do Not Apply



101534

Editing Format for EAN-13 Addon 5

***Apply**



101537

Do Not Apply



101536

Editing Format for French Pharmacode

***Apply**



100412

Do Not Apply



101504

Editing Format for Italian Pharmacode

***Apply**



101503


Do Not Apply




101502





Editing Format for Industrial 25

*Apply	 101507
Do Not Apply	 101506


Editing Format for Interleaved 25

*Apply	 101509
Do Not Apply	 101508

Editing Format for Matrix 25

*Apply	 101511
Do Not Apply	 101510

Editing Format for MSI

*Apply	 101545
Do Not Apply	 101544

Editing Format for Plessey

*Apply	 101547
Do Not Apply	 101546



Editing Format for Telepen

***Apply**



101549

Do Not Apply



101548

Editing Format for UPC-A

***Apply**



101539

Do Not Apply



101538

Editing Format for UPC-A Addon 2

***Apply**



101541

Do Not Apply



101540

Editing Format for UPC-A Addon 5

***Apply**



101543

Do Not Apply



101542

Editing Format for UPC-E

***Apply**



101521

Do Not Apply



101520



Editing Format for UPC-E Addon 2

*Apply	 101523
Do Not Apply	 101522

Editing Format for UPC-E Addon 5

*Apply	 101525
Do Not Apply	 101524

Editing Format for Code 11

*Apply	 101557
Do Not Apply	 101556



6.3.2 DATA LENGTH

The length must include prefix, suffix (0x0d by default), length code, etc. By default, barcodes of any length (character count) are eligible for data editing.

- ▶ A value ranging from 0 to 254 can be specified.
- ▶ When zero is given to Max. & Min. Length, the scanner will not perform the length qualification.

- 1) Read the barcode below to specify Max. Length or Min. Length separately, and follow steps 2~3.

Max. Length



Min. Length



- 2) Read the "[Decimal Value](#)" barcode on page 233 for the desired length.
- 3) Read the "Validate" barcode on the same page to complete this setting.



6.3.3 MATCHING STRING & LOCATION

By default, no matching string is specified, and therefore, it is disabled. You may enable this feature by specifying a matching string up to four characters.

- ▶ When the Matching String Location is zero, the scanner will only check for the existence of the matching string in the barcode data.
- ▶ Specify a value from 1 to 254 to indicate where the matching string starts in the barcode data.

- 1) Read the barcode to specify a matching string.

Matching String...



- 2) Read the "[Hexadecimal Value](#)" barcode on page 234 for the desired character string.
- 3) Read the "Validate" barcode to complete this setting.
- 4) Read the barcode to specify the location of the matching string.

Location of Matching
String...



- 5) Read the "[Decimal Value](#)" barcode on page 233 for the desired location.
- 6) Read the "Validate" barcode on the same page to complete this setting.



6.4 CONFIGURE FORMAT — DEFINE DATA FIELD

6.4.1 START POSITION

Data can be divided into fields in one of the following direction –

- ▶ from head (F1) to tail (F5)
- ▶ from tail (F1) to head (F5)

*From Head



101600

From Tail



101601

6.4.2 FIELD ADJUSTMENT

You may apply equal length to all fields, if necessary. If data is found longer than specified, it will be truncated automatically. When data is found shorter, it will add "Space" (0x20) to field.

*No adjustment



101602

Set length to adjust
fields... (*0)



101603

- 1) Read the barcode above to adjust field by length.
- 2) Read the "[Decimal Value](#)" barcode on page 233 for the desired field length.
- 3) Read the "Validate" barcode on the same page to complete this setting.



6.4.3 TOTAL NUMBER OF FIELDS

Data can be divided into at most 6 fields; each of them is numbered from F1 to F6 accordingly. However, only F1~F5 can be configured.

- ▶ The total number of fields must be specified correctly. If three fields are configured for the editing format, the data characters after F3 will be assigned to F4 automatically. This feature is quite useful especially when data of variable lengths is processed by editing formats.

*One Field	 101590
Two Fields	 101591
Three Fields	 101592
Four Fields	 101593
Five Fields	 101594
Six Fields	 101595

Note: The number of configurable fields is always one less than the total number of fields specified. The extra data characters beyond the last field configured will be automatically assigned to the next field.



6.4.4 FIELD SETTINGS

Data eligible for editing formats is divided into fields by user-specified rules – either using the field terminating string or specified field length.

By Terminating String

Specify the field terminating string. Up to two characters are allowed. The scanner will search for the occurrence of this particular string in the data.

- ▶ By default, this string will be included in the field. You may discard it.

By Length

Alternatively, you may simply specify the field length. The scanner will assign the next specified number of characters into the field.

Field 1 Setting

- 1) Read the barcode below to divide field 1 by a specified terminating string.

Select
Field Separator
to Divide Field 1...



- 2) Read the "[Hexadecimal Value](#)" barcode on page 234 for the desired character string.
- 3) Read the "Validate" barcode to complete this setting.
- 4) Read the "Discard Separator" barcode if the field separator is not desired in the field.

*Include Separator



Discard Separator



If not dividing the field by a specific separator, you may divide it by a specified length.

- 1) Read the barcode below to divide field 1 by length.

Divide Field 1
by Length




- 2) Read the "[Decimal Value](#)" barcode on page 233 for the desired field length.
- 3) Read the "Validate" barcode on the same page to complete this setting.



Field 2 Setting

- 1) Read the barcode below to divide field 2 by a specified terminating string.

Select
Field Separator
to Divide Field 2...



101571

- 2) Read the "Hexadecimal Value" barcode on page 234 for the desired character string.
- 3) Read the "Validate" barcode to complete this setting.
- 4) Read the "Discard Separator" barcode if the field separator is not desired in the field.

*Include Separator



101569

Discard Separator



101568

If not dividing the field by a specific separator, you may divide it by a specified length.

- 1) Read the barcode below to divide field 2 by length.

Divide Field 2
by Length



101570

- 2) Read the "Decimal Value" barcode on page 233 for the desired field length.
- 3) Read the "Validate" barcode on the same page to complete this setting.



Field 3 Setting

- 1) Read the barcode below to divide field 3 by a specified terminating string.

Select
Field Separator
to Divide Field 3...



- 2) Read the "[Hexadecimal Value](#)" barcode on page 234 for the desired character string.
- 3) Read the "Validate" barcode to complete this setting.
- 4) Read the "Discard Separator" barcode if the field separator is not desired in the field.

*Include Separator



Discard Separator



If not dividing the field by a specific separator, you may divide it by a specified length.

- 1) Read the barcode below to divide field 3 by length.

Divide Field 3
by Length




- 2) Read the "[Decimal Value](#)" barcode on page 233 for the desired field length.
- 3) Read the "Validate" barcode on the same page to complete this setting.



Field 4 Setting

- 1) Read the barcode below to divide field 4 by a specified terminating string.

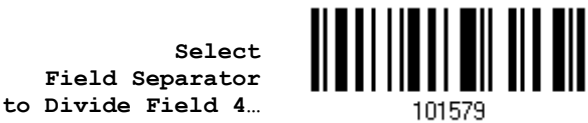

- 2) Read the "[Hexadecimal Value](#)" barcode on page 234 for the desired character string.
3) Read the "Validate" barcode to complete this setting.
4) Read the "Discard Separator" barcode if the field separator is not desired in the field.



If not dividing the field by a specific separator, you may divide it by a specified length.

- 1) Read the barcode below to divide field 4 by length.



- 2) Read the "[Decimal Value](#)" barcode on page 233 for the desired field length.
3) Read the "Validate" barcode on the same page to complete this setting.



Field 5 Setting

- 1) Read the barcode below to divide field 5 by a specified terminating string.

Select
Field Separator
to Divide Field 5...



- 2) Read the "[Hexadecimal Value](#)" barcode on page 234 for the desired character string.
- 3) Read the "Validate" barcode to complete this setting.
- 4) Read the "Discard Separator" barcode if the field separator is not desired in the field.

*Include Separator



Discard Separator



If not dividing the field by a specific separator, you may divide it by a specified length.

- 1) Read the barcode below to divide field 5 by length.

Divide Field 5
by Length



- 2) Read the "[Decimal Value](#)" barcode on page 233 for the desired field length.
- 3) Read the "Validate" barcode on the same page to complete this setting.



Additional Fields

Up to five additional fields can be created for each editing format; each of them is numbered from AF1 to AF5 accordingly.

- ▶ If “Bluetooth® HID” or “USB HID” is configured for interface, Key Type and Key Status will then become applicable. You may decide whether or not to apply Key Status when “Normal Key” is selected for Key Type.

Key Type		Key Status
Scan Code	Up to 2 scan code values are allowed.	N/A
Normal Key	Up to 4 character strings are allowed.	<ul style="list-style-type: none"> ▶ Add Shift ▶ Add Left Ctrl ▶ Add Left Alt ▶ Add Right Ctrl ▶ Add Right Alt Refer to Keyboard Wedge Table .

- 1) Read the barcode below to specify an additional field, one at a time.

Additional Field 1...



Additional Field 2...



Additional Field 3...



Additional Field 4...



Additional Field 5...



- 2) Read the “[Hexadecimal Value](#)” barcode on page 234 for the desired additional field.
- 3) Read the “Validate” barcode to complete this setting.



6.4.5 PAUSE FIELD SETTING

Pause Field Time

You can limit the pause time interval (1~16). By default, it is set to 1 second.

Pause Field Time
1~16 sec.
(*1)



- 1) Read the barcode above to specify the time interval for the Pause Field. (It is set to 1 by default.)
- 2) Read the "[Decimal Value](#)" barcode on page 233. For example, read "1" and "0" for setting the Pause Field Time to 10 seconds.
- 3) Read the "Validate" barcode on the same page to complete this setting.



6.5 CONFIGURE FORMAT — DEFINE TRANSMISSION SEQUENCE

After configuring the data fields and additional fields, you must now program the transmission sequence of these fields that comprise the final data. This field transmission sequence can be assigned in any desired order and fields can be assigned multiple times as well.

Note: Up to twelve fields can be assigned.

- 1) Read the “Start” barcode to begin with programming the field transmission sequence.

Start Programming...



- 2) Program the transmission sequence by reading the desired fields as well as additional fields.

Field 1



Field 2



Field 3



Field 4



Field 5



Field 6



Additional Field 1



Additional Field 2



Additional Field 3



Additional Field 4



Additional Field 5



Pause Field



Null Character Field



3) Read the "End" barcode to complete this setting.

End Programming...



6.6 PROGRAMMING EXAMPLES

6.6.1 EXAMPLE I

Extract data from the 10th character to the 19th character...

The editing format should be configured as follows:

- 1) Read the "Enter Setup" barcode to enter the Configuration Mode.
- 2) Read the "Configure Format 1" barcode.
- 3) Read the "Clear All" and "Code 128" barcodes for applicable code type.
- 4) Read the "Three Fields" barcode.
- 5) Read the "Divide Field 1 by Length" barcode, and set length to 9.
Field 1 data starts from the 1st character to the 9th character.
- 6) Read the "Divide Field 2 by Length" barcode, and set length to 10.
Field 2 data starts from the 10th character to the 19th character.
- 7) Read the "Start (Programming)" barcode to program the transmission sequence.
- 8) Read the "Field 2" barcode.
- 9) Read the "End" barcode to complete the transmission sequence setting.
- 10) Read the "End Programming Format" barcode to complete the setting of Editing Format 1.
- 11) Read the "Enable Format 1" barcode to apply Editing Format 1 to Code 128.
- 12) Read the "Update" barcode to exit the Configuration Mode.



6.6.2 EXAMPLE II

Extract the date code, item number, and quantity information from barcodes.

Data in a barcode is encoded like this:

- ▶ From the 1st character to the 6th character is the date code.
- ▶ From the 7th character to the dash '-' character is the item number.
- ▶ After the dash '-' character is the quantity information.

Data will be transmitted like this:

- ▶ The item number goes first, then a TAB character, followed by the date code, then another TAB character, and finally the quantity information.

The editing format should be configured as follows:

- 1) Read the "Enter Setup" barcode to enter the Configuration Mode.
- 2) Read the "Configure Format 2" barcode.
- 3) Read the "Three Fields" barcode.
- 4) Read the "Divide Field 1 by Length" barcode, and set length to 6.
Field 1 data starts from the 1st character to the 6th character.
- 5) Read the "Select Field Separator to Divide Field 2" barcode, and use a dash '-' character.
Field 2 data starts from the 7th character until the dash '-' character is met.
- 6) Read the "Additional Field 1" barcode, and use a tab character for the field.
- 7) Read the "Start (Programming)" barcode to program the transmission sequence.
- 8) Read the "Field 2", "Additional Field 1", "Field 1", "Additional Field 1", "Field 3" barcodes.
- 9) Read the "End" barcode to complete the transmission sequence (F2 A1 F1 A1 F3) setting.
- 10) Read the "End Programming Format" barcode to complete the setting of Editing Format 1.
- 11) Read the "Enable Format 2" barcode to apply Editing Format 2 to all code types.
- 12) Read the "Update" barcode to exit the Configuration Mode.



SPECIFICATIONS



Optical Characteristics	1663
Scan Engine	Non-contact type
Optical Sensor	2500 pixels CCD image sensor
Light Source	Visible Red LED
Scan Rate	200 scans/second
RF Characteristics	
WPAN Module	Bluetooth® Class 2, Version 2.1
Coverage (line-of-sight)	20 meters with 3610
Interface Supported	<ul style="list-style-type: none"> ▶ Serial Port Profile (Bluetooth® SPP) ▶ Human Interface Device Profile (Bluetooth® HID) ▶ 3610 ▶ Direct USB HID ▶ Direct USB Virtual COM
Physical Characteristics	
Memory	<ul style="list-style-type: none"> ▶ 2 KB SDRAM for transmit buffer ▶ 4MB flash for memory mode
Switch	Push-button switch for [Trigger] key, plus [Power/Delete] key
Indication	Triple-color LED (Red/Green/Blue) and beeper
Dimensions	113 x 44.9 x 29.9 mm
Weight	106g (with battery) 83g (without battery)



Electrical Characteristics		
Battery		Rechargeable Li-ion battery — 3.7 V, 850 mAh
Power Adaptor		
Input		AC 100~240 V (50/60 Hz)
Output		DC 5V 2A (Battery Charger)
Operating Temperature		0 °C to 40 °C
Environmental Characteristics		
Temperature	Operating	0 °C to 50 °C
	Storage	-20 °C to 60 °C
Humidity (Non-condensing)	Operating	10% to 90%
	Storage	5% to 95%
Resistance		
Electrostatic Discharge		± 15 kV air discharge, ± 8 kV contact discharge
Programming Support		
Configuration		Use setup barcodes or host serial commands
Software		Windows®-based ScanMaster
Firmware upgradeable		Download firmware updates via the download utility
Accessories (✓ means “supported”)		
CipherLab Dongle (3610)		✓
Rechargeable Li-ion Battery		✓
Direct USB Cable		✓
Wristband		✓
Protective Cover (Pouch)		✓
Single Battery Charger		✓



FIRMWARE UPGRADE

Upgrade firmware to one scanner at a time. For example, turn off each of the rest scanners when there is more than one scanner connected to host computer.

Note: 1. Ensure the scanner has a fully charged battery prior to attempting a firmware upgrade.
2. In order to avoid the data loss during firmware upgrade. Please save or upload all the data from the flash memory before beginning firmware upgrade.

HOW TO UPGRADE 1663 FIRMWARE

USING 3610

- 1) Connect 3610 to the USB port of PC after installing its driver.
- 2) Refer to [3.1.1 Connect to 3610](#) for connecting to 3610.
Read the "Set Connection" label first, and then the "Serial Number" label. Both labels can be located at the back of 3610.
- 3) Read the following barcodes in sequence to configure the scanner to use USB Virtual COM as download interface.

Enter Setup



Activate 3610 USB
Virtual COM



100004

Update



109999

Note: You may also choose to use "Direct" USB Virtual COM interface.

- 4) Read the following barcodes in sequence for the scanner to enter the download mode. The scanner will respond with beeps to indicate it is ready for downloading.



Update

Enter Setup




Download



109997

- 5) Run the download utility "ProgLoad.exe" on your computer.

Kernel Program	User Program
K1663_V*.shx	STD1663_V*.shx

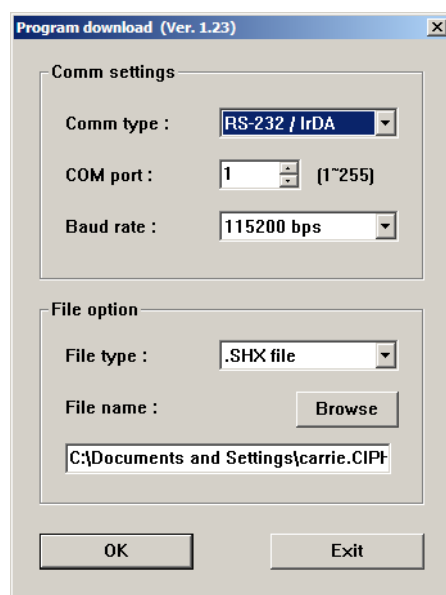

- ▶ For the communication settings, select "RS-232" and the correct COM port for USB Virtual COM interface.
- ▶ Ignore the baud rate setting.
- ▶ For the file option, click [Browse] to select the target file for firmware update.
- ▶ Click [OK].

- 6) After upgrading kernel, you will need to manually restart the scanner.

After upgrading the user program, the scanner will automatically restart itself once the download is completed successfully.

Note: The output interface remains unchanged as specified in step 3 (= USB Virtual COM).



Enter Setup

USE DIRECT USB VIRTUAL COM

- 1) Use the provided USB cable to connect 1663 to the USB port of PC. You will need to install its driver first!
- 2) Read the following barcodes in sequence to configure 1663 to use Direct USB Virtual COM as the download interface (read either barcode label '100008' or '100010').

Enter Setup



Activate Direct USB
Virtual COM



100008

Or

Activate Direct USB
Virtual COM_CDC



100010

Update



109999

- 3) And then read the following barcodes in sequence for the scanner to enter download mode. The scanner will respond with beeps to indicate it is ready for downloading.

Enter Setup



Download




109979

- 4) Run the download utility "ProgLoad.exe" on host computer.

Kernel Program	User Program
K1663_V*.shx	STD1663_V*.shx



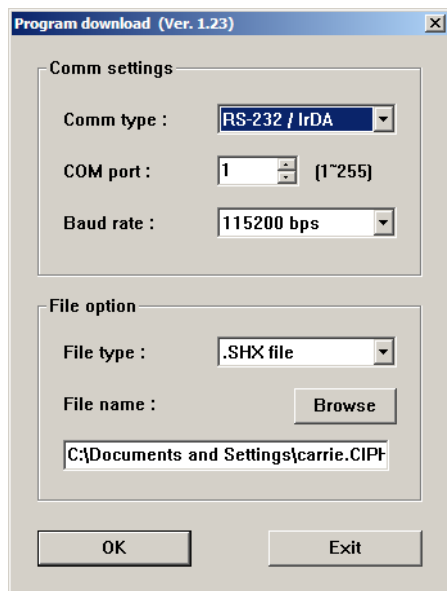

- ▶ For the communication settings, select "RS-232" and the correct COM port for Direct USB Virtual COM interface.
- ▶ Ignore the baud rate setting.
- ▶ For the file option, click [Browse] to select the target file for firmware update.
- ▶ Click [OK].

5) After upgrading kernel, you will need to restart the scanner manually.

After upgrading the user program, the scanner will restart itself automatically once the download is completely.

Note: Because 1663 supports the downloading of firmware via Direct USB Virtual COM interface, the output interface will be set to the previously used one upon completion of firmware upgrade.

USE BLUETOOTH® DONGLE

- 1) Refer to [3.2.3 Connect to Dongle](#) for the target scanner to accept the connection request from your computer.
- 2) Read the following barcodes in sequence to configure the scanner to use *Bluetooth®* SPP as download interface.

Enter Setup



Activate *Bluetooth®*
SPP



100003

Update



109999

3) Read the following barcodes in sequence for the scanner to enter the download mode.



The scanner will respond with beeps to indicate it is ready for downloading.

Enter Setup




Download



109997

- 4) Run the download utility "ProgLoad.exe" on your computer.

Kernel Program	User Program
K1663_V*.shx	STD1663_V*.shx

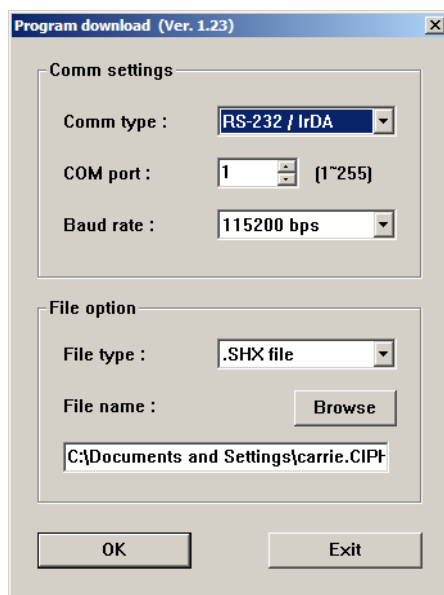

- ▶ For the communication settings, select "RS-232" and the correct COM port for *Bluetooth*® SPP interface.
- ▶ Ignore the baud rate setting.
- ▶ For the file option, click [Browse] to select the target file for firmware update.
- ▶ Click [OK].

- 5) After upgrading kernel, you will need to manually restart the scanner.

After upgrading the user program, the scanner will automatically restart itself once the download is completed successfully.

Note: The output interface remains unchanged as specified in step 2 (=Bluetooth® SPP).



HOW TO UPGRADE 3610 FIRMWARE

Connect 3610 to the USB port of PC after installing its driver. Refer to [3.1.1 Connect to 3610](#) for the target scanner to connect to 3610.


UPGRADE 3610 CPU FIRMWARE

- 1) Read the following barcodes in sequence for 3610 to enter the download mode. The Communication LED on 3610 will be flashing red to indicate it is ready for downloading.



- 2) Run the download utility "ProgLoad.exe" on your computer.

Kernel Program	User Program
K3610_V*.shx	STD3610_V*.shx

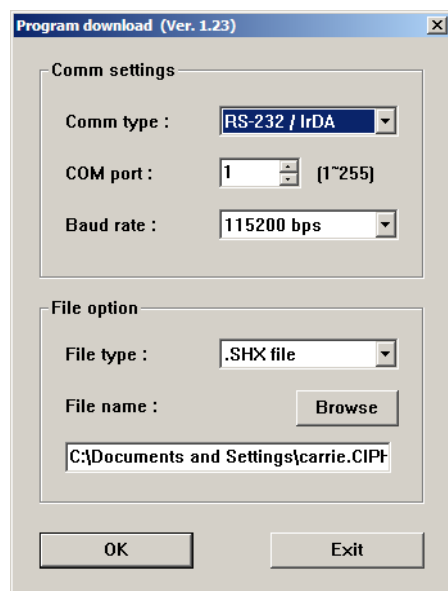

- ▶ For the communication settings, select "RS-232" and the correct COM port for USB Virtual COM interface.
- ▶ Ignore the baud rate setting.
- ▶ For the file option, click [Browse] to select the target file for firmware update.
- ▶ Click [OK].

- 3) The 3610 will automatically restart itself when upgrading firmware is completed successfully.
- 4) Read the "Update" barcode for the scanner to resume its operation (exit the configuration mode).



Update



109999

UPGRADE 3610 USB BRIDGE FIRMWARE

- 1) Read the following barcodes in sequence for 3610 to enter the download mode. The Communication LED on 3610 will be flashing red to indicate it is ready for downloading.

Enter Setup




Download 3610
USB Bridge Firmware



LoadBridge

- 2) Run the download utility "ProgLoad.exe" on your computer.

Kernel Program	User Program
K3610Bridge_V*.shx	STD3610Bridge_V*.shx

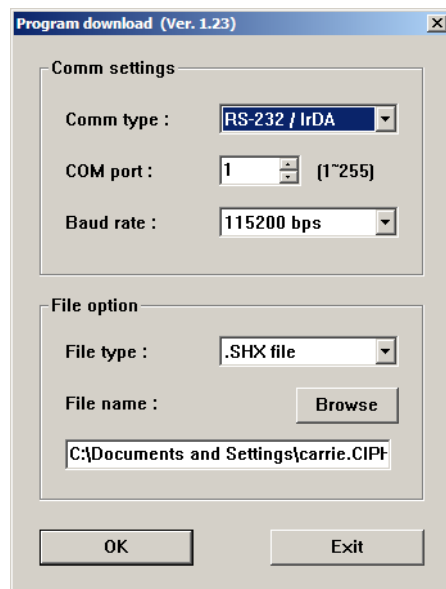

- ▶ For the communication settings, select "RS-232" and the correct COM port for USB Virtual COM interface.
- ▶ Ignore the baud rate setting.
- ▶ For the file option, click [Browse] to select the target file for firmware update.
- ▶ Click [OK].

- 3) The 3610 will automatically restart itself when upgrading firmware is completed successfully.
- 4) Read the "Update" barcode for the scanner to resume its operation (exit the configuration mode).



Update

Update



109999



Enter Setup

HOST SERIAL COMMANDS

SERIAL COMMANDS

D	
Purpose	To disable the scanner.
Remarks	"D"


E	
Purpose	To enable the scanner.
Remarks	"E"

#@nnnnnn<CR>	
Purpose	To configure the scanner.
Remarks	nnnnnn – the six digits of command parameters. For example, "109952" is to list the current Code ID settings.

List Page 3



 109952



"0x23" + "0x40" + "0x31" + "0x30" + "0x39" + "0x39" + "0x35" + "0x32" + "0x0d"

Note: After configuring the scanner, you may send the serial command "#@109999" to save the settings.

#@----<CR>	
Purpose	To halt the scanner.
Remarks	"0x23" + "0x40" + "0x2d" + "0x2d" + "0x2d" + "0x2d" + "0x0d"

#@....<CR>	
Purpose	To resume operation.
Remarks	"0x23" + "0x40" + "0x2e" + "0x2e" + "0x2e" + "0x2e" + "0x0d"

#@////<CR>	
Purpose	To respond with a beep.
Remarks	"0x23" + "0x40" + "0x2f" + "0x2f" + "0x2f" + "0x2f" + "0x0d"



#@TRIGOFF<CR>

Purpose	To disable the software trigger
Remarks	"0x23" + "0x40" + "0x54" + "0x52" + "0x49" + "0x47" + "0x4f" + "0x46" + "0x46" + "0x0d"

#@TRIGON<CR>

Purpose	To enable the software trigger
Remarks	"0x23" + "0x40" + "0x54" + "0x52" + "0x49" + "0x47" + "0x4f" + "0x4e" + "0x0d"

#@RDSN<CR>

Purpose	Read serial number
Remarks	"0x23" + "0x40" + "0x52" + "0x44" + "0x53" + "0x4e" + "0x0d"

#@BEEP,nn<CR>

Purpose	Have the scanner beep as many times as you specified ranging from 00 to 99 times (00 is to stop the work). The length of beep time is based on the duration of Good Read Beep setting and the constant interval between two beeps is 100ms.
Remarks	nn – the two digits of command parameters For example, '@BEEP,09' is to have the scanner beep for 9 times. "0x23" + "0x40" + "0x42" + "0x45" + "0x45" + "0x50" + "0x2c" + "0x30" + "0x39" + "0x0d"

#@RLED,nn<CR>

Purpose	Have the scanner's red LED indicator blink as many times as you specified ranging from 00 to 99 (00 is to stop the work). The length of blinking time is based on the Good Read LED Duration setting and the constant interval between two flashes is 200ms.
Remarks	nn – the two digits of command parameters For example, '@RLED,09' is to have the scanner blink for 9 times. "0x23" + "0x40" + "0x52" + "0x4c" + "0x45" + "0x44" + "0x2c" + "0x30" + "0x39" + "0x0d"

#@GLED,nn<CR>

Purpose	Have the scanner's green LED indicator blink as many times as you specified ranging from 00 to 99 (00 is to stop the work). The length of blinking time is based on the Good Read LED Duration setting and the constant interval between two flashes is 200ms.
Remarks	nn – the two digits of command parameters For example, '@GLED,09' is to have the scanner blink for 9 times. "0x23" + "0x40" + "0x47" + "0x4c" + "0x45" + "0x44" + "0x2c" + "0x30" + "0x39" + "0x0d"



#@VIBR,nn<CR>

Purpose	Have the scanner vibrate as many times as you specified ranging from 00 to 99 (00 is to stop the work). The length of vibrating time is based on the Good Read Vibrator Duration setting and the constant interval between two shakes is 500ms.
Remarks	nn – the two digits of command parameters For example, '@VIBR,09' is to have the scanner blink for 9 times. "0x23" + "0x40" + "0x56" + "0x49" + "0x42" + "0x52" + "0x2c" + "0x30" + "0x39" + "0x0d"

#@RDVER<CR>

Purpose	Read the information of firmware version.
Remarks	"0x23" + "0x40" + "0x52" + "0x44" + "0x56" + "0x45" + "0x52" + "0x0d"

EXAMPLE

You may run HyperTerminal.exe on the host computer to send serial commands to the scanner via USB Virtual COM or *Bluetooth*® SPP.

- ▶ For the scanner to stop immediately –
D
- ▶ For the scanner to resume working –
E
- ▶ For the scanner to change the beeper to medium volume and beep –
#@101011<CR>
#@////<CR>
- ▶ For the scanner to change the beeper to minimal volume and beep –
#@101010<CR>
#@////<CR>
- ▶ For the scanner to change the beeper frequency to 8 kHz (for Good Read Beep only) and beep –
#@101001<CR>
#@////<CR>
- ▶ For the scanner to change the beeper length to longest (for Good Read Beep only) and beep –
#@101008<CR>
#@////<CR>
- ▶ For the scanner to save the settings, send the serial command "@109999" –
#@101011<CR>
#@109999<CR>
- ▶ For the scanner to read the serial number and beep -
#@RDSN<CR>



#@////<CR>

- ▶ For the scanner to beep for nine times -

#@BEEP,09<CR>

- ▶ For the scanner's LED indicator to blink in red for nine times -

#@RLED,09<CR>

- ▶ For the scanner's LED indicator to blink in green for nine times -

#@GLED,09<CR>

- ▶ For the scanner to shake for nine times -

#@VIBR,09<CR>

- ▶ For the scanner to read the firmware version and beep -

#@RDVER<CR>

#@////<CR>

Note: (1) For USB Virtual COM, only configure the first scanner that connects to 3610.
To identify the scanner, send the serial command to have it respond with a beep.
(2) For *Bluetooth*® SPP, you can configure up to seven scanners at the same time.



3610 SETUP BARCODES & SERIAL COMMANDS

Normally, configure the 3610 dongle by having a connected scanner read 3610-related setup barcodes.

- 1) Connect 3610 to the USB port of PC. You will need to install its driver first!
- 2) Refer to [3.1.1 Connect to 3610](#) for the target scanner to connect to 3610.
Read the "Set Connection" barcode first, and then the "Serial Number" barcod. Both barcode labels can be located at the back of 3610.
- 3) Read the following barcodes in sequence to configure 3610.

Enter Setup



(3610-related setup barcodes)

Update



109999

For 3610-related setup barcodes, refer to the Serial Command table below. Note that for the "Version" and "GetID" barcodes, you must run HyperTerminal.exe or any text editor to receive or view the information.

- ▶ If the output interface is USB Virtual COM, run HyperTerminal.exe on the host computer to receive the information.
- ▶ If the output interface is USB HID, run any text editor to receive the information.



3610 SERIAL COMMANDS AND EQUIVALENT SETUP BARCODES

Config<CR>

Purpose To configure 3610.

Here is the setup barcode for this serial command:



Remarks A list of the current settings will be displayed. Run HyperTerminal.exe on your computer and change the settings one by one.

DefaultSetting<CR>

Purpose To restore the default settings.

Here is the setup barcode for this serial command:



SingleConnection<CR>

Purpose To allow only one scanner connecting to 3610.

Here is the setup barcode for this serial command:



MultiConnection<CR>

Purpose To allow up to seven scanners connecting to 3610.

Here is the setup barcode for this serial command:



UseOnePortforAll<CR>

Purpose To use one Virtual COM port for all whenever connecting 3610 to PC via USB. This setting requires to connect one 3610 at a time, and will facilitate configuring multiple 3610 via the same Virtual COM port (for administrators' or factory use).

Here is the setup barcode for this serial command:



UseVariablePort<CR>

Purpose To use variable Virtual COM port when connecting more than one 3610 to PC via USB.

Here is the setup barcode for this serial command:



Version<CR>

Purpose To get the firmware versions (CPU+USB Bridge).

Here is the setup barcode for this serial command:



GetID<CR>

Purpose To get MAC ID.

Here is the setup barcode for this serial command:



Download<CR>

Purpose To download CPU firmware to 3610.

Here is the setup barcode for this serial command:



LoadBridge<CR>

Purpose To download USB Bridge firmware to 3610.

Here is the setup barcode for this serial command:



EXAMPLE

Without using the scanner to read the above setup barcodes for configuring the 3610 dongle, run HyperTerminal.exe on the host computer to send serial commands to 3610 via USB Virtual COM.

- 1) Connect 3610 to the USB port of PC.
- 2) The Communication LED will indicate when 3610 can accept serial commands after initializing. Refer to the table below.
 - ▶ If the output interface is USB Virtual COM, run HyperTerminal.exe on the host computer. While the Communication LED on 3610 is purple (red with flashing blue), type the serial command within 3 seconds.
 - ▶ If the output interface is USB HID, press the "Num Lock" or "Caps Lock" key via the keyboard 5 times within 3 seconds while the Communication LED on 3610 is flashing red and blue. This will change the interface from USB HID to USB Virtual COM and the Communication LED will become purple (red with flashing blue). Then, run HyperTerminal.exe on the host computer. While the Communication LED on 3610 is purple (red with flashing blue), type the serial command within 3 seconds. After configuring via serial commands, the interface will reset to USB HID after re-connecting 3610.

Communication LED		Meaning
---	Blue, solid	Initialize
Red, solid	Blue, flashing	Serial command mode with USB Virtual COM: wait 3 seconds for starting a serial command
Red, flashing	Blue, flashing	Serial command mode with USB HID changed to USB Virtual COM first: wait 3 seconds for pressing [Num Lock] or [Caps Lock] 5 times via keyboard

The serial commands mentioned above have to be typed within 3 seconds. However, the commands below can be typed freely without any time limit.

##ShowScanner<CR>

To list the scanner devices connecting with 3610

##SelectScannerN<CR>

To select a scanner device from the list for configuring

N – the scanner ID in numerals representing the scanner device in the list



KEYBOARD WEDGE TABLE

		F2	SP	0	@	P	`	p	⑩
	INS	F3	!	1	A	Q	a	q	⑪
	DLT	F4	"	2	B	R	b	r	⑫
	Home	F5	#	3	C	S	c	s	⑬
	End	F6	\$	4	D	T	d	t	⑭
	Up	F7	%	5	E	U	e	u	⑮
	Down	F8	&	6	F	V	f	v	⑯
	Left	F9	'	7	G	W	g	w	⑰
	BS	F10	(8	H	X	h	x	⑱
	HT	F11)	9	I	Y	i	y	⑲
	LF	F12	*	:	J	Z	j	z	
	Right	ESC	+	;	K	[k	{	
	PgUp	Exec	,	<	L	\	l		
	CR	CR*	-	=	M]	m	}	
	PgDn		.	>	N	^	n	~	
	F1		/	?	O	_	o	Dly	ENTER*

Note: (1) ⑩~⑲: Digits of numeric keypad.
 (2) CR*/ENTER*: ENTER key on the numeric keypad.



KEY TYPE & STATUS

KEY TYPE

If “Bluetooth® HID” or “USB HID” is configured for interface, Key Type and Key Status will then become applicable.

*Normal



109926

Scan Code



109936

KEY STATUS

Decide whether or not to change key status when “Normal Key” is selected for Key Type.

Add Shift



109930

Add Left Ctrl



109931

Add Right Ctrl



109933

Add Left Alt



109932

Add Right Alt



109934



EXAMPLE**KEY TYPE = NORMAL**

For example, if you want to program the character "!" as the prefix code:

- 1) Read the "Configure Prefix" barcode.
- 2) Read the "[Hexadecimal Value](#)" barcode on page 234 for "2" and "1".
- 3) Read the "Validate" barcode to complete this setting.

KEY TYPE = SCAN CODE

For example, if you want to program the character "a" (= "1C" on the scan code table) as the prefix code:

- 1) Read the "Configure Prefix" barcode.
- 2) Read the "Scan Code" barcode.
- 3) Read the "[Hexadecimal Value](#)" barcode on page 234 for "1" and "C".
- 4) Read the "Validate" barcode to complete this setting.

KEY TYPE = NORMAL + KEY STATUS = SHIFT

For example, if you want to program the character "!" (= "Shift" + "1" on keyboard) as the prefix code:

- 1) Read the "Configure Prefix" barcode.
- 2) Read the "Add Shift" barcode.
- 3) Read the "[Hexadecimal Value](#)" barcode on page 234 for "3" and "1".
- 4) Read the "Validate" barcode to complete this setting.

KEY TYPE = NORMAL + KEY STATUS = CTRL

For example, if you want to program "Ctrl+A" and "Ctrl+\$" as the prefix code:

- 1) Read the "Configure Prefix" barcode.
- 2) Read the "Add Left Ctrl" barcode.
- 3) Read the "[Hexadecimal Value](#)" barcode on page 234 for "4", "1" (= "A").
- 4) Read the "Add Left Ctrl" barcode.
- 5) Read the "[Hexadecimal Value](#)" barcode on page 234 for "2", "4" (= "\$").
- 6) Read the "Validate" barcode to complete this setting.





NUMERAL SYSTEMS

DECIMAL SYSTEM

Decimal



















Validate the Values



HEXADECIMAL SYSTEM

Hexadecimal

0  109900	1  109901
2  109902	3  109903
4  109904	5  109905
6  109906	7  109907
8  109908	9  109909
A  109910	B  109911
C  109912	D  109913
E  109914	F  109915



Validate the Values



ASCII TABLE

0		DLE	SP	0	@	P	`	p	
1	SOH	DC1	!	1	A	Q	a	q	
2	STX	DC2	"	2	B	R	b	r	
3	ETX	DC3	#	3	C	S	c	s	
4	EOT	DC4	\$	4	D	T	d	t	
5	ENQ	NAK	%	5	E	U	e	u	
6	ACK	SYN	&	6	F	V	f	v	
7	BEL	ETB	'	7	G	W	g	w	
8	BS	CAN	(8	H	X	h	x	
9	HT	EM)	9	I	Y	i	y	
A	LF	SUB	*	:	J	Z	j	z	
B	VT	ESC	+	;	K	[k	{	
C	FF	FS	,	<	L	\	l		
D	CR	GS	-	=	M]	m	}	
E	SO	RS	.	>	N	^	n	~	
F	SI	US	/	?	O	_	o	DEL	



ENTERING PIN CODE FOR AUTHENTICATION

USE PRESET PIN

- 1) In the configuration mode, read the barcode below to use a preset PIN for authentication.

Use Preset PIN



- 2) Read one of the barcodes to specify the PIN code, in decimal or hexadecimal.
By default, the PIN code is set to "0000". Maximum 16 characters are allowed.

Enter PIN in
Hexadecimal...



Enter PIN in
Decimal...



- 3) Read the "[Decimal Value](#)" barcode on page 233 or the "[Hexadecimal Value](#)" barcode on page 234 for the desired digits or character string.

Read the "Clear PIN Code" barcode first if you need to re-input the PIN code.

Clear PIN Code



- 4) Read the "Validate" barcode to complete this setting.



DISABLE AUTHENTICATION OR USE RANDOM PIN

In the configuration mode, read the barcode below to disable authentication (= No PIN) or use a random PIN for authentication.

*No PIN or
use random PIN



Note: When using *Bluetooth*® HID, some device drivers may not support pre-defined PIN code for authentication. In this case, make sure you have the scanner set to "No PIN or use random PIN" before pairing. While pairing, the host PIN code will be displayed on the computer screen.

Use Random PIN

When the target device is set to use a random PIN for authentication, wait until the random PIN is displayed on the target device while pairing, and then input the matching PIN code on the scanner.

Note: Follow the steps below to enter the matching PIN on the scanner. There is no need to enter the configuration mode!

- 1) Read one of the barcodes to specify the PIN code, in decimal or hexadecimal.

Enter PIN in
Hexadecimal...



Enter PIN in
Decimal...



- 2) Read the "[Decimal Value](#)" barcode on page 233 or the "[Hexadecimal Value](#)" barcode on page 234 for the desired digits or character string.

Read the "Clear PIN Code" barcode first if you need to re-input the PIN.

Clear PIN Code



- 3) Read the "Validate" barcode to complete this setting.

Reject Random PIN Request

When the random PIN is displayed on the target device while pairing, you can reject the PIN request by having the scanner read the "Validate" barcode.





Appendix V

KEYBOARD TYPE ONE-SCAN BARCODE

BLUETOOTH HID

PCAT (US)



PCAT (French)



PCAT (German)



PCAT (Italian)



PCAT (Swedish)



PCAT (Norwegian)



PCAT (UK)



PCAT (Belgium)



PCAT (Spanish)



PCAT (Portuguese)



PS55 A01-2 (Japanese)



User-defined table



PCAT (Turkish)



PCAT (Hungarian)



PCAT (Swiss German)



PCAT (Danish)



REMOTE USB HID

PCAT (US)



#@RH0064#

PCAT (French)



#@RH0065#

PCAT (German)



#@RH0066#

PCAT (Italian)



#@RH0067#

PCAT (Swedish)



#@RH0068#

PCAT (Norwegian)



#@RH0069#

PCAT (UK)



#@RH0070#

PCAT (Belgium)



#@RH0071#

PCAT (Spanish)



#@RH0072#

PCAT (Portuguese)



#@RH0073#

PS55 A01-2 (Japanese)



#@RH0074#

User-defined table



#@RH0075#

PCAT (Turkish)



#@RH0076#

PCAT (Hungarian)



#@RH0077#

PCAT (Swiss German)



#@RH0078#

PCAT (Danish)



#@RH0079#