


### Open Your Box

- ☒ 4-Slot Terminal & 4-Slot Battery Cradle (with Ethernet)
- ☒ Adapter plus Power Cord
- ☒ DC Power Splitter Y Cable
- ☒ Quick Start Guide

The 4-Slot Terminal & 4-Slot Battery Cradle (with Ethernet) allows simultaneous charging and Ethernet access on up to four RS50 or RS51 mobile computers.

Multiple 4-Slot Terminal & 4-Slot Battery Cradle can also be interconnected to one another for shared Ethernet communication.

### Overview

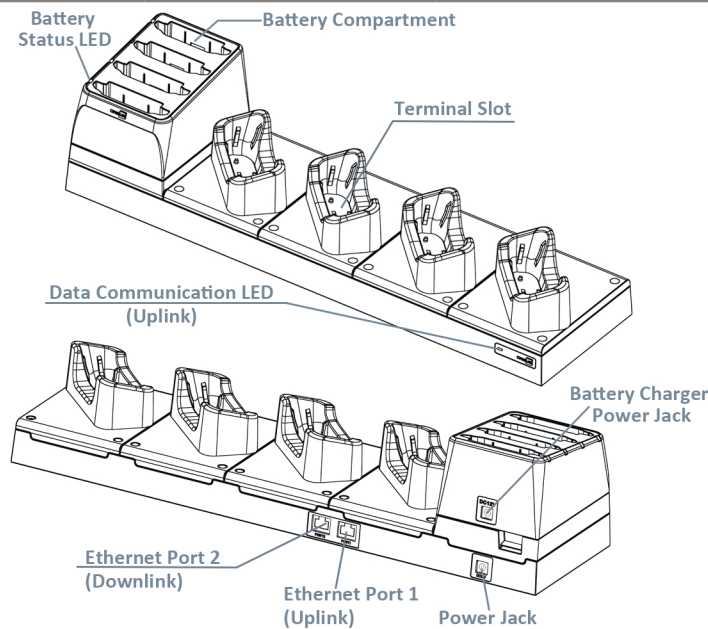


### Important Charging Information

|                         |                                                                                |
|-------------------------|--------------------------------------------------------------------------------|
| Power Supply            | Input: AC 100-240V, 47-63Hz<br>Output: DC 12V± 5%, 8-10A<br>CipherLab approved |
| Battery Pack (optional) | 3.8V, 4000mAh / 3.75V, 5300mAh<br>rechargeable Li-ion, CipherLab proprietary   |
| Charging Time           | Approx. 5 hours (4000mAh) / 6 hours (5300mAh)                                  |
| Charging Temperature    | 0°C - 45°C                                                                     |


### LED Indicators

**Charging LED:** The charging LED (left) on the RS50/RS51 mobile computer shows the charging status of the main battery on the device.

| Charging LED Status |                                                     |
|---------------------|-----------------------------------------------------|
| Green, solid        | Charging complete                                   |
| Red, solid          | Charging the mobile computer                        |
| Red, blinking       | Charging error (for instance, battery not in place) |

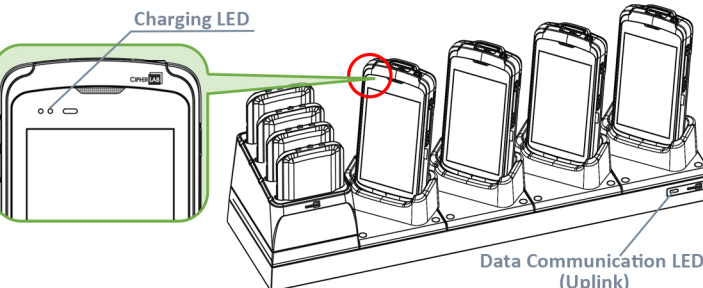

**Data Communication LED (Uplink):** For Ethernet uplink status, check the uplink LED on the 4-Slot Terminal & 4-Slot Battery Cradle's lower right corner.

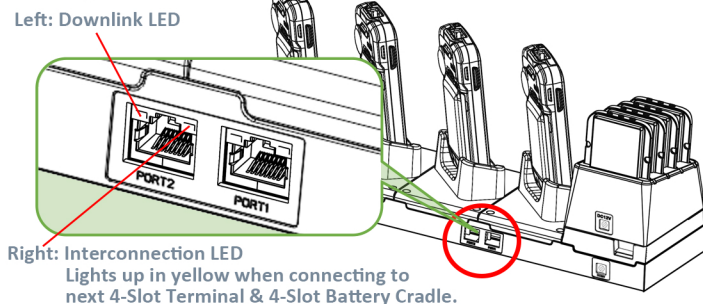

**Data Communication LED (Downlink):** For Ethernet downlink status, check the downlink LED on the back of the 4-Slot Terminal & 4-Slot Battery Cradle.

| Data Communication LED Status |                                |
|-------------------------------|--------------------------------|
| Green, solid                  | 1000 Base-T Ethernet Linked    |
| Green, blink                  | 1000 Base-T Network activity   |
| Orange, solid                 | 10/100 Base-T Ethernet Linked  |
| Orange, blink                 | 10/100 Base-T Network activity |

**Note:** If two 4-Slot Terminal & 4-Slot Battery Cradles are connected, the second one's data communication LED (Uplink) will light up in green.


### LED Indicators on 4-Slot Battery Charger

The status LED on the 4-slot battery charger shows the battery charging status:

| Charging LED Status |                                                                          |
|---------------------|--------------------------------------------------------------------------|
| Green, solid        | Charging complete                                                        |
| Red, solid          | Charging the battery                                                     |
| Red, blinking       | Charging error (e.g. the charging temperature is out of the valid range) |


### Charging & Ethernet Communication

**Step 1:** Connect the DC Power Splitter Y Cable with the adapter, and then connect the power cord with the adapter. Finally plug the power cord to an electrical outlet.




**Step 2:** Plug the DC Power Splitter Y Cable and Ethernet cables to the back of the 4-Slot Terminal & 4-Slot Battery Cradle:

**Port 2:** Connect to the next 5-Slot Terminal Cradle  
**Port 1:** Connect to a router, switch, or hub  
**Battery Charger Power Jack:** Connect to the DC Power Splitter Y Cable (with power supply)

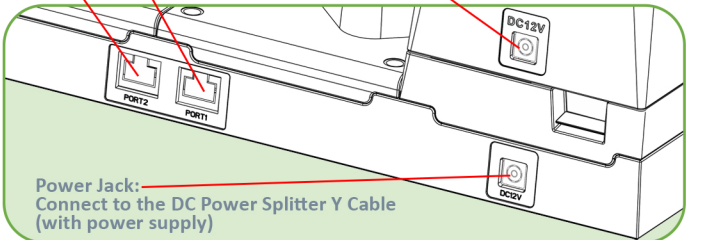

**Step 3:** Insert RS50/RS51 mobile computers and batteries into the charging slots and the battery compartment of the 4-Slot Terminal & 4-Slot Battery Cradle.

**Step 4:** The 4-Slot Terminal & 4-Slot Battery Cradle allows Ethernet interconnection between multiple cradles. Connect Ethernet cable from Port 2 (downlink port) of the first cradle to Port 1 (uplink port) of the next one. Ethernet communication will be available on all devices.

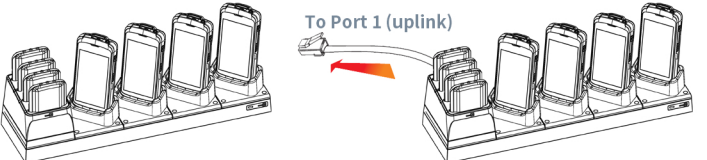

# RS50/RS51 四槽傳輸充電座含四槽電池充電座 快速使用指南


繁體中文 簡體中文

## 檢視包裝內容物／检视包装内容物

- 四槽傳輸充電座含四槽電池充電座（具備乙太網路功能）  
四槽传输充电座含四槽电池充电座（具备以太网路功能）
- 電源轉換器，附電源線／电源转换器，附电源线
- DC電源線一分為二擴充線／DC电源线一分為二擴充线
- 快速使用指南／快速使用指南

RS50/RS51 四槽傳輸充電座含四槽電池充電座可同時為四支RS50/RS51 行動電腦進行充電，亦可連接至乙太網路供行動電腦上網。使用網路線串聯多個四槽傳輸充電座含四槽電池充電座，即可讓所有行動電腦同時透過乙太網路傳輸資料。／RS50/RS51 四槽传输充电座含四槽电池充电座可同时为四支RS50/RS51 行动电脑进行充电，亦可连接至以太网网络供行动电脑上网。使用网络线串联多个四槽传输充电座含四槽电池充电座，即可让所有行动电脑同时透过以太网网络传输数据。

## 概覽／概览

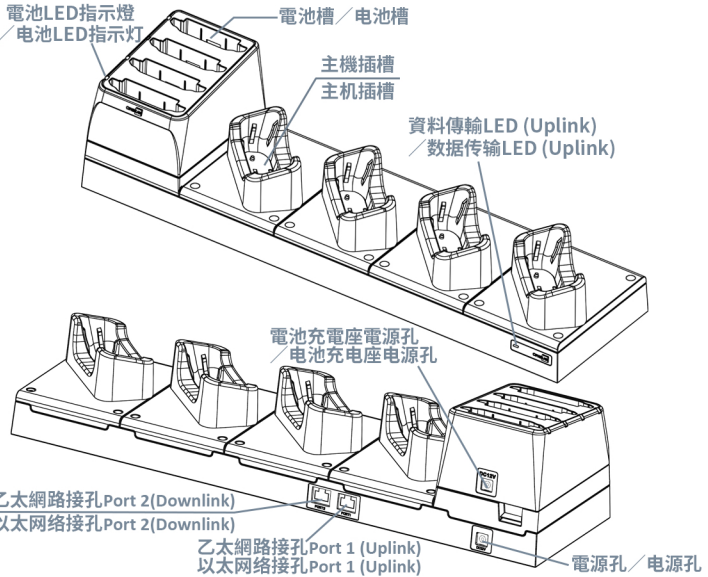

## 重要電源資訊／重要电源信息

|                      |                                                                                    |
|----------------------|------------------------------------------------------------------------------------|
| 電源轉換器<br>电源转换器       | 輸入／输入：AC 100-240V, 47-63Hz<br>輸出／输出：DC 12V± 5%, 8-10A<br>CipherLab 專用電源供應器／专用电源供应器 |
| 電池容量（可選）<br>电池容量（可选） | 3.8V, 4000mAh / 3.75V, 5300mAh<br>CipherLab 專用充電式鋰電池<br>CipherLab 专用充电式锂电池         |
| 充電時間／充电时间            | 4000mAh 約 5 小時 / 4000mAh 约 5 小时<br>5300mAh 約 6 小時 / 5300mAh 约 6 小时                 |
| 充電溫度／充电温度            | 0°C - 45°C                                                                         |


# RS50/RS51 四槽传输充电座含四槽电池充电座 快速使用指南

繁體中文 簡體中文


## LED 指示燈／LED 指示灯

充電LED／充电LED: 行動電腦上的充電指示燈(左側)顯示充電資訊。  
行动电脑上的充电指示灯(左侧)显示充电信息。

| 充電LED指示燈狀態說明／充电LED指示灯状态说明 |                            |
|---------------------------|----------------------------|
| 綠燈恆亮／绿灯恒亮                 | 充電完成／充电完成                  |
| 紅燈恆亮／红灯恒亮                 | 行動電腦充電中／行动电脑充电中            |
| 紅燈閃爍／红灯闪烁                 | 充電錯誤／充电错误（如：電池未裝好／如：电池未装好） |

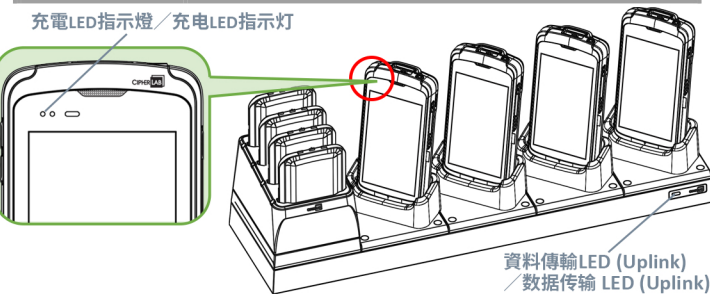

資料傳輸LED (Uplink)：乙太網路上行通訊(uplink)狀態，請查看四槽傳輸充電座含四槽電池充電座右下角的LED指示燈。  
数据传输LED (Uplink)：以太网路上行通信(uplink)状态，请查看四槽传输充电座含四槽电池充电座右下角的LED指示灯。

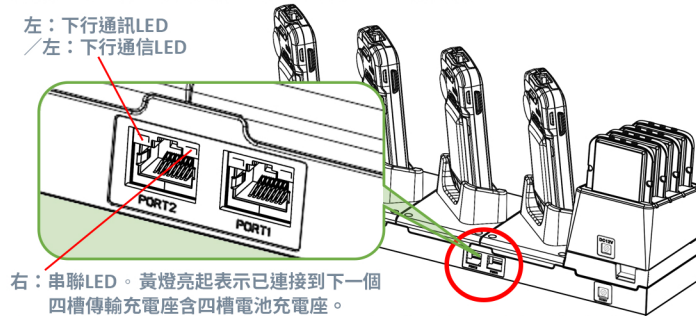


資料傳輸LED (Downlink)／数据传输LED (Downlink)：乙太網路下行通訊(downlink)狀態，請查看後方Port 2左上角LED指示燈。  
以太网网络下行通信(downlink)状态，请查看后方Port 2左上角LED指示灯。

| 資料傳輸LED 狀態說明／数据传输LED状态说明 |                                                  |
|--------------------------|--------------------------------------------------|
| 綠燈恆亮<br>绿灯恒亮             | 已連接到1000 Base-T乙太網路<br>／已连接到1000 Base-T以太网网络     |
| 綠燈閃爍<br>绿灯闪烁             | 以1000 Base-T速度傳送資料中<br>／以1000 Base-T速度传送数据中      |
| 橘燈恆亮<br>橘灯恒亮             | 已連接到10/100 Base-T乙太網路<br>／已连接到10/100 Base-T以太网网络 |
| 橘燈閃爍<br>橘灯闪烁             | 以10/100 Base-T速度傳送資料中<br>／以10/100 Base-T速度传送数据中  |

注意：當2個充電座連接時，第二個充電座的資料傳輸LED (Uplink) 會呈綠燈。  
注意：当2个充电座连接时，第二个充电座的资料传输LED (Uplink) 会呈绿灯。

## 電池充電座LED 指示燈／电池充电座LED 指示灯

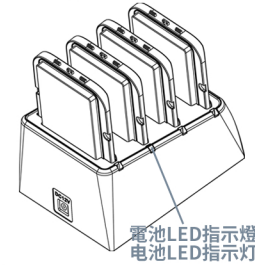


四槽電池充電座上的充電指示燈顯示電池充電資訊。  
四槽电池充电座上的充电指示灯显示电池充电信息。


| LED指示燈狀態說明／LED指示灯状态说明 |                                              |
|-----------------------|----------------------------------------------|
| 綠燈恆亮／绿灯恒亮             | 充電完成／充电完成                                    |
| 紅燈恆亮／红灯恒亮             | 電池充電中／电池充电中                                  |
| 紅燈閃爍／红灯闪烁             | 充電錯誤／充电错误<br>（如：超出可充電的溫度範圍<br>／如：超出可充电的温度范围） |

## 充電與連接乙太網路／充电与连接以太网网络

步驟1：將DC電源線一分為二擴充線接上電源轉換器，再將電源線一端連接到電源轉換器，另一端連接到插座。  
步骤1：将DC电源线一分為二擴充线接上电源转换器，再将电源线一端连接到电源转换器，另一端连接到插座。

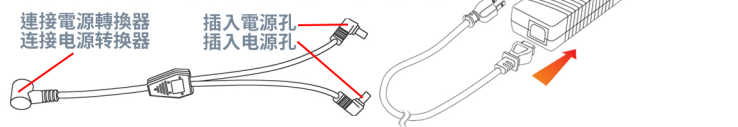

步驟2：將DC電源線一分為二擴充線與網路線連接到四槽傳輸充電座含四槽電池充電座後方的插孔。  
步骤2：将DC电源线一分為二擴充线與網路线連接到四槽传输充电座含四槽电池充电座后方的插孔。

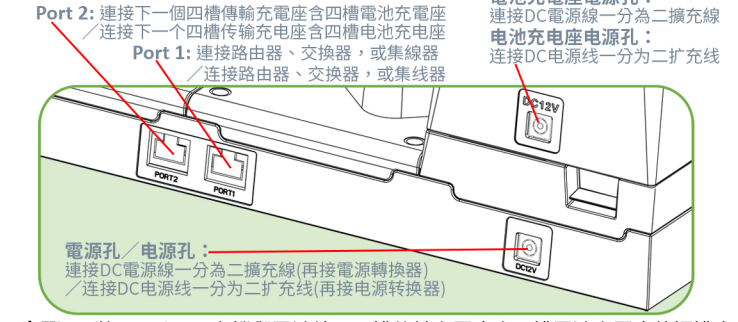

步驟3：將RS50/RS51主機與電池放入四槽傳輸充電座含四槽電池充電座的插槽中。  
步骤3：将RS50/RS51主机与电池放入四槽传输充电座含四槽电池充电座的插槽中。  
步驟4：透過網路線，可將多個四槽傳輸充電座含四槽電池充電座串聯在一起。  
步骤4：透过网络线，可将多个四槽传输充电座含四槽电池充电座串联在一起。  
將網路線從第一部充電座的Port 2 (downlink port)連接到下一部充電座的Port 1 (uplink port)，所有行動電腦即可透過乙太網路傳送資料。  
将网络线从第一部充电座的Port 2 (downlink port)连接到下一部充电座的Port 1 (uplink port)，所有行动电脑即可透过以太网网络传送数据。

