



Overview

RS51 Pistol, a pistol-shaped handle with a trigger button, is used for working with RS51 Mobile Computer to perform intensive scanning.

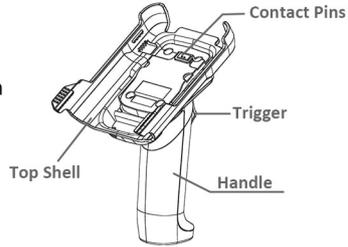

Scanning

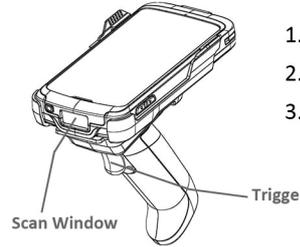


1. Launch the application "ReaderConfig".
2. Aim the scan window at the barcode to read.
3. Pull the trigger on the pistol grip.

Installation


Step 1:
Remove the Rubber Accessories which covers the contact pins in the back side of RS51 Mobile Computer.
If a hand strap is attached, removed it from RS51 Mobile Computer as well.

Step 2:
Put RS51 Mobile Computer with its one side tilted into RS51 Pistol, and then press down its another side to lay RS51 Mobile Computer flat on RS51 Pistol with their contact pins connected.

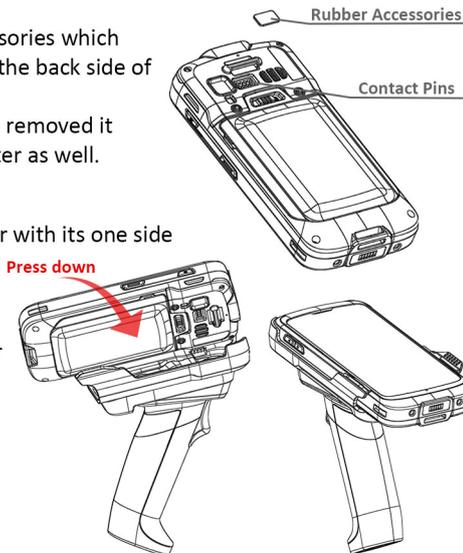


Remove

Step 1:
As the figure shows, place the RS51 mobile computer installed with a pistol on a horizontal flat surface by both your hands holding the two side of the pistol top shell.

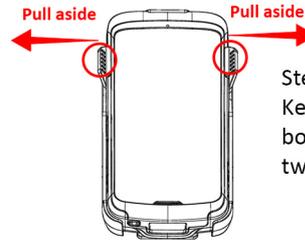

Step 2:
Keeping holding the pistol top shell with both hands, and slightly pull aside the two sides of pistol top shell by thumbs.

Step 3:
While the two side of the pistol top shell is pulled aside by your thumbs, use other fingers to push out the RS51 mobile computer from its back side to make it apart with the pistol.

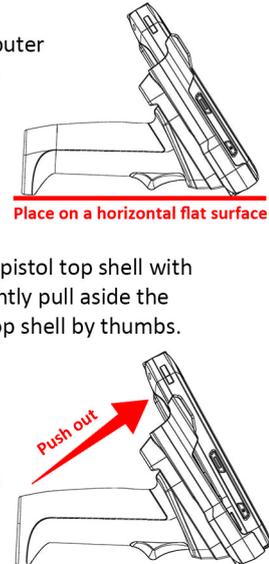

RS51 行動電腦槍式握把 快速開始指南

> 繁中 簡中

RS51 行動電腦槍式握把 快速開始指南

>> 繁中 簡中

概覽 / 概览

RS51 行動電腦槍式握把，搭配 RS51 行動電腦使用，便於進行大量資料蒐集。

RS51 行動電腦槍式握把，搭配 RS51 行動電腦使用，便於進行大量數據搜集。



進行掃描 / 进行扫描

1. 開啟行動電腦上的 Reader Config 應用程式。
2. 將掃描窗對準要讀取的條碼。
3. 扣下掃描板機，即完成掃描。



1. 开启行动电脑上的『条码设置』应用。
2. 将扫描窗对准要读取的条码。
3. 扣下扫描板机，即完成扫描。

安裝 / 安装

步驟 1：
移除 RS51 行動電腦背面遮蓋住金屬接觸點的配件蓋橡膠。


若有安裝手背帶，也請一併移除。

步驟 1：
移除 RS51 行動電腦背面遮蓋住金屬接觸點的配件蓋橡膠。

若有安裝手背帶，也請一併移除。

步驟 2：
將 RS51 行動電腦一側略微傾斜放入 RS51 槍式握把後，再下壓另一側讓 RS51 行動電腦平躺於 RS51 槍式握把頂部外殼內，其金屬接觸點與槍式握把的金屬接觸點須對準接合。


步驟 2：
將 RS51 行動電腦一側略微傾斜放入 RS51 槍式握把後，再下壓另一側讓 RS51 行動電腦平躺於 RS51 槍式握把頂部外殼內，其金屬接觸點與槍式握把的金屬接觸點須對準接合。

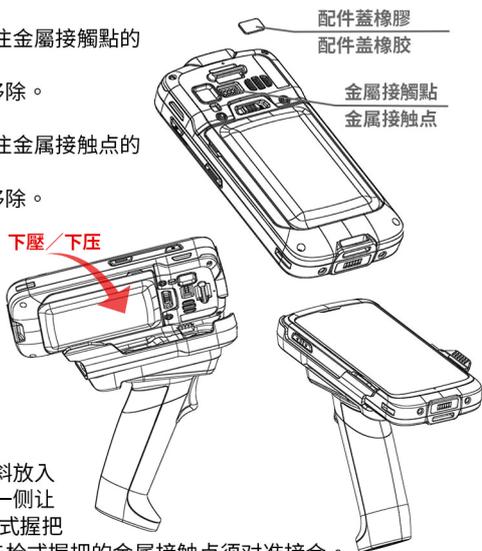

卸除 / 卸除

步驟 1：
如圖所示，將安裝有槍式握把的 RS51 行動電腦，以雙手緊握槍式握把頂部外殼兩側，放置於平面上。

步驟 1：
如圖所示，將安裝有槍式握把的 RS51 行動電腦，以雙手緊握槍式握把頂部外殼兩側，放置於平面上。



步驟 2：
持續以雙手握緊槍式握把頂部外殼，並以拇指將頂部外殼兩臂向外輕推開。

步驟 2：
持續以雙手握緊槍式握把頂部外殼，並以拇指將頂部外殼兩臂向外輕推開。

步驟 3：
在頂部外殼兩臂以拇指推開的同時，餘指輔助朝內推動 RS51 主機使其彈出握把頂部外殼。

步驟 3：
在頂部外殼兩臂以拇指推開的同時，餘指輔助朝內推動 RS51 主機使其彈出握把頂部外殼。

