

RK25 5-Slot Charging Cradle

Quick Start Guide

>
EN


>>
EN

RK25 5-Slot Charging Cradle allows simultaneous charging up to five RK25 mobile computers.

Overview

Open Your Box:

- ☑ 5-Slot Charging Cradle
- ☑ Adapter plus Power Cord
- ☑ Quick Start Guide

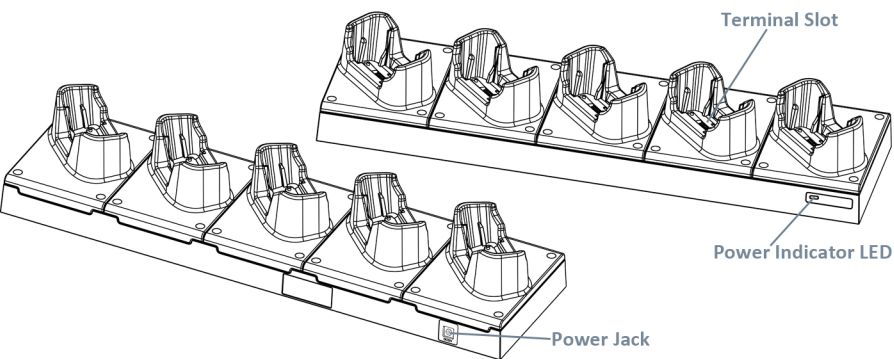

Important Charging Information

Power Supply	Input: AC 100-240V, 47-63Hz; output: DC 12V± 5%, 8-10A CipherLab approved
Battery Pack	3.8V, 4000mAh rechargeable Li-Polymerbattery CipherLab proprietary
Charging Time	Approx. 4 hours
Charging Temperature	0°C - 40°C


LED Indicator

Charging LED: The charging LED (right) located above the touch screen of the RK25 mobile computer shows the charging status

Charging LED Status	
Green, solid	Charging complete
Red, solid	Charging the mobile computer
Red, blink	Charging error (for instance, battery not in place)
No light	Not charging. It might result from the power cable which is not correctly connected.

Power Indicator LED:


The Power Indicator LED lights up in green when the unit is powered.

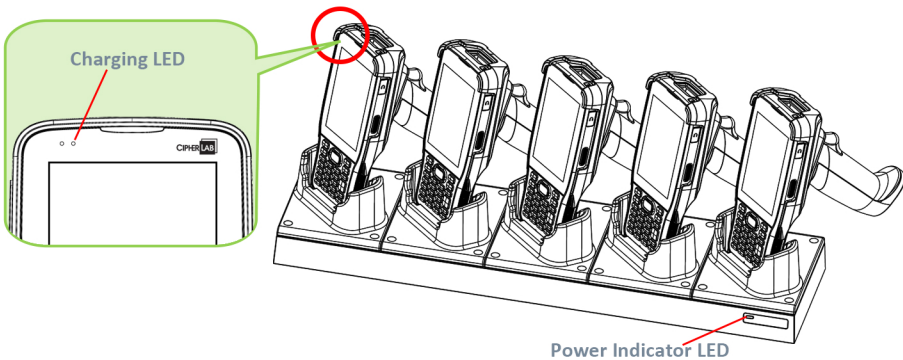


Charging

Step 1:

Connect the power cord with the adapter, and plug the power cord to an electrical outlet.

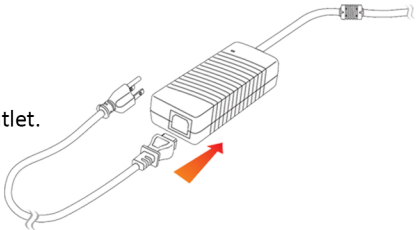

Step 2: Plug adapter plug to the back of the 5-Slot Charging Cradle.

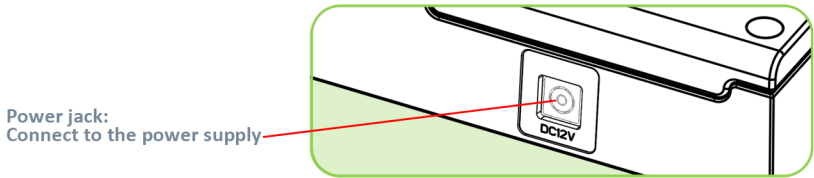

Step 3:

Insert the RK25 mobile computer(s) into the charging slots of the 5-Slot Charging Cradle.

Warning:

You can insert the device(s) into the charging slot(s) without detaching the rubber boot, handstrap, or pistol in advance. However, the micro USB cable must be removed before inserting RK25 mobile onto the 5-slot charging cradle.

RK25 五槽主機充電座

快速使用指南

>


繁中 簡中

RK25 五槽主機充電座可同時為五支RK25 行動電腦進行充電。
RK25 五槽主機充電座可同時為五支RK25 行動電腦進行充電。

概覽／概览

檢視包裝內容物／检视包装内容物：

- ☑ 五槽主機充電座／五槽主机充电座
- ☑ 電源轉換器，附電源線／电源转换器，附电源线
- ☑ 快速使用指南／快速使用指南

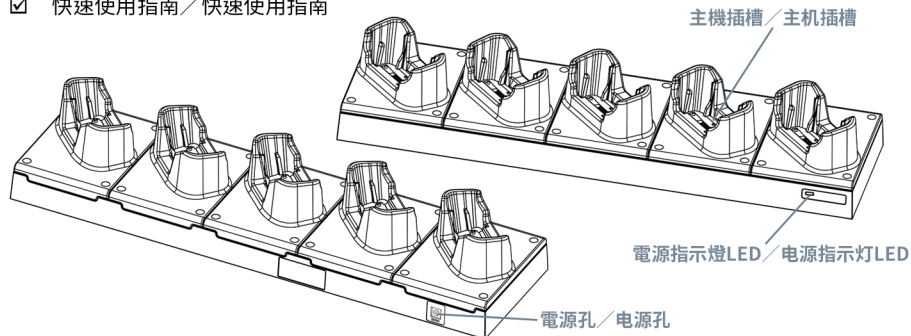

重要電源資訊／重要电源信息

電源轉換器／电源转换器	輸入／输入: AC 100-240V, 47-63Hz；輸出／输出: DC 12V± 5%, 8-10A CipherLab 專用電源供應器／CipherLab 专用电源供应器
電池容量／电池容量	3.8V, 4000mAh, CipherLab 專用鋰聚合物電池 3.8V, 4000mAh, CipherLab 专用锂聚合物电池
充電時間／充电时间	約 4 小時／约 4 小时
充電溫度／充电温度	0°C - 40°C

LED 指示燈／LED 指示灯

充電LED／充电LED: 行動電腦觸控螢幕上方的充電指示燈(右側)顯示充電資訊。
行动电脑触控屏幕上方的充电指示灯(右侧)显示充电信息。

充電LED指示燈狀態說明／充电LED指示灯状态说明

綠燈恆亮／绿灯恒亮	充電完成／充电完成
紅燈恆亮／红灯恒亮	行動電腦充電中／行动电脑充电中
紅燈閃爍／红灯闪烁	充電錯誤／充电错误 (如：電池未裝好／如：电池未装好)
沒有燈亮／没有灯亮	無法充電 (充電線端未正確連接本機或插座) 无法充电 (充电线端未正确连接本机或插座)


RK25 五槽主机充电座

快速使用指南

>>

繁中 簡中

電源指示燈LED／电源指示灯LED： 接上電源時綠燈亮起。／接上电源时绿灯亮起。

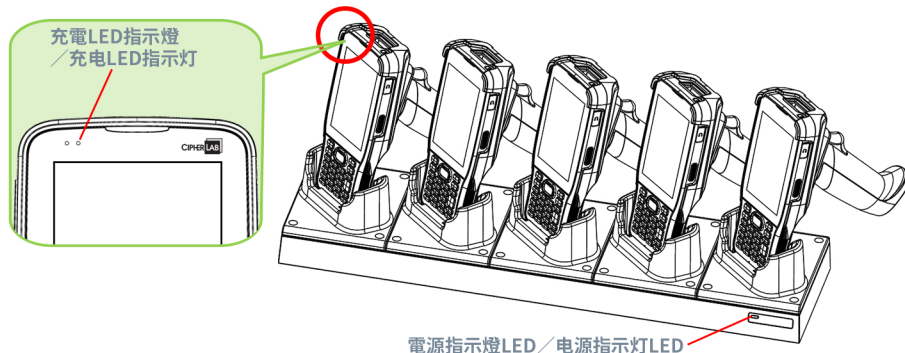


充電／充电

步驟1：

將電源線一端連接到電源轉換器，
另一端連接到插座。

步驟1：


將電源線一端連接到電源轉換器，
另一端連接到插座。

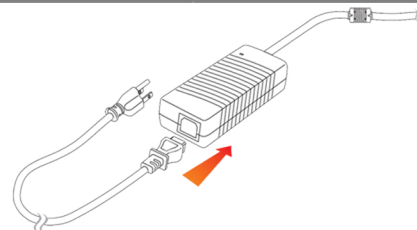

步驟2：將電源轉換器接頭連接到五槽主機座後方的插孔。

步骤2：将电源转换器接头连接到五槽主机座后方的插孔。

電源孔：連接電源轉換器
电源孔：连接电源转换器

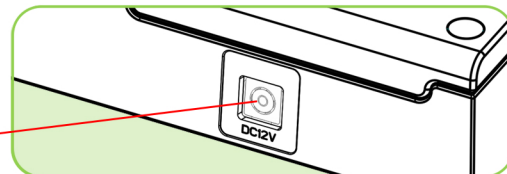

步驟3：將RK25行動電腦放入五槽主機座的插槽中。

步骤3：将RK25行动电脑放入五槽主机座的插槽中。

警告：您無須事先拆卸RK25槍式握把、手背帶或RK25保護殼，即可直接將RK25主機放入充電槽中。
但請務必先移除Micro USB線，再將RK25主機放入傳輸充電座中。

警告：您無須事先拆卸RK25槍式握把、手背帶或RK25保護殼，即可直接將RK25主機放入充電槽中。
请务必先移除Micro USB线，再将RK25主机放入传输充电座中。