



Overview

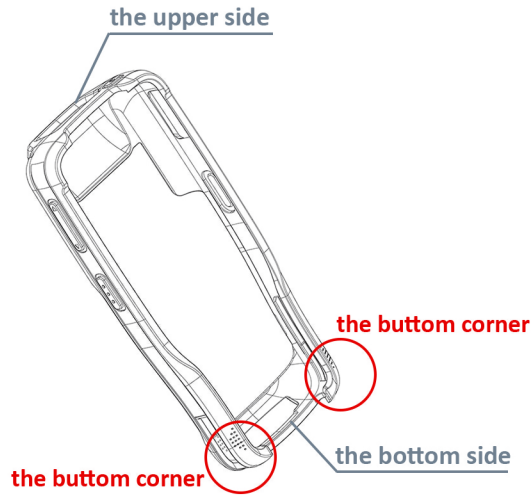

Installation

Step 1:


Put RK25 mobile computer into the rubber boot from its upper end.

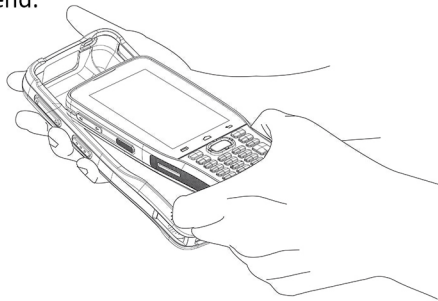

Note:


If a hand strap is attached on RK25 mobile computer, please remove it beforehand.

Step 2: Pull aside the two bottom corners of the rubber boot separately, and cover the bottom side of RK25 mobile computer with the two bottom corners.

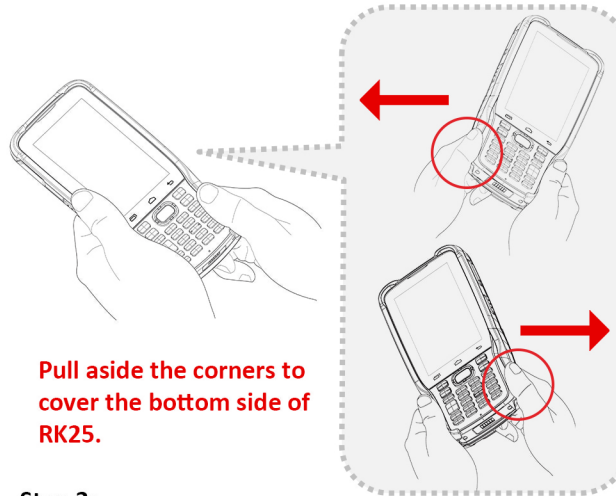


Step 3:

Complete shielding RK25 mobile computer by rubber boot.

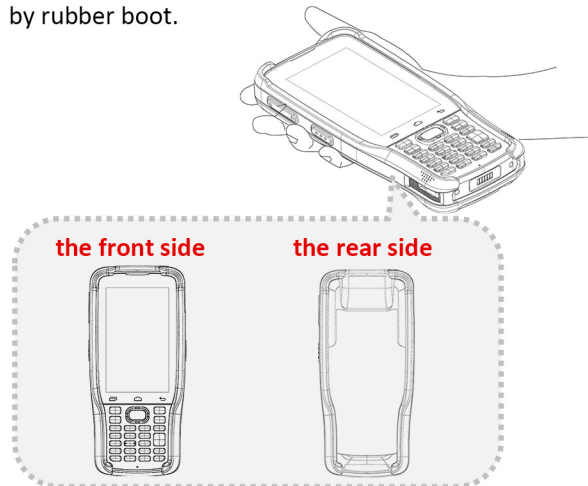


Remove

Step 1-1: Peeling the rubber boot by pulling aside and downward one of the bottom corners.

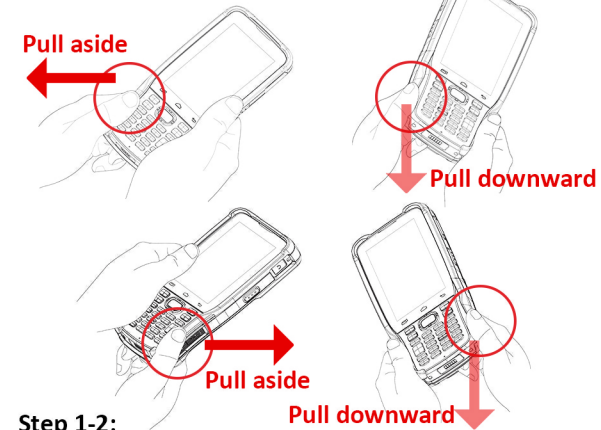

Step 1-2:

While pulling downward one bottom corner of the rubber boot, push out RK25 mobile computer from its back side. Repeat the same steps for another bottom corner.

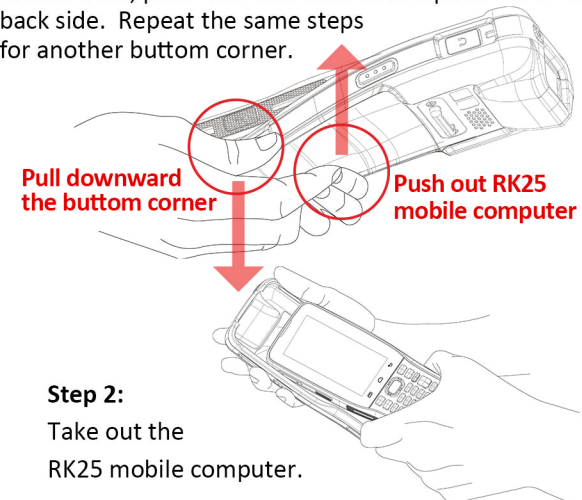

Step 2:

Take out the RK25 mobile computer.

RK25保護殼 快速開始指南

繁中

簡中

RK25保护壳 快速开始指南

繁中


簡中

>>>

繁中

簡中


概覽／概览

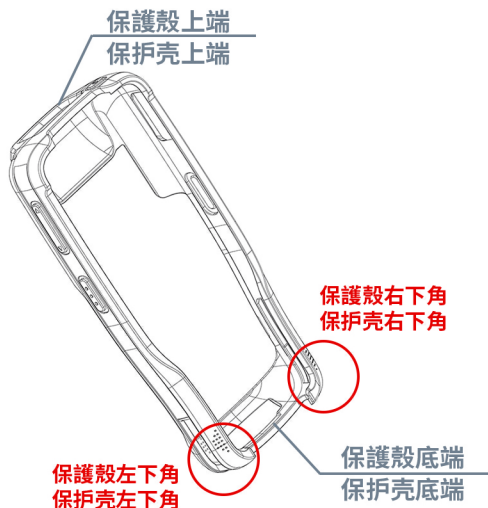

安裝保護殼／安装保护壳

步驟1：將RK25行動電腦主機上端，對準保護殼放置入。


步驟1：將RK25行动电脑主机上端，对准保护壳放置入。

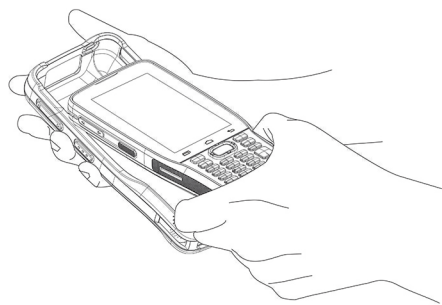

注意：若RK25行動電腦主機上裝有手背帶，請先將手背帶移除。
注意：若RK25行动电脑主机上装上手背带，请先将手背带移除。

步驟2：分別向外輕拉開保護殼底端的左右二角，並以左右二角包覆住RK25行動電腦主機底部。

步骤2：分别向外轻拉开保护壳底端的左右二角，并以左右二角包覆住RK25行动电脑主机底部。

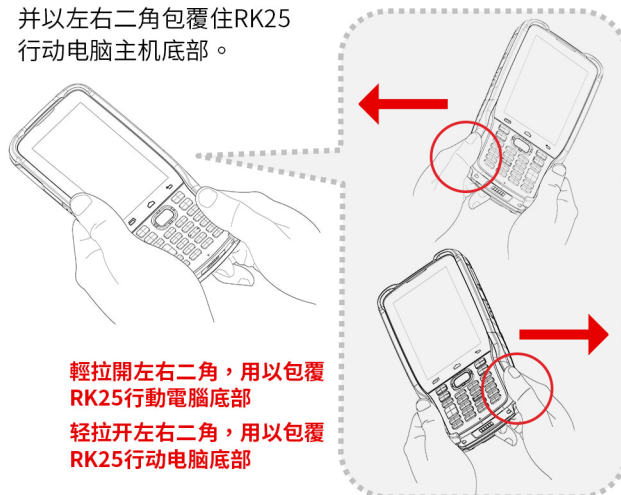

步驟3：RK25主機放置入保護殼內完成。


步骤3：RK25主机放置入
保护壳内完成。



移除保護殼／移除保护壳


步驟1-1：向外並向下輕拉保護殼下端的其中一角，將其剝開。

步骤1-1：向外并向下轻拉保护壳下端的其中一角，将其剥开。

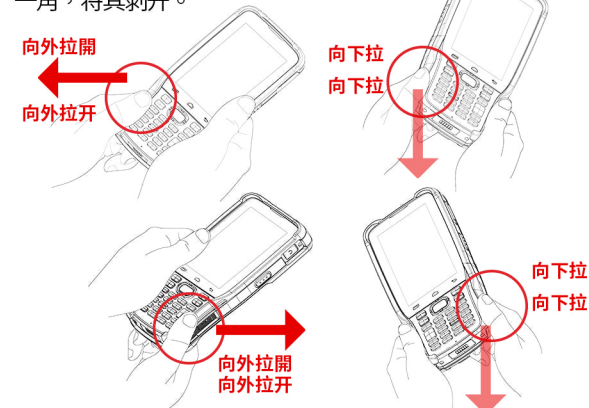

步驟1-2：剝開保護殼下端的其中一角的同时，由RK25主機背面將主機輕推出。以同樣步驟卸除另一角。

步骤1-2：剥开保护壳下端的其中一角的同时，由RK25主机背面将主机轻推出。以同样步骤卸除另一角。

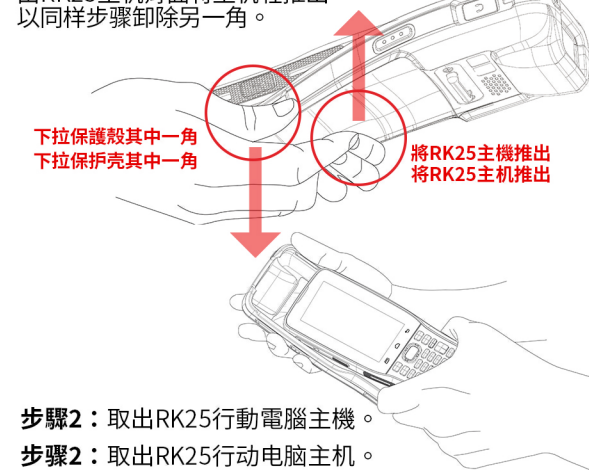

步驟2：取出RK25行動電腦主機。

步骤2：取出RK25行动电脑主机。