

RK25 4スロットバッテリーチャージャー > クイックスタートガイド

日本語

>>


日本語

RK25モバイルコンピュータの使い方については、モバイルコンピュータの操作マニュアルをご参照ください。


内容物の確認

- ☑ 4スロットバッテリーチャージャー
- ☑ 電源ケーブル
- ☑ 電源アダプター
- ☑ クイックスタートガイド

外観

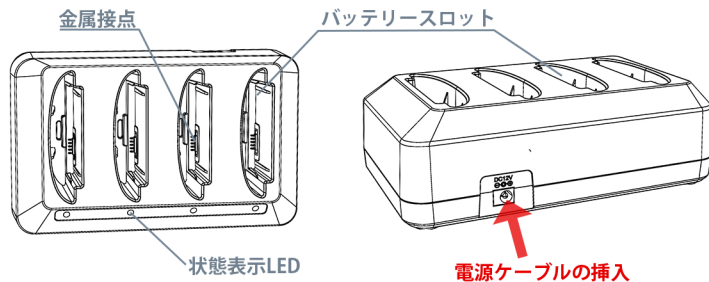

充電

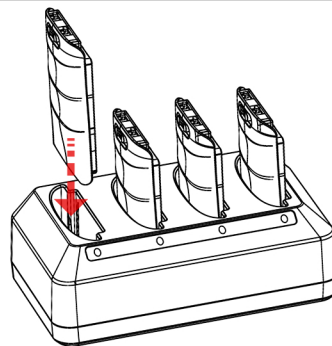

バッテリー充電：

バッテリーの接点を右向きに
バッテリースロットの形状に
合わせて、バッテリーを挿入し、
状態指示LEDが点灯します。

バッテリーの取り外し：

バッテリーを上方向に取り出し
ます。

注意：

バッテリーを正しく充電するため、バッテリーの金属接点を
バッテリースロット内の金属接点に合わせてからスロット内に入れ、
LEDが点灯することを確認してください。

電源に関する重要情報

電源アダプター	入力： AC 100-240V, 50-60 Hz 出力： DC 12V/3.3A CipherLab端末専用電源アダプター
バッテリー容量	3.8V, 4000mAh CipherLab端末専用 充電リチウムポリマーバッテリー
充電時間	約4時間

状態表示LED

緑LED点灯	バッテリーが充電されました
赤LED点灯	バッテリー充電中
赤LEDがゆっくり点滅	バッテリーの充電エラー発生
赤LED 1回点滅	電源は接続されましたが、 バッテリースロットにバッテリーが 入っていません。

RK25 4-Slot Battery Charger

Quick Start Guide

>
EN


>>
EN

Please refer to RK25 manual for details on using the RK25 mobile computer.

Open Your Box

- ✓ 4-Slot Battery Charger
- ✓ AC Power Cable
- ✓ Adapter
- ✓ Quick Start Guide


Overview

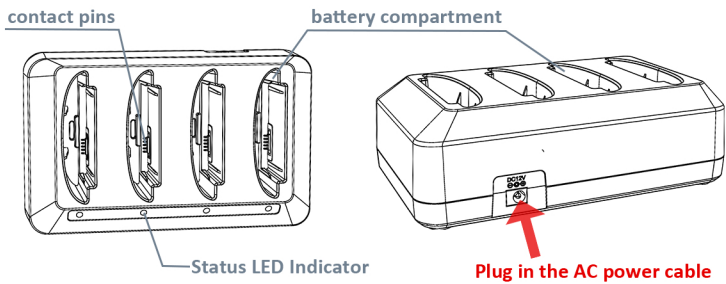

Important Charging Information

Power Supply	Input: AC 100-240V, 50-60 Hz Output: DC 12V/3.3A CipherLab approved
Battery Pack	3.8V, 4000mAh rechargeable Li-Polymer battery CipherLab proprietary
Charging Time	Approximate 4 hours

Charging

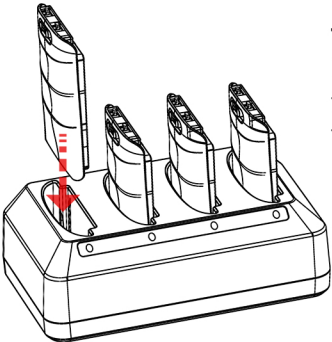

To charge battery:
Insert battery with contact pins facing right. The LED indicator on the charger will light up.

To remove battery:
Simply lift battery up to remove.

Note:
For proper battery charging, align the metal contacts on the battery with those inside the compartment and ensure the LED indicator lights up to show the charging status.

LED Indicator

Green, solid	Battery is fully charged
Red, solid	Battery is charging
Red, slow blinking	Battery charging error
Red, blink once	Adapter is plugged in but no battery in the compartment