

RK25 5スロットクレイドル クイックスタートガイド

日本語

日本語

日本語


内容物の確認

- ☑ 5スロットクレイドル（ネットワーク通信機能付き）
- ☑ 付属電源アダプター、電源ケーブル
- ☑ クイックスタートガイド

RK25 5スロットクレイドルは5台のRK25モバイルコンピュータを同時充電、またネットワーク通信機能により、装着済みの端末がインターネットへの接続は可能になります。

ネットワークケーブルを使用し複数の5スロットクレイドルを接続、全ての端末をインターネットに同時接続しデータを送受信することができます。

外観

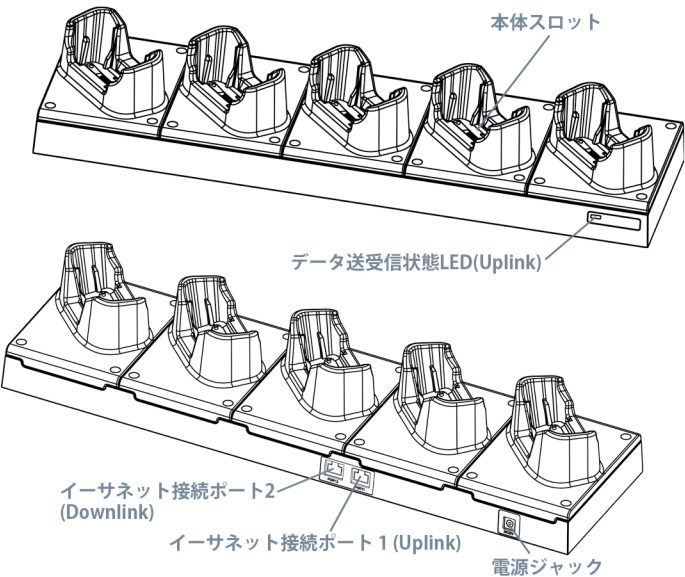


電源に関する重要情報

電源アダプター	入力： AC 100-240V, 47-63Hz 出力： DC 12V± 5%, 8-10A CipherLab専用電源アダプター
バッテリー容量	3.8V, 4000mAh , CipherLab専用リチウムポリマーバッテリー
充電時間	約4時間
充電温度	0℃ - 40℃

状態表示LED

充電LED： 端末・タッチスクリーン上方の充電指示ランプ（右側）が充電状態を表示します。

状態表示LEDの説明	
緑LED点灯	充電完了
赤LED点灯	充電中
赤LEDの点滅	充電エラー（バッテリー未装着等）
LED点灯なし	充電不能（電源ケーブルが正しく接続されていません）

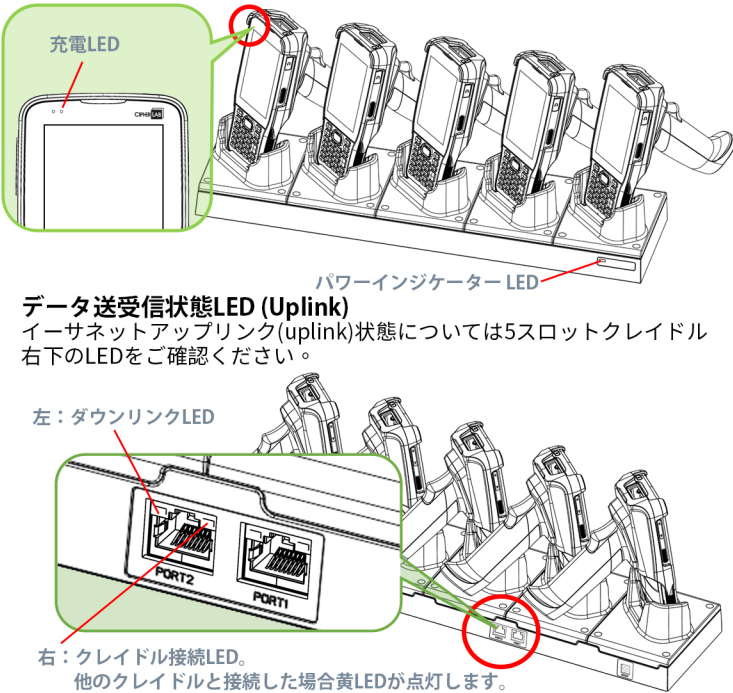


データ送受信状態LED (Downlink)： イーサネットダウンリンク(downlink)状態については後方Port2左上のLEDをご確認ください。

データ送受信LED状態説明	
緑LED点灯	1000 Base-Tイーサネットに接続しました
緑LED点滅	1000 Base-Tでデータを伝送中
オレンジLED点灯	10/100 Base-Tイーサネットに接続しました
オレンジLEDの点滅	10/100 Base-Tでデータを伝送中

注意：2台の5スロット本体クレイドルが接続している場合、2台目の本体スタンドのデータ伝送LED (Uplink)は緑LED点灯します。


充電とイーサネットへの接続

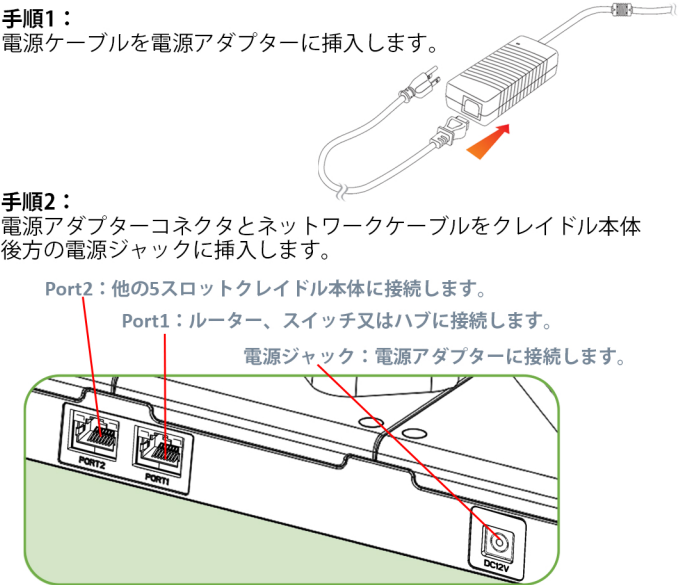

手順3： RK25モバイルコンピュータを5スロットクレイドルのスロットに装着します。

警告： 事前にRK25ガン式グリップ、ハンドストラップ又はRK25保護カバーを取り外す必要はなく、直接RK25本体を本体スロットに装着できます。 Micro USBケーブル使用される場合、必ず先にMicro USBケーブルを抜いてからRK25本体を5スロットクレイドルに装着してください。

手順4： ネットワークケーブルを通じて、複数の5スロットクレイドルを繋ぐことができます。 ネットワークケーブルを最初の5スロットクレイドルのPort2 (downlink port)から次接続するクレイドルのPort1 (uplink port)に接続することで、全てのクレイドルはイーサネットを通じてデータが伝送できるようになります。

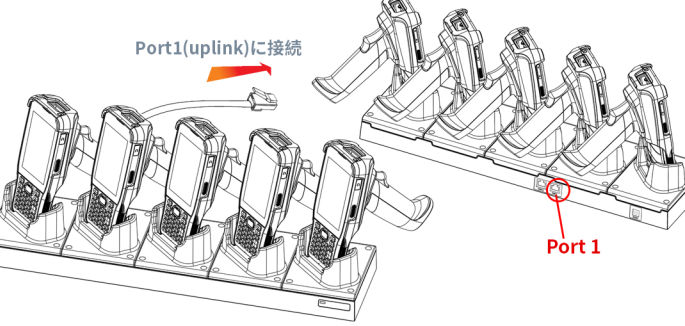


Open Your Box

- ✓ 5-Slot Terminal Cradle (with Ethernet)
- ✓ Adapter plus Power Cord
- ✓ Quick Start Guide

The 5-Slot Terminal Cradle (with Ethernet) allows simultaneous charging and Ethernet access on up to five RK25 mobile computers. Multiple 5-Slot Cradles can also be interconnected to one another for shared Ethernet communication.

Overview

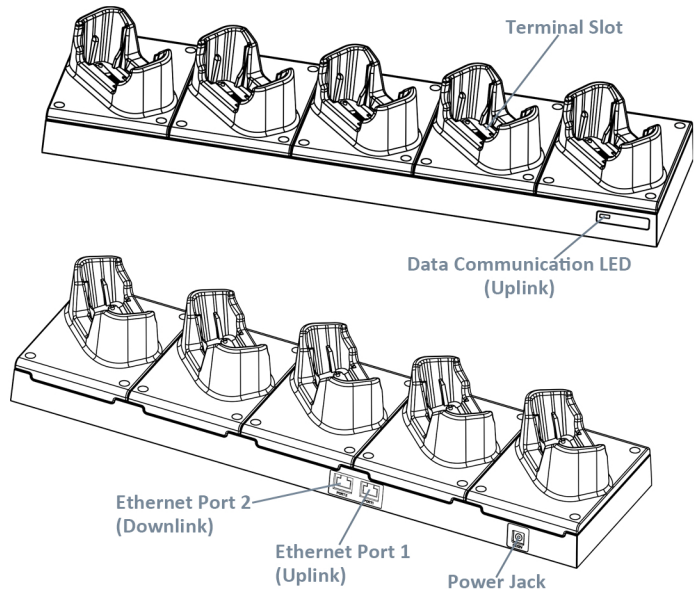


Important Charging Information

Power Supply	Input: AC 100-240V, 47-63Hz Output: DC 12V± 5%, 8-10A CipherLab approved
Battery Pack	3.8V, 4000mAh rechargeable Li-Polymerbattery CipherLab proprietary
Charging Time	Approx. 4 hours
Charging Temperature	0°C - 40°C


LED Indicators

Charging LED: The charging LED (right) located above the touch screen of the RK25 mobile computer shows the charging status.

Charging LED Status	
Green, solid	Charging complete
Red, solid	Charging the mobile computer
Red, blink	Charging error (for instance, battery not in place)
No light	Not charging. It might result from the power cable which is not correctly connected.

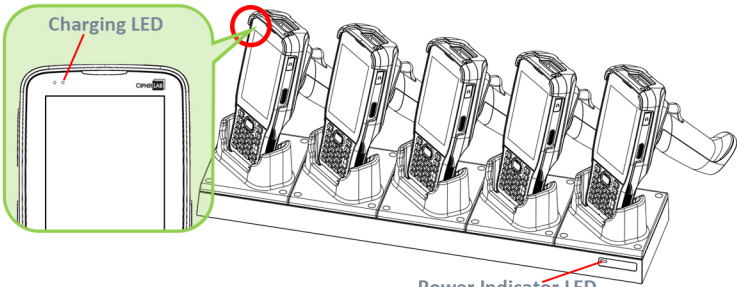

Data Communication LED (Uplink): For Ethernet uplink status, please check uplink LED on 5-Slot Terminal Cradle's lower right corner.

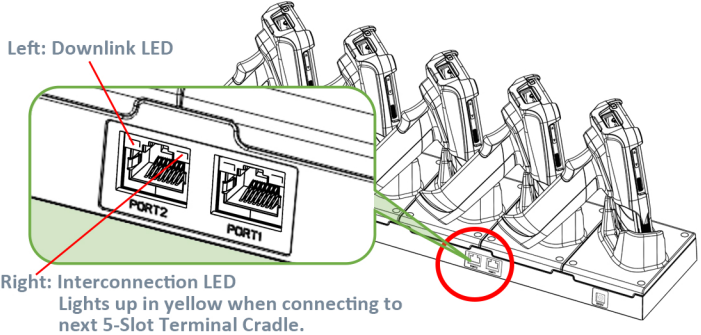


Data Communication LED (Downlink): For Ethernet downlink status, please check downlink LED on the back of 5-Slot Terminal Cradle.

Data Communication LED Status	
Green, solid	1000 Base-T Ethernet Linked
Green, blink	1000 Base-T Network activity
Orange, solid	10/100 Base-T Ethernet Linked
Orange, blink	10/100 Base-T Network activity


Note: If two 5-Slot Ethernet Cradles are connected, the second one's data communication LED (Uplink) will light up in green.

Charging & Ethernet Communication

Step 1: Connect the power cord with the adapter, and plug the power cord to an electrical outlet.

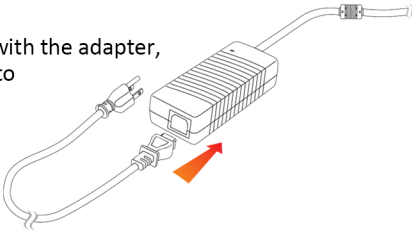

Step 2: Plug adapter plug and Ethernet cables to the back of the 5-Slot Terminal Cradle:

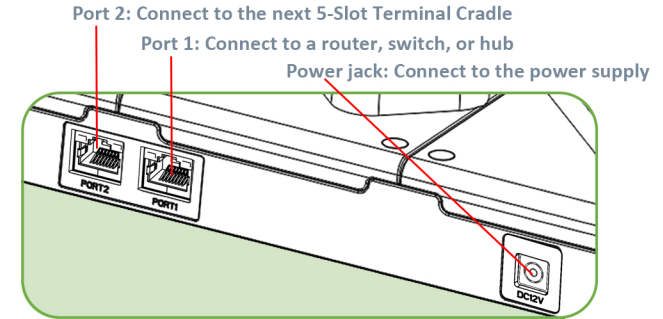

Step 3: Insert the RK25 mobile computer(s) into the charging slots of the 5-Slot Charging Cradle.

Warning: You can insert the device(s) into the terminal slot(s) without detaching the rubber boot, handstrap, or pistol in advance. However, the micro USB cable must be removed before inserting RK25 mobile onto the 5-slot terminal cradle.

Step 4: The 5-Slots Terminal Cradle allows Ethernet interconnection between multiple cradles. Connect Ethernet cable from Port 2 (downlink port) of the first cradle to Port 1 (uplink port) of the next one. Ethernet communication will be available on all mobile computers.

