


RK95 Snap-on Charging and Comm. Cable Quick Start Guide

The Snap-on Cable allows convenient charging and data transmission of the RK95 mobile computer. Please refer to the RK95 reference manual for more details on using the RK95 mobile computer.

Overview

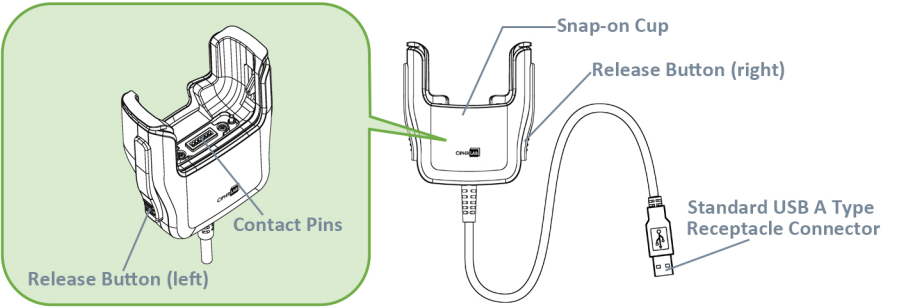


Important Charging Information

Power Supply	Input: AC 100 - 240V, 47 - 63Hz; output: 4.75V - 5.4V, 2A (Maximum) CipherLab approved
Battery Pack (optional)	3.7V, 3000mAh rechargeable Li-ion battery, CipherLab proprietary 3.7V, 6000mAh rechargeable Li-ion battery, CipherLab proprietary
Charging Time	For 3.7V, 3000mAh battery: Approx. 4 hours via adapter For 3.7V, 6000mAh battery: Approx. 6 hours via adapter

Install & Remove Internal Cup


Remove:
The internal cup must be removed if the device is equipped with the rubber boot.
1) Press the two top edges inwards.
2) Take off the internal cup.

Install:
1) Push the internal cup into the snap-on cup.
2) Push the two edges outwards to make the internal cup fasten to the snap-on cup till a “click” sound is made.

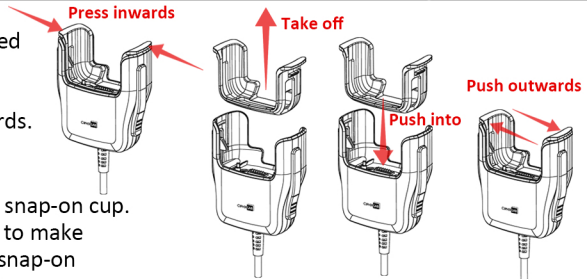

Installation & Remove

Installation:
Simply hold the snap-on cup toward the bottom of the RK95 mobile computer, and push the snap-on cup upwards to make it to be attached to the device. A “click” sound is made once the snap-on cable is connected with the bottom of the device in place.

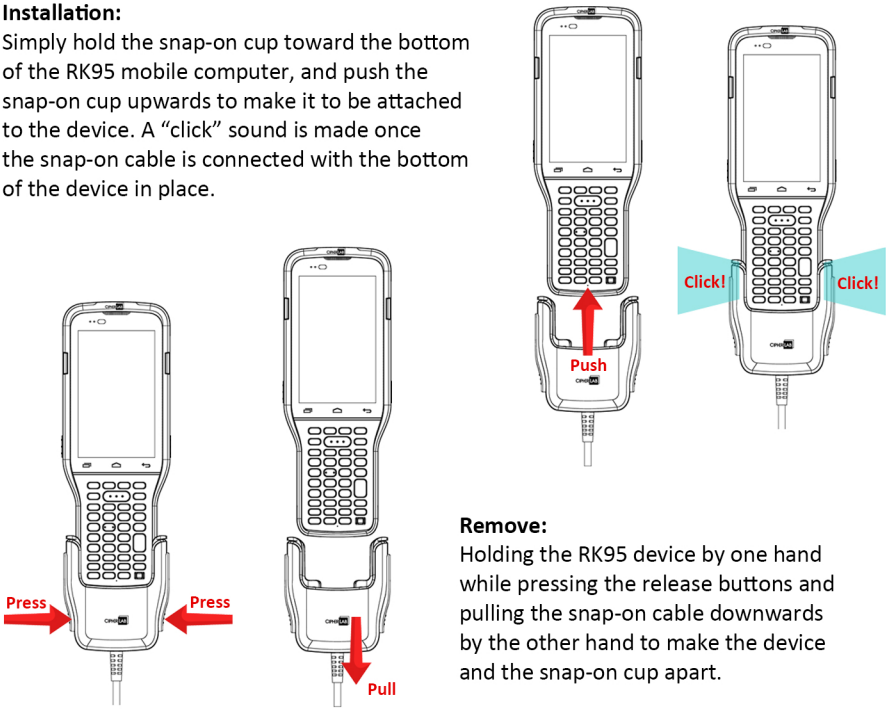

Remove:
Holding the RK95 device by one hand while pressing the release buttons and pulling the snap-on cable downwards by the other hand to make the device and the snap-on cup apart.

LED Indicator on the RK95 Mobile Computer

While the device battery is being charged via the Snap-on cable, the LED on the upper right side of the mobile computer screen will indicate the charging status:


LED Indicator	Status	Description
Charging	Red, solid	Charging the mobile computer
	Red, blink	Charging error
	Green, solid	Charging complete
	No light	The cable is not correctly connected

RK95 卡扣式傳輸充電線 快速開始指南

繁中 簡中

卡扣式充電傳輸線可用於進行RK95行動電腦的充電及資料傳輸，而關於RK95行動電腦的使用方式，請參考行動電腦的操作手冊。
卡扣式充電傳輸線可用於進行RK95行動電腦的充電及資料傳輸，而關於RK95行動電腦的使用方式，請參考行動電腦的操作手冊。

概覽／概覽

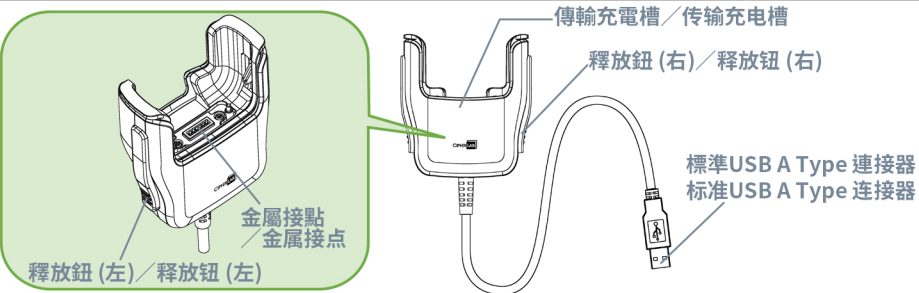

重要電源資訊／重要电源信息

電源轉換器 电源适配器	輸入／输入：AC 100 - 240V, 47 - 63Hz；輸出／输出：4.75V - 5.4V, 2A CipherLab專用電源供應器／CipherLab 专用电源适配器
電池容量（可選） 电池容量（可选）	3.7V, 3000mAh、3.7V, 6000mAh CipherLab 專用充電式鋰電池／CipherLab 专用充电式锂电池
充電時間 充电时间	3.7V, 3000mAh電池：以電源轉換器充電約4小時 3.7V, 3000mAh電池：以电源转换器充电约4小时 3.7V, 6000mAh電池：以電源轉換器充電約6小時 3.7V, 6000mAh電池：以电源转换器充电约6小时


內襯座的安裝與移除／内衬座的安装与移除

移除／移除：若主機已裝上保護殼，需先將卡扣式傳輸充電座的內襯座取出。
／若主机已装上保护壳，需先将卡扣式传输充电座的内衬座取出。

- 1) 將左右兩側邊頂端朝內壓。／将左右两侧边顶端朝内压。
- 2) 取出內襯座。／取出内衬座。

安裝內襯座／安装内衬座：

- 1) 將內襯座推入卡扣式傳輸充電座。
／將内衬座推入卡扣式传输充电座。
- 2) 外推內襯座左右兩側邊至『喀』聲響，使其與卡扣式傳輸充電座密合。
／外推内衬座左右两侧边至『喀』声响，使其与卡扣式传输充电座密合。

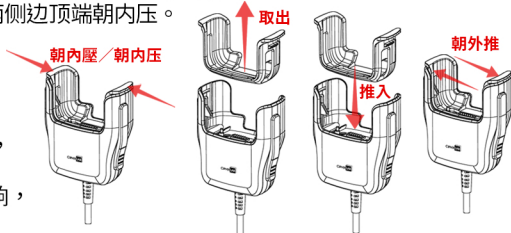

> RK95 卡扣式传输充电线 快速开始指南



>>

繁中 簡中

安裝與移除／安装与移除

安裝／安装：

將傳輸充電槽對準RK95行動電腦底部，上推傳輸充電槽，使其與RK95主機接合。當傳輸充電槽確切連接卡上 RK95行動電腦底部時，會發出『喀』聲。
／将传输充电槽对准RK95行动电脑底部，上推传输充电槽，使其与RK95主机接合。当传输充电槽确切连接卡上 RK95行动电脑底部时，会发出『喀』声。

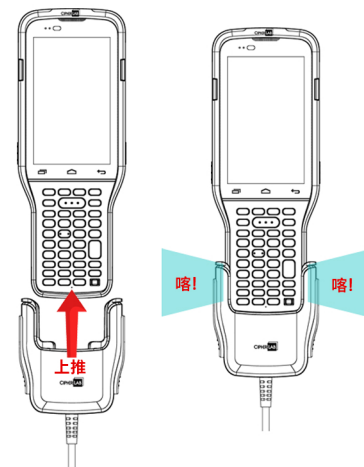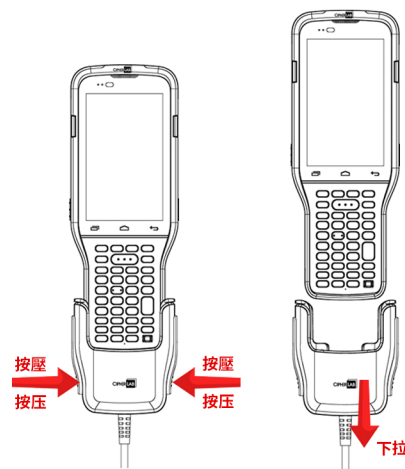

移除／移除：

以一手握住RK95主機，而另一手按壓釋放鈕的同時下拉傳輸充電槽，讓主機與傳輸充電線分開。
／以一手握住RK95主机，而另一手按压释放钮的同时下拉传输充电槽，让主机与传输充电线分开。

主機上的LED指示燈號／主机上的LED指示灯号

行動電腦主電池充電時，螢幕右上方的LED充電狀態指示燈將亮起，顯示充電狀態：
行动电脑主电池充电时，螢幕右上方的LED充电状态指示灯将亮起，显示充电状态：

LED 指示燈 LED 指示灯	狀態／状态	說明／说明
充電／充电	紅燈恆亮／红灯恒亮	行動電腦充電中／行动电脑充电中
	紅燈閃爍／红灯闪烁	充電錯誤（充電將會停止）／充电错误（充电将会停止）
	綠燈恆亮／绿色恒亮	充電完成／充电完成
	沒有燈亮／没有灯亮	無法充電（充電線端未正確連接主機或插座） 无法充电（充电线端未正确连接主机或插座）