

RS50 Charging & Comm. Cradle  
Quick Start Guide



EN


EN

Basics

- Open Your Box**
- ✓ RS50 Charging & Communication Cradle
  - ✓ Micro USB Cable
  - ✓ Adapter plus power cord
  - ✓ Quick Start Guide

The RS50 Charging & Communication Cradle allows charging and data transmission of the RS50 Mobile Computer. Aside from a main charging station, the Cradle is equipped with a spare battery chamber, which helps maintain a charged spare battery for your convenient use.


Overview

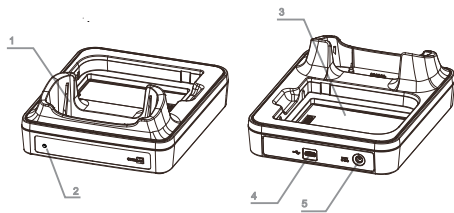

- 1. Main Charging Station (for RS50 Mobile Computer)
- 2. Spare Battery Charging Station Status LED
- 3. Spare Battery Charging Station
- 4. Micro USB Receptacle
- 5. Power Jack


| Important Charging Information |                                                                                             |
|--------------------------------|---------------------------------------------------------------------------------------------|
| Power Supply                   | Input: AC 100-240V, 50-60Hz; output: 5V/4A<br>CipherLab approved                            |
| Battery Pack (optional)        | 3.8V, 4000mAh/3.75V, 5300mAh (Standard/Extended) rechargeable Li-ion, CipherLab proprietary |
| Charging Time                  | Approx. 5 hours/6 hours (Standard/Extended battery)                                         |

LED Indicators

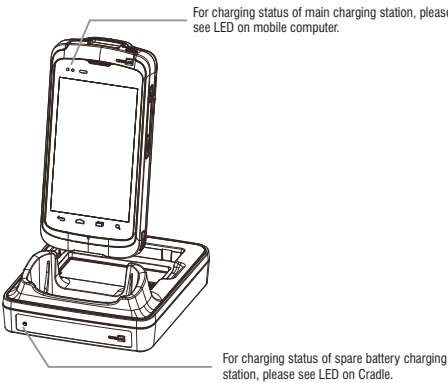

| LED Indicator   |                                      |
|-----------------|--------------------------------------|
| Green, solid    | Battery is fully charged             |
| Red, solid      | Battery is charging                  |
| Red, blinking   | Battery charging error               |
| Red, blink once | Adapter is plugged in but no battery |

Charging and Communication

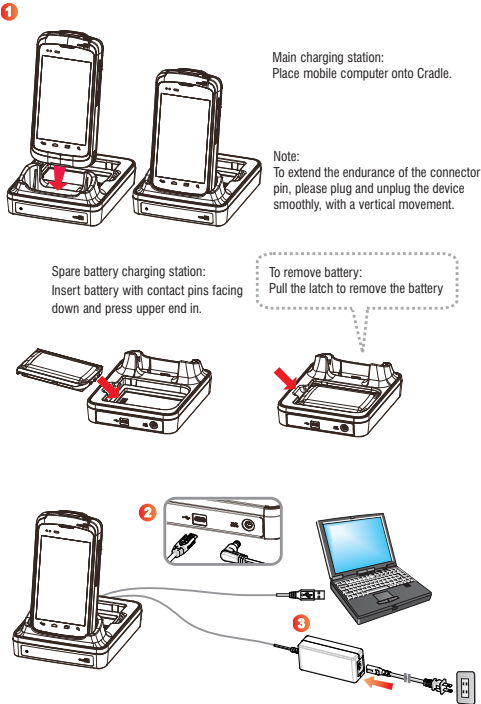

- Step 1: Place RS50 Mobile Computer in the main charging station. Insert battery in the spare battery charging station.
- Step 2: Plug in USB connector for data transmission and/or adapter plug for charging. (To charge both RS50 Mobile Computer and the spare battery at the same time, be sure to have the adapter plugged in.)
- Step 3: For data transmission, connect USB cable to PC. For charging, connect power cord to adapter and plug power cord to electrical outlet. LED on Cradle or Mobile Computer will light up in green or red depending on the battery level at the moment.

RS50 行動電腦傳輸充電座

快速開始指南



RS50 移动数据终端传输充电座

快速开始指南



繁體中文

繁體中文


基本操作

檢視包裝內容物 / 检视包装内容物

- ✓ RS50 傳輸充電座 / RS50 移动数据终端传输充电座
- ✓ Micro USB 傳輸線 / Micro USB 传输线
- ✓ 電源轉換器附電源線 / 电源转换器附电源线
- ✓ 快速開始指南 / 快速开始指南

RS50 行動電腦傳輸充電座可用於進行 RS50 行動電腦的資料傳輸與充電。  
本裝置除主機傳輸充電槽外，另設有備用電池充電槽，方便隨時備有電量充足的備用電池。  
RS50 移动数据终端传输充电座可用于进行 RS50 移动数据终端的数据传输与充电。  
本装置除主机传输充电槽外，另设有备用电池充电槽，方便随时备有电量充足的备用电池。


概觀

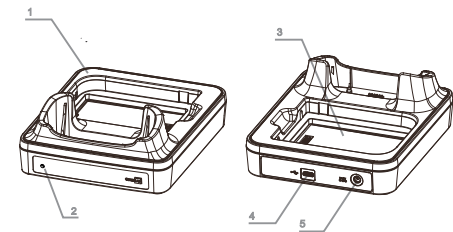

1. 主機傳輸充電槽 (連接 RS50 行動電腦)  
主机传输充电槽 (连接 RS50 移动数据终端)
2. 傳輸充電座充電指示燈  
传输充电座充电指示灯
3. 備用電池充電槽 / 备用电池充电槽
4. Micro USB 連接埠 / Micro USB 端口
5. 電源接孔 / 电源接孔

| 重要電源資訊 / 重要电源信息      |                                                                                                                                  |
|----------------------|----------------------------------------------------------------------------------------------------------------------------------|
| 電源轉換器<br>电源转换器       | 輸入：AC 100-240V, 50-60Hz；輸出：5V/4A<br>CipherLab 專用電源供應器<br>输入：AC 100-240V, 50-60Hz；输出：5V/4A<br>CipherLab 专用电源供应器                   |
| 電池容量(可選)<br>电池容量(可选) | 3.8V, 4000mAh/3.75V, 5300mAh (標準容量/加大容量)<br>CipherLab 專用充電式鋰電池<br>3.8V, 4000mAh/3.75V, 5300mAh (标准容量/加大容量)<br>CipherLab 专用充电式锂电池 |
| 充電時間<br>充电时间         | 標準電池約 5 小時，加大電池約 6 小時<br>标准电池约 5 小时，大容量电池约 6 小时                                                                                  |

LED 充電指示燈

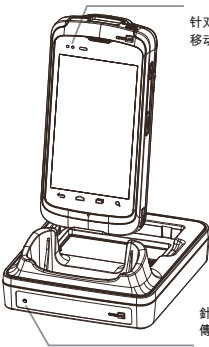


針對主機傳輸充電槽的充電狀態，請查看行動電腦上的 LED 充電指示燈。  
针对主机传输充电槽的充电状态，请查看移动数据终端的 LED 充电指示灯。

針對備用電池充電槽的充電狀態，請查看傳輸充電座上的 LED 充電指示燈。  
针对备用电池充电槽的充电状态，请查看传输充电座上的 LED 充电指示灯。

| LED 充電指示燈 / LED 充电指示灯 |                            |
|-----------------------|----------------------------|
| 綠燈恆亮<br>绿灯恒亮          | 充電完成<br>充电完成               |
| 紅燈恆亮<br>红灯恒亮          | 電池充電中<br>电池充电中             |
| 紅燈閃爍<br>红灯闪烁          | 電池充電錯誤<br>电池充电错误           |
| 紅燈閃爍 1 次<br>红灯闪烁 1 次  | 已連接電源但未裝入電池<br>已连接电源但未装入电池 |

充電及資料傳輸

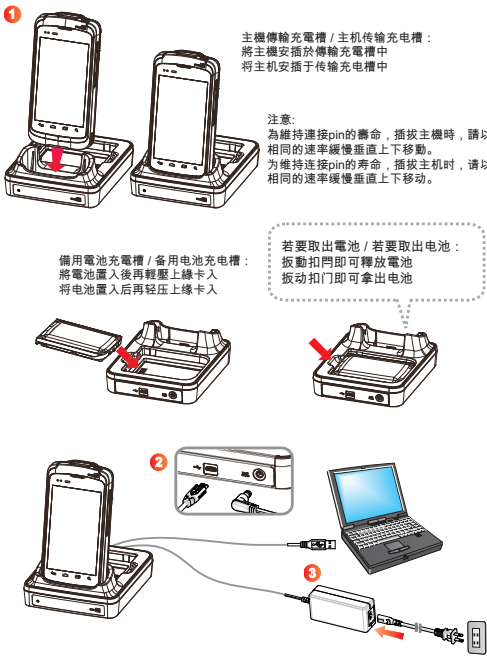

1. 主機傳輸充電槽 / 主机传输充电槽：  
將主機安插於傳輸充電槽中  
将主机安插于传输充电槽中  
注意：  
為維持連接pin的壽命，插拔主機時，請以相同的速率緩慢垂直上下移動。  
为维持连接pin的寿命，插拔主机时，请以相同的速率缓慢垂直上下移动。

備用電池充電槽 / 备用电池充电槽：  
將電池置入後再輕壓上緣卡入  
将电池置入后再轻压上缘卡入  
若要取出電池 / 若要取出电池：  
扳動扣門即可釋放電池  
扳动扣门即可拿出电池

2. 插上 USB 傳輸線(資料傳輸)及/或電源轉換器接頭(充電)。  
欲同時為行動電腦及備用電池充電，請務必插上電源轉換器接頭。  
插上 USB 传输线(数据传输)及/或电源转换器接头(充电)。  
欲同时为行动电脑及备用电池充电，请务必插上电源转换器接头。

Step 3：如需進行資料傳輸，將 USB 傳輸線連接至 PC；如需充電，以電源線連接電源轉換器和插座。傳輸充電座或行動電腦上的 LED 指示燈將依據當下的電池電量，亮起綠燈或紅燈。  
如需进行数据传输，将 USB 传输线连接至 PC；如需充电，以电源线连接电源转换器和插座。传输充电座或移动数据终端上的 LED 指示灯将依据当下的电池电量，亮起绿灯或红灯。