


Open Your Box

- 4-Slot Charging & 4-Slot Battery Cradle
 - Adapter plus Power Cord
 - DC Power Splitter Y Cable
 - Quick Start Guide
- The RS50/RS51 4-Slot Charging & 4-Slot Battery Cradle allows simultaneous charging up to four RS50 or RS51 mobile computers and four batteries.

Overview

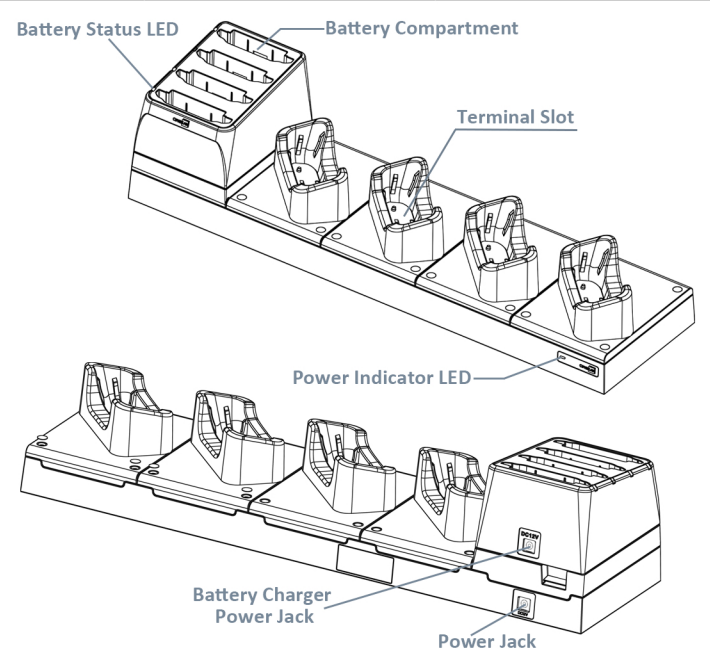


Important Charging Information

Power Supply	Input: AC 100-240V, 47-63Hz Output: DC 12V± 5%, 8-10A CipherLab approved
Battery Pack (optional)	3.8V, 4000mAh / 3.75V, 5300mAh rechargeable Li-ion, CipherLab proprietary
Charging Time	Approx. 5 hours (4000mAh) / 6 hours (5300mAh)
Charging Temperature	0°C - 45°C

LED Indicators

Charging LED: The charging LED (left) on the RS50/RS51 mobile computer shows the charging status of the main battery on the device.


Charging LED Status	
Green, solid	Charging complete
Red, solid	Charging the mobile computer
Red, blinking	Charging error (for instance, battery not in place)

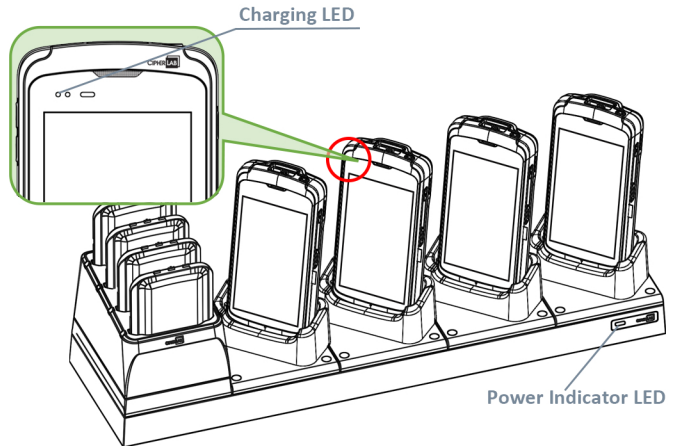

Power Indicator LED:
The Power Indicator LED lights up in green when the unit is powered.

LED Indicators on 4-Slot Battery Charger


The status LED on the 4-slot battery charger shows the battery charging status:

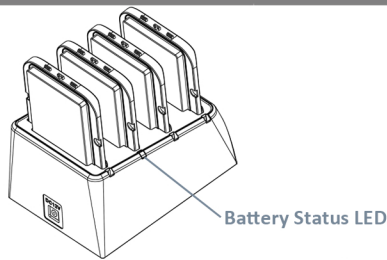


Battery Charging LED Status	
Green, solid	Charging complete
Red, solid	Charging the battery
Red, blinking	Charging error (e.g. the charging temperature is out of the valid range)

Charging


Step 1: Connect the DC Power Splitter Y Cable with the adapter, and then connect the power cord with the adapter. Finally plug the power cord to an electrical outlet.

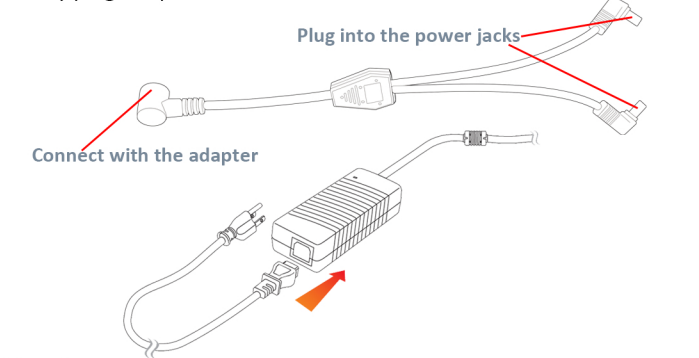

Step 2:
Plug the DC Power Splitter Y Cable to the back of the 4-Slot Terminal & 4-Slot Battery Cradle:

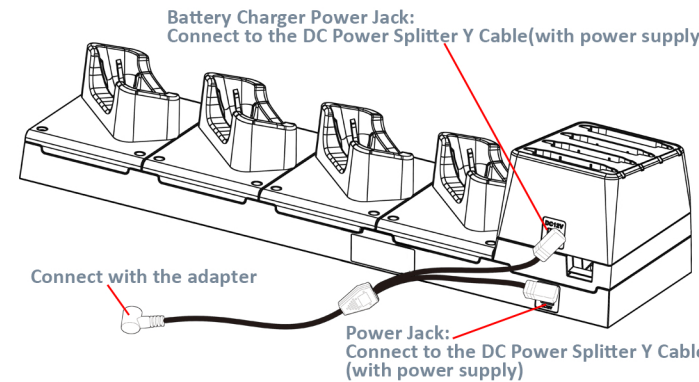

Step 3:
Insert RS50/RS51 mobile computers and batteries into the charging slots and the battery compartment of the 4-Slot Terminal & 4-Slot Battery Cradle.

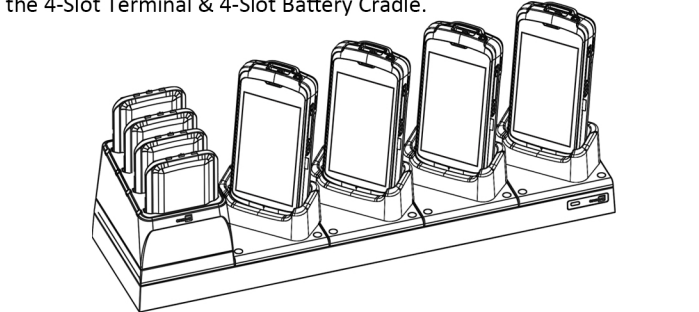

RS50/RS51
四槽充電座含四槽電池充電座
快速使用指南


繁體中文 簡體中文

檢視包裝內容物／检视包装内容物

- 四槽充電座含四槽電池充電座／四槽充电座含四槽电池充电座
- 電源轉換器，附電源線／电源转换器，附电源线
- DC電源線一分為二擴充線／DC电源线一分為二扩充线
- 快速使用指南／快速使用指南

RS50/RS51 四槽充電座含四槽電池充電座可同時為四支RS50/RS51 行動電腦以及四顆電池進行充電。
RS50/RS51 四槽充电座含四槽电池充电座可同时为四支RS50/RS51 行动电脑以及四颗电池进行充电。

概覽／概览

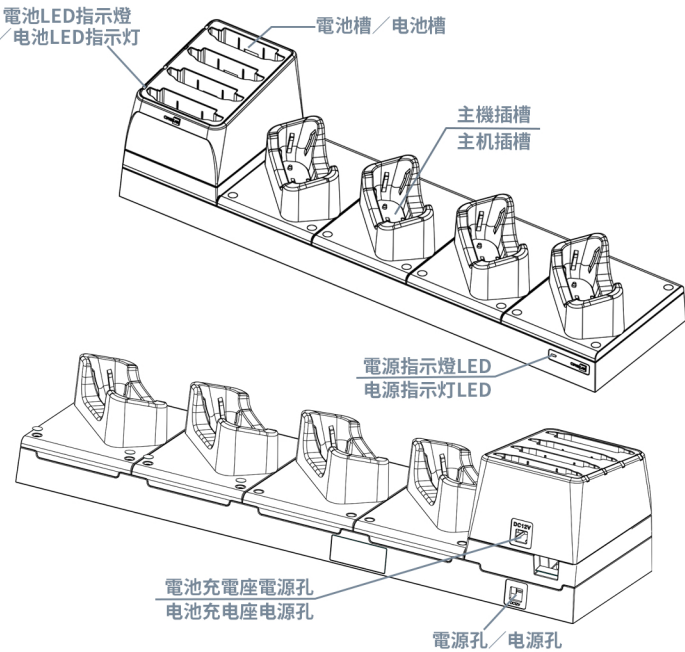

重要電源資訊／重要电源信息

電源轉換器 电源转换器	輸入／输入：AC 100-240V, 47-63Hz 輸出／输出：DC 12V± 5%, 8-10A CipherLab 專用電源供應器／专用电源供应器
電池容量（可選） 电池容量（可选）	3.8V, 4000mAh / 3.75V, 5300mAh CipherLab 專用充電式鋰電池 CipherLab 专用充电式锂电池
充電時間／充电时间	4000mAh 約 5 小時 / 4000mAh 约 5 小时 5300mAh 約 6 小時 / 5300mAh 约 6 小时
充電溫度／充电温度	0°C - 45°C


RS50/RS51
四槽传输座含四槽电池充电座
快速使用指南

繁體中文 簡體中文

LED 指示燈／LED 指示灯

充電LED／充电LED: 行動電腦上的充電指示燈(左側)顯示充電資訊。
行动电脑上的充电指示灯(左侧)显示充电信息。

充電LED指示燈狀態說明／充电LED指示灯状态说明	
綠燈恆亮／绿灯恒亮	充電完成／充电完成
紅燈恆亮／红灯恒亮	行動電腦充電中／行动电脑充电中
紅燈閃爍／红灯闪烁	充電錯誤／充电错误（如：電池未裝好／如：电池未装好）

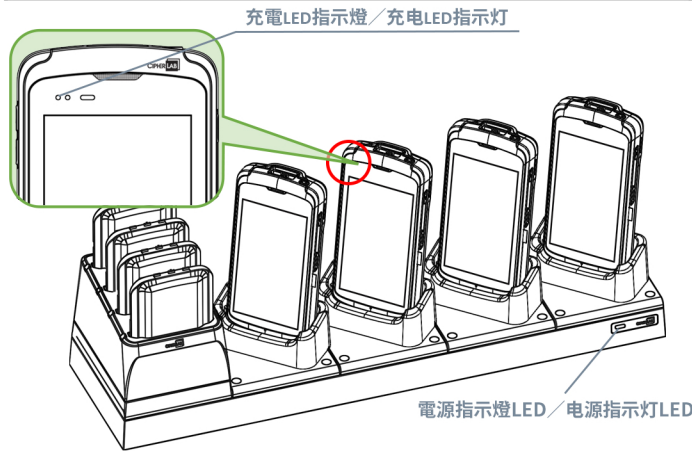


電源指示燈LED：接上電源時綠燈亮起。
电源指示灯LED：接上电源时绿灯亮起。

電池充電座LED 指示燈／电池充电座LED 指示灯

四槽電池充電座上的充電指示燈
顯示電池充電資訊。


四槽电池充电座上的充电指示灯
显示电池充电信息。

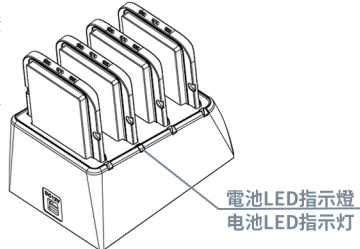


LED指示燈狀態說明／LED指示灯状态说明	
綠燈恆亮／绿灯恒亮	充電完成／充电完成
紅燈恆亮／红灯恒亮	電池充電中／电池充电中
紅燈閃爍／红灯闪烁	充電錯誤／充电错误 （如：超出可充電的溫度範圍 ／如：超出可充电的温度范围）

充電／充电

步驟1：將DC電源線一分為二擴充線接上電源轉換器。再將電源線一端連接到電源轉換器，另一端連接到插座。
步骤1：将DC电源线一分為二扩充线接上电源转换器。再将电源线一端连接到电源转换器，另一端连接到插座。

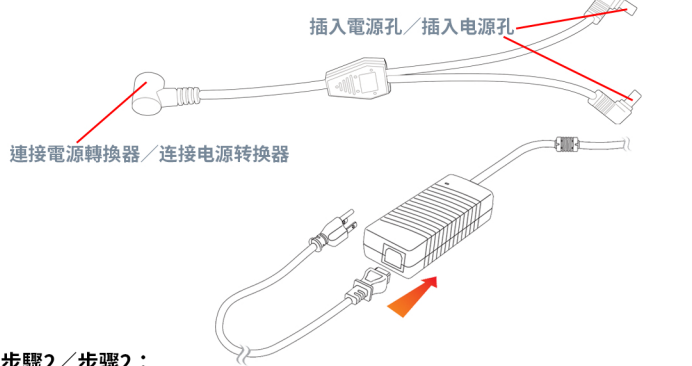

步驟2／步骤2：
將DC電源線一分為二擴充線連接到四槽充電座含四槽電池充電座後方的插孔。
将DC电源线一分為二扩充线连接到四槽充电座含四槽电池充电座后方的插孔。

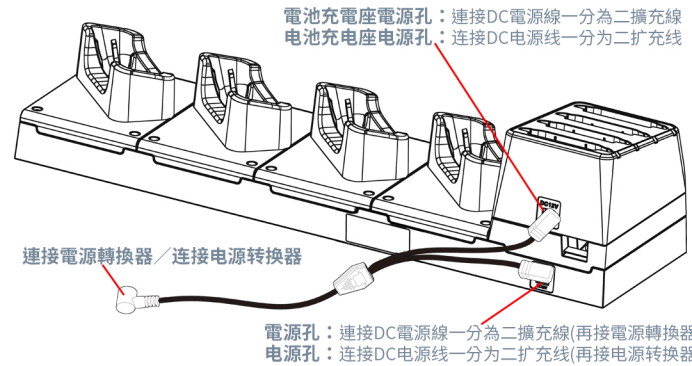

步驟3／步骤3：
將RS50／RS51主機與電池放入四槽充電座含四槽電池充電座的插槽中。
将RS50／RS51主机与电池放入四槽充电座含四槽电池充电座的插槽中。

