


Open Your Box

- ✓ 5-Slot Terminal Cradle (with Ethernet)
- ✓ Adapter plus Power Cord
- ✓ Quick Start Guide

The 5-Slot Terminal Cradle (with Ethernet) allows simultaneous charging and Ethernet access on up to five RK25 mobile computers. Multiple 5-Slot Cradles can also be interconnected to one another for shared Ethernet communication.

Overview

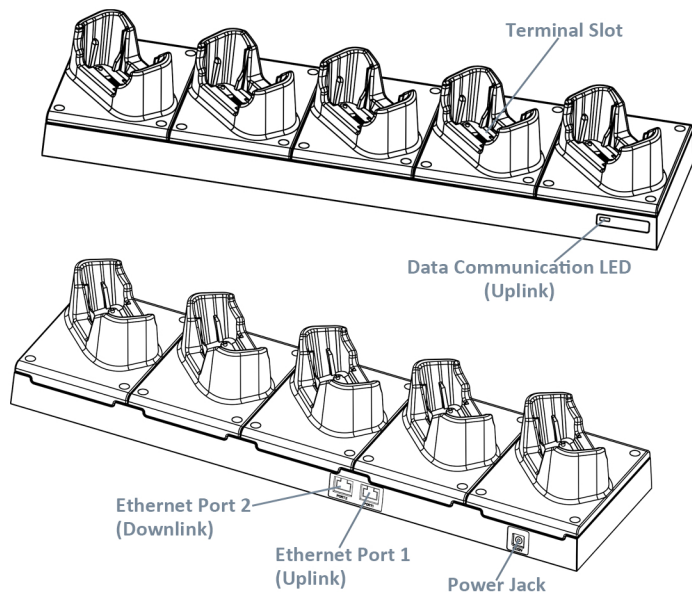


Important Charging Information

Power Supply	Input: AC 100-240V, 47-63Hz Output: DC 12V± 5%, 8-10A CipherLab approved
Battery Pack	3.8V, 4000mAh rechargeable Li-Polymerbattery CipherLab proprietary
Charging Time	Approx. 4 hours
Charging Temperature	0°C - 40°C


LED Indicators

Charging LED: The charging LED (right) located above the touch screen of the RK25 mobile computer shows the charging status.

Charging LED Status	
Green, solid	Charging complete
Red, solid	Charging the mobile computer
Red, blink	Charging error (for instance, battery not in place)
No light	Not charging. It might result from the power cable which is not correctly connected.

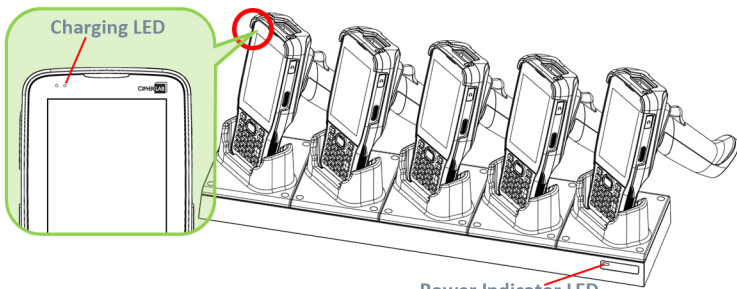

Data Communication LED (Uplink): For Ethernet uplink status, please check uplink LED on 5-Slot Terminal Cradle's lower right corner.

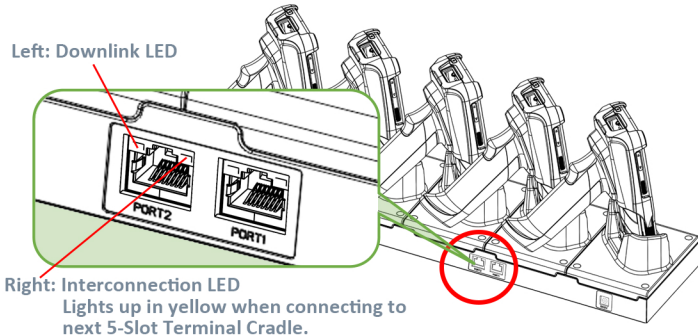

Data Communication LED (Downlink): For Ethernet downlink status, please check downlink LED on the back of 5-Slot Terminal Cradle.


Data Communication LED Status	
Green, solid	1000 Base-T Ethernet Linked
Green, blink	1000 Base-T Network activity
Orange, solid	10/100 Base-T Ethernet Linked
Orange, blink	10/100 Base-T Network activity

Note: If two 5-Slot Ethernet Cradles are connected, the second one's data communication LED (Uplink) will light up in green.

Charging & Ethernet Communication


Step 1:

Connect the power cord with the adapter, and plug the power cord to an electrical outlet.

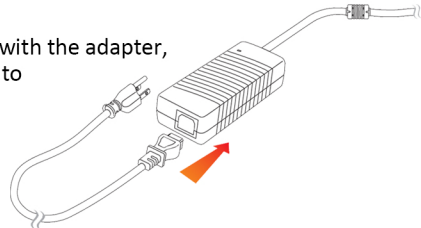

Step 2:

Plug adapter plug and Ethernet cables to the back of the 5-Slot Terminal Cradle:

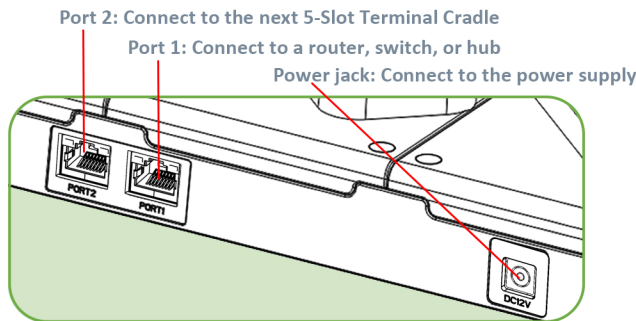


Step 3:

Insert the RK25 mobile computer(s) into the charging slots of the 5-Slot Charging Cradle.

Warning:
You can insert the device(s) into the terminal slot(s) without detaching the rubber boot, handstrap, or pistol in advance. However, the micro USB cable must be removed before inserting RK25 mobile onto the 5-slot terminal cradle.

Step 4:

The 5-Slots Terminal Cradle allows Ethernet interconnection between multiple cradles. Connect Ethernet cable from Port 2 (downlink port) of the first cradle to Port 1 (uplink port) of the next one. Ethernet communication will be available on all mobile computers.

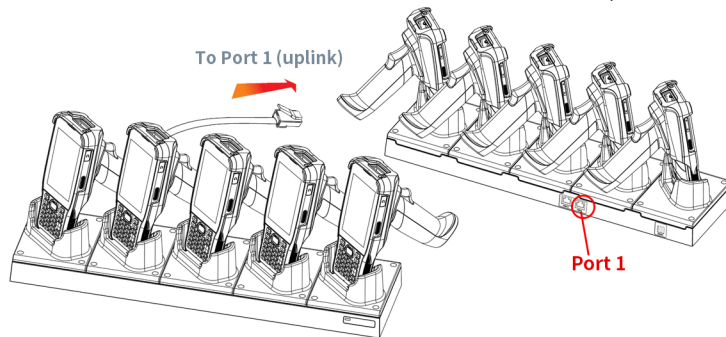

RK25五槽主機座 快速使用指南

繁體中文 簡體中文


檢視包裝內容物／检视包装内容物

- ☑ 五槽主機座（具備乙太網路功能）／五槽主机座（具备以太网路功能）
- ☑ 電源轉換器，附電源線／电源转换器，附电源线
- ☑ 快速使用指南／快速使用指南

RK25 五槽主機座可同時為五支RK25 行動電腦進行充電，亦可連接至乙太網路供行動電腦上網。使用網路線串聯多個五槽主機座，即可讓所有行動電腦同時透過乙太網路傳輸資料。

RK25 五槽主机座可同时为五支RK25 行动电脑进行充电，亦可连接至以太网路供行动电脑上网。使用网络线串联多个五槽主机座，即可让所有行动电脑同时透过乙太网络传输数据。

概覽／概览

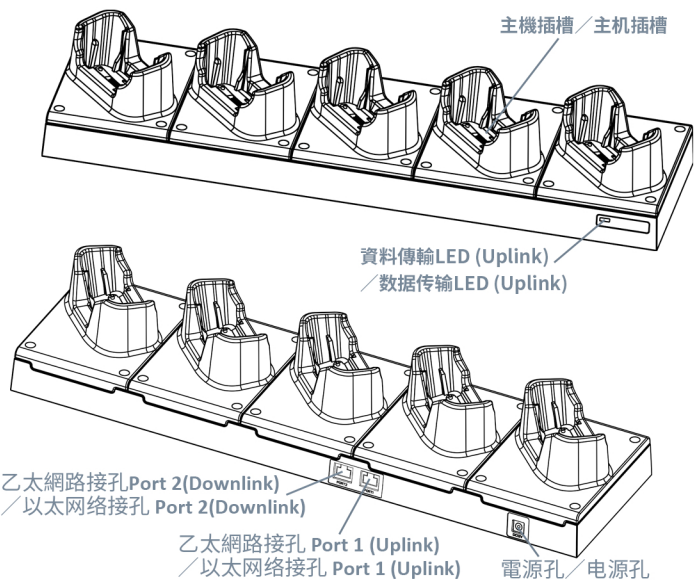

重要電源資訊／重要电源信息

電源轉換器 电源转换器	輸入／输入：AC 100-240V, 47-63Hz 輸出／输出：DC 12V± 5%, 8-10A CipherLab 專用電源供應器 CipherLab 专用电源供应器
電池容量 电池容量	3.8V, 4000mAh, CipherLab 專用鋰聚合物電池 3.8V, 4000mAh, CipherLab 专用锂聚合物电池
充電時間／充电时间	約 4 小時／约 4 小时
充電溫度／充电温度	0°C - 40°C


RK25 五槽主机座 快速使用指南

繁體中文 簡體中文

LED 指示燈／LED 指示灯

充電LED：行動電腦觸控螢幕上方的充電指示燈(右側)顯示充電資訊。
充电LED：行动电脑触控屏上方的充电指示灯(右侧)显示充电信息。

充電LED指示燈狀態說明／充电LED指示灯状态说明	
綠燈恆亮／绿灯恒亮	充電完成／充电完成
紅燈恆亮／红灯恒亮	行動電腦充電中／行动电脑充电中
紅燈閃爍／红灯闪烁	充電錯誤／充电错误 (如：電池未裝好／如：电池未装好)
沒有燈亮／没有灯亮	無法充電(充電線端未正確連接本機或插座) 无法充电(充电线端未正确连接本机或插座)

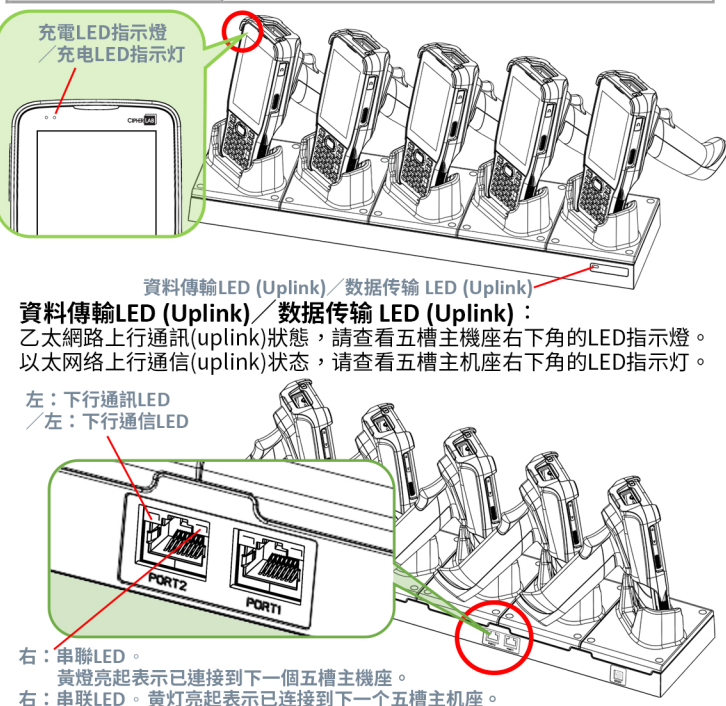

資料傳輸LED (Downlink)／数据传输 LED (Downlink)：
乙太網路下行通訊(downlink)狀態，請查看後方Port 2左上角LED指示燈。
以太网路下行通信(downlink)状态，请查看后方Port 2左上角LED指示灯。


資料傳輸LED 狀態說明／数据传输LED 状态说明	
綠燈恆亮／绿灯恒亮	已連接到1000 Base-T乙太網路 已连接到1000 Base-T以太网路
綠燈閃爍／绿灯闪烁	以1000 Base-T速度傳送資料中 以1000 Base-T速度传送数据中
橘燈恆亮／橘灯恒亮	已連接到10/100 Base-T 乙太網路 已连接到10/100 Base-T 以太网路
橘燈閃爍／橘灯闪烁	以10/100 Base-T速度傳送資料中 以10/100 Base-T速度传送数据中

注意：當2個五槽主機座連接時，第二個主機座的資料傳輸LED (Uplink) 會呈綠燈。
注意：当2个五槽主机座连接时，第二个主机座的资料传输LED (Uplink) 会呈绿灯。

充電與連接乙太網路／充电与连接以太网网络

步驟1：
將電源線一端連接到電源轉換器，另一端連接到插座。
步骤1：
将电源线一端连接到电源转换器，另一端连接到插座。

步驟2：將電源轉換器接頭與網路線連接到五槽主機座後方的插孔。
步骤2：将电源转换器接头与网络线连接到五槽主机座后方的插孔。

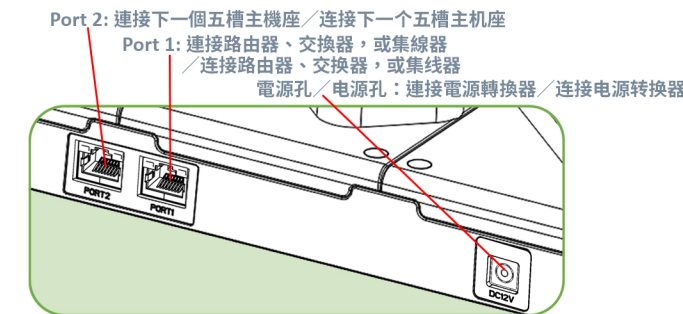

步驟3：將RK25行動電腦放入五槽主機座的插槽中。
步骤3：将RK25行动电脑放入五槽主机座的插槽中。
警告：您無須事先拆卸RK25槍式握把、手背帶或RK25保護殼，即可直接將RK25主機放入主機插槽中。
但請務必先移除Micro USB線，再將RK25主機放入五槽主機座中。
警告：您无须事先拆卸RK25枪式握把、手背带或RK25保护壳，即可直接将RK25主机放入主机插槽中。
但请务必先移除Micro USB线，再将RK25主机放入五槽主机座中。

步驟4：
透過網路線，可將多個五槽主機座串聯在一起。將網路線從第一部五槽主機座的Port 2 (downlink port) 連接到下一部五槽主機座的Port 1 (uplink port)，所有行動電腦即可透過乙太網路傳送資料。
步骤4：
透过网络线，可将多个五槽主机座串联在一起。将网络线从第一部五槽主机座的Port 2 (downlink port) 连接到下一部五槽主机座的Port 1 (uplink port)，所有行动电脑即可透过以太网路传送数据。

