

EN

EN


EN

Illustration of Screw Hole Size

- Package Content:
- ✓ Locking Mount Bracket * 1
 - ✓ Philips Tapping Screws (Diameter=5mm; Length=19mm) * 4
 - ✓ Plastic Anchors (Inner Diameter=3.2mm; Length=22mm) * 4

Instructions


1. Place this illustration on a proper position like wall or desk and fix it.
2. Drill the holes according to the marks (5mm in diameter, 25mm deep).

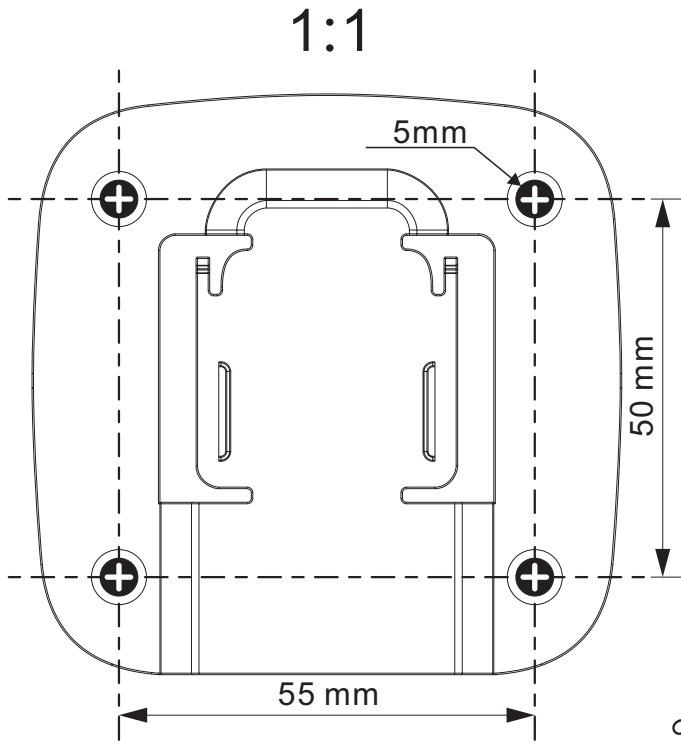


Desktop Installation

For desktop position, follow the steps listed below:

1. Consider to leave enough space for cable deployment around the scanner in advance. Place the locking mount bracket to the target position on the desk, drill four holes respectively through the bracket holes.
2. Secure the bracket with the included tapping screws.

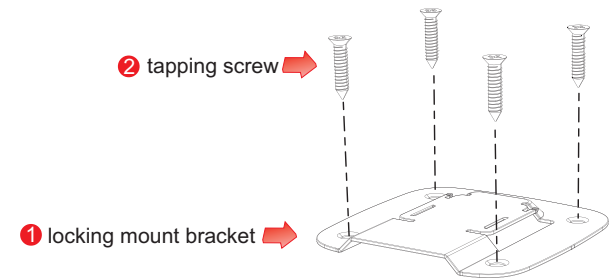


After fixing the bracket, slide the bottom of the scanner forward along the bracket rails until the end.

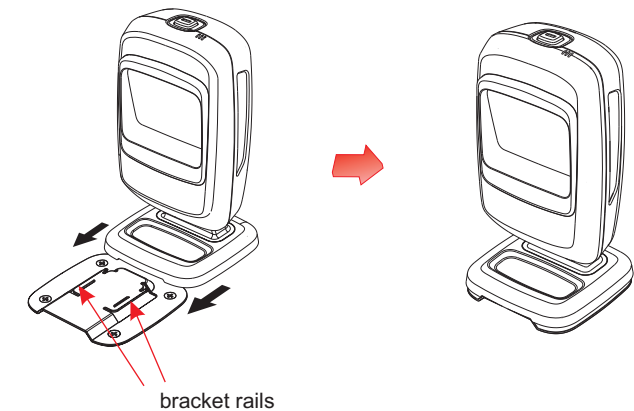


Wall-mount Installation

For wall mount position, follow the steps listed below:

1. After you fix the illustration to the target position, respectively drill four holes on the wall.
2. Push the screw anchors to their full depth into the holes.
3. Place the locking mount bracket by aligning the bracket holes with anchor holes.
4. Insert the screws through the bracket, and screw them into the anchors.

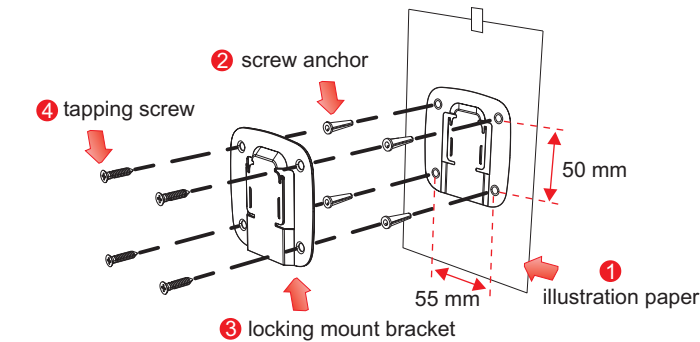

After fixing the bracket, slide the bottom of the scanner facing down along the bracket rails until the end.

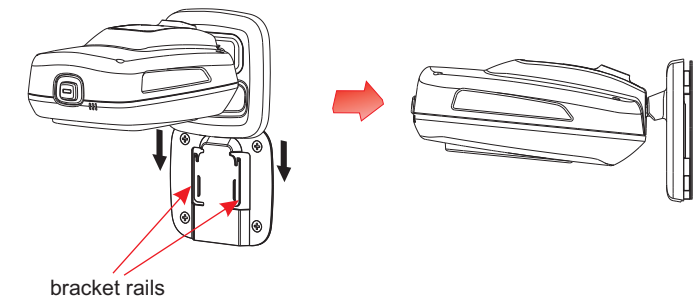

2200固定托架配件 快速開始指南

>

>>


繁中 簡中

繁中 簡中


繁中 簡中

桌面安裝

- 請依照下面步驟進行桌面安裝：
1. 安裝前請預留連接線的佈線空間。將固定托架固定於桌面目標位置，依托架上的螺絲孔位於桌面鑽4個孔。
 2. 鑽孔後，以4顆螺絲將固定底座鎖於桌面上。
- 请依照下面步骤进行桌面安装：
1. 安装前请预留连接线的布线空间。将固定托架固定于桌面目标位置，依托架上的螺丝孔位于桌面钻4个孔。
 2. 钻孔后，以4颗螺丝将固定底座锁于桌面上。

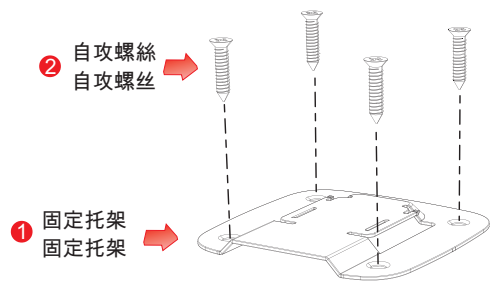


鎖好固定托架後，將掃描器直立，以底部溝槽沿著固定座的滑軌往前推到底。
锁好固定托架后，将扫描仪直立，以底部沟槽沿着固定座的滑轨往前推到底。

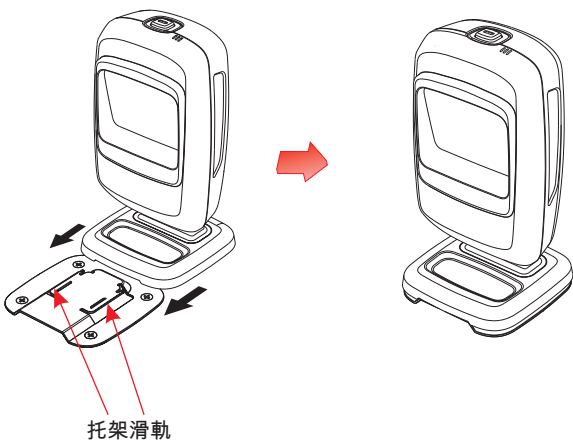


壁掛安裝

- 請依照下面步驟進行壁掛安裝：
1. 將托架孔位尺寸圖固定於牆面目標位置，依圖紙上標示的螺絲孔位進行鑽孔。
 2. 將4個塑膠螺絲錨完全插入所鑽螺絲孔位。
 3. 將固定托架的4個孔與牆面上4個塑膠螺絲錨孔對準。
 4. 對準後，以4顆螺絲將固定托架鎖於牆面上。
- 请依照下面步骤进行壁挂安装：
1. 将托架孔位尺寸图固定于墙面目标位置，依图纸上标示的螺丝孔位进行钻孔。
 2. 将4个塑料螺丝锚完全插入所钻螺丝孔位。
 3. 将固定托架的4个孔与墙面上4个塑料螺丝锚孔对准。
 4. 对准后，以4颗螺丝将固定托架锁于墙面上。

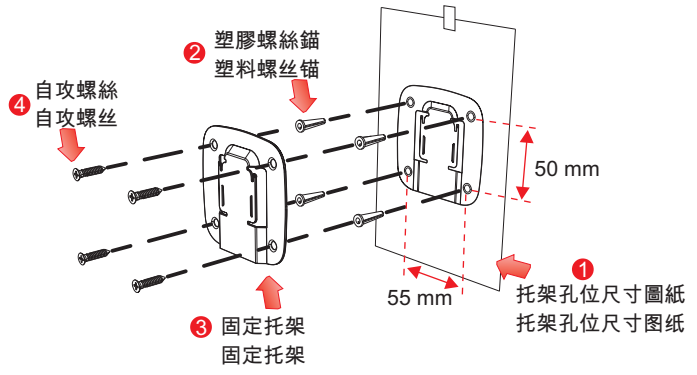

鎖好固定托架後，將掃描器正面朝下，以底部溝槽沿著托架的滑軌往下推到底。
锁好固定托架后，将扫描仪正面朝下，以底部沟槽沿着托架的滑轨往下推到底。

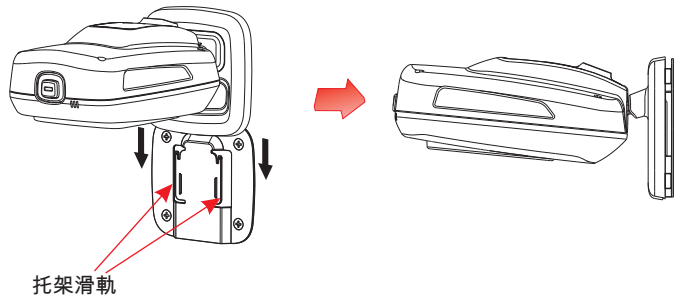

固定托架孔位尺寸圖

- 套件內容 / 套件内容：
- ✓ 固定托架*1/ 固定托架 * 1
 - ✓ 托架固定自攻螺絲 (平頂十字，直徑5mm; 長度19mm) * 4
托架固定自攻螺丝 (平顶十字，直径5mm; 长度19mm) * 4
 - ✓ 塑膠螺絲錨 (內徑3.2mm; 長度22mm) * 4
塑料螺丝锚 (内径3.2mm; 长度22mm) * 4
- 指示/提示
1. 將孔位尺寸圖直接放在要安裝的壁上(或桌面上)並固定好。
将孔位尺寸图直接放在要安装的壁上(或桌面上)并固定好。
 2. 根據孔位尺寸圖標示進行鑽孔(孔徑5mm、深25mm)。
根据孔位尺寸图标示进行钻洞(孔径5mm、深25mm)。

