

256x Series BT Base Quick Start Guide

Download the user manual and CD contents using GoBetween, available at <http://ccs.cipherlab.com>.

Wall-Mount Installation


Step 1: Drill one upper hole 4.7 mm in diameter on the wall.

Step 2: 181 mm down below the upper hole, drill two lower holes (spaced 7.8 mm apart) 2.5 mm in diameter on the wall.

Step 3: Then secure the provided screws and wall mounting clip to the holes respectively.

Step 4: Get the scanner hook out of the BT base. Turn it upside down and put it back.

Step 5: Align the BT base bottom slot with the mounting clip which can slide into the slot. Mount the base by sliding it downwards the clip. Then hang the BT base on the upper screw.

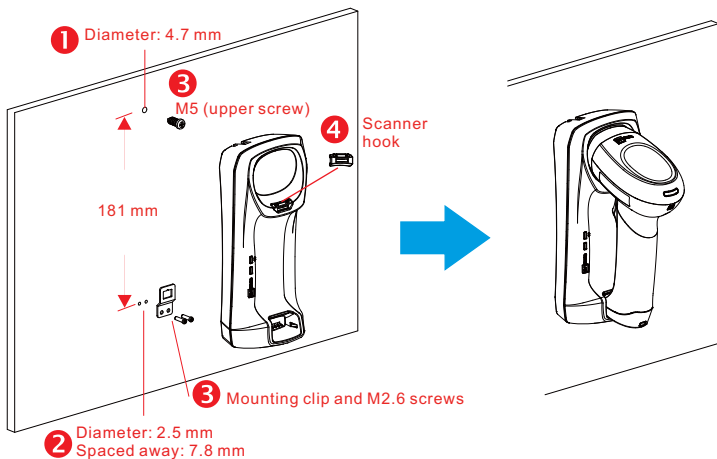

256x 傳輸充電座 快速開始指南

請透過GoBetween取得手冊與光碟資訊：<http://ccs.cipherlab.com>

請透過GoBetween取得手冊與光碟資訊：<http://ccs.cipherlab.com>

繁中 簡中

Wall-Mount Installation

- Step 1:** 在牆上鑽一個直徑4.7 mm的孔。
在牆上鑽一個直徑4.7 mm的孔。
- Step 2:** 離上方孔下方181 mm處再鑽2個直徑2.5 mm的螺絲孔，此2孔中心距離7.8mm。
離上方孔下方181 mm處再鑽2個直徑2.5 mm的螺絲孔，此2孔中心距離7.8mm。
- Step 3:** 將所附懸掛螺絲及壁掛彈片組分別鎖上牆上螺絲孔。
將所附懸掛螺絲及壁掛彈片組分別鎖上牆上螺絲孔。
- Step 4:** 將基座上的掛勾取出，翻轉180度後置回原位置。
將基座上的掛勾取出，翻轉180度後置回原位置。
- Step 5:** 將基座底部槽孔對準牆上彈片，輕輕往下滑入。再將基座上方掛孔掛於螺絲上。
將基座底部槽孔對準牆上彈片，輕輕往下滑入。再將基座上方掛孔掛於螺絲上。

