

CipherLab Reference Manual

Windows Embedded Handheld 6.5

Mobile Computer 9700

Version 1.09



PREFACE

COPYRIGHT

Copyright © 2021 CIPHERLAB CO., LTD.

All rights reserved

The information contained in this document, including all pictures, illustrations and software, is the proprietary information of CIPHERLAB CO., LTD. and its respective legal owners; it is protected by copyright laws and international copyright treaties, as well as other intellectual property laws and treaties, with all rights reserved.

In no event and by no part shall this document be reproduced, stored in a retrieval system, or transmitted in any form or by any means including but not limited to electronic, mechanical, photocopying, and recording without the prior written consent of CIPHERLAB CO., LTD. Any reverse engineering of software is also prohibited.

DISCLAIMER

The information herein is subject to change without notice. The information and the intellectual property herein are confidential between you and CIPHERLAB CO., LTD. and remain the exclusive property of CIPHERLAB CO., LTD. and its respective legal owners. Should you find any problems in this document, please report them to CIPHERLAB in writing. CIPHERLAB does not warrant this document is error-free.

TRADEMARK RECOGNITION

CipherLab logo is a registered trademark of CIPHERLAB CO., LTD. Windows Embedded Handheld is a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries. All other brands, products and services, and trademark names are the property of their registered owners. The editorial use of these names is for identification as well as to the benefit of the owners, with no intention of infringement.

CONTACT

For product consultancy and technical support, please contact CIPHERLAB's sales representative in your local area. You may also visit CIPHERLAB web site for more information.

CIPHERLAB CO., LTD.
Website: <http://www.CipherLab.com>

SAFETY NOTICES

FOR HAND-HELD PRODUCT WITH RF FUNCTIONS

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator and your body.

FOR UNITED STATES

This equipment has been tested and found to comply with the limits for a **Class B** digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ▶ Reorient or relocate the receiving antenna.
- ▶ Increase the separation between the equipment and receiver.
- ▶ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ▶ Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FOR PRODUCT WITH LASER



CAUTION

This laser component emits FDA / IEC Class 2 laser light at the exit port. Do not stare into beam.

SAFETY PRECAUTIONS

RISK OF EXPLOSION: IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

- ▶ The use of any batteries or charging devices which are not originally sold or manufactured by CipherLab will void your warranty and may cause damage to human body or the product itself.
- ▶ DO NOT disassemble, incinerate or short circuit the battery.
- ▶ DO NOT expose the scanner or the battery to any flammable sources.
- ▶ For green-environment issue, it's important that batteries should be recycled in a proper way.
- ▶ Under no circumstances, internal components are self-serviceable.
- ▶ The charging and communication cradle uses an AC power adapter. A socket outlet shall be installed near the equipment and shall be easily accessible. Make sure there is stable power supply for the mobile computer or its peripherals to operate properly.

CARE & MAINTENANCE

- ▶ This mobile computer is intended for industrial use. The mobile computer is rated IP65, however, the mobile computer can get damaged when being exposed to extreme temperatures or soaked wet.
- ▶ When the enclosure of the mobile computer gets dirty, use a clean and wet cloth to wipe off the dust. DO NOT use/mix any bleach or cleaner. Always keep the LCD dry.
- ▶ For a liquid crystal display (LCD) or touch screen, use a clean, non-abrasive, lint-free cloth to wipe dust off the screen. DO NOT contact the surface with any pointed or sharp object.
- ▶ If you want to put away the mobile computer for a period of time, download the collected data to a host computer, and then take out the battery pack. Store the mobile computer and battery pack separately.
- ▶ When the mobile computer resumes its work, it takes some time for the main and backup batteries to become fully charged.
- ▶ If you shall find the mobile computer malfunctioning, write down the specific scenario and consult the sales representative in your local area.
- ▶ Keep the mobile computer away from any magnets and magnetic fields to prevent the laser engine from malfunctioning.

DECLARATION OF CONFORMITY



Declaration of Conformity

Manufacturer

CIPHERLAB Co., Ltd.

12F., 333, Dunhua S. Rd., Sec. 2

Taipei, Taiwan 106, R.O.C.

Tel: +886 2 8647 1166

<http://www.cipherlab.com>

Type of Equipment

Mobile Computer

Model(s) Declared

9700 9700A

Initial Year of Manufacture **2017**

Reference to the specification under which conformity is declared in accordance with Council Directive- 2014/30/EU(EMC), 2014/53/EU (RED), 2011/65/EU (RoHS), 2014/35/EC (LVD), 1999/519/EC (EMF).

EN 300 328 V2.1.1

EN 62311:2008

EN 61000-3-3 :2013

EN 62479:2010

EN 301 893 V2.1.1

EN 301 489-1 V2.2.0

EN 301 489-17 V3.2.0

EN 55024 :2010

EN 61000-3-2 :2014 classA

EN 55032: 2012+AC:2013

EN 60950-1 : 2006+A2:2013

I the undersigned, hereby declare that the equipment specified above conforms to the above Directive(s) and Standard(s).

Manufacture Signature

Vicky Chiang

Full Name : Vicky Chiang

Title : Senior Engineer

Date: 2017.07.02

THAILAND CAUTION

เครื่องโทรคมนาคมและอุปกรณ์นี้มีความสอดคล้องตามมาตรฐานหรือข้อกำหนดของกสทช.


nans.

เครื่องวิทยุคมนาคมนี้ ได้รับยกเว้น ไม่ต้องได้รับ
ใบอนุญาตให้มี ใช้ซึ่งเครื่องวิทยุคมนาคม
หรือตั้งสถานีวิทยุคมนาคมตามประกาศ กสทช.
เรื่อง เครื่องวิทยุคมนาคม และสถานีวิทยุ
คมนาคมที่ได้รับยกเว้นไม่ต้องได้รับใบอนุญาต
วิทยุคมนาคม ตามพระราชบัญญัติวิทยุ
คมนาคม พ.ศ. 2498



nans. | โทรคมนาคม
กำกับดูแลเพื่อประชาชน
Call Center 1200 (Insw5)

เครื่องวิทยุคมนาคมนี้ มีระดับการแผ่คลื่นแม่เหล็กไฟฟ้าสอดคล้องตามมาตรฐานความปลอดภัยต่อสุขภาพ
ของมนุษย์จากการใช้เครื่องวิทยุคมนาคมที่คณะกรรมการกิจการโทรคมนาคมแห่งชาติประกาศกำหนด

RELEASE NOTES

Version	Date	Notes
1.09	April 19, 2022	<ul style="list-style-type: none">▶ Update Section 2.1.2: "Scan Angle" of 1D (Laser) Reader Settings▶ Update Section 2.1.2: Keyboard Emulation▶ Add "Inter Character Delay" to Section 2.1.2▶ Update Appendix I "Scan Engine Settings".▶ Update Appendix II "Laser (SE9x5)".▶ Update Appendix IV "2D Imager (SE4500 / 4750SR)".
1.08	May 20, 2021	<ul style="list-style-type: none">▶ Modify 5.1.2 Setting options - Custom: Revise "ASCII key code (0x00~0xFF)" to "Microsoft Virtual-Key Codes".
1.07	April 28, 2020	<ul style="list-style-type: none">▶ Modify 4.2.3 Change Bluetooth Name: Revise "Device ID" to "Device Name".▶ Update 6.2.3 System Folder: Update the description about Code "5" of Digit Pair "1" in System Information Part.
1.06	July 26, 2019	<ul style="list-style-type: none">▶ Add "Thailand Caution".
1.05	June 8, 2018	<ul style="list-style-type: none">▶ Modify 1.2.1 Power Manu: Change "Cancel" as default setting▶ Modify 6.1 Update Hidden Partition & OS Image
1.04	Aug 25, 2015	<ul style="list-style-type: none">▶ Modify the description of some keys in 53 key mapping table and express the behaviour with characters, VK definition and hexadecimal value
1.03	Jul 24, 2015	<ul style="list-style-type: none">▶ Delete description relating to CD▶ Add Related Documentation to Introduction
1.02	Mar 11, 2015	<ul style="list-style-type: none">▶ Update 1.8 Direct Data Communication: Add WMDC description▶ Add 6.1 Update Hidden Partition▶ Update Code 11, Matrix 2 of 5 code length settings in Appendix V: Near/Far 2D Imager▶ Update Appendix V: Near/Far 2D Imager: Add notes for Trioptic Code 39, Full ASCII Code 39, ISBT 128
1.01	Dec 11, 2014	<ul style="list-style-type: none">▶ Rename Green/Red keys in 1.5.1 Physical Keypad▶ Revise Input Mode Icons in 1.5.1 Physical Keypad
1.00	Dec 2, 2014	Initial release

CONTENTS

- PREFACE - 2 -**
 - Copyright - 2 -
 - Disclaimer - 2 -
 - Trademark Recognition..... - 2 -
 - Contact..... - 2 -
 - Safety Notices..... - 3 -
 - For Hand-held Product with RF Functions - 3 -
 - For United States - 3 -
 - For Product with Laser - 3 -
 - Safety Precautions - 3 -
 - Care & Maintenance - 4 -
 - Declaration of Conformity - 5 -
 - Thailand Caution - 6 -
- RELEASE NOTES - 7 -**
- INTRODUCTION 1**
 - About This Document..... 1
 - Features 2
 - Inside This Package 2
 - Accessories..... 2
 - Related Documentation 2
- USE MOBILE COMPUTER 4**
 - 1.1. Take a Tour 5
 - 1.1.1. Overview 5
 - 1.1.2. Before Initial Use 6
 - 1.2. Power On/Off Mobile Computer 7
 - 1.2.1. Power Menu 7
 - 1.3. Notifications..... 9
 - 1.4. Battery 11
 - 1.4.1. Install/Remove Main Battery 12
 - 1.4.2. Charge Batteries 13
 - 1.4.3. Monitor Battery Level 16
 - 1.4.4. Power Management 20
 - 1.5. Keypad 21
 - 1.5.1. Physical keypad 21
 - 1.5.2. On-screen Keyboard 30
 - 1.5.3. Edit Text..... 35
 - 1.6. Touch Control..... 36
 - 1.6.1. Use Touch screen 36
 - 1.6.2. Screen Orientation..... 36
 - 1.6.3. Adjust Backlight 38
 - 1.6.4. Calibration 40
 - 1.7. Memory 41
 - 1.7.1. Data Loss Caution 41

1.7.2.	Check Storage.....	41
1.7.3.	Insert SD Card.....	43
1.8.	Direct Data Communication.....	44
1.8.1.	Use Snap-on Cable	44
1.8.2.	Use Cradle.....	45
1.8.3.	Syncing Tools.....	46
1.8.4.	Sync Partnership.....	46
1.8.5.	1 st USB Sync.....	47
1.8.6.	Disconnect USB Partnership.....	50
1.8.7.	Syncing Actions to Take	51
1.9.	Volume and Audio.....	59
1.9.1.	Audio Playback.....	59
1.9.2.	Volume Control	59
DATA CAPTURE.....		60
2.1.	Configure Reader.....	61
2.1.1.	Launch Reader Config.....	61
2.1.2.	General Settings	62
2.1.3.	Symbology	70
2.1.4.	Miscellaneous.....	74
2.1.5.	Reader Config Option Menu.....	75
2.2.	Read Printed Barcodes	80
OPERATING SYSTEM.....		82
3.1.	1 st Startup	83
3.2.	Today Screen	84
3.2.1.	Customize Today Screen.....	85
3.2.2.	Return to Today Screen.....	85
3.3.	Start Screen	86
3.3.1.	Return to Start Screen	87
3.3.2.	Title Bar	87
3.3.3.	Manage Notofications	88
3.3.4.	Customize Start Screen.....	90
3.3.5.	Start Screen Icons	93
3.4.	Set Screen Lock.....	95
3.4.1.	Unlock Screen.....	95
3.5.	Manage Applications.....	96
3.5.1.	Task Manager	96
3.6.	Suspend & Reset Mobile Computer	102
3.6.1.	Suspend Mobile Computer	102
3.6.2.	Wake Up Mobile Computer	103
3.6.3.	Restart Mobile Comptuer (Warm Boot).....	104
RADIOS		105
4.1.	Use Wi-Fi.....	106
4.1.1.	Launch SCU.....	106
4.1.2.	Status Tab Page.....	107
4.1.3.	Configuration Tab Page	107
4.1.4.	Diagnostics Tab Page	121
4.2.	Use Bluetooth	128
4.2.1.	Bluetooth Profiles Supported.....	128

4.2.2.	Status Icons	128
4.2.3.	Change Bluetooth Name	129
4.2.4.	Turn On/Off Bluetooth.....	129
4.2.5.	Expose Mobile Computer	130
4.2.6.	Pair & Connect Bluetooth Devices.....	131
4.2.7.	Disconnect Bluetooth Devices.....	134
4.2.8.	Unpair Bluetooth Devices.....	134
4.2.9.	Reconnect Bluetooth Devices.....	134
4.2.10.	Edit Bluetooth Features to Use.....	135
4.2.11.	Bluetooth File Exchange.....	136
4.2.12.	Bluetooth ActiveSync.....	137
4.2.13.	Bluetooth Internet Sharing.....	139
4.2.14.	Bluetooth Pass-through Networking.....	140
MORE APPLICATIONS.....		141
5.1.	Button Assignment	142
5.1.1.	Launch Button Assignment.....	142
5.1.2.	Redefine Keys.....	143
5.1.3.	Main Menu	145
5.1.4.	Keypad Modes	149
5.2.	Signature Utility.....	155
5.2.1.	Launch Signature Utility	155
5.2.2.	Capture Signature.....	156
5.2.3.	View or Edit Existing Signatures	157
5.2.4.	Preferences.....	158
5.3.	Push to Talk	159
5.3.1.	Launch Push to Talk.....	159
5.3.2.	Communicate With Group Members.....	160
MANAGE MOBILE COMPUTER.....		166
6.1.	Update Hidden Partition & OS Image.....	167
6.1.1.	Update via Mobile Deployment System	167
6.1.2.	Update with Memory Card.....	169
6.2.	System Settings.....	171
6.2.1.	Connections Folder.....	173
6.2.2.	Personal Folder.....	176
6.2.3.	System Folder	177
SPECIFICATIONS		185
	Platform, Processor & Memory.....	185
	Communications & Data Capture	185
	Electrical Characteristics	186
	Physical Characteristics	186
	Environmental Characteristics	187
	Programming Support.....	187
	Accessories.....	188
SCAN ENGINE SETTINGS		189
	Symbologies Supported	190
LASER (SE955)		192
	Symbology Settings.....	192

Miscellaneous	197
AIM Code ID – Code Characters.....	197
AIM Code ID – Modifier Characters.....	197
EXTENDED RANGE LASER (SE1524).....	201
Symbology Settings	201
Miscellaneous	205
2D IMAGER (SE4500DL)	207
Symbology Settings	207
1D Symbologies	207
2D Symbologies	213
Miscellaneous	215
NEAR/FAR 2D IMAGER (EX25)	216
Symbology Settings	216
1D Symbologies	216
2D Symbologies	221
Miscellaneous	221
PHYSICAL KEYPAD REFERENCE TABLE	222
Numeric Keypad (30 Keys).....	222
Using Alpha, Shift & Fn Keys	222
Numeric & Function Keypad (38 Keys).....	224
Using Alpha, Shift & Fn Keys	224
Alphanumeric Keypad (53 Keys).....	227
Using Alpha, Shift & Fn Keys	227

INTRODUCTION

Thank you for choosing CipherLab products. CipherLab welcomes another Windows Embedded by introducing 9700 Series Mobile Computer. Powered by Windows Embedded Handheld 6.5, the mobile computer delivers better user experience and advances enterprise mobile computing.

The mobile computer has transfective LCD to hold up the readability in a wide range of light conditions, courtesy of the supplementary backlight enabled by a built-in ambient light sensor. Also on board is a G-sensor to save power according to the mobile computer's motion and posture. G-sensor also enables screen orientation when the device is posed sideways or upright. Furthermore, the mobile computer has integrated a built-in e-compass and gyroscope, both of which provide useful functions in navigation.

The series sports satisfactory data connections by integrating a communication port for direct data exchange. For wireless data connection, it hosts a Bluetooth and 802.11b/g module.

Dedicated to data capture, the mobile computer has essential 1D (laser) reader or 2D imager. Rated with IP65, the rugged 9700 is light-weighted and easy to cradle in your hand, and will be your good help on field works.

ABOUT THIS DOCUMENT

This guide distills the information about 9700 Series Mobile Computer. Subjects discussed include the mobile computer's physical features, platform basics, software and applications, and part of the accessories to boost the mobile computer's performance.

We recommend that you keep one copy of this manual at hand for the quick reference for necessary maintenance.

FEATURES

- ▶ Rugged yet smoothened outlined, with hand strap for secure hold
- ▶ IP65-rated tough form to survive drop, shock, heat, cold, and impervious to moisture/dust
- ▶ Windows Embedded Handheld 6.5 OS, TI OMAP3730 1GHz CPU
- ▶ 512MB SDRAM to run application programs
- ▶ 4GB NAND flash to store OS, applications, settings and so on
- ▶ Storage expansion: Up to 32GB MicroSDHC
- ▶ Sunlight-readable screen to enhance the viewability of outdoor use
- ▶ Ambient light sensor to enable supplementary backlight for LCD and keypad
- ▶ G-sensor for power management and screen orientation
- ▶ 2 symmetric side-triggers for ambidextrous scanning
- ▶ Total data solution — supports Bluetooth, 802.11a/b/g/n
- ▶ C++ and .Net programming support

INSIDE THIS PACKAGE

The mobile computer ships with the following items. Save the box and packaging material in case of future need to store or deliver the mobile computer.

- ▶ Mobile Computer
- ▶ Rechargeable Li-ion battery pack (standard/high capacity)
- ▶ Stylus
- ▶ Screen protector
- ▶ Hand strap
- ▶ Quick Start Guide

ACCESSORIES

Optional accessories to enhance the mobile computer's performance are:

- ▶ Snap-on Charging and Communication Cable (USB or RS-232)
- ▶ Charging & Communication Cradle
- ▶ Pistol Grip
- ▶ Snap-On Car Charger
- ▶ 4-Slot Terminal (Ethernet) Cradle
- ▶ 4-Slot Battery Charger
- ▶ Belt Holster

RELATED DOCUMENTATION

Log in to GoBetween to access related documentation about the 9700 mobile computer from the CipherLab Central Service (CCS) platform. Download the GoBetween desktop or mobile device application, or launch the GoBetween Lite web application from the following site: <http://ccs.cipherlab.com/>.

USE MOBILE COMPUTER

Before the mobile computer takes part in your work, get to know it first. This chapter includes the basic features of the mobile computer including the power supply, memory, and the units that bridge users with the mobile computer. This chapter helps you set the mobile computer to work at the earliest.

IN THIS CHAPTER

1.1 Take a Tour.....	5
1.2 Power On.....	7
1.3 Notifications.....	9
1.4 Battery.....	9
1.5 Keypad.....	21
1.6 Touch Control.....	36
1.7 Memory.....	41
1.8 Direct Data Communication.....	44
1.9 Volume and Audio.....	59

1.1. TAKE A TOUR

This section shows the major components on the mobile computer and inside battery chamber. You will also learn how to power on/off the mobile computer and how the mobile computer gives information about its status.

1.1.1. OVERVIEW

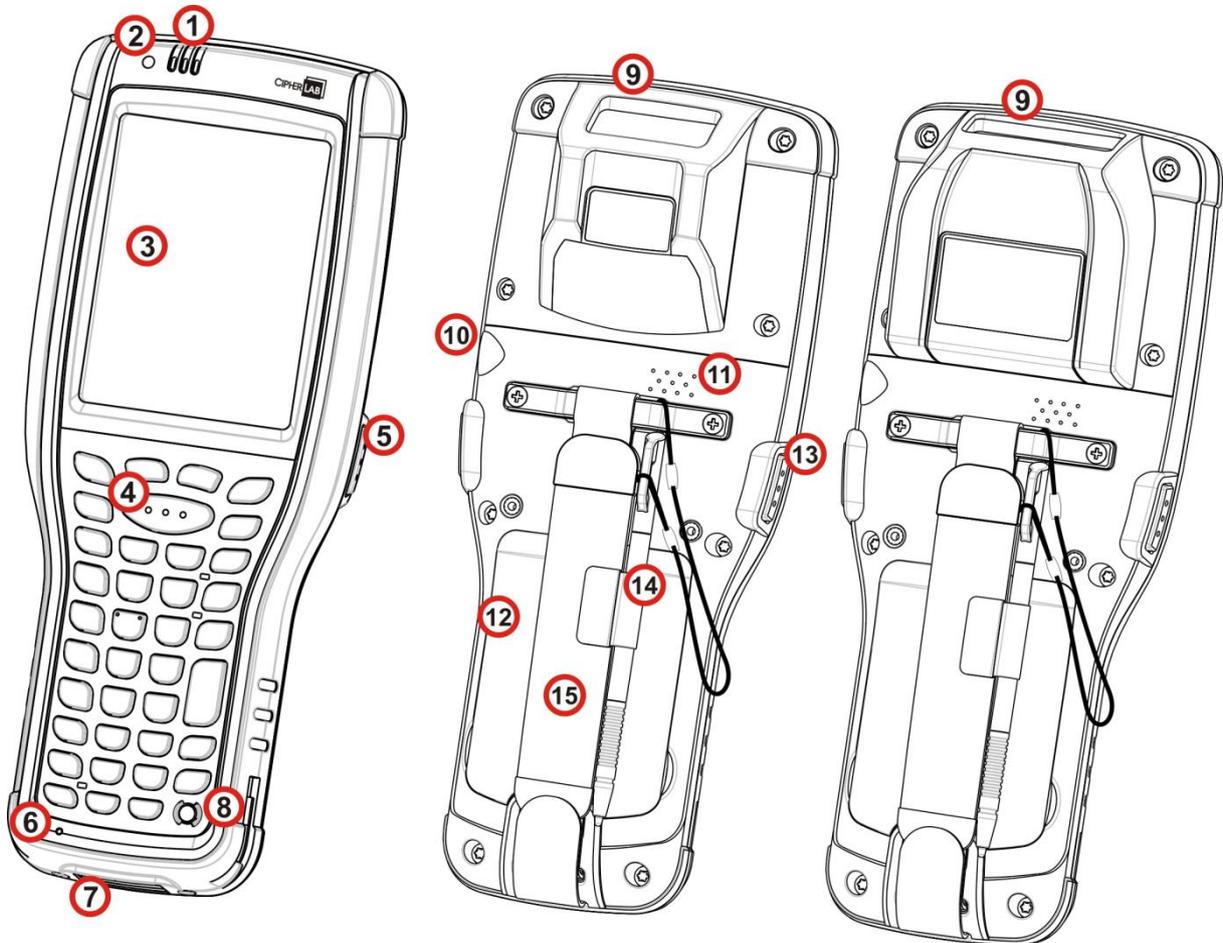


Figure 1: Overview

No.	Description	No.	Description
1	Status LED (refer to Notifications)	2	Light sensor
3	Touch screen	4	Scan key
5	Side-trigger (user definable)	6	Microphone
7	Direct charging & communication port	8	Power key
9	Scan window	10	Headset jack
11	Speaker	12	Battery
13	Side-trigger (user definable)	14	Stylus (with attaching cord)
15	Handstrap		

1.1.2. BEFORE INITIAL USE

Prior to using the mobile computer for the first time, we recommend applying the protective film over the LCD. This will prevent scratching the touch screen during daily usage, and also help enhance the durability of the touch screen.

To apply the LCD protective film:

- 1) Upon delivery, the touch screen of the mobile computer is covered with a thin transparent film. Peel off and discard this film.
- 2) Wipe the touch screen with a clean, non-abrasive, lint-free cloth.
- 3) Carefully apply the LCD protective film to the touch screen by aligning its edges with the edges of the touch screen. Make sure the film adheres tightly to the surface.

The mobile computer is then ready for usage.


1.2. POWER ON/OFF MOBILE COMPUTER

To power on the mobile computer, press the Power button  sitting at the upper right of the keypad. The mobile computer powers on.

1.2.1. POWER MENU

The 9700 mobile computer features a power menu. This menu allows you to select whether you would like to power off the mobile computer, enter suspension, or enter sleeping mode for main battery replacement.

To enter this power menu, press the power button for more than three seconds. A menu will open on-screen with a countdown bar at the bottom.

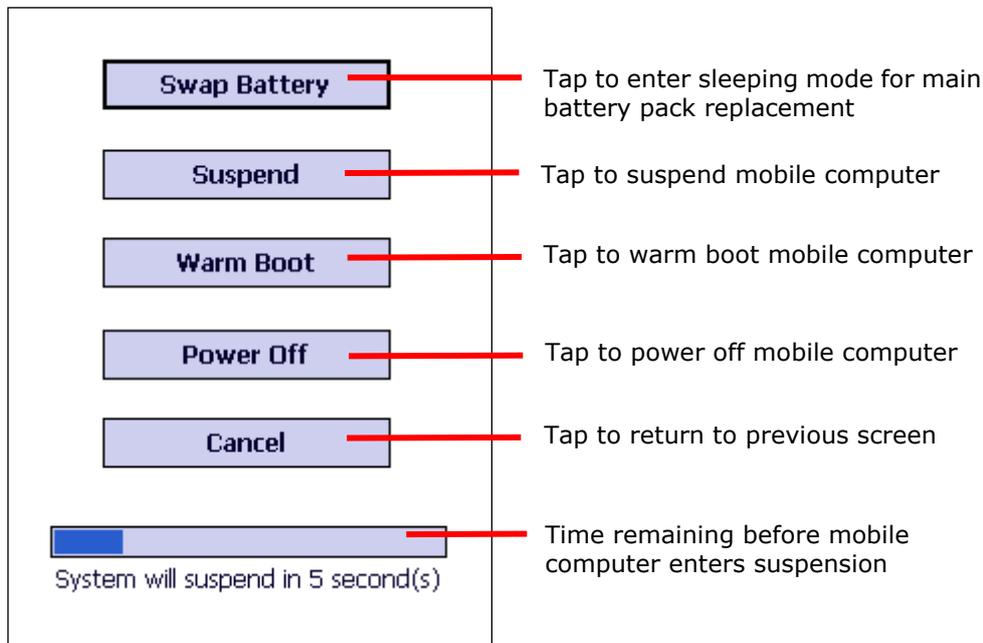

Menu options are as follows:

Action to take	Description
Swap Battery	If you would like to replace the main battery pack on the mobile computer, select this option to let the mobile computer enter sleeping mode. After the main battery has been replaced, wake up the mobile computer by pressing the power button. All applications and tasks will remain active.
Suspend (default)	When the mobile computer is not under frequent use, select this option to let the mobile computer enter suspension and save power. When you need to use the mobile computer once more, resume it by pressing the power button or central scan key. All applications and tasks will remain active. See also Suspend & Reset Mobile Computer .

Warm Boot	Select this option to warm boot (restart) the mobile computer. This will close all applications and tasks currently running. All unsaved data will be lost.
Power Off	Select this option if you will not be using the mobile computer in a while and would like to power it off. This will close all applications and tasks currently running. All unsaved data will be lost.
Cancel (default)	Selecting this option will close the menu and return to the previously active screen. All applications and tasks will remain active. This is the default function, and when no option is selected in the power menu, it will automatically cancel after 5 seconds.

Note: If you wish to replace the main battery pack on the mobile computer, aside from taking the steps above, please also make sure the following requirements are met. Otherwise, the mobile computer might function abnormally, and will require system restart.

- (1) Make sure the backup battery on the mobile computer is not drained out. Check [Backup Battery Level](#) before taking any actions.
 - (2) After selecting **Swap Battery** in the power menu, proceed to replacing the battery as soon as possible.
-

1.3. NOTIFICATIONS

The mobile computer features visible, audible, and tactile feedback to draw users' prompt awareness of the mobile computer's contiguous events such as barcode reading, wireless/mobile data connections, and battery charging.

STATUS LED

Three LED lights are located on the upper-right corner of the mobile computer. Their functions are:

Matter	LED Color	Action	Description
Battery Charging (Left)	Green, Orange, Red	Green, solid	Battery is fully charged.
		Orange, solid	Battery is being charged, and the battery level is sufficient to power on the mobile computer.
		Red, solid	Battery is being charged, however the battery level is insufficient to power on the mobile computer.
		Red, blinking fast	Battery charging error has occurred, for instance, charging temperature is below 0°C or above 35°C, or adapter is plugged in but no battery is present.
Radios (Middle)	Blue	Blue, blinking	Wi-Fi or Bluetooth in use.
Scanning Good Read (Right)	Green	Green, flashes once	Indicates good reading of the scanned barcode. Enable/Disable this LED light on the Reader Config Notification Settings page. To set the good read LED via API deployment, see the 9700 Programming Guide for details.

SPEAKER

The mobile computer has a speaker on the back for audio signaling and playback.

The speaker sounds for system events, application warnings, on-screen item selection and physical keypad stroke. In noisy environments, the speaker remains efficacious with the help of a Bluetooth headset. To control sound volume, see [Volume Control](#).

The speaker also sounds for successful barcode reading, which can be controlled on the Reader Config Notification Settings page.

VIBRATOR

The mobile computer owes its tactile feedback to the vibrator built inside. Vibration delivered to the mobile computer alerts users of its currents status.

Working based on user's sense, the vibrator is particularly helpful when the mobile computer is serving in a noisy environment.

Same as the speaker and LED light, the vibrator also works for good barcode reading. Enable/disable vibration and set its duration on the Reader Config Notification Settings page. Alternatively, program the vibrator through API deployment to have it vibrate when a successful reading occurs. See the 9700 Programming Guide for details.

1.4. BATTERY

The 9700 mobile computer is fed by two batteries, main battery pack and backup battery. The main battery is removable and replaceable from the battery chamber while the backup battery is mounted on the main board inside the mobile computer.

When the mobile computer is shipped, the main battery is stored in a package separated from the mobile computer, which keeps it in good condition for future use.

MAIN BATTERY

The main battery is a Li-ion battery pack which comes in two different capacities, a 3.7V, 3600mAh battery which takes approximately 4 hours to charge to full, and a 3.7V, 5400mAh battery which takes around 6 hours to charge to full. The working time of the mobile computer varies by its working states. A battery icon seated on the title bar will show the remaining [Main Battery Level](#).

See also [Install/Remove Main Battery](#) for installing the main battery.

BACKUP BATTERY

The backup battery is settled on the main board inside the mobile computer. It is a 3.6V, 15mAh rechargeable Ni-MH battery. When the main battery is absent or depleted, the backup battery takes over to feed the mobile computer. Without the main battery, a fully charged backup battery retains the data in the DRAM and holds the system in suspension for 30 minutes (as long as the wireless modules are inactive).

The backup battery is rechargeable by the main battery pack. It takes 36 hours to charge it to full. See [Backup Battery Level](#).

Note:

- (1) On initial use of the mobile computer, it is recommended that a fully charged main battery is placed in the main battery compartment for at least three days, in order to allow the backup battery to charge to a full state.
 - (2) When removing the main battery pack, actual data retention time will depend on the backup battery level. Check backup battery level before replacing the main battery to ensure your data is retained.
-

1.4.1. INSTALL/REMOVE MAIN BATTERY

Follow the steps below to install the main battery:

- 1) The handstrap is installed over the battery chamber. You do not need to remove the handstrap to install the battery; simply lift up the handstrap to allow enough space to insert the battery.
- 2) Place the main battery pack into the battery chamber with the contact pins facing down. Fix the upper end first, and press the lower end down until the battery "clicks" into place.

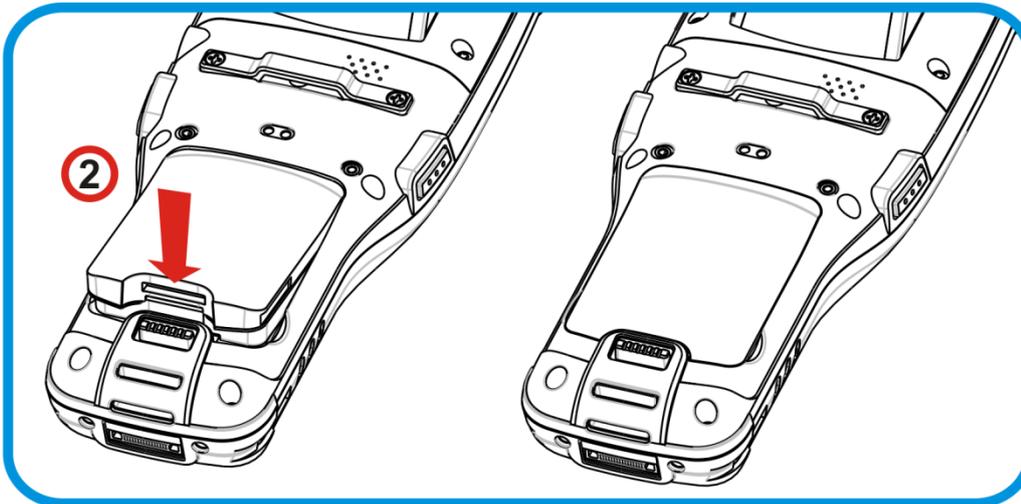


Figure 2: Install main battery

Follow the steps below to remove the main battery:

- 1) A battery latch is located at the lower end of the main battery. Push the latch down and the battery will be released.

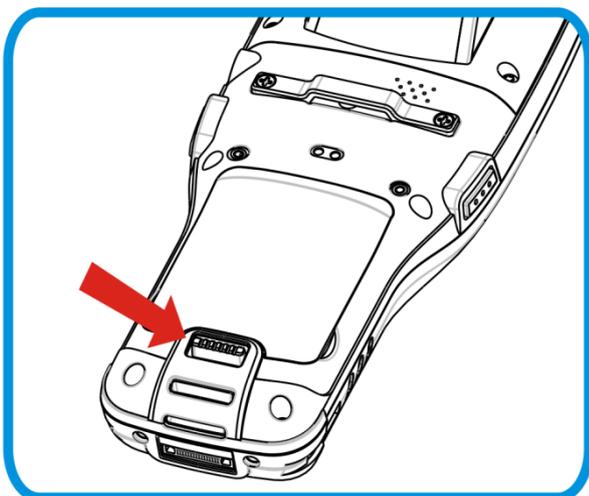


Figure 3: Remove main battery

- Note:
- (1) When main battery level drops to low level, charge it ASAP or replace it with a charged battery.
 - (2) Always turn off the mobile computer to replace the main battery pack.
 - (3) Any improper handling may reduce battery life.

1.4.2. CHARGE BATTERIES

Due to shipment, it is likely that the main battery and backup battery won't be fully charged when you receive the package. Before setting the mobile computer to work, charge the main battery to full by direct charging via a power adapter (with the help of a Snap-on Charging & Communication Cable or Charging & Communication Cradle).

Some key facts about charging batteries:

Charging Time

- ▶ **Main battery:** It takes approximately 4 hours to charge the 3.3V, 3600mAh main battery, and approximately 6 hours to charge the 3.3V, 5400mAh main battery. The battery charging LED above the touch screen lights red or orange during charging (depending on the battery level at the moment), and lights green when the mobile computer is completely charged. See [Status LED](#) for details about the LED indicator.
- ▶ **Backup battery:** The backup battery is a 3.6V, 15mAh Ni-MH battery which is rechargeable by the main battery. It takes around 36 hours to charge the battery to full, however it does not need to be fully charged for the mobile computer to work.

Charging Temperature

- ▶ It is recommended that batteries be charged at room temperature (18°C~25°C) for optimal performance.
- ▶ Charging stops when temperature drops below 0°C or exceeds 35°C. In this case the battery charging LED will be continuously blinking in red.

Power Consumption

- ▶ When all radios (802.11 a/b/g/n, Bluetooth) are active on battery power, main battery level will drop substantially.
- ▶ In order to prevent the system from shutting down due to depletion of the main battery, we suggest that you keep a fully charged battery for replacement or have the mobile computer access the radios on external power.

The following guides how to charge batteries.

DIRECT CHARGING USING SNAP-ON CABLE

Direct charging of the mobile computer relies on the Snap-on Charging & Communication Cable (hereinafter "snap-on cable"). There is a power jack on the connector of this cable to connect external power.

Prior to charging, install the main battery as described in [Install/Remove Main Battery](#). Then follow the steps below:

- 1) Attach the snap-on cable to the mobile computer.
- 2) Plug the head of the power adapter cord into the power jack located on the snap-on cable's connector.
- 3) Connect the power adapter to a power outlet.

To output data to your PC or laptop, connect the snap-on cable (either through USB or RS-232 connection) to it. See [Direct Data Communication](#) for follow-ups.

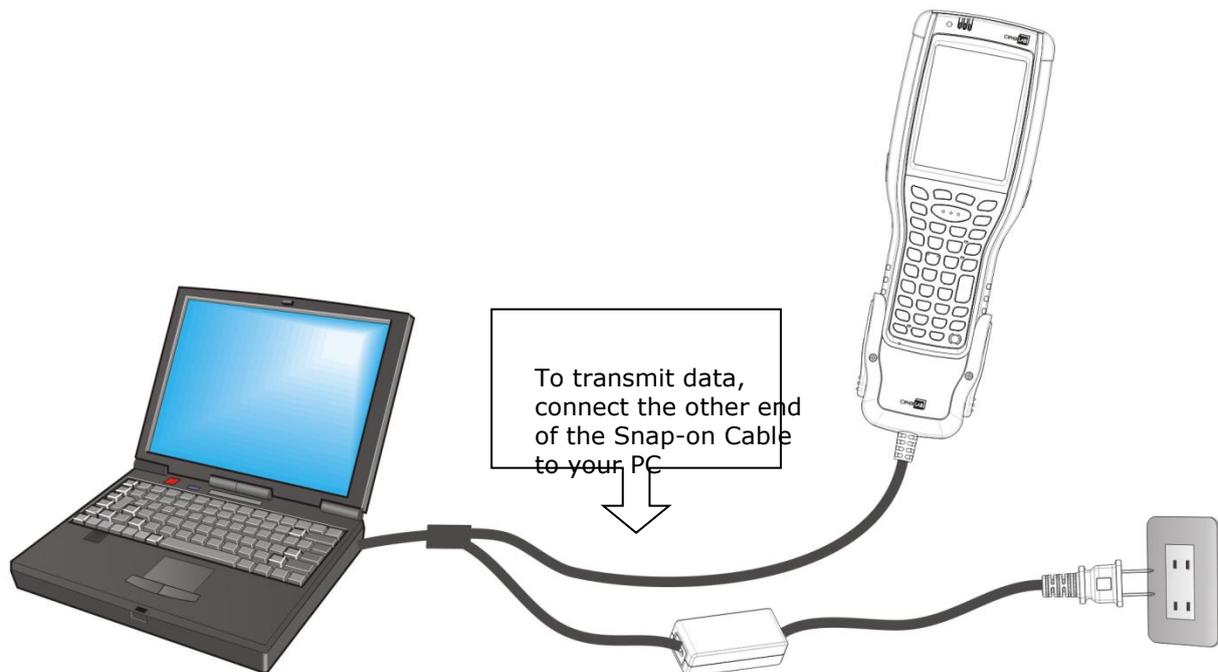


Figure 4: Direct Charging Using Snap-on Cable

DIRECT CHARGING USING CRADLE

Direct cradle charging makes use of a Charging & Communication Cradle (hereinafter “cradle”). The cradle is one of the accessories you can opt for.

Prior to charging, install main battery as described in [Install/Remove Main Battery](#). Then follow the steps below:

- 1) Seat the mobile computer onto the cradle.
- 2) Connect the cradle to an external power source using the power adapter.

To output data to your PC or laptop, connect the mobile computer and your PC with a microUSB cable. See [Direct Data Communication](#) for follow-ups.

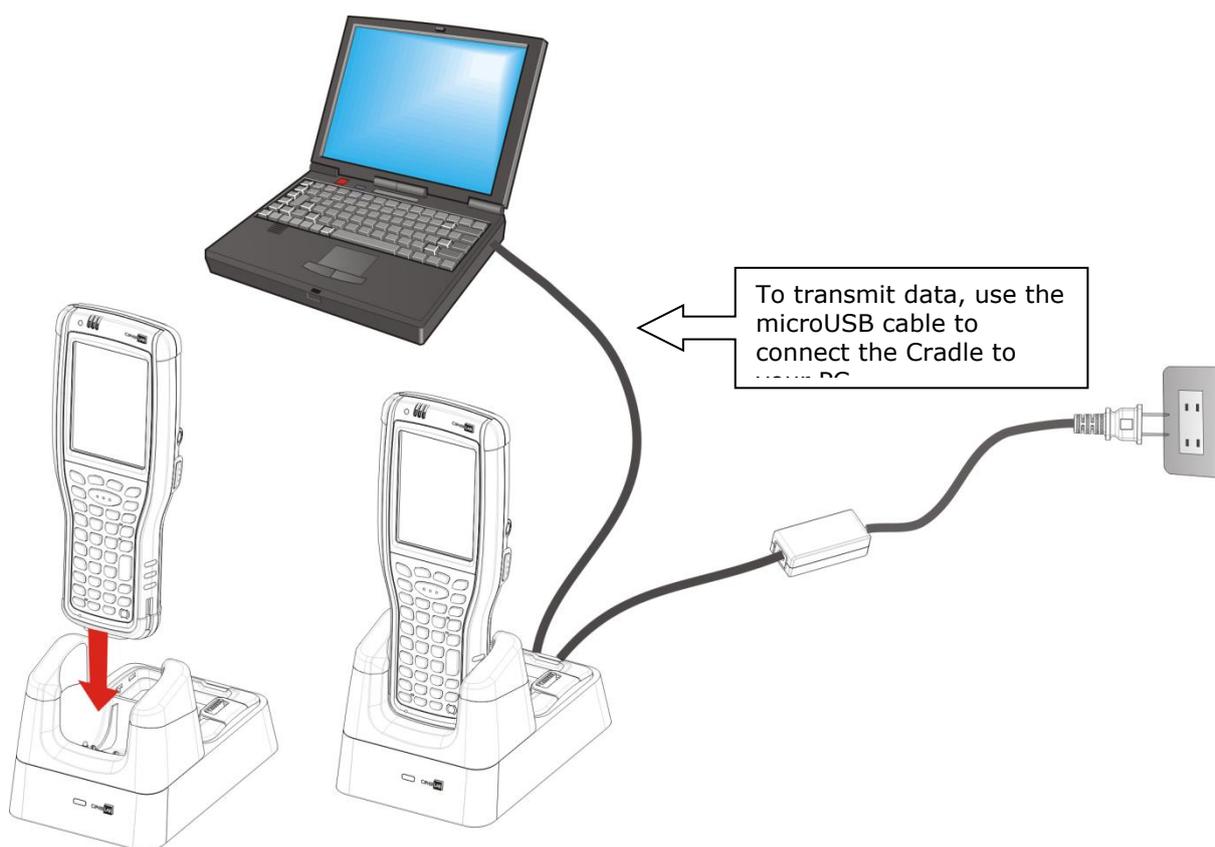


Figure 5: Direct Charging Using Cradle

REPLACE MAIN BATTERY PACK

The Charging and Communication Cradle holds a separate charging compartment for the main battery pack. This allows the mobile computer and a separate main battery pack to be charged either individually or simultaneously. We advise you to keep a fully charged battery at hand at all times.

Before replacing the main battery pack, turn off the mobile computer. Insert a charged main battery pack as shown in [Install/Remove Main Battery](#) and power on the mobile computer.

1.4.3. MONITOR BATTERY LEVEL

The main battery is the only source that feeds the mobile computer to work. It also supplies the backup battery on main board to retain the data stored in DRAM. Hence when main battery level gets low, recharge it or change it as soon as possible. Most critically, back up the important data from time to time to protect your work.

MAIN BATTERY LEVEL


To check the main battery level:

- 1) Tap **Start | Settings | System | Power**  .


Power Properties window opens showing **Battery** tab page. Precise battery level is shown in percentage under the **Main battery** label.

Depending on whether the main battery is being charged, charging status will show "Battery power remaining", meaning the mobile computer is on battery power, or "Recharging state: Charging", meaning that external power is connected.

Main battery isn't being charged.

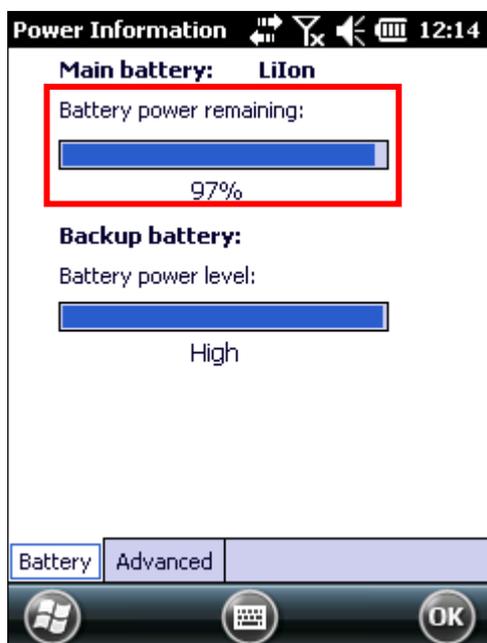


Main battery is being charged.

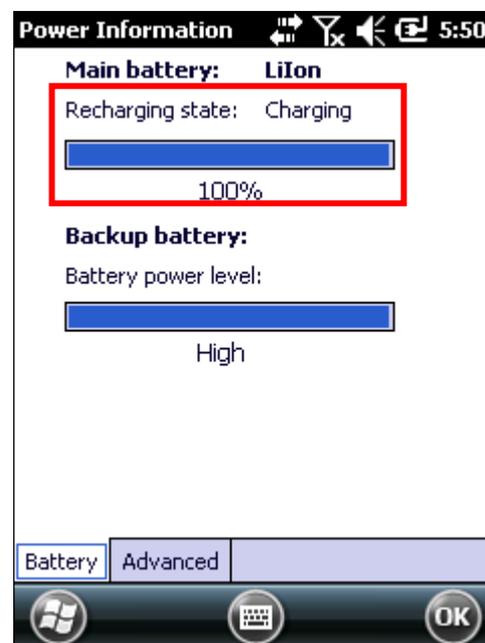

BATTERY STATUS ICONS

The OS features a couple of icons that deliver main battery status. These icons can be found on the [Title Bar](#).

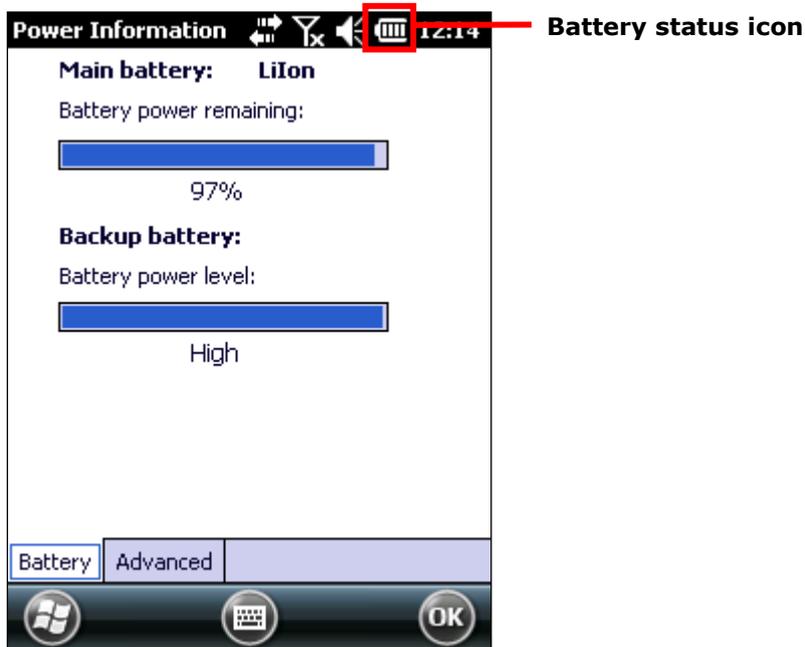


Battery level is illustrated by the following icons:

Icon	Battery Status
	Main battery is being charged from external power.
	Main battery level is 80% to full.
	Main battery level is partially drained between 60%-79%.
	Main battery level is between 40%-59%.
	Main battery level is between 20%-39%.
	Main battery has dropped between 1%-19%. Battery needs charging immediately.

LOW BATTERY ALERT

When main battery level drops below 40%, the mobile computer prompts "Main Battery Low" for a recharge. When further reduced to under 20%, the mobile computer prompts "Main Battery Very low" to solicit your immediate action.

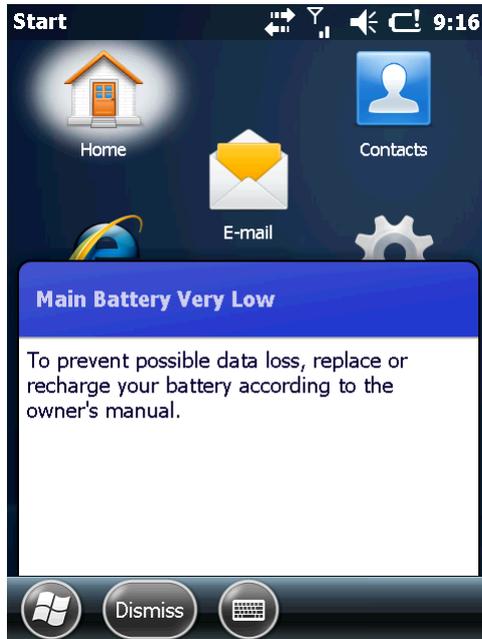

Low battery may incur shutdown to the mobile computer and cause DRAM data damage. Always save data before running short of power or keep a fully charged battery at hand for replacement.


Note: Constant usage of the mobile computer at low battery level can affect battery life. For maximum performance, recharge the battery periodically to avoid battery drain out and maintain good battery health.

When main battery drains out, the mobile computer shuts down automatically. Backup battery takes over to hold DRAM data for 30 minutes if it is fully charged. When this occurs, replace main battery pack immediately to avoid data loss.

BACKUP BATTERY LEVEL

- 1) To check backup battery level, tap **Start | Settings | System | Power**  .

On **Battery** tab page of **Power Properties** window, backup battery level is summarized as “Good”, “Low” or “Very Low” under the **Power** label.

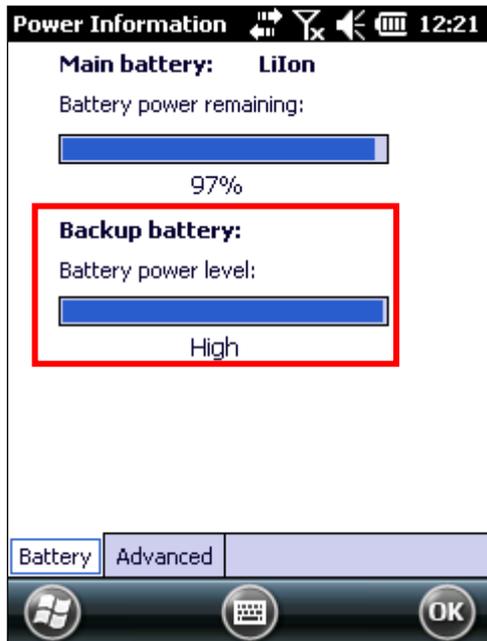


Backup battery level descriptions are as follows:

Description	Battery Status
High	Backup battery level is good.
Low	Backup battery level is low. Charging is recommended.
Critical	Backup battery level is very low and needs to be charged immediately.

LOW BATTERY ALERT

When backup battery level drops to “Very Low”, the mobile computer prompts a “Backup Battery Very Low” warning to alert users that backup battery level is almost drained out.

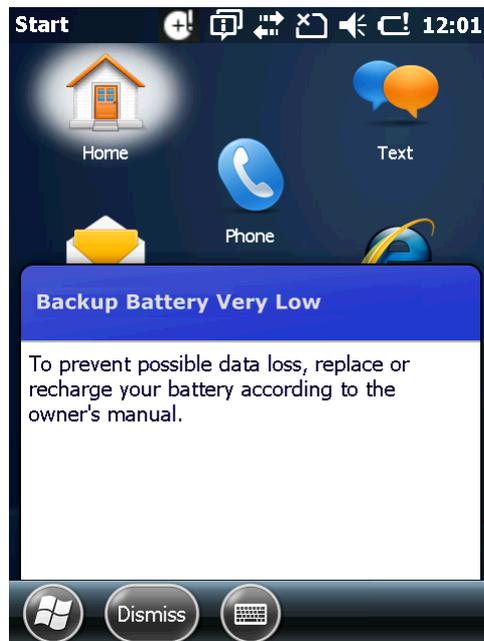

Backup battery is rechargeable by the main battery pack. Low backup battery puts DRAM data in great danger. Remember to save data from time to time or keep a fully charged battery at hand for replacement.

Once backup battery drains out completely, the data in DRAM is gone. Any data that has not been saved will be lost!

1.4.4. POWER MANAGEMENT

Power issues are critical for portable devices. Always turn off the features you don't need on the mobile computer in order to save power. To extend battery life as long as possible, always take the following actions:

- ▶ Suspend the mobile computer when it isn't actively in use. See [Suspend Mobile Computer](#)
- ▶ Turn down LCD backlight brightness as described in [Adjust Backlight](#), and set a shorter LCD timeout as described in [Auto-Suspension](#)
- ▶ Auto Sync the mobile computer with your PC less frequently. See [Direct Data Communication](#)
- ▶ If you are using any “push e-mail” or any automatic syncing service on the mobile computer, change the syncing schedule to manually check updates
- ▶ When Wi-Fi or Bluetooth isn't in use, turn it off. See [Radios](#)

1.5. KEYPAD

The mobile computer has a physical keypad and a touch screen to receive user's input. Among the two, the touch screen provides more intuitiveness in interacting with the device.

This section shows how to input text using physical keypad and on-screen keyboard. To know how to operate the mobile computer using the touch screen, see [Touch Control](#).

1.5.1. PHYSICAL KEYPAD

The physical keypad, which receives supplementary backlight along with the screen, comes in three formats: 30-key, 38-key and 53-key. Each type of keypad wedges a set of "enhanced keys" along the top and a set of character keys at the lower half. All keypads support multi-key operation, which normally requires two keys hit simultaneously, one of which is a modifier key. The keypads are equally capable of entering numbers, letters, symbols and punctuation marks, and delivering function keys.



Figure 6: 30-key numeric keypad



Figure 7: 38-key numeric & function keypad



Figure 8: 53-key alphanumeric keypad

NUMERIC KEYPAD (30-KEY)

The numeric keypad possesses 30 keys, including the number keys 0-9, and Esc, Ctrl, Space, Backspace, Enter and period key (.). Also featured are function keys F1 to F4. The power key is seated at the lower right corner of the keypad.

The orange Function key  and blue Alpha key  are modifier keys located under the Basic keys, and can be used to change the keypad input mode. The Alpha key  can be used to enter numbers 2-9 or letters A-Z, or trigger the Shift key, and the Function key , with accompanied use of other keys, can be used to produce function keys (F5 to F12), adjust volume and touch screen backlight, or lock the keypad.



NUMERIC & FUNCTION KEYPAD (38-KEY)

The numeric and function keypad possesses function keys (F1 to F10) which can assist usage in special applications. The keypad provides number keys 0-9, as well as Esc, Ctrl, Space, Backspace, Enter key, period key (.) and comma key (,). The power key is also seated at the lower right corner of the keypad.

The numeric and function keypad also features a blue Alpha key , Shift key  and orange Function key . When triggered, the Alpha key  can be used to enter letters A-Z. The Shift key  is located right below the Alpha key, and is used to change alphabetic input to uppercase. The Function key  is seated on the lower end of the keypad, and extends the number of Fn keys to F14. It can also be used with other keys to produce function keys (F11 to F14), adjust volume and touch screen backlight, or lock the keypad.




ALPHANUMERIC KEYPAD (53-KEY)

The 53-key alphanumeric keypad features three available configurations which can be applied in connection sessions to different host terminals. All three keypad configurations feature the letter keys A-Z and number keys 0-9, Esc key, Ctrl key, Backspace key, Shift key, Enter key, period key (.) and comma key (,). The power key is located near the upper right corner of the keypad.

As for modifier keys, the alphanumeric keypads are equipped with a blue Alpha key  and Shift key . The Alpha key combined with other keys on the keypad can enter a variety of symbols, or adjust volume and touch screen backlight. It can also be used to trigger the Alt key, function keys F1-F10, and enter other text editing keys (tab leftward and rightward). As for the Shift key, it allows entering of Shift+1, 2, 3...10. In addition, it locks the keypad when used with the Backspace key.

Note: The three configurations of the 53-key keypad are functionally identical. However when CipherLab's Terminal Emulation or other terminal emulation software is running on the device, each of the three configurations features different commands for application during host sessions.

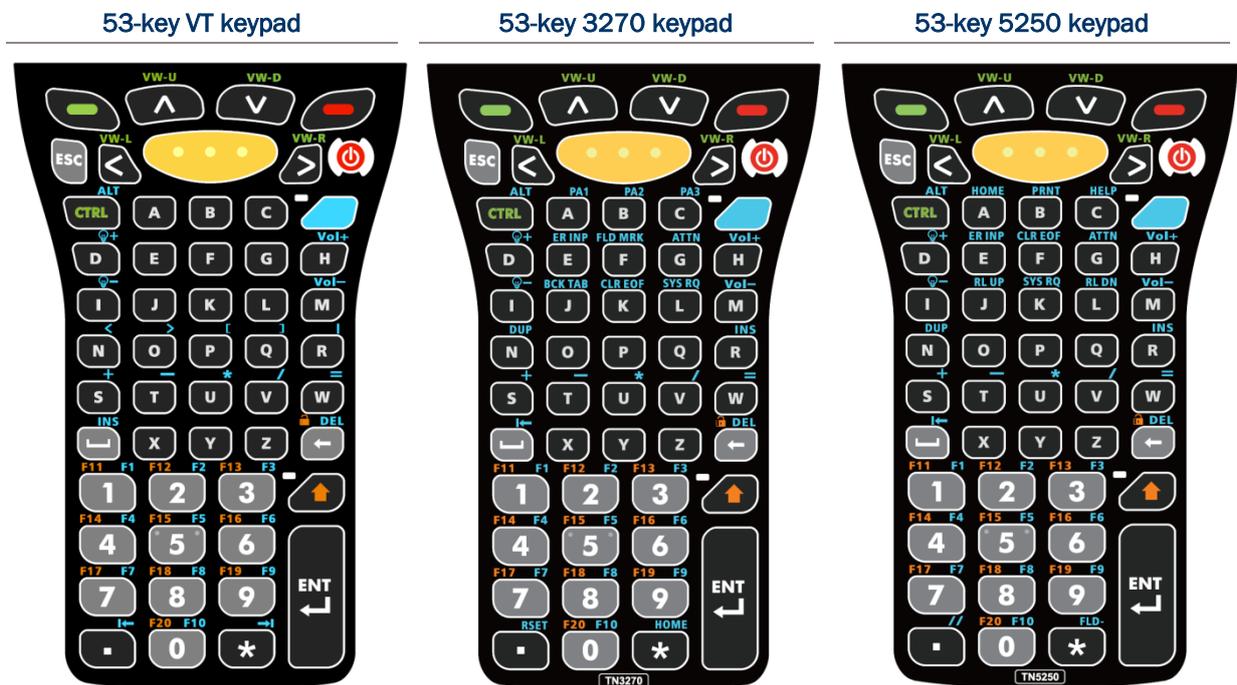

BASIC KEYS

These are a set of keys kept at the top of the keypad throughout all three keypad types.

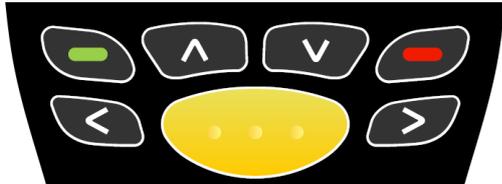


Figure 9: Basic keys

Basic keys deliver the following functions:

Key	Description
SCAN KEY 	Press the scan key to read a barcode in place.
ARROW KEYS 	The arrow keys are circled around the center scan key. These can be used to move the cursor up, down, left or right during text input, or move between items in certain applications.
GREEN/RED KEY 	By default, these two keys input the functions F14 and F15. You may also define their new key functions using CipherLab's Button Assignment.

MODIFIER KEYS

The keypads have five different modifier keys integrated on it. The key trigger and recovery methods differ slightly according to keypad type.

Key	Keypad	Key Location	How to enter	How to resume
Alpha (Blue)	30-key	Available on keypad 	Press Alpha key once to enter Alpha Lock mode	Press Alpha key once more to return to default input mode
	38-key	Available on keypad 		
	53-key	Available on keypad 		
Function (Orange)	30-key	Available on keypad 	Press Fn key once to enter Fn mode	Keypad returns to default input mode upon pressing any button engraved in orange <ul style="list-style-type: none"> ▶ If Alpha key is pressed, keypad will return to Alpha mode until Alpha key is pressed again
	38-key	Available on keypad 		
	53-key	Not available		

Shift	30-key	Available under Alpha mode 	Under Alpha mode, press the period key (.) once to enter Shift mode Under Alpha mode, press the period key (.) twice to enter Shift Lock mode	Under Shift mode, keypad returns to default input mode upon pressing any button Under Shift Lock mode, keypad returns to default input mode upon pressing Shift key once more, or upon pressing Ctrl or Alt key
	38-key	Available on keypad 	Press Shift key once to enter Shift mode	
	53-key	Available on keypad 	Press Shift key twice to enter Shift Lock mode	
Ctrl	30-key	Available on keypad	Press Ctrl key once to enter Ctrl mode	Keypad returns to default input mode upon pressing any button
	38-key	Available on keypad	▶ Press Ctrl key first, then press the key to deliver the Ctrl function to.	
	53-key	Available on keypad		
Alt	30-key	Available under Alpha mode	Press Alt key once to enter Alt mode	Keypad returns to default input mode upon pressing any button
	38-key	Available under Fn mode	▶ Press Alt key first, then press the key to deliver the Alt function to.	
	53-key	Available under Alpha mode		

ALPHA KEY

The Alpha key is equipped with an LED indicator. When the Alpha key is pressed, the LED will light up in blue to indicate that Alpha key is activated. The 30-key and 38-key keypads enter Alpha lock mode when Alpha key is pressed, and only when Alpha key is pressed once more will the LED go off, and thus the keypad returns to default input mode. The 53-key keypad enters Alpha mode when Alpha key is pressed, and the Alpha key LED goes off and the keypad returns to default input mode once another key is pressed.

The Alpha key delivers the following functions on each of the keypads:

Keypad	Alpha key	Key Function
30-key		<ul style="list-style-type: none"> ▶ Under Alpha mode, press number keys 2-9 to enter lowercase letters a-z ▶ Under Alpha mode, press number keys 0 and 1 to enter punctuation marks ▶ Under Alpha mode, press period key to enter Shift mode, in which pressing number keys 2-9 enters uppercase letters A-Z, and pressing arrow keys moves the cursor up, down, left and right
38-key		<ul style="list-style-type: none"> ▶ Under Alpha mode, press arrow keys, number keys 0-9, Function keys F1-F10 and punctuation keys to enter lowercase letters a-z ▶ Under Alpha mode, press Shift key to enter Shift mode, in which pressing arrow keys, number keys 0-9, Function keys F1-F10 and punctuation keys enters uppercase letters A-Z

53-key		<ul style="list-style-type: none"> ▶ Under Alpha mode, press letter keys A-Z to enter symbols, adjust volume or touch screen backlight ▶ Under Alpha mode, press Ctrl key to trigger Alt mode ▶ Under Alpha mode, press Space/Backspace key to Insert/Delete ▶ Under Alpha mode, press number keys 0-9 to trigger function keys F1-F10 ▶ Under Alpha mode, press period key (.) or asterisk key (*) to move to the previous or next tab spot
--------	---	---

Note: Alpha mode can coexist with Function mode. When both modes are active, the dominant mode depends on the last pressed key. If you press Function key and then press Alpha key, Alpha mode will be the effective for the next pressed key.

SHIFT KEY

The Shift key is equipped with an LED indicator. When the Shift key is pressed once, the LED will light up in green to indicate that Shift mode is activated. The LED goes off when another key is pressed and the keypad returns to default input mode. When the Shift key is pressed twice, the keypad will enter Shift lock mode and the LED will stay lit until Shift key is pressed once more.

The Shift key delivers the following functions on each of the keypads:

Keypad	Shift key	Key Function
30-key	 (Alpha mode)	<ul style="list-style-type: none"> ▶ Under Alpha mode, press Shift key to enter Shift mode, and press number keys 2-9 to enter uppercase letters A-Z ▶ Under Alpha mode, press Shift key to enter Shift mode, and press arrow keys to move the cursor up, down, right or left ▶ Under Alpha mode, press Shift key to enter Shift mode, and press F1 +F4 to enter Shift+F1 to F4
38-key		<ul style="list-style-type: none"> ▶ Under Shift mode, press number keys 0-9 to enter Shift+0-9 ▶ Under Shift mode, press arrow keys to move the cursor up, down, right or left ▶ Under Shift mode, press Green key/Red key to enter Shift+F14/F15 ▶ Under Shift mode, press F1 to F10 to enter Shift+F1 to F10 ▶ Under Alpha mode, press Shift key to enter Shift mode, and press arrow keys, number keys 0-9, function keys F1 to F10, period key and comma key to enter uppercase letters A-Z
53-key		<ul style="list-style-type: none"> ▶ Under Shift mode, press letter keys a-z to enter uppercase letters A-Z ▶ Under Shift mode, press 0-9 to trigger function keys F11 to F20 ▶ Under Shift mode, press Backspace key to lock the keypad

Note: If you are using the on-screen keyboard, tap CAP (Caps Lock) to switch between uppercase and lowercase alphabetic modes.

FUNCTION KEY

The Function key is equipped with an LED indicator. When the Function key is pressed, the LED will light up in orange to indicate that Function key is activated. When Function key is pressed once more, the LED will go off and the keypad will return to default input mode.

The Function key delivers the following functions on each of the keypads:

Keypad	Fn key	Key Function
30-key		<ul style="list-style-type: none"> ▶ Under Function mode, press number keys 1-4 and function keys F1-F4 to enter function keys F5-F12 ▶ Under Function mode, press other number keys to adjust volume, touch screen backlight or enter a hyphen (-) ▶ Under Function mode, press arrow keys to deliver Home, End, Page Up, Page Down ▶ Under Function mode, press Ctrl key to activate Alt key ▶ Under Function mode, press Backspace to lock the keypad ▶ Under Function mode, press space key to open the Start screen
38-key		<ul style="list-style-type: none"> ▶ Under Function mode, press number keys 1-4 and function keys F1-F4 to enter function keys F11-F14 ▶ Under Function mode, press other Fn keys to adjust volume, touch screen backlight ▶ Under Function mode, press arrow keys to deliver Home, End, Page Up, Page Down ▶ Under Function mode, press Ctrl key to activate Alt key ▶ Under Function mode, press Backspace to lock the keypad ▶ Under Function mode, press space key to open the Start screen
53-key	Not available	None

Note: Function mode can coexist with Alpha mode. When both modes are active, the dominant mode depends on the last pressed key. If you press Alpha key and then press Function key, Function mode will be the effective for the next pressed key.

KEYPAD LOCK

All three keypads feature a keypad lock mode, which can be triggered by pressing a hot key combination. When the keypad lock mode is triggered, all keys on the keypad will become locked to prevent any accidental pressing of keys. A keypad lock icon  will appear on the title bar to indicate keys are currently locked.

To release the keypad lock mode, press the keypad lock hot key combination again. The input mode on the mobile computer will return to default state.


To trigger or release keypad lock mode:

- ▶ On the 30-key keypad, press the Function key followed by the backspace key
- ▶ On the 38-key keypad, press the Function key followed by the backspace key
- ▶ On the 53-key keypad, press the Shift key followed by the backspace key

Note: Under keypad lock mode, the only available keys aside from the keypad lock button itself are the power key and scan keys.

INPUT MODE ICONS

When the Shift key, Alpha key and Function key are pressed, corresponding icons will appear on the title bar to indicate the current input mode.

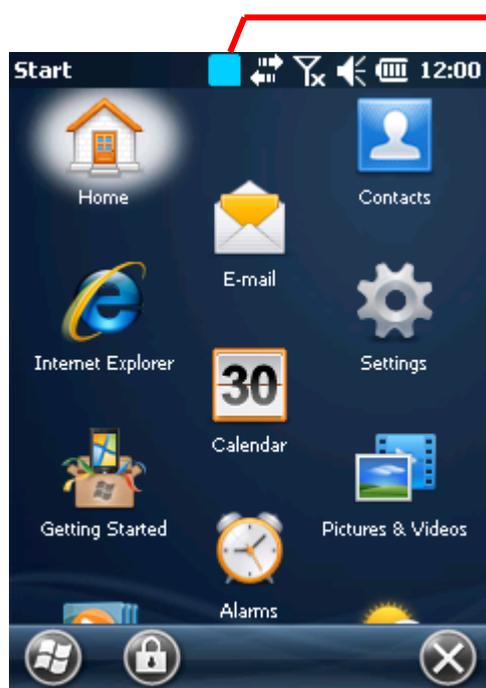

When the input mode is changed, a corresponding icon will appear on the title bar

Icon	Description	Trigger and Withdrawal
No icon	<ul style="list-style-type: none"> ▶ 30-key keypad enters numbers 0-9 and function keys F1-F4 ▶ 38-key keypad enters numbers 0-9 and Function keys F1-F10 ▶ 53-key keypad enters numbers 0-9 and lowercase letters a-z 	Default mode. This mode remains until Alpha key, Shift key or Function key is pressed.
	<ul style="list-style-type: none"> ▶ 30-key keypad enters one uppercase letter A-Z ▶ 38-key keypad enters one symbol. When Alpha key is pressed, 38-key keypad enters one uppercase letter A-Z ▶ 53-key keypad enters one uppercase letter A-Z. When Alpha key is pressed, 53-key keypad enters one symbol 	<ul style="list-style-type: none"> ▶ On the 30-key keypad, press Alpha key to enter Alpha mode, then press the period key [.] ▶ On the 38-key keypad and 53-key keypad, press Shift key once to enter this mode Returns to default input mode once a key is pressed.
	<ul style="list-style-type: none"> ▶ 30-key keypad enters uppercase letters A-Z ▶ 38-key keypad enters symbols. When Alpha key is pressed, 38-key keypad enters uppercase letters A-Z 	<ul style="list-style-type: none"> ▶ On the 30-key keypad, press the Alpha key to enter Alpha mode, then press the period key [.] ▶ On the 38-key keypad and 53-key keypad, press Shift key twice to enter this mode


	<ul style="list-style-type: none"> ▶ 53-key keypad enters uppercase letters A-Z. When Alpha key is pressed, 53-key keypad enters symbols 	<ul style="list-style-type: none"> ▶ On the 30-key keypad, press the period key [.] once more to return to Alpha mode, or press the Alpha key to return to default input mode ▶ On the 38-key keypad and 53-key keypad, press Shift key once more to return to default input mode
	<ul style="list-style-type: none"> ▶ 30-key keypad enters lowercase letters a-z engraved in blue ▶ 38-key keypad enters lowercase letters a-z engraved in blue ▶ 53-key keypad enters symbols or key values engraved in blue 	<p>Press Alpha key once to enter this mode.</p> <ul style="list-style-type: none"> ▶ On the 30-key and 38-key keypad, press the Alpha key once more to return to default input mode ▶ The 53-key keypad returns to default input mode once a key is pressed
	<ul style="list-style-type: none"> ▶ 30-key keypad enters F5-F12 and the key values engraved in orange ▶ 38-key keypad enters F11-F14 and the key values engraved in orange 	<p>Press Function key once to enter this mode.</p> <ul style="list-style-type: none"> ▶ When Function mode is on, Shift mode and Alpha Key mode are both retained <p>Returns to default input mode once a key is pressed.</p> <ul style="list-style-type: none"> ▶ If the Alpha key is pressed next, the system will enter Alpha input mode
	<p>The function of the Alt key is delivered along with another key. For instance, press Ctrl and then press the letter a in order to deliver Ctrl+a.</p>	<p>Press Ctrl key once to trigger this mode.</p> <p>Returns to default input mode once a key is pressed.</p>
	<p>The function of the Alt key is delivered along with another key. For instance, press Alt and then press the letter a in order to deliver Alt+a.</p>	<ul style="list-style-type: none"> ▶ On the 30-key and 38-key keypad, press the Function key first, then press the Ctrl key ▶ On the 53-key keypad, press the Shift key first, then press the Ctrl key <p>Returns to default input mode once a key is pressed.</p>

1.5.2. ON-SCREEN KEYBOARD

The OS provides users with an on-screen keyboard. The on-screen keyboard supports entering a series of diacritics for European languages by tapping a modifier key.

The on-screen keyboard auto-opens in some applications when a text input field is selected.

In case the on-screen keyboard doesn't open automatically, tap the keyboard icon  on the softkey bar. When opened, the on-screen keypad is ready to enter lowercase letters, numbers, and a few frequently used symbols.

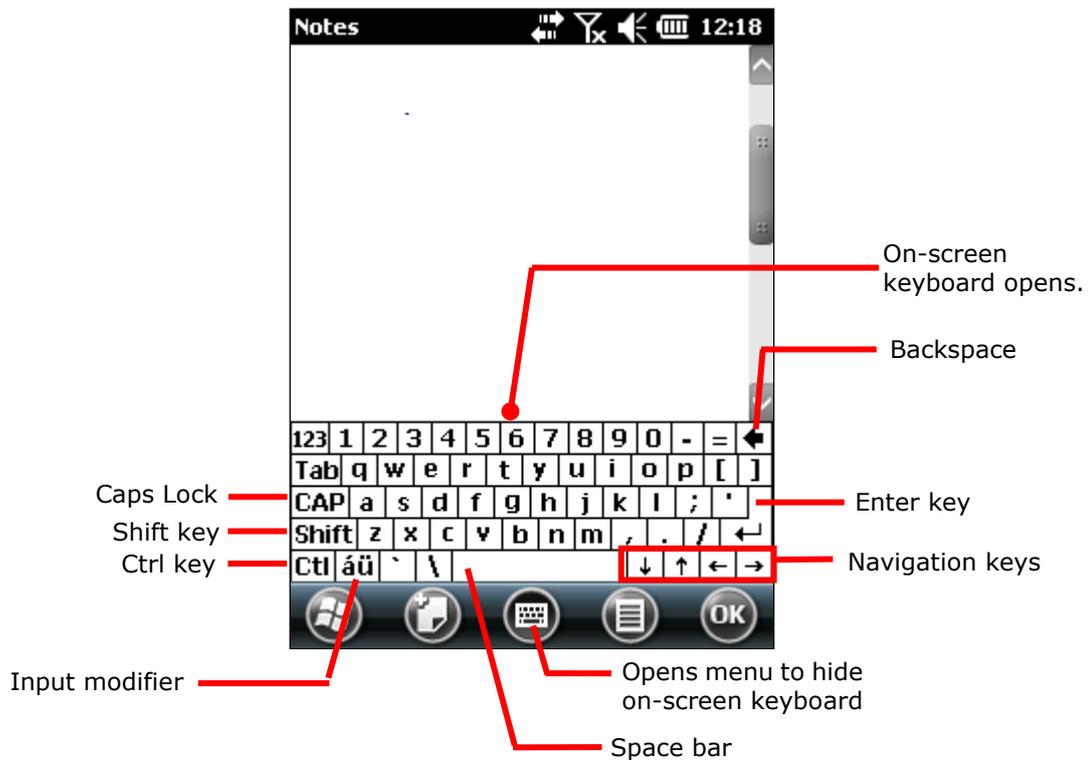

MODIFIER KEYS

Although the touch screen is a resistive single-touch type, use of modifier keys, which normally involves hitting two keys, are still available on the on-screen keyboard.

On the on-screen keyboard there are four modifier keys, which are seated at the left edge. These keys work as follows:

- 1) Press a modifier key on on-screen keyboard.


The on-screen keyboard enters modifier state.

- 2) Press the second key.

The desired performance will be produced in the active application or on the screen open at the moment.


Modifier keys are explicated as following

Key	Description
Ctrl key Ctrl	Once tapped, it becomes color-inverted Ctrl and causes a special action from OS or the active application when a character key is tapped. It quits once the said action is triggered or when it is tapped again. For example: Tap Ctrl key and then tap key "A" to produce Ctrl+A function, which in Windows environment usually selects all content on the active screen. Once "A" is tapped, the on-screen keyboard quits Ctrl state.
Shift key Shift	Once tapped, it becomes color-inverted Shift and capitalizes the letter typed. It quits once a character key is tapped or it is tapped again. To enter all caps, use Caps Lock CAP .
Caps Lock CAP	Once tapped, it becomes color-inverted CAP and capitalizes all the alphabetic characters typed. It doesn't quit until it is tapped again. This key does not affect numbers, punctuation marks, or symbols.
Input modifier áü	Once tapped, it becomes color-inverted áü and presents a series of accented vowels such as ä, æ, ë, ï, ö, ú or letter variants such as ß and ç which are needed for European languages. It quits once a character key is tapped.

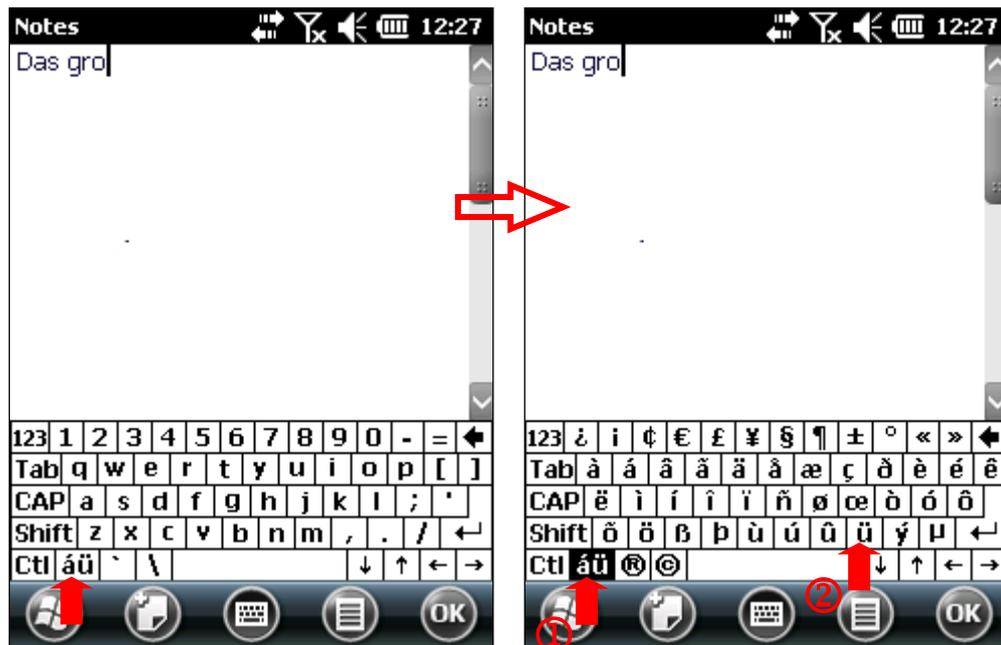

Tap **áü** key on on-screen keyboard.


áü key becomes color-inverted **áü**. Then tap a character key.

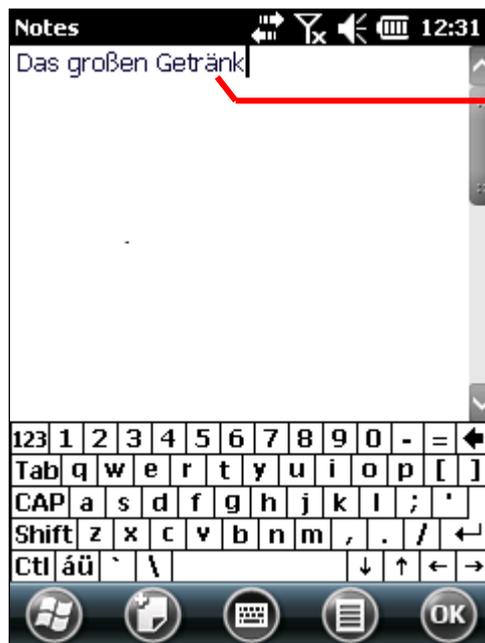

Letter variant "ü" is entered

After the letter variant "ü" is entered, the on-screen keyboard restores to normal English alphanumeric layout.

Diacritical letters and letter variants are presented both in lowercase and uppercase.

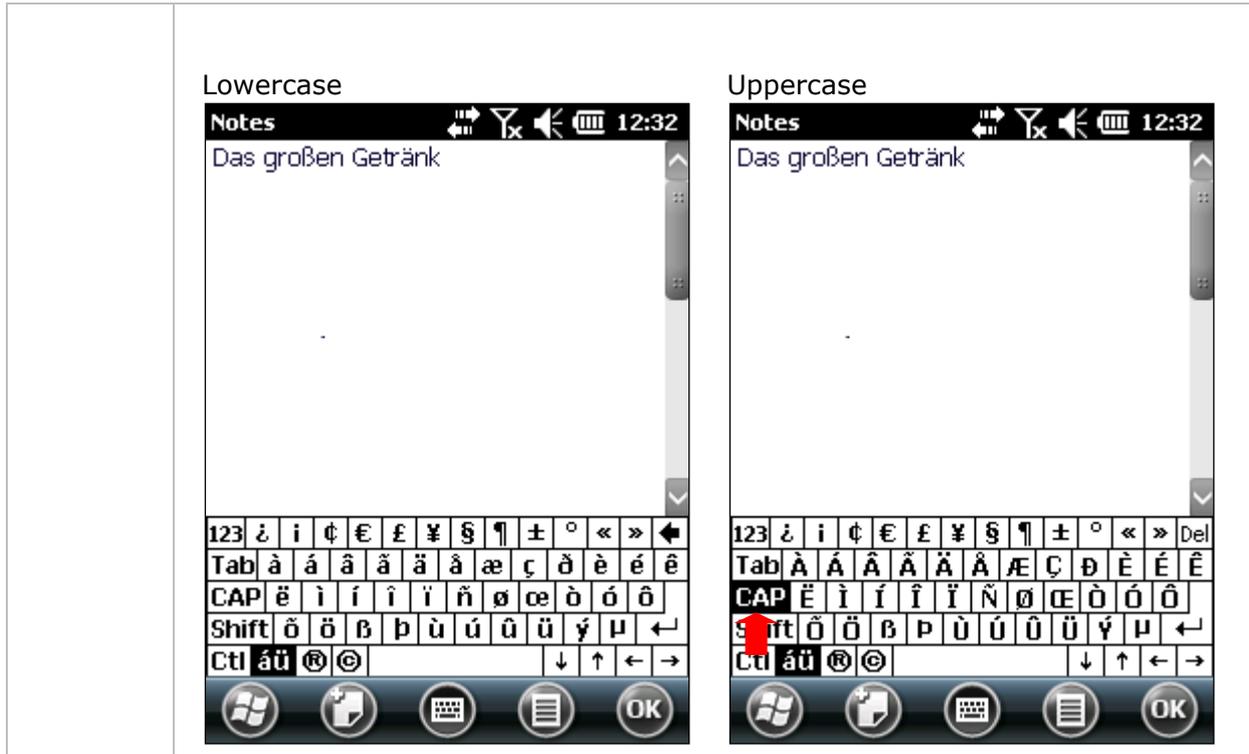


OTHER KEYS

Key	Description
Tab key 	Navigates among the highlight items in some applications. For text input, it inserts Tab character, which means it moves caret to the next tab stop.
Backspace 	Erases the characters to the left of caret.
Enter key 	Executes a command or confirms input. When text input, it inserts a break between paragraphs.
Navigation keys 	Move caret in an input field. In certain applications, they navigate vertically or horizontally among highlight items.
Spacebar 	Inserts a blank space where caret is.

CHANGE KEYBOARD ORIENTATION

The mobile computer is built-in with a G-sensor and supports screen orientation, which is enabled by default. So when the mobile computer turns sideways or upright, the screen changes its orientation, and on-screen keyboard also readjusts itself to the new orientation.

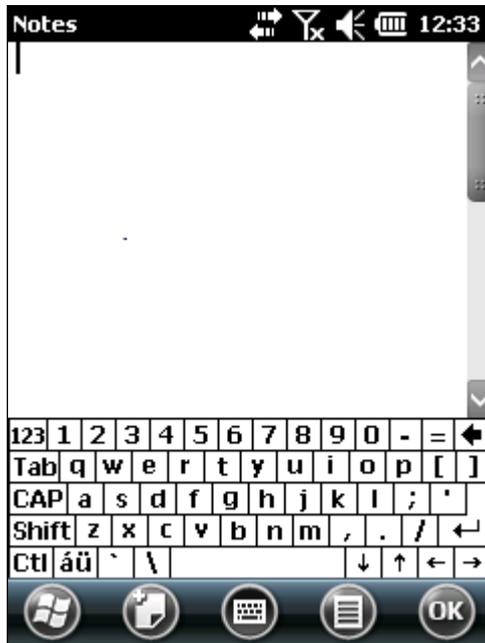

Upright (Portrait Mode)



Sideways (Landscape Mode)

To disable automatic screen rotation, see [Screen Orientation](#).

1.5.3. EDIT TEXT

On the mobile computer, cut, copy, and paste text within an application or across applications by the menu commands. Some applications don't support editing some or all of the text they display while others may offer their own way to edit text.

EDIT TEXT IN INPUT FIELDS

To edit text in a text input field:

- 1) Tap where you want to edit text.

Caret moves to the desired place and manifests itself as a vertical bar that blinks to indicate where the typed or pasted text will be inserted.

- 2) Type, paste or delete text.

To paste text, see [Paste Text](#).

SELECT TEXT

When you see some text on a page you want to copy, select it first by tapping and dragging the caret so the desired text is highlighted.

CUT OR COPY TEXT

After a text is selected, tap the **Edit** menu on the title bar of the active window to open an option menu that includes **Copy/Cut** commands. Tap them to copy/cut the selected text.

PASTE TEXT

Within the OS, texts can be copied to and from certain applications.

To paste text:

- 1) Tap the text field where you want to paste the text.
- 2) Tap the **Edit** menu on the title bar of the active window and select the **Paste** command.

1.6. TOUCH CONTROL

The mobile computer's LCD is overlaid by a resistive touch panel and thus forms a resistive touch screen. Since a resistive touch screen locates the user's touch by the force applied on it, by operating with the stylus one can apply minimum force to trigger actions from the touch screen.

Touch control is one of the main ways to interact with the mobile computer. It provides the ability to manipulate icons, buttons, menu commands, the on-screen keyboard, or any on-screen items.

1.6.1. USE TOUCH SCREEN

The mobile computer comes with a stylus. Use it to touch-operate the mobile computer. Apply the gestures below to work on the touch screen:


- ▶ **Tap** – Touch any item on the screen such as an application icon or a setting icon to work on it, or touch any key on the on-screen keyboard to type it.
- ▶ **Tap and hold** – Touch an item on the screen and do not release until an action occurs.
- ▶ **Drag** – Touch and hold an item for a moment and then, without release, move the item on-screen until you reach the target.
- ▶ **Double-tap** – Touch quickly twice on certain screens to zoom. For example, double-tap a section of a webpage in a web browser to zoom that section so it fits the width of the screen. Some applications such as map-info applications support picture zooming with double-tap.
- ▶ **Rotate screen** – On most screens, the screen rotates as the mobile computer changes its orientations between upright and sideways.

1.6.2. SCREEN ORIENTATION


The mobile computer has a built-in G-sensor for screen orientation. In order to enable automatic screen orientation:

- 1) Tap **Start | Settings | System | Screen Rotation** .

Screen Rotation window opens with three orientation modes to select from and an option to suspend the mobile computer when the screen is facing down.

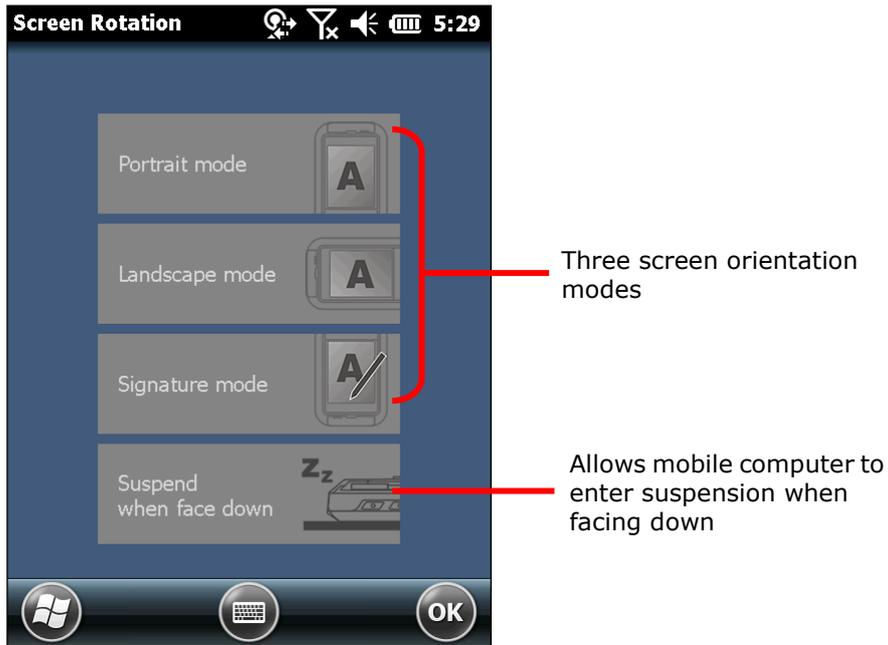

- 2) Tap the modes that you wish to enable. The tapped item will light up to indicate it is currently enabled.

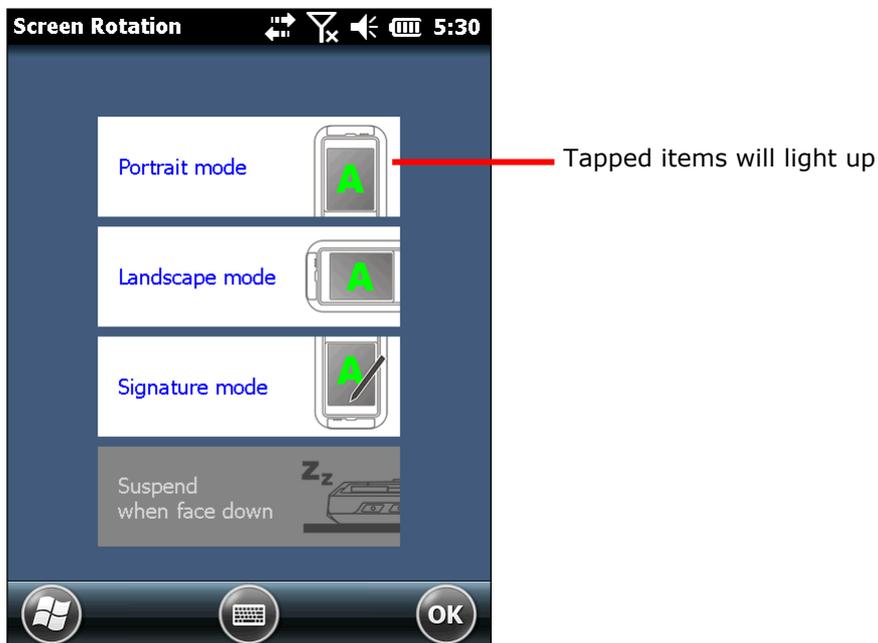

- 3) Tap **OK** on the title bar to apply the changes.

The mobile computer will then automatically switch between the enabled modes according to its physical orientation. For instance, if **Portrait** and **Landscape** modes are enabled, the touch screen will switch between upright and sideways view according to the user's holding position. However, if only **Portrait** (upright) mode is enabled, the touch screen will stay in upright mode regardless of the mobile computer's orientation.

SIGNATURE MODE

The signature mode is for combined usage with the CipherLab application **Signature**. With this mode enabled, the screen will immediately rotate 180° when the front of the mobile computer is tilted outwards, which is convenient for signing by a second party.

Note: If no modes are selected in **Screen Rotation**, the mobile computer's touch screen will be fixed in portrait mode.

1.6.3. ADJUST BACKLIGHT

Screen backlight can be adjusted manually or automatically. Upon shipping, the mobile computer is set to automatic adjustment, which helps save power. Alternatively you can set the backlight manually according to your preferences.


MANUAL BACKLIGHT ADJUSTMENT

To adjust screen backlight:

- 1) Tap **Start | Settings | System | Backlight Setting** .

Brightness tab page opens with a checkbox to enable manual backlight setting, and a slider bar for setting screen backlight level.

By default, **Manual backlight setting** is checked, and screen and keypad backlights will stay at the set level and will not adjust automatically. When **Manual backlight setting** is unchecked, the light sensor embedded on the front of the mobile computer will detect current lighting environments, and screen and keypad backlights will adjust automatically according to the backlight profiles set under the **Profile** tab page.

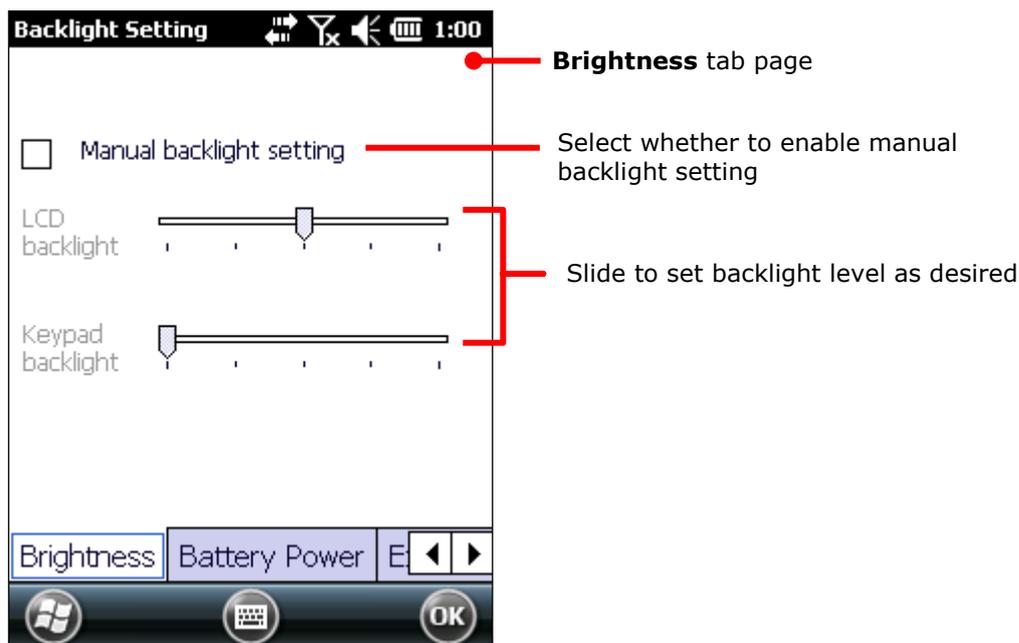

- 2) Tap **Save** in the lower right corner to apply the settings.

AUTOMATIC BACKLIGHT PROFILES


The mobile computer stores three backlight profiles to represent backlight level under different environments. These can be configured according to user's likings.

To set backlight profiles:

- 1) Tap **Start | Settings | System | Backlight Setting** .
- 2) Uncheck **Manual backlight setting** to enable profile function.
- 3) Switch to the **Profile** tab page.

Three profiles, **Dark**, **Bright**, and **Brightest** are available in the drop-down box. Select the profile you would like to modify and use the slider bar below to set the backlight levels to your preferences. The screen backlight will change temporarily to show the effect.

To restore profile settings to default, tap the **Default** button at the top right corner.

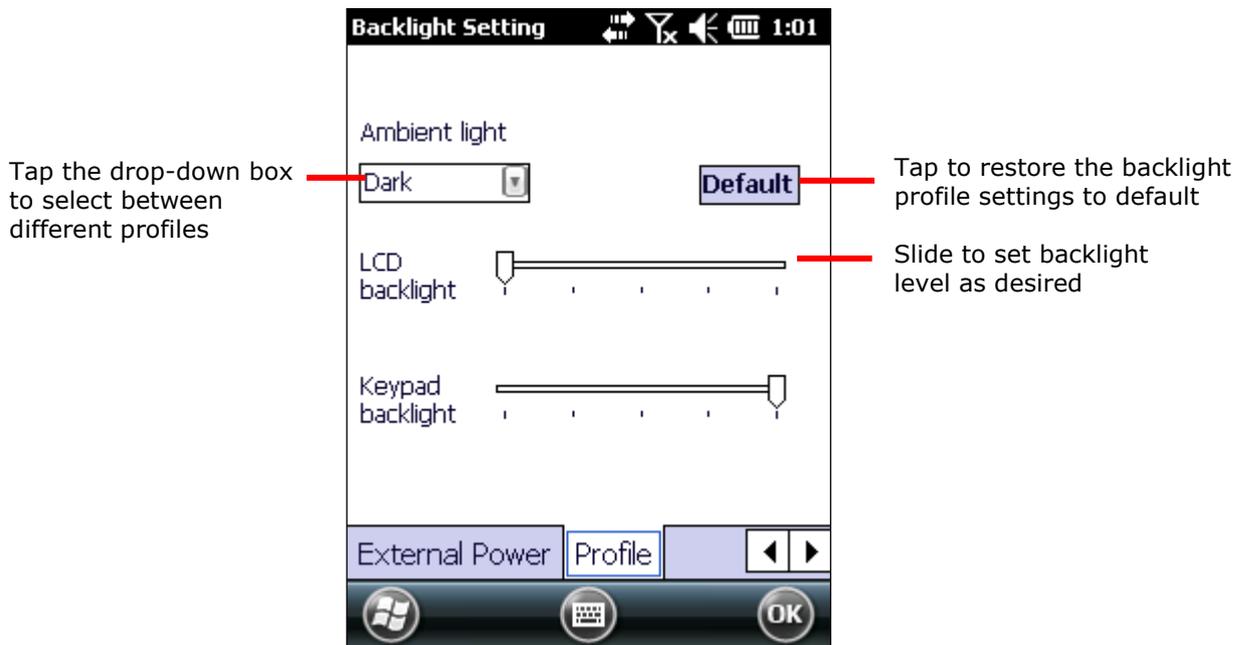



- 4) Tap **Save** in the lower right corner to apply the settings.

1.6.4. CALIBRATION

A resistive touch screen needs calibration to work accurately after serving for a period of time. Calibration aligns the coordinates of the touch panel and the LCD underneath to improve touch accuracy.

To calibrate the touch screen:

- 1) Tap **Start | Settings | System | Screen** .
- 2) Tap **General** tab page. Tap **Align Screen** button to open the calibration screen.

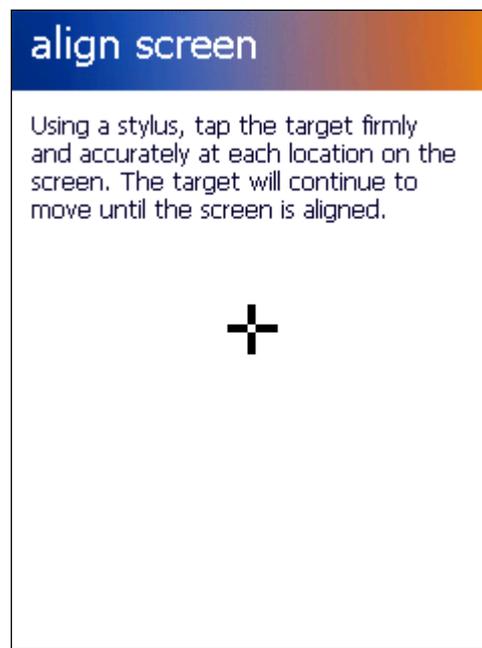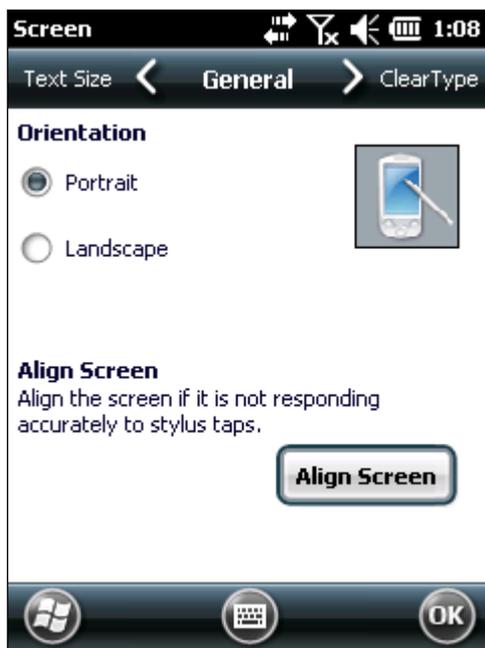

- 3) Using the stylus, tap firmly at the center of the cross that appears on-screen. Five crosses will appear in sequence.

Follow the on-screen instructions to save the new calibration settings or restore the old settings. Once completed, the screen returns to **General** tab page.

1.7. MEMORY

The mobile computer packs the following memory units to retain data and instructions from users:

- ▶ **Internal Storage: Random-access Memory (RAM) and Flash memory**
 - 512 MB SDRAM for temporary storage and fast access of active applications. When the main battery pack is absent, SDRAM is fed by backup battery to retain data.
 - 4GB flash memory to store OS (Windows Embedded Handheld 6.5), application files, settings, and other data used by applications.
- ▶ **External Storage**
 - Insert a storage card to increase the mobile computer's storage capacity. Supported are MicroSDHC cards up to 32GB.

1.7.1. DATA LOSS CAUTION

When main battery is absent or used up, backup battery on the main board takes over to supply power to the mobile computer. A fully charged backup battery retains SDRAM data and suspends the mobile computer for 30 minutes.

Note if you are leaving the mobile computer to sit for a couple of days, data loss will occur when both main and backup batteries drain out. Consider backing up data before putting away the mobile computer.

1.7.2. CHECK STORAGE


INTERNAL STORAGE

To check internal storage size:

- 1) Tap **Start** | **Settings** | **System** | **System**

Information . The application opens revealing information about the mobile computer's assemblage and hardware/firmware components, including device manufacturer, device ID, memory size, and firmware/software version. RAM and Flash size are also listed among this info.

Expand to view information on memory size

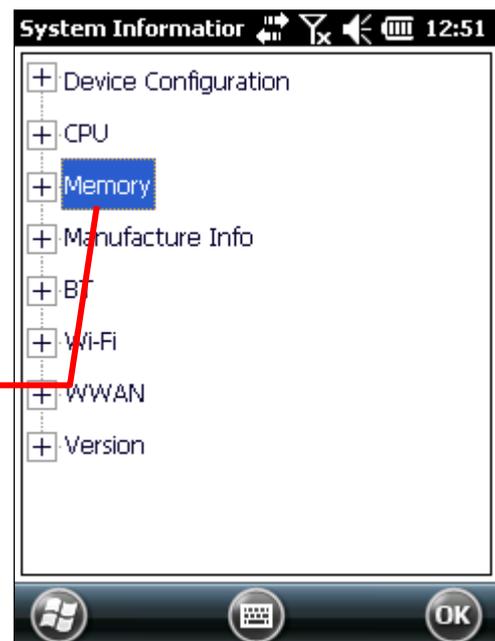

EXTERNAL STORAGE

Tap **Start | Settings | System | Storage Information** . The **Storage Card** label shows the available space on the storage card (if no storage card is installed on the mobile computer, the available size will be displayed as 0).



1.7.3. INSERT SD CARD

Day-to-day use of the mobile computer might cause the available internal storage to run short. Equip the mobile computer with an external memory unit to expand storage capacity.

Follow the steps below to install a SD card:

- 1) Power off the mobile computer.
- 2) Place the mobile computer face-down on a flat and soft surface.
- 3) Lift up the handstrap slightly to remove the main battery pack as described in [Install/Remove Main Battery](#).
- 4) The SD card socket is equipped with a hinged cover. Push the hinged cover right and lift the cover up to open the card socket. Insert your SD card in the indicated direction .
- 5) Close the hinged cover and push the cover left to have it locked.
- 6) A plastic cover is provided for the SD card socket to prevent moisture accumulation. Press the plastic cover down to secure it on top of the SD card socket.
- 7) Replace the main battery pack.

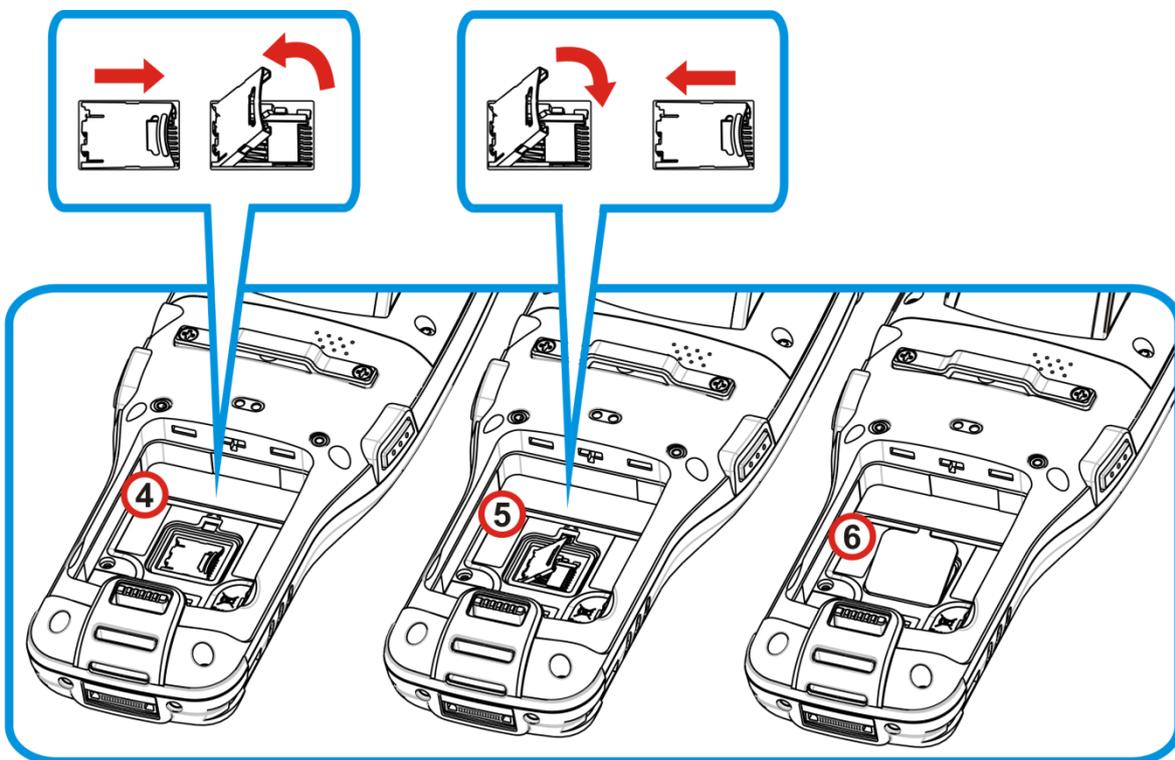


Figure 10: Inserting SD Card

1.8. DIRECT DATA COMMUNICATION

“Direct” data connection means “hardwired” data connection between the mobile computer and a Windows-based PC as opposed to wireless connection. Direct data connection relies on a RS-232 cable or a USB cable (sometimes plus an auxiliary cradle) between the two mentioned devices. Once the mobile computer and PC are “directly” connected with each other by a RS-232 or USB-cable, they can sync data with each other.

1.8.1. USE SNAP-ON CABLE

Direct data communication using a cable:

- 1) Connect the mobile computer to your PC with a Snap-on Charging and Communication Cable (either USB or RS-232 type).
- 2) To charge the mobile computer, connect an external power source to the Snap-on Cable.

- 3) On the mobile computer, tap **Start | Settings | System | USB Connection**  .
- 4) To connect the mobile computer and PC via ActiveSync or WMDC, select **ActiveSync Advanced Network Mode** or **ActiveSync Serial Mode**.

To treat the mobile computer as an external storage device, choose **Mass Storage – SD Card**. Note that **Mass Storage** is only supported when as SD card is installed on the mobile computer.

- 5) Tap **OK** on the title bar to apply the settings.

If one of the first two options is selected, ActiveSync or Windows Mobile Device Center will automatically detect connection between the two and prompt for data synchronization.

For detailed usage, see [Syncing Tools](#).

Note: The 9700 mobile computer uses COM9 for serial transmission via RS-232.



Figure 11: Direct Data Communication Using Snap-on Cable

1.8.2. USE CRADLE

Direct cradle charging makes use of a Charging & Communication Cradle (hereinafter “cradle”). The cradle is one of the accessories you can opt for.

Prior to charging, install main battery as described in [Install/Remove Main Battery](#). Then follow the steps below:

- 1) Seat the mobile computer into the cradle. Connect one end of the USB cable to the Cradle and the other end to the PC.
- 2) To charge the mobile computer, connect the cradle to an external power source using the power adapter.

3) Tap **Start | Settings | System | USB Connection** .

4) To connect to the PC via ActiveSync or WMDC, choose **ActiveSync Advanced Network Mode ActiveSync Advanced Network Mode**.

To treat the mobile computer as an external storage device, choose **Mass Storage – SD Card**. Note that **Mass Storage** is only supported when as SD card is installed on the mobile computer.

5) Tap **OK** on the title bar to apply the settings.

For detailed usage, see [Syncing Tools](#).

Note: The cradle supports USB Host Mode via a USB OTG cable.

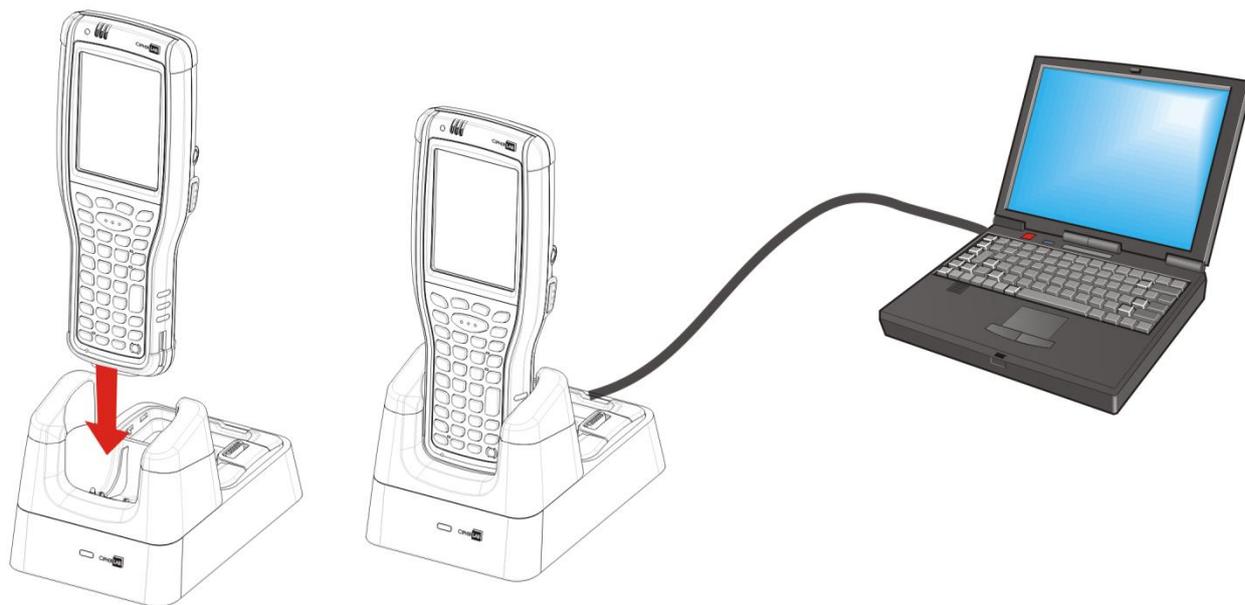


Figure 12: Direct Data Communication Using Cradle

1.8.3. SYNCING TOOLS

Microsoft's syncing tools enables users to update or back up the data on their mobile computers to desktop computers.

Two syncing tools are featured by Microsoft - ActiveSync and Windows Mobile Device Center (WMDC). Which tool to use depends on which OS is running on your PC. See the rule below:

OS	Syncing Program
Windows Vista or later	Windows Mobile Device Center 
Windows XP SP3 or earlier	ActiveSync 

ActiveSync and WMDC can be downloaded from Microsoft's website. Download and install the right one on your PC.

1.8.4. SYNC PARTNERSHIP

Once a direct connection is established between the mobile computer and your PC as described in [Use Snap-on Cable](#), they are able to form the following ties:

Sync Partnership	Services
Synchronization Relationship	<ul style="list-style-type: none"> ▶ Allows the mobile computer and PC to sync data with each other. ▶ Allows PC to add and remove programs to/from the mobile computer. ▶ Allows PC to browse files on the mobile computer. ▶ Allows PC to copy files to/from the mobile computer. ▶ Allows PC to back up the files on the mobile computer.
Temporary Relationship (Mobile computer works as a "guest" to PC)	<ul style="list-style-type: none"> ▶ Allows PC to add and remove programs to/from the mobile computer. ▶ Allows PC to browse files on the mobile computer. ▶ Allows PC to copy files to/from the mobile computer. ▶ Allows PC to back up the files on the mobile computer.

Note that data stored on external storage (the SD card) cannot be synchronized.

See [Syncing Actions to Take](#) for details about the mentioned services.

1.8.5. 1ST USB SYNC

This section will guide you through USB syncing.


CONNECT WITH ACTIVESYNC

- 1) Download ActiveSync as described in [Syncing Tools](#) and install it on your PC.
- 2) Connect the mobile computer and your PC as described in [Use Snap-on Cable](#).
- 3) On your PC, run the syncing program.

ActiveSync will detect the mobile computer. **Sync Setup Wizard** launches and prompts to set up [Sync Partnership](#) between two computers.

- 4) Click **Next** for "Synchronization Relationship", or click **Cancel** for "Temporary Relationship" if you don't plan to connect to the PC on a regular basis.


If you have clicked **Next**, follow the on-screen instructions and select the data categories you would like to synchronize. Once confirmed, synchronization will begin shortly, and when the process is finished, ActiveSync window will show "Synchronized" to indicate that the data on the mobile computer and PC are identical.

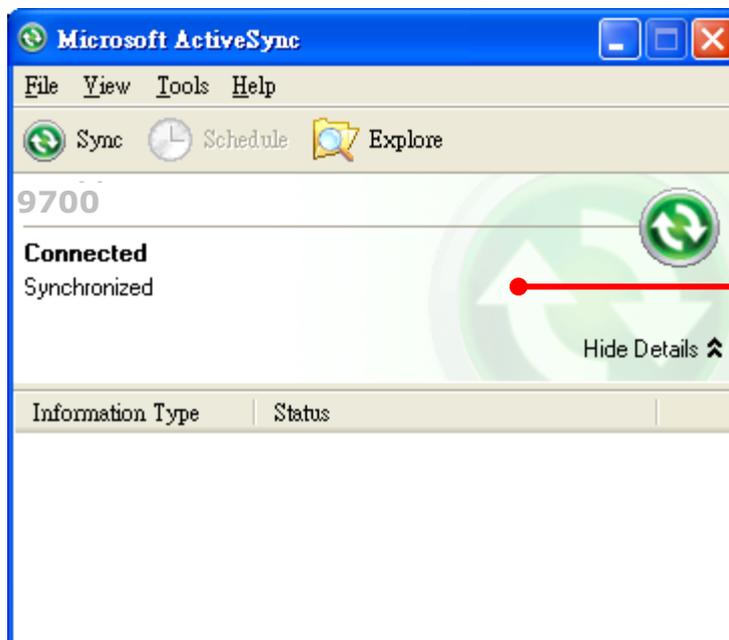

A "Synchronization Relationship" is established between the mobile computer and the PC

OR

If you have pressed **Cancel**, Microsoft ActiveSync opens showing "Guest" and "Connected". The mobile computer and the PC are connected but the data is not synchronized.

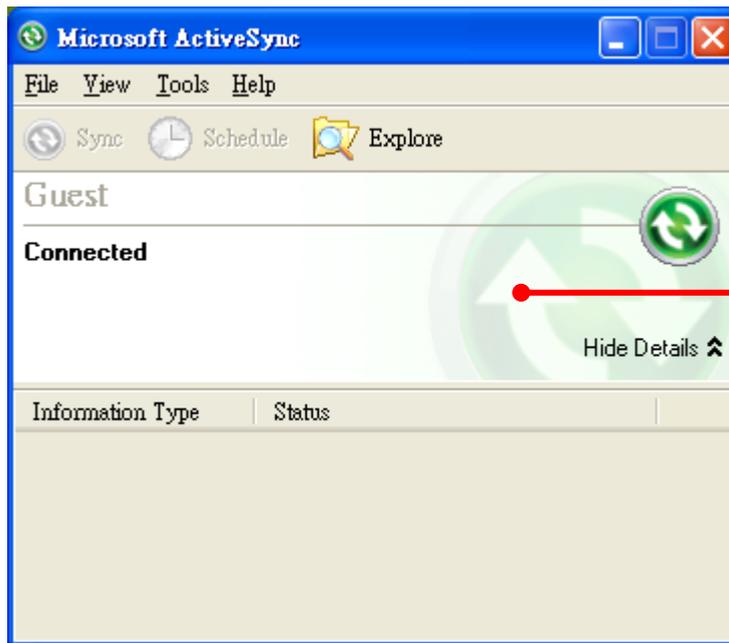

A "Temporary Relationship" is established between the mobile computer and the PC

CONNECT WITH WMDC

- 1) Download WMDC as described in [Syncing Tools](#) and install it on your PC.
- 2) Connect the mobile computer and your PC as described in [Use Snap-on Cable](#).
- 3) On your PC, run the syncing program.

WMDC will detect the mobile computer, and the status will change from "Connecting" to "Connected".



- 4) Click **Set up your device** to synchronize the information on your device with the mobile computer, or click **Connect without setting up your device** if you don't plan to connect to the PC on a regular basis.
- 5) Click **Mobile Device Settings | Connection Settings** to adjust partnership settings.



Note: If you encounter trouble during USB ActiveSync or WMDC connection, tap **Start | Settings | System | USB Connection** and make sure "**ActiveSync Serial Mode**" is selected.

1.8.6. DISCONNECT USB PARTNERSHIP

To disconnect USB partnership:

- 1) On your PC, open ActiveSync or WMDC by double-clicking its icon in the notification area.
- 2) In ActiveSync, click **File | Connection Settings** on the menu bar.
In WMDC, click **Mobile Device Settings | Connection Settings**.
- 3) Deselect **Allow USB connections**.
- 4) Click the **OK** button to apply the change and quit setting.

The next time your mobile computer is plugged to your PC, the syncing tool no longer attempts to connect to it.

1.8.7. SYNCING ACTIONS TO TAKE

Once "Synchronization Relationship" or "Temporary Relationship" is established between two computers, a variety of actions can be taken to enhance resource sharing between them as previously mentioned in [Sync Partnership](#).


"Synchronization Relationship" is more advanced than "Temporary Relationship" as it is capable of syncing Microsoft Office Outlook data. However "Temporary Relationship" provides satisfactory file sharing if you don't want to synchronize information.

CHANGE MICROSOFT OFFICE OUTLOOK DATA TO SYNCHRONIZE


Note this is for "Synchronization Relationship" only.

In default state, "Synchronization Relationship" doesn't synchronize all Microsoft Office Outlook data but only a limited amount between two computers in order to save storage on the mobile computer. You can change the amount of information to synchronize:

- 1) In ActiveSync, select **Tool | Options** from the menu bar.

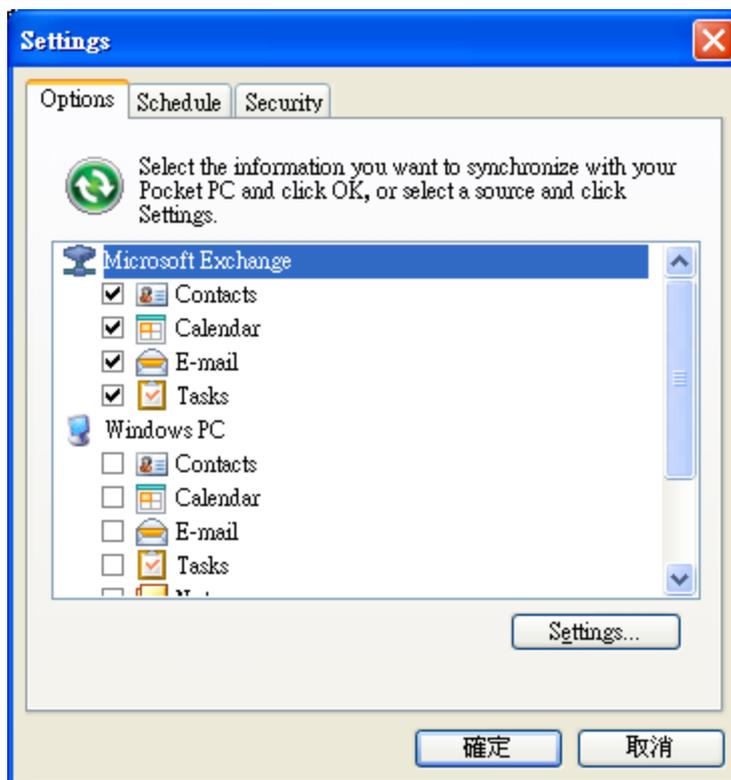

In WMDC, click **Mobile Device Settings | Manage a partnership**.

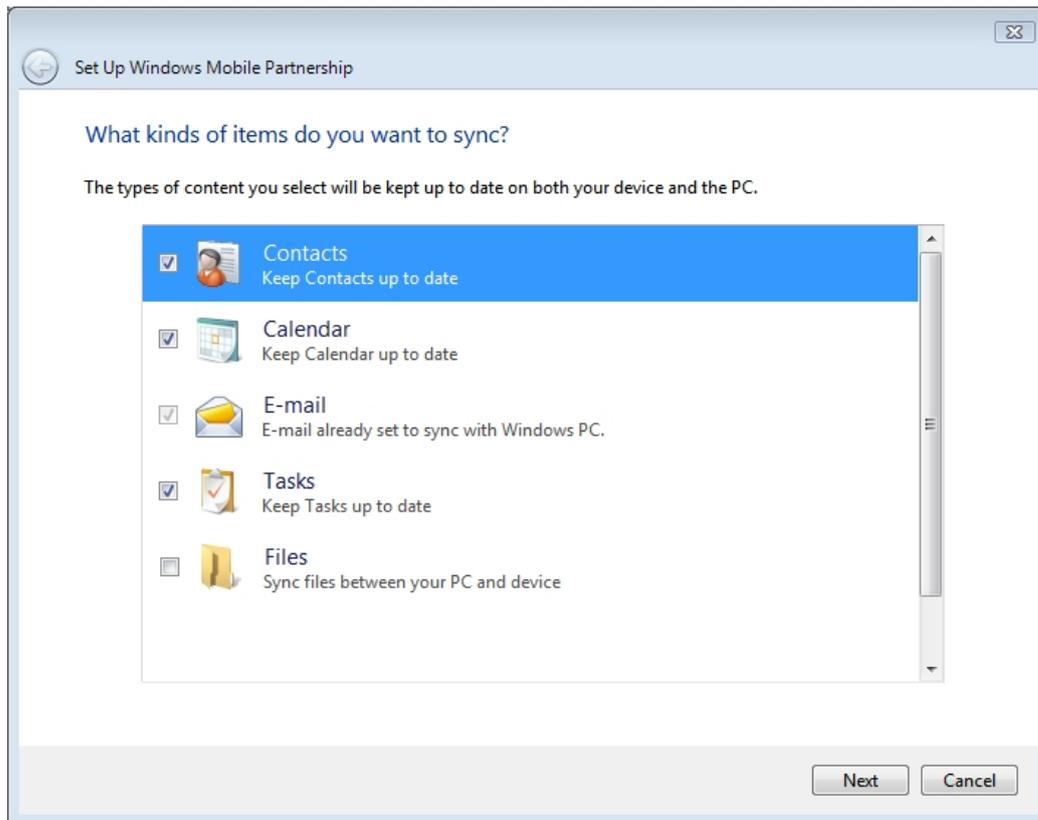

- 2) Select an information type to synchronize, and deselect an information type to stop synchronizing.
- 3) In ActiveSync, click **OK** to save the change and quit settings.

In WMDC, click **Next**, confirm the device name and how to synchronize data, and click **Set up**.

Note you can also change the information to synchronize on the mobile computer by disconnecting ActiveSync first as mentioned in [Disconnect USB Partnership](#) or [Disconnect Bluetooth ActiveSync](#) and then tap ActiveSync's "Menu" command on the softkey bar and tap **Options**.


ADD/REMOVE PROGRAMS

The applications to be installed on the mobile computer need to be installed on your PC first. Download the application programs to your PC first and install them on your PC so they can be installed onto the mobile computer later.


Many application programs are installed in different ways. Read their installation guides or documentation to understand how they are installed. If you are installing an application that cannot be installed on your PC first, try to install it right from the mobile computer. See [Download & Install Applications](#) for more details.

To install an application on the mobile computer:


- 1) Connect two computers as described in [Use Snap-on Cable](#).
- 2) Sync two computers as described in [1st USB Sync](#).
- 3) In ActiveSync, select **Tools | Add/Remove Programs** from the menu bar.

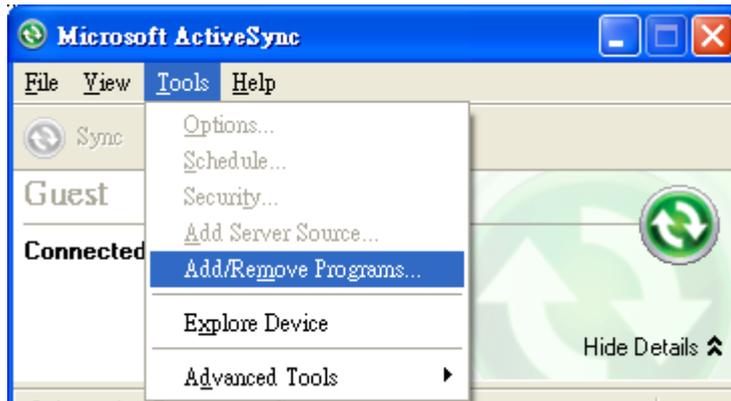

ActiveSync starts to search for the application programs installed on your PC and opens its **[Add/Remove Programs]** dialog which lists those found. Each entry comes with a check box on the left. An unchecked box means the program is yet to install to the mobile computer while a checked one means an installed program.

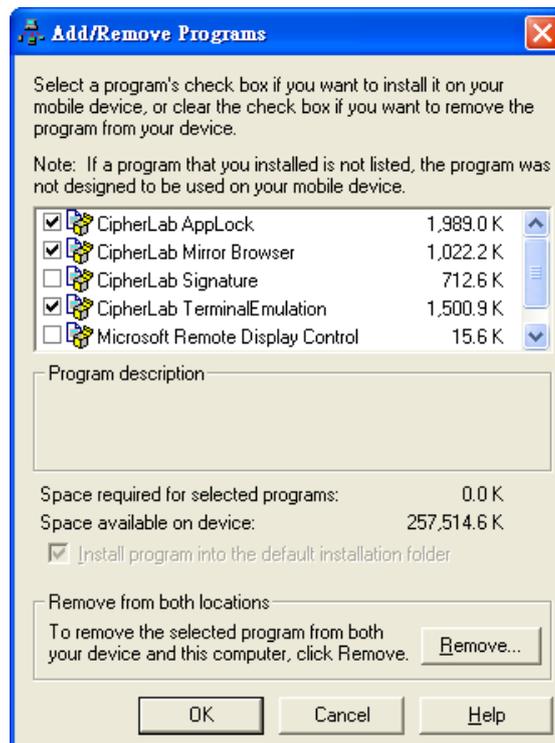

In WMDC, click **Programs and Services | Add/Remove programs.**

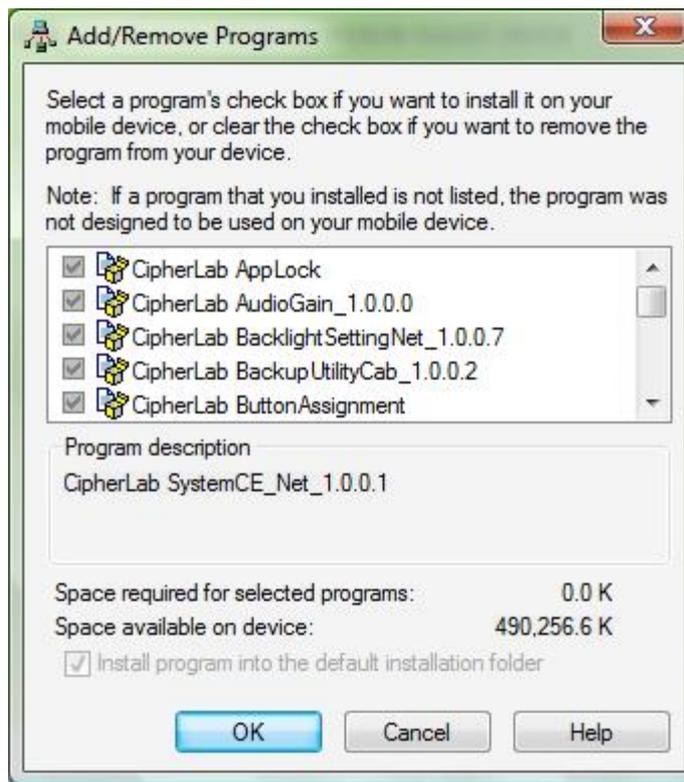

4) Select the application program(s) to install to the mobile computer, and deselect the application program(s) to uninstall from the mobile computer.

5) Press the **OK** button.

The syncing tool proceeds to install programs and/or remove programs to/from the mobile computer.

6) Follow the on-screen instructions on both your PC and the mobile computer to proceed.

Noteworthy facts:

- ▶ Normally the application program(s) downloaded from external resources are installed to the mobile computer's directory at **My Device\Program Files**. However sometimes there are exceptions and the actual situation depends on the application.
- ▶ You can also uninstall applications directly on the mobile computer rather than on the PC. See [Uninstall Applications](#) for more details.
- ▶ If you would like to uninstall a program that isn't listed in the [**Add/Remove Programs**]


dialog, browse to it on the mobile computer by tapping **My Device**  on the desktop. Tap and hold it, and select **Delete** from the context menu that pops up.

ADD APPLICATION SHORTCUTS TO START SCREEN

To add an application shortcut to Start screen:

- 1) Connect two computers as described in [Use Snap-on Cable](#).
- 2) Sync two computers as described in [1st USB Sync](#).
- 3) In ActiveSync, select **Tools | Explore Device** from the menu bar, or press **Explore**  on the toolbar.

The mobile computer's internal storage's root directory "**Mobile Device**" opens presenting a few folders (and files).

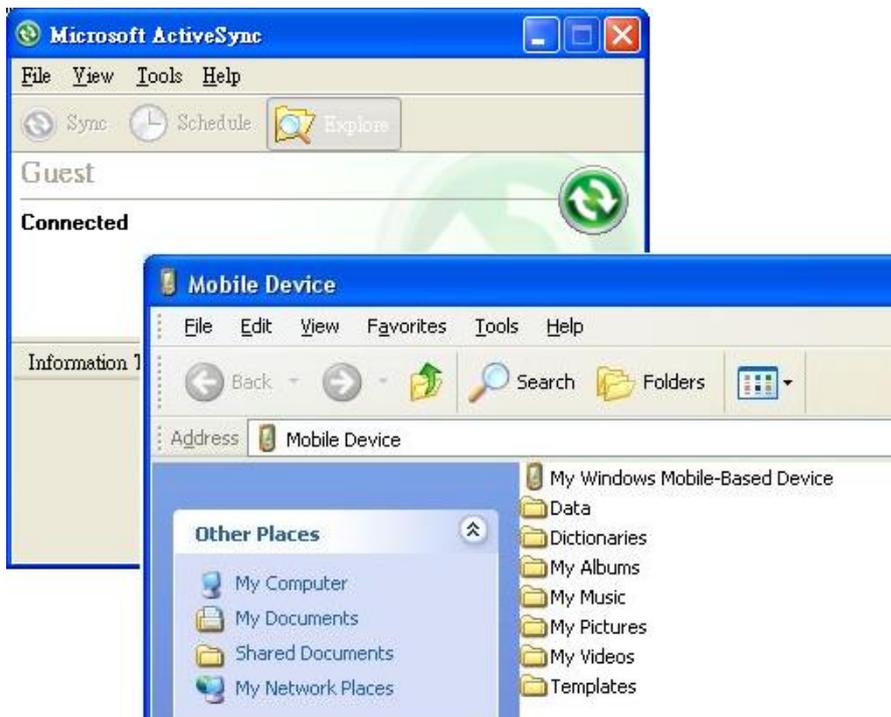

In WMDC, click **File Management | Browse the contents of your device**.

- 4) Double-click **My Windows Mobile-Based Device** .

My Windows Mobile-Based Device opens.
- 5) Double-click **Program Files**.

Program Files folder opens. This is where the downloaded applications are normally installed on the mobile computer's local storage.

In the folder, each sub-folder stores an application.
- 6) Open the folder of the application to create shortcut for.
- 7) Find the executable file of that application. Right-click on it and select **Copy** from the context menu that comes up.

The executable file is copied.
- 8) Browse to **My Windows Mobile-Based Device\Windows\Start Menu\Programs**.

Programs folder opens.

- 9) Right-click any vacant spot in the folder and select **Paste shortcut** from the context menu that comes up.

A shortcut to the application is added to Start screen.

Note: You can also copy & paste by the sequence **Create Shortcut -> Cut -> Paste**.

You can also add an application shortcut to Start screen directly on the mobile computer. See [Add Items to Start Screen](#) for more details.

ADD FILE SHORTCUTS TO START SCREEN

To add a file shortcut to Start screen:

- 1) Connect two computers as described in [Use Snap-on Cable](#).
- 2) Sync two computers as described in [1st USB Sync](#)
- 3) In ActiveSync, select **Tools | Explore Pocket PC** from the menu bar, or press **Explore**  on the toolbar.

In WMDC, click **File Management | Browse the contents of your device**.

The mobile computer's internal storage root directory "**Mobile Device**" opens presenting a few folders.

- 4) Browse to the file to create shortcut for.
- 5) Right-click on the file and select **Copy** from the context menu that comes up.
- 6) Browse to **My Windows Mobile-Based Device\Windows\Start Menu\Programs**. Programs folder opens.
- 7) Right-click any vacant spot in the folder and select **Paste shortcut** from the context menu that comes up.

A shortcut to the file is added to Start screen.

Note: You can also copy & paste by the sequence **Create Shortcut -> Cut -> Paste**.

You can also add a file shortcut to Start screen directly on the mobile computer. See [Add Items to Start Screen](#) or more details.

REMOVE SHORTCUTS FROM START SCREEN

Note the inherent shortcuts aren't removable. Only the added shortcuts are removable.

To remove an added shortcut from Start screen, simply delete the shortcut from **My Windows Mobile-Based Device\Windows\Start Menu\Programs** folder.

You can also remove an added shortcut from Start screen directly on the mobile computer. See [Remove Items from Start Screen](#) for more details.

CREATE NEW FOLDERS

To create a new folder on the mobile computer:

- 1) Connect two computers as described in [Use Snap-on Cable](#).
- 2) Sync two computers as described in [1st USB Sync](#).

In ActiveSync, select **Tools | Explore Pocket PC** from the menu bar, or press **Explore**  on the toolbar.

In WMDC, click **File Management | Browse the contents of your device**.

- 3) Browse where you want to create a folder.
- 4) Right-click any vacant spot there.

Context menu opens

- 5) Select **New Folder**.

A new folder is created.

BACKUP DATA

To best protect your work, regularly back up the data on your mobile computer. Manually back up by either setting a "Synchronization Relationship" with your PC, or use a "Temporary Relationship" and simply copy & paste to back up files to your PC.

USB PASS-THROUGH NETWORKING

Both ActiveSync and WMDC support "Pass-Through Networking" in which the mobile computer networks using your PC's data connection.

For security, disable network bridging on the PC, especially the bridging to a Remote NDIS adapter. For more information on network bridging, see Windows Help on your PC.

After sync partnership is set up between the mobile computer and your PC:

- 1) In ActiveSync, select **File | Connection Settings** from the menu bar.
In WMDC, click **Mobile Device Settings | Connection Settings**.
- 2) For **This computer is connected to**, select a network which your PC should connect to when passing through the syncing tool. Options are:

Option	Description
Automatic	Auto-detects proxy <ul style="list-style-type: none"> ▶ This option detects if a proxy should be used when passing connections through the PC. If yes, configure the proxy on the mobile computer. ▶ This option best suits connecting to a PC (laptop) that may be used at home (with no proxy), as well as to a corporate network (with proxy).
Work Network	Always uses proxy <ul style="list-style-type: none"> ▶ This option assumes a proxy should be used when passing connections through the PC, and uses whatever proxy is already configured on the mobile computer. ▶ This option best suits connecting to a PC that is always on corporate network.
The Internet	Never uses proxy <ul style="list-style-type: none"> ▶ This option assumes no proxy is necessary when passing connections through the PC. ▶ This option best suits connecting to a PC connected directly to the Internet through ISP (at home)

- 3) In ActiveSync, select **Open ActiveSync when my device connects**.
- 4) Press **OK** button to apply the change and quit settings.

For pass-through networking using Bluetooth, see [Bluetooth Pass-through Networking](#).

1.9. VOLUME AND AUDIO

1.9.1. AUDIO PLAYBACK

Use a headset for audio playback and hands-free telephone communication.

The headset jack (3.5 mm DIA) is built up on one side of the mobile computer and sealed with a hinged rubber. Open the rubber to reveal the headset jack. Plug the connector of your headset to the jack.

Bluetooth headsets are also supported to deliver better mobility. See [Use Bluetooth](#).

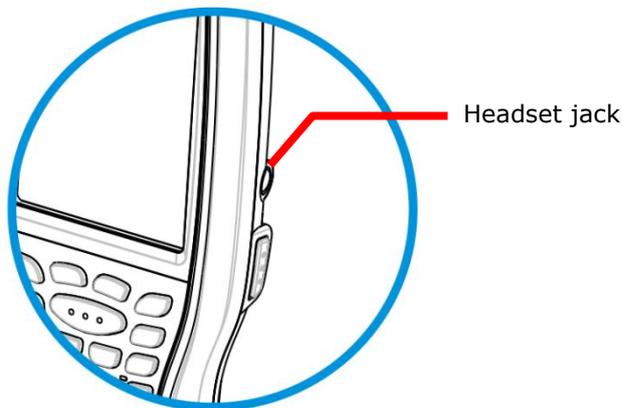


Figure 13: Audio Playback


1.9.2. VOLUME CONTROL

The mobile computer features an on-screen volume gauge to control the system volume, including event sounds, notifications and media playback.

- 1) Tap the volume notification icon  on the title bar.
- 2) In the drop-down bar that opens, tap the volume icon .

Volume window opens showing a slider to adjust system volume and radio buttons to switch on or off the system volume, or set to vibrate.

Slider bar and buttons to adjust system volume

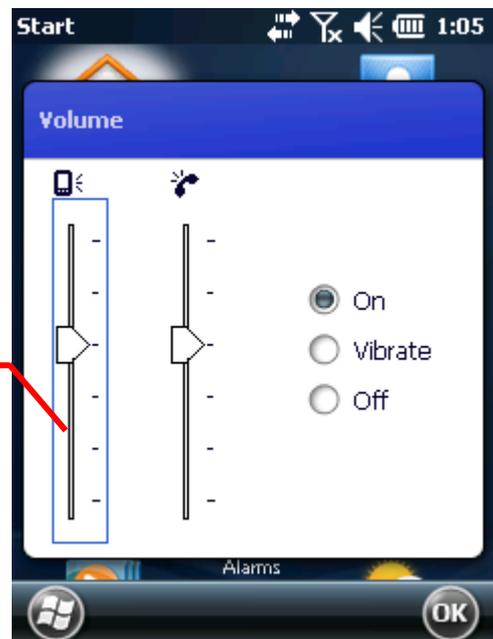

- 3) Adjust the settings to meet your needs.
When finished, tap **OK** to apply the settings.

DATA CAPTURE

Although highly converged, the mobile computer is also a dedicated barcode reader. The mobile computer is shipped with either a (laser) 1D reader or 2D imager. A number of symbologies are supported and data about them can be decoded and collected.

After data has been collected, the mobile computer can output it locally to applications installed on the mobile computer or to the host computer so data storage, advanced data analysis and more special services can be performed.

This chapter describes how to collect data with reader modules.

IN THIS CHAPTER

2.1 Configure Reader	61
2.2 Read Printed Barcodes.....	80

2.1. CONFIGURE READER


The mobile computer is capable of reading printed barcodes. The reader module can be either a (laser) 1D reader or a 2D imager. The mobile computer is installed with a CipherLab utility **Reader Config** to configure the scan engine built inside. Use it to create a profile of settings that best suits your needs.

2.1.1. LAUNCH READER CONFIG

To launch Reader Config:

- 1) Tap **Start | Settings | System | Reader Configuration** .


Reader Config launches in context with the reader module(s) on board the mobile computer. On the main settings page are three sections: **General Settings**, **Symbology** and **Miscellaneous**.

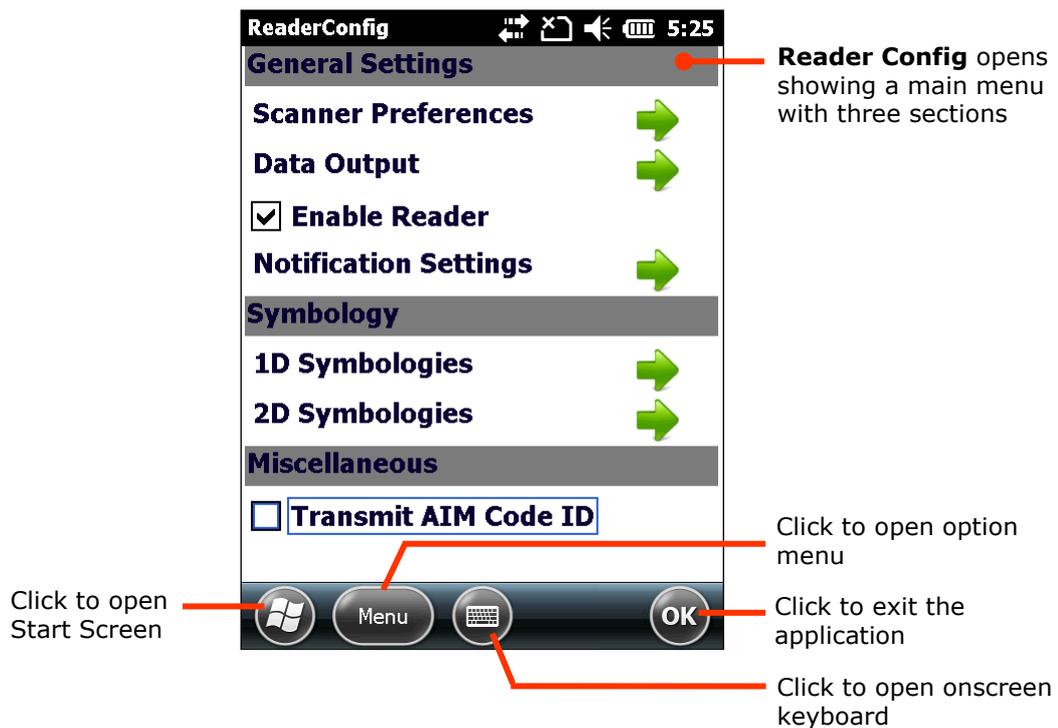

The following will guide to settings provided in each of the three sections.

2.1.2. GENERAL SETTINGS

General Settings is where all reader settings are accessed from except for symbologies settings. Tap the green arrow next to each item to enter the sub-menu for that given item.

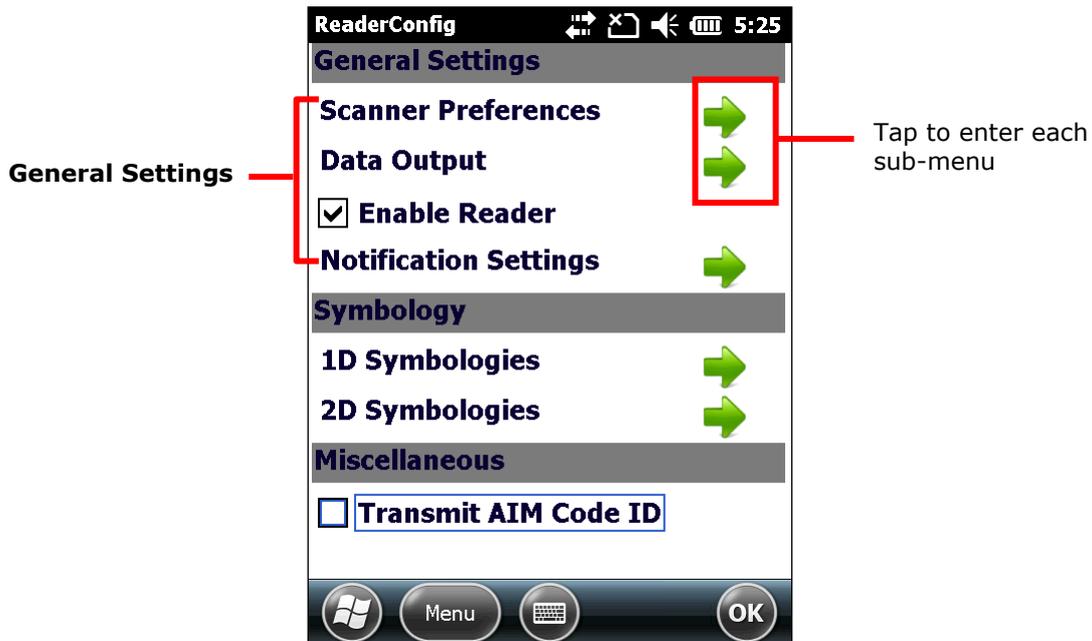

The functions under **General Settings** include:

- ▶ Scanner Preferences
- ▶ Data Output
- ▶ Enable Reader - enabled by default
- ▶ Notification Settings

SCANNER PREFERENCES

Scanner Preferences page can be entered by tapping the given item on the **Reader Config** main settings page. The options provided in this page differ according to the type of scan engine (either 1D or 2D) built within the mobile computer.

To open **Scanner Preferences** page:

- 1) Open **Reader Config** as described in [Launch Reader Config](#).


Reader Config settings page opens.

- 2) Tap the arrow next to **Scanner Preferences**.

Scanner Preferences settings page opens.

Featured settings are different for 1D (laser) reader, 2D imager and near/far 2D imager:

1D (laser) reader settings

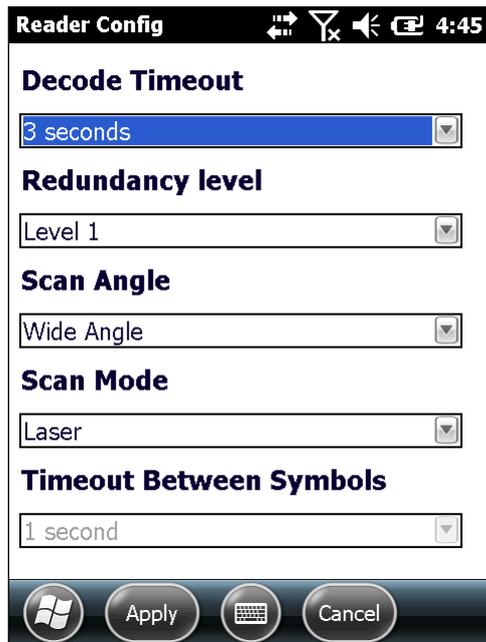

Reader Config 4:45

Decode Timeout
3 seconds

Redundancy level
Level 1


Scan Angle
Wide Angle

Scan Mode
Laser

Timeout Between Symbols
1 second

Apply Cancel

2D imager settings

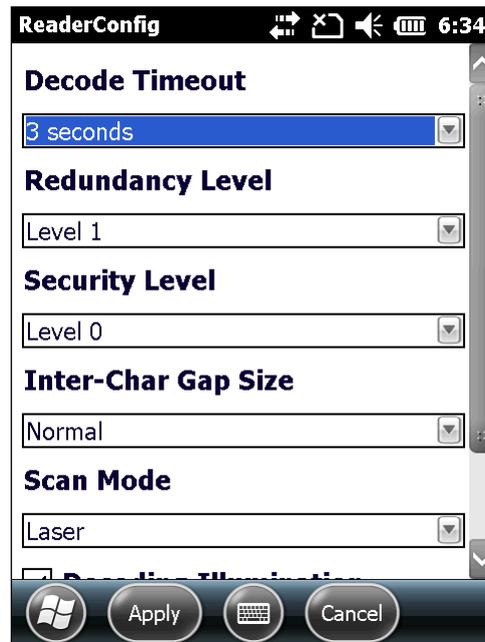

ReaderConfig 6:34

Decode Timeout
3 seconds

Redundancy Level
Level 1


Security Level
Level 0

Inter-Char Gap Size
Normal

Scan Mode
Laser

Apply Cancel

Near/far 2D imager settings

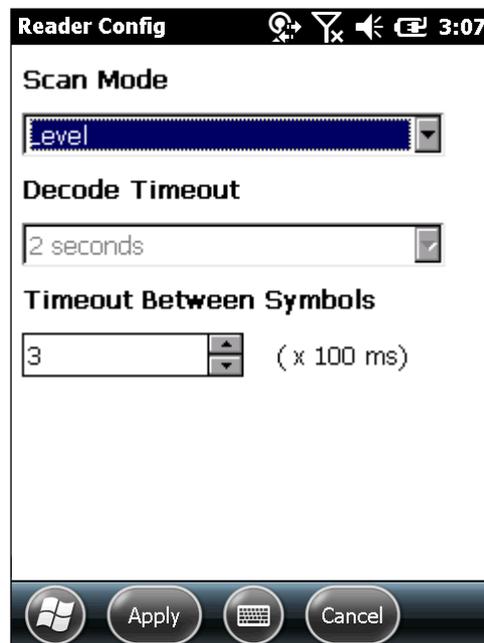

Reader Config 3:07

Scan Mode
Level

Decode Timeout
2 seconds

Timeout Between Symbols
3 (x 100 ms)

Apply Cancel

1D (LASER) READER SETTINGS

Setting	Description	Default										
Decode Timeout	Sets the maximum time for the decoding process during a scan. Configurable between 1 sec to 9 sec.	3 sec										
Redundancy Level	<p>Sets how many successful readings should be done before linear barcodes such as Codabar, MSI, and Interleaved 2 of 5 can be decoded. Levels 1 to 4 available.</p> <p>The readings needed for each level are as follows:</p> <table border="1"> <thead> <tr> <th>Level</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Level 1</td> <td>The following barcodes must be successfully read twice before being decoded: Codabar, MSI, Industrial 25 (Discrete 25), Interleaved 25.</td> </tr> <tr> <td>Level 2</td> <td>All barcodes must be successfully read twice before being decoded.</td> </tr> <tr> <td>Level 3</td> <td>All barcodes must be successfully read twice before being decoded, except for the following which must be read three times: MSI, Industrial 25 (Discrete 25), Interleaved 25.</td> </tr> <tr> <td>Level 4</td> <td>All barcodes must be successfully read three times before being decoded.</td> </tr> </tbody> </table>	Level	Description	Level 1	The following barcodes must be successfully read twice before being decoded: Codabar, MSI, Industrial 25 (Discrete 25), Interleaved 25.	Level 2	All barcodes must be successfully read twice before being decoded.	Level 3	All barcodes must be successfully read twice before being decoded, except for the following which must be read three times: MSI, Industrial 25 (Discrete 25), Interleaved 25.	Level 4	All barcodes must be successfully read three times before being decoded.	Level 1
Level	Description											
Level 1	The following barcodes must be successfully read twice before being decoded: Codabar, MSI, Industrial 25 (Discrete 25), Interleaved 25.											
Level 2	All barcodes must be successfully read twice before being decoded.											
Level 3	All barcodes must be successfully read twice before being decoded, except for the following which must be read three times: MSI, Industrial 25 (Discrete 25), Interleaved 25.											
Level 4	All barcodes must be successfully read three times before being decoded.											
Scan Angle	<p>Sets the scan angle for laser scan engine.</p> <ul style="list-style-type: none"> ▶ Wide Angle: 47° (Extended range laser reader is fixed at Wide Angle) ▶ Medium Angle ▶ Narrow Angle: 35° 	Wide Angle										
Scan Mode	<p>Sets the reader's scanning behavior. Options available are Continuous and Level modes.</p> <ul style="list-style-type: none"> ▶ Continuous: Used for continuous reading of barcodes. The scan engine remains on when this mode is activated. ▶ Level: Reads a barcode when the trigger is pressed. 	Level										
Timeout Between Symbols	<p>Sets the time for the barcode reader to resurrect its ability to once more decode the barcode it just decoded.</p> <ul style="list-style-type: none"> ▶ Only applied in Continuous mode 	1 sec										

Note: On the 1D laser reader, the light beam will be sent out when the trigger is pressed down, and will stop when the trigger is released, or the decode timeout has passed.

2D IMAGER SETTINGS

Setting	Description	Default										
Decode Timeout	Sets the maximum time for the decoding process during a scan. Configurable between 1 sec to 9 sec.	3 sec.										
Redundancy Level	Sets how many successful readings should be done before linear barcodes such as Codabar, MSI, and Interleaved 2 of 5 can be decoded. Levels 1 to 4 available.	Level 1										
Security Level	<p>Sets the security level to ensure decoding accuracy considering the printed quality of barcodes such as Code 128, Code 93, and UPC/EAN. The higher the level is, the more security is ensured. Options are:</p> <table border="1"> <thead> <tr> <th>Level</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>With this default, the scan engine is aggressive enough to decode most "in-spec" barcodes.</td> </tr> <tr> <td>1</td> <td>Select this level if misdecodes have occurred. It fixes most misdecodes.</td> </tr> <tr> <td>2</td> <td>Select this level if Level 1 should fail to eliminate misdecodes.</td> </tr> <tr> <td>3</td> <td>Select this level if Security Level 2 should fail to prevent misdecodes. However, as this level actually impairs the decoding ability of the decoder, a safer solution would be to improve the quality of the bar codes to read.</td> </tr> </tbody> </table>	Level	Description	0	With this default, the scan engine is aggressive enough to decode most "in-spec" barcodes.	1	Select this level if misdecodes have occurred. It fixes most misdecodes.	2	Select this level if Level 1 should fail to eliminate misdecodes.	3	Select this level if Security Level 2 should fail to prevent misdecodes. However, as this level actually impairs the decoding ability of the decoder, a safer solution would be to improve the quality of the bar codes to read.	Level 0
Level	Description											
0	With this default, the scan engine is aggressive enough to decode most "in-spec" barcodes.											
1	Select this level if misdecodes have occurred. It fixes most misdecodes.											
2	Select this level if Level 1 should fail to eliminate misdecodes.											
3	Select this level if Security Level 2 should fail to prevent misdecodes. However, as this level actually impairs the decoding ability of the decoder, a safer solution would be to improve the quality of the bar codes to read.											
Inter-Char Gap Size	Sets the intercharacter gap size for Code 39 and Codabar. Switch between Normal and Large .	Normal										
Scan Mode	<p>Sets the reader's scanning behavior. Options available are Level and Presentation Mode.</p> <ul style="list-style-type: none"> ▶ Level: The decoding process is activated by a trigger event, and continues until the trigger event ends, a valid decode happens or decode session time-out is reached. ▶ Presentation Mode: The imager engine attempts to decode a barcode when an object appears in its field of view. To enter this mode, select "Presentation Mode" and tap Apply. Once activated, the imager will stay on, and will only be deactivated if one of the following occurs: the trigger is pressed, or the time interval specified in Decode Timeout passes without any new object coming into its field of view. 	Level										
Decoding Illumination	Enables an LED light beam to aid barcode reading.	Selected (Enabled)										
Decode Aiming Pattern	Projects a crosshair at the center of the laser light beam to facilitate barcode reading.	Selected (Enabled)										
Picklist Mode	When selected, only barcodes aligned at the crosshair of the laser light beam will be decoded.	Deselected (Disabled)										
Display Mode	Enable improved performance for reading barcodes on electronic displays and mobile phones.	Deselected (Disabled)										

Note: On the 2D Imager, the light beam will be sent out when the trigger is pressed down, and will stop when the trigger is released, or the decode timeout has passed.

NEAR/FAR 2D IMAGER SETTINGS

Setting	Description	Default
Scan Mode	<p>Sets the imager engine's scanning behaviour. Options available are Level and Presentation Mode.</p> <ul style="list-style-type: none"> ▶ Level: Decoding process is activated by a trigger event and continues until the trigger event ends, a valid decode happens or decode session time-out is reached. ▶ Presentation Mode: The imager engine attempts to decode a barcode when an object appears in its field of view. To enter this mode, select Presentation Mode and tap Apply. Once activated, the imager will stay on, and will only be deactivated if one of the following occurs: the trigger is pressed, or the time interval specified in Decode Timeout passes without any new object coming into its field of view. 	Level
Decode Timeout	<p>Sets the maximum time for the decoding process during a scan. Configurable between 1 sec to 9 sec.</p> <ul style="list-style-type: none"> ▶ Only applied in Presentation Mode 	2 sec.
Timeout Between Symbols	<p>Sets the time for the imager engine to resurrect its ability to once more decode a barcode it just decoded. Configurable between 0 to 2500 ms in increments of 100 ms.</p> <ul style="list-style-type: none"> ▶ This prevents the imager from consecutively decoding the same barcode more than once. When a timeout period is set, the imager will wait for the set time interval before allowing a second decoding of the just decoded barcode. The timeout begins when the barcode is removed from the imager's field of view. 	300 ms

Note: On the near/far 2D Imager, the light beam will be sent out when the trigger is pressed down, and will stop when the trigger is released.

DATA OUTPUT

Data Output allows users to set the way to output decoded data.


To open **Data Output** settings page:

1) Open **Reader Config** as described in [Launch Reader Config](#).

Reader Config main menu opens.

2) Tap the arrow next to **Data Output**.

Data Output settings page opens.

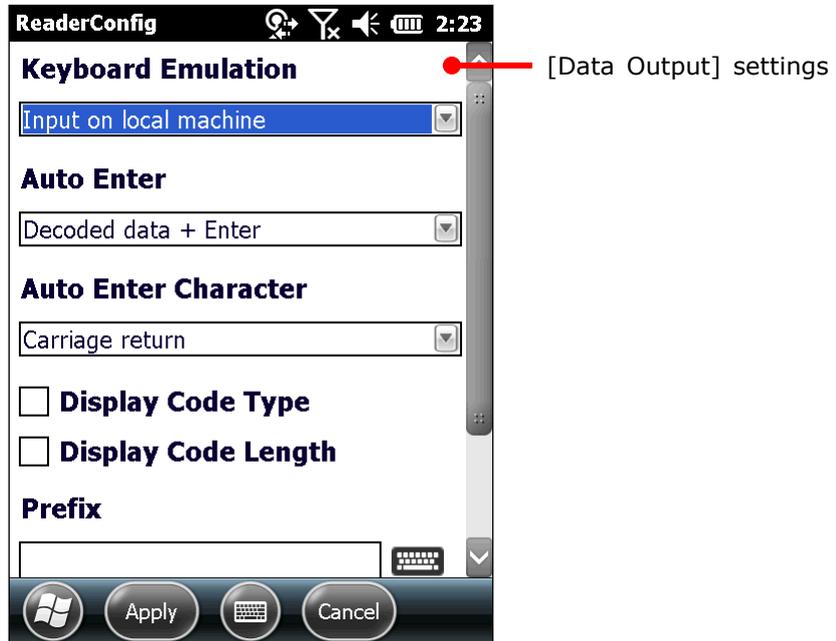

WHERE TO OUTPUT

Keyboard Emulation setting controls where the decoded data is to be output.

Setting	Descriptions	Default
Keyboard Emulation	<p>Treats decoded data as typed text and outputs it to the active application locally on the mobile computer or remotely on a computer. Options are:</p> <ul style="list-style-type: none"> ▶ Disable – Disables Keyboard emulation whereby decoded data won't be output. ▶ String Mode –The decoded data is send to the specified window. ▶ RDP Mode – The decoded data can be forwarded wirelessly to the active application on a remote PC. ▶ Character Mode – The decoded data is converted from ASCII characters into keystrokes. ▶ Copy and Paste – Copy the decoded data and paste it to the active application. 	String Mode

HOW TO OUTPUT

After the output destination is set, configure how to output decoded data, i.e. the “format” to present decoded data.

Setting	Description	Default
Auto Enter	Adds an ENTER character before or after each string of decoded data. The ENTER character can be defined in the “Auto Enter character” field below. This function saves the trouble of pressing a confirmation key to accept each string of decoded data. Options are: <ul style="list-style-type: none"> ▶ Disable ▶ Decoded data + Enter char ▶ Enter char + Decoded data 	Decoded data + Enter char
Auto Enter character	Adds a key code before or after the decoded data. If [Auto Enter] is enabled, select the ENTER character to send. Options are: <ul style="list-style-type: none"> ▶ None ▶ Carriage Return ▶ Tab ▶ Space ▶ Comma ▶ Semicolon 	Carriage Return
Display Code Type	Prefixes the output data with code type information.	Deselected (Disabled)
Show Code Length	Suffixes the output data with code length information.	Deselected (Disabled)
Prefix	Affixes 0 to 10 characters to the left of the output data. Tap the keyboard icon  next to the input field to open a character table for entering the prefix. <ul style="list-style-type: none"> ▶ Prefixes containing invisible characters are supported. 	--
Suffix	Affixes 0 to 10 characters to the right of the output data. Tap the keyboard icon  next to the input field to open a character table for entering the suffix. <ul style="list-style-type: none"> ▶ Suffixes containing invisible characters are supported. 	--
Field Delimiter	Sets the delimiter to separate the output barcode data to the following pieces: code type, decoded barcode data, and code length (if applicable). Options are: <ul style="list-style-type: none"> ▶ Comma ▶ Semicolon ▶ Full stop 	Comma
Inter Character Delay	Set the delay time to be inserted between transmitting characters.	10

ENABLE READER

Features a checkbox to enable or disable reader scanning ability. When enabled, light beam will be sent out each time the trigger (scan key) is pressed.

NOTIFICATION SETTINGS

Notification Settings enables audible, visible and tactile feedback for scanning good read, which helps notify the user of a successful decoding.


To open **Notification Settings** page:

1) Open **Reader Config** as described in [Launch Reader Config](#).

Reader Config main menu opens.

2) Tap the arrow next to **Notification Settings**.

Notification Settings page opens.

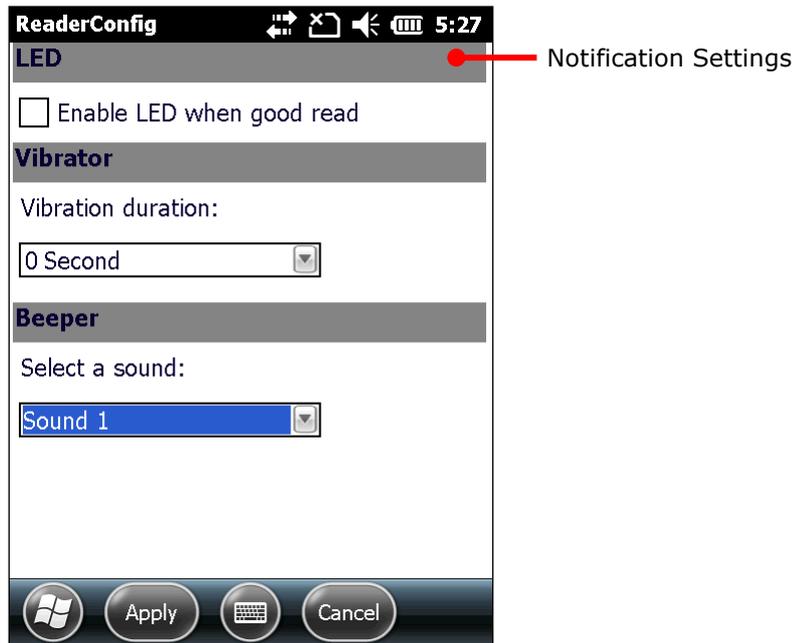


Setting		Description	Default
LED	Enable LED when good read	Selects to enable/disable LED light (left) for scanning good read. See Status LED for details.	Deselected (Disabled)
Vibrator	Vibrate when good read	Enables/disables tactile feedback (vibration) for good read and sets the duration to vibrate.	0 second (Disabled)
Beeper	Beep when good read	Sets the beeper sound for scanning good read. Users can choose to mute the beeper sound, or configure the beeper between sounds 1 to 9.	Sound 1

2.1.3. SYMBOLOGY

Symbology section sets the symbologies to read, and also enables/disables some feature(s) for a symbology to read, such as:

- ▶ Customize and transmit start/stop characters
- ▶ Verify/transmit check digits
- ▶ Enable/disable addon digits
- ▶ Convert to another symbology
- ▶ Transmit symbology ID

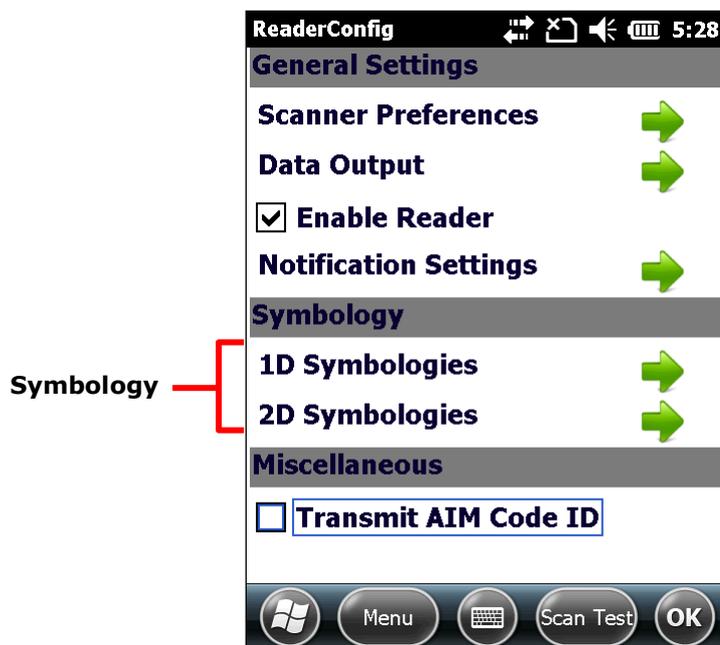

To open **Symbology** settings page:

- 1) Open **Reader Config** as described in [Launch Reader Config](#).

Reader Config main menu opens.

- 2) Tap the arrow next to **1D Symbologies** (or **2D Symbologies** in the case of a 2D imager).

Symbology settings page opens listing all symbologies which can be decoded.

1D Symbologies

Symbology	Enable	Detail
Codabar	✓	...
Code 11	✓	...
Code 39	✓	...
Code 93	✓	...
Code 128	✓	
GS1-128	✓	
ISBT 128	✓	...
Chinese 25	✓	

2D Symbologies

Symbology	Enable	Detail
Aztec	✓	...
Data Matrix	✓	...
MaxiCode	✓	
MicroPDF417	—	...
MicroQR	✓	
PDF417	✓	
QR code	✓	...

ENABLE/DISABLE SYMBOLOGY

The icon in the **Enable** column indicates whether the specific symbology is enabled. A check ✓ indicates that decoding of the symbology is enabled, while a short bar — indicates decoding of the symbology is disabled. Tap the icon to switch between enable/disable modes.

Tap to disable symbology



Symbology	Enable	Detail
Codabar	✓	...
Code 11	✓	...
Code 39	✓	...
Code 93	✓	...
Code 128	✓	
GS1-128	✓	
ISBT 128	✓	...
Chinese 25	✓	

Tap to enable symbology

Symbology	Enable	Detail
Codabar	—	...
Code 11	✓	...
Code 39	✓	...
Code 93	✓	...
Code 128	✓	
GS1-128	✓	
ISBT 128	✓	...
Chinese 25	✓	

SYMBOLGY SETTINGS


Tap the browse button in the **Detail** column of each symbology to access detailed settings for the specific symbology.

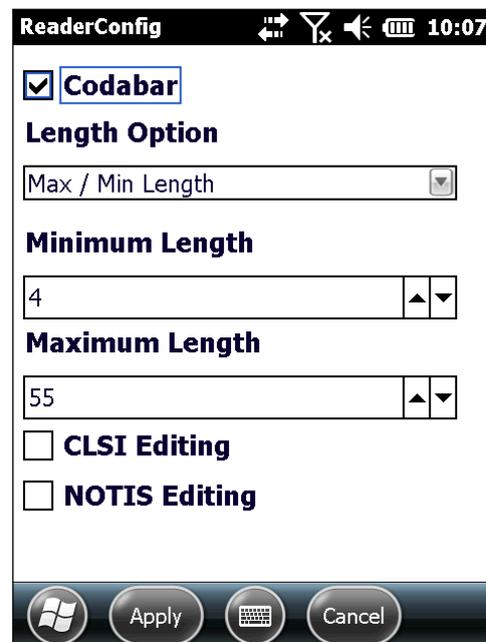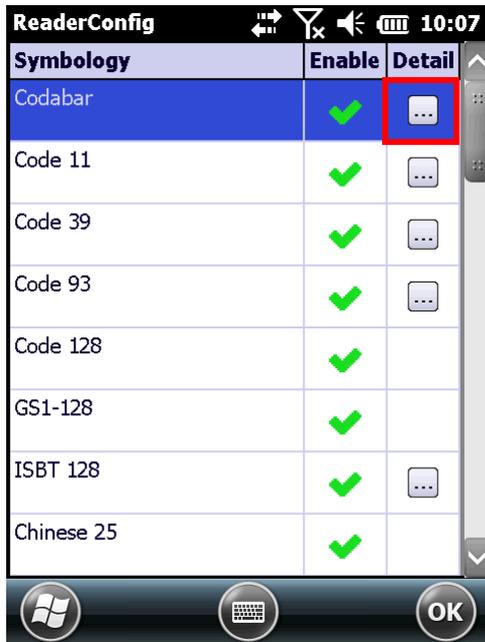

GENERAL PREFERENCES

For certain symbologies, common settings are grouped together and displayed in a detailed settings page for that barcode family. To open the general settings page for a set of symbologies, tap the browse button next to **General Preference**.

General settings are provided for Composite Code, Postal Code, and UPC/EAN families.

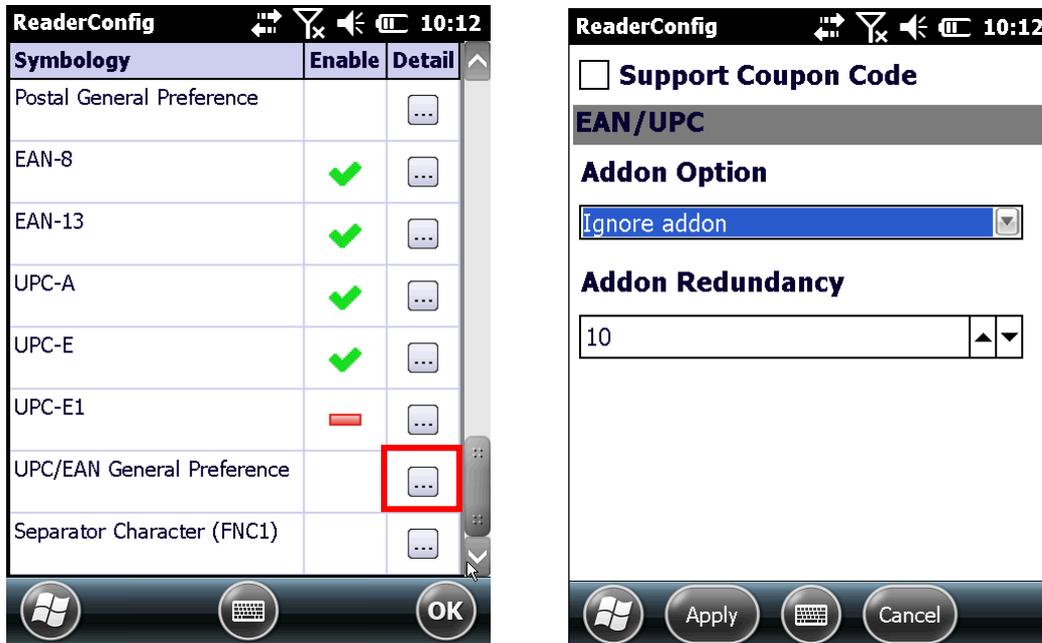


For details about the featured settings:

- ▶ See Appendix II: Laser [Symbology Settings](#).
- ▶ See Appendix III: Extended Range Laser [Symbology Settings](#).
- ▶ See Appendix IV: 2D Imager [Symbology Settings](#).
- ▶ See Appendix V: Near/far 2D Imager [Symbology Settings](#).

2.1.4. MISCELLANEOUS



This section allows enabling code ID transmission for easy identification of the scanned barcode, and enabling picklist mode to enhance decoding accuracy.

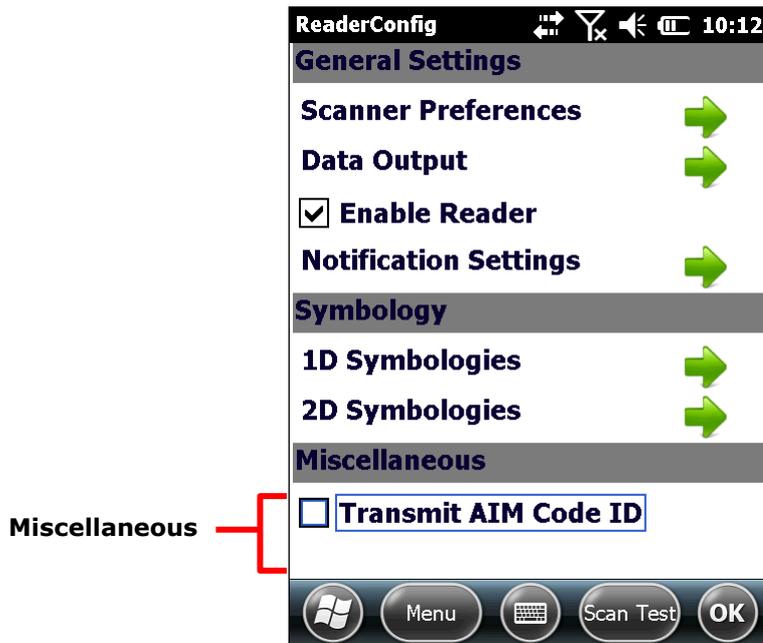

Setting	Description	Default
Transmit AIM Code ID	<p>Sets whether to include AIM code ID character in the decoded data. For AIM code ID, see the following:</p> <ul style="list-style-type: none"> ▶ Appendix II: Laser Symbology Settings. ▶ Appendix III: Extended Range Laser Symbology Settings. ▶ Appendix IV: 2D Imager Symbology Settings. ▶ Appendix V: Near/far 2D Imager Symbology Settings. 	Deselected (Disabled)

2.1.5. READER CONFIG OPTION MENU

Reader Config provides an option menu which is accessible on the menu bar of the main settings page. This menu allows you to import/export all settings in a re-usable format, reset all settings back to factory default, view copyright and version information, and exit the application.

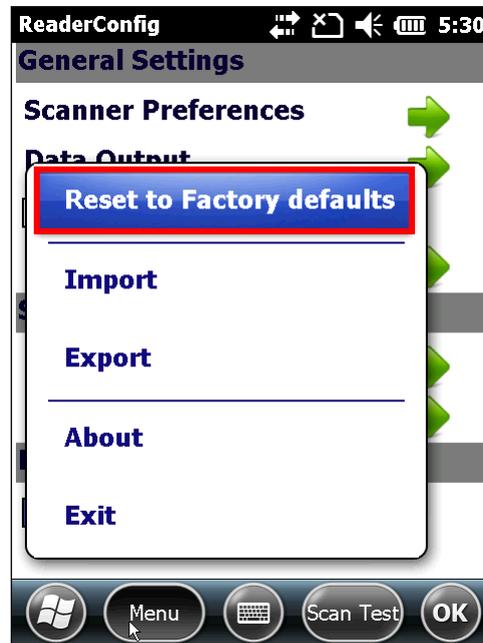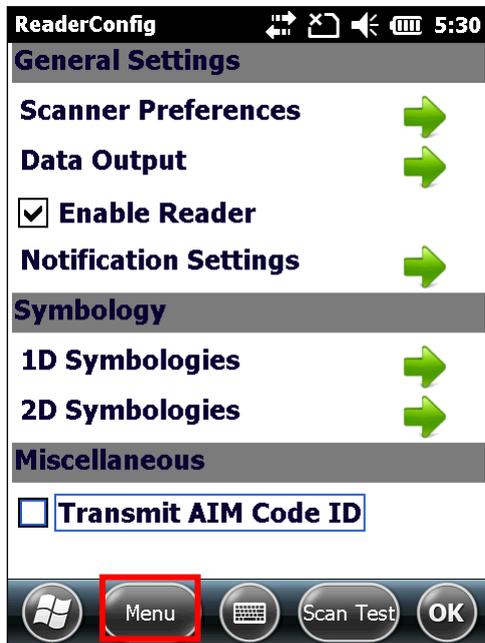


RESET TO FACTORY DEFAULTS

This function restores all settings in the **Reader Config** application to default.

To enable Factory Reset:

- 1) Open **Reader Config** as described in [Launch Reader Config](#).
Reader Config main menu opens.
- 2) Tap **Menu** button on the menu bar to open the option menu.
- 3) Tap **Reset to Factory defaults**.
- 4) A warning dialog appears confirming whether to restore all application settings back to default. Tap **Yes** to reset or **No** to close the dialog.

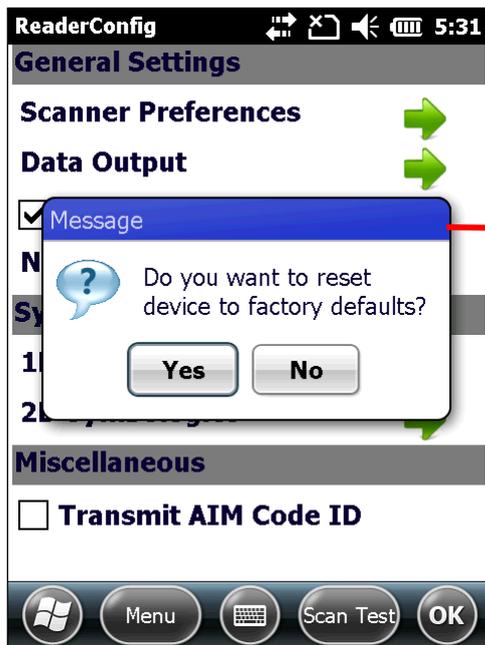

A warning dialog pops up to confirm if reset should be performed

IMPORT AND EXPORT


Reader Config supports saving the settings and exporting them as an .xml file.

Previously exported symbology and scanner settings can be imported again on the mobile computer. This can also be used to implement identical Reader Config settings on two or more devices.


To import settings:

- 1) Open **Reader Config** as described in [Launch Reader Config](#).
Reader Config main menu opens.
- 2) Tap **Menu** button on the menu bar to open the option menu.
- 3) Tap **Import** in the option menu.

A page opens allowing you to select a previously saved profile.

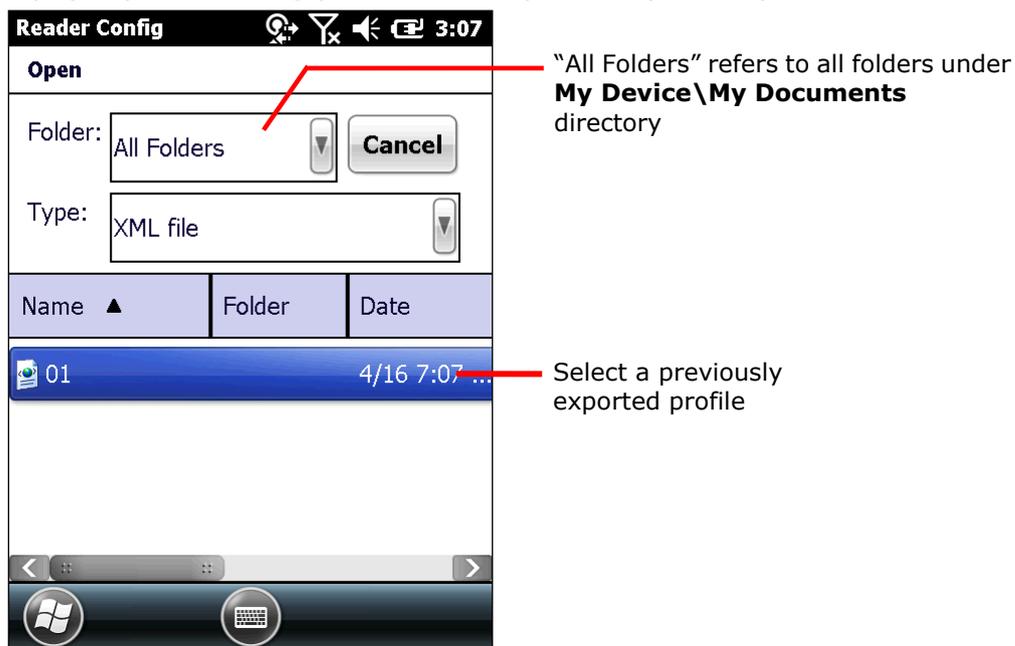

- 4) Select the profile you would like to apply and tap **OK**. In a few seconds a prompt will appear on the mobile computer to indicate settings have been imported successfully.

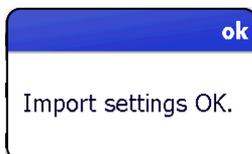

To export settings:

- 1) Open **Reader Config** as described in [Launch Reader Config](#).
Reader Config main menu opens.
- 2) Tap **Menu** button on the menu bar to open the option menu.
- 3) Tap **Export**.

An export page opens allowing you to enter and select information about the profile to be saved.

Reader Config 3:08

Save As

Name: 02

Folder: None


Type: XML file

Location: Main memory

Save Cancel


Enter information about the profile to save

- 4) Enter file name, storage folder and location. Tap **OK** to export. A prompt will appear on-screen to notify that settings have been exported.

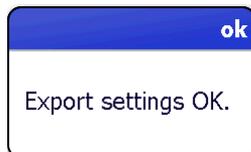

ABOUT

Tap **About** in the Reader Config option menu to display software version and copyright information.

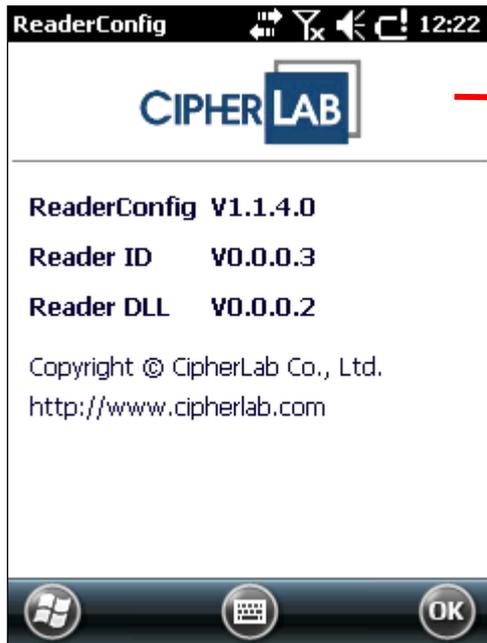

Information about the software

2.2. READ PRINTED BARCODES

Aside from output to destinations as per [Keyboard Emulation](#) settings, Reader Config provides a **Scan Test** feature for quick viewing of decoded data.

To perform test scanning of barcodes:

- 1) Open **Reader Config** as described in [Launch Reader Config](#).
- 2) Tap **Scan Test** on the menu bar.

A Test Scan Form opens for displaying the scanned data.



- 3) Aim the scanning window at the printed barcode to read and press the scan key (or any of the two side triggers).

The scanning light beams to read the printed barcodes.

The scanning light goes off once data is decoded, or decoding timeout is reached.


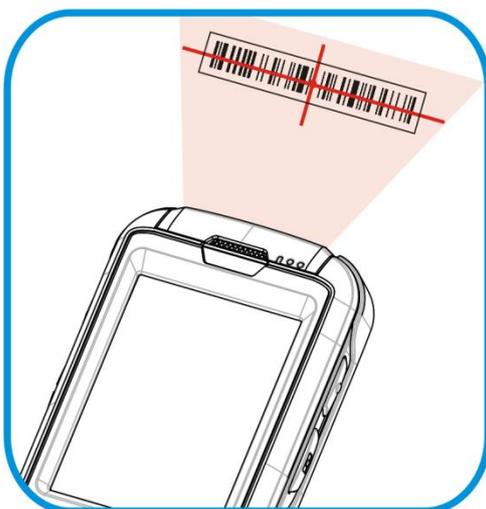


Figure 14: Read printed barcodes

The decoded data will appear on the page. When finished viewing, tap **OK** on the softkey bar to leave the test scan page.

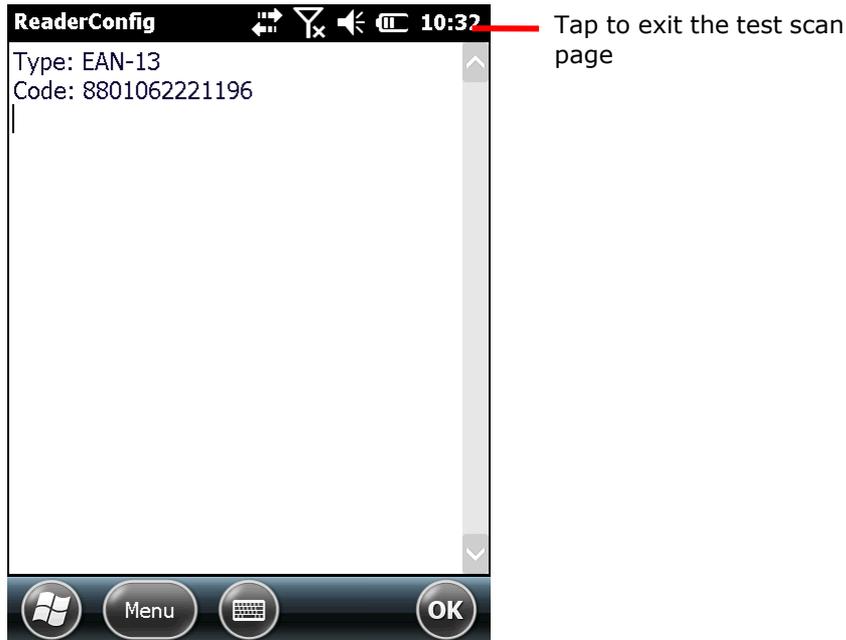


To display more information such as barcode type and length, configure the reader as in [Data Output](#).

You may also configure the reader module(s) as described in [Configure Reader](#) before starting to collect data.

TEST SCAN MENU

Tap the **Menu** button to save the decoded data as a .txt file, clear all data shown on the screen, or exit the Test Scan page.

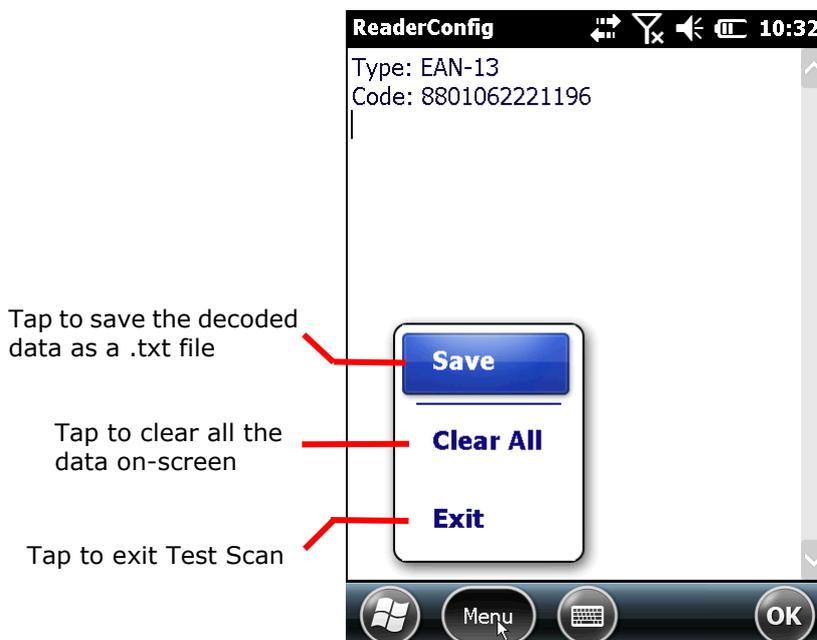

OPERATING SYSTEM

The mobile computer is powered by Windows Embedded Handheld 6.5 a member of Windows Embedded family. Windows Embedded Handheld 6.5 bears much similarity to desktop OS, and users rely only on a few basic gestures such as tap, double-tap and drag to navigate within the OS.

IN THIS CHAPTER


3.1 1st Startup.....	83
3.2 Today Screen	84
3.3 Start Screen.....	86
3.4 Set Screen Lock.....	95
3.5 Manage Applications.....	96
3.6 Suspend & Reset Mobile Computer	102

3.1. 1ST STARTUP

Finished with the setup as described in [Install/Remove Main Battery](#) and [Insert SD Card](#), proceed to power on the mobile computer as described in [Power On](#).

Without a SIM card installed, the mobile computer is still able to connect to an available Wi-Fi hotspot for data. To learn more, see [Use Wi-Fi](#).


When the mobile computer first powers on, the OS boots into [Today Screen](#):

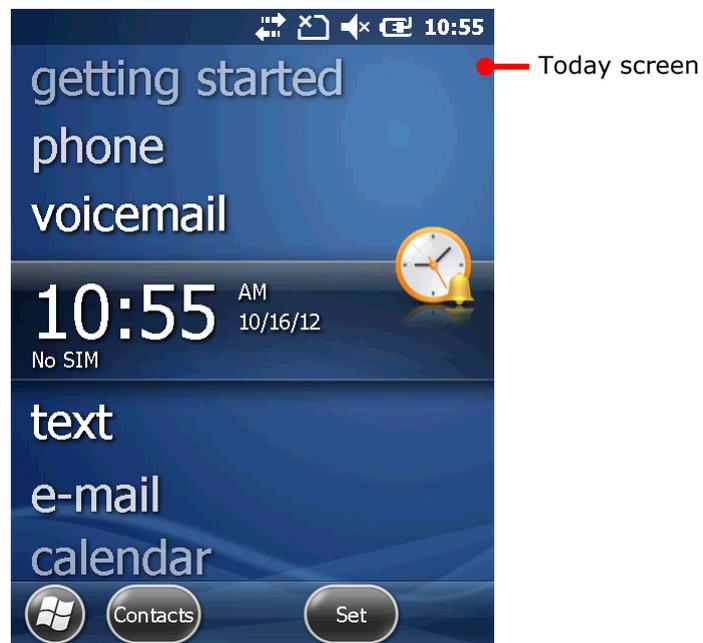

3.2. TODAY SCREEN

It is Today screen that first shows on-screen when the mobile computer powers on or is unlocked. Today screen shows a scrollable list of applications such as pictures, music, clock & time and so on, and the application in the center is always the active one.

When an application is active, today screen displays additional information, and command buttons appear on the softkey bar to take actions to the application. Tap an active application to open it.

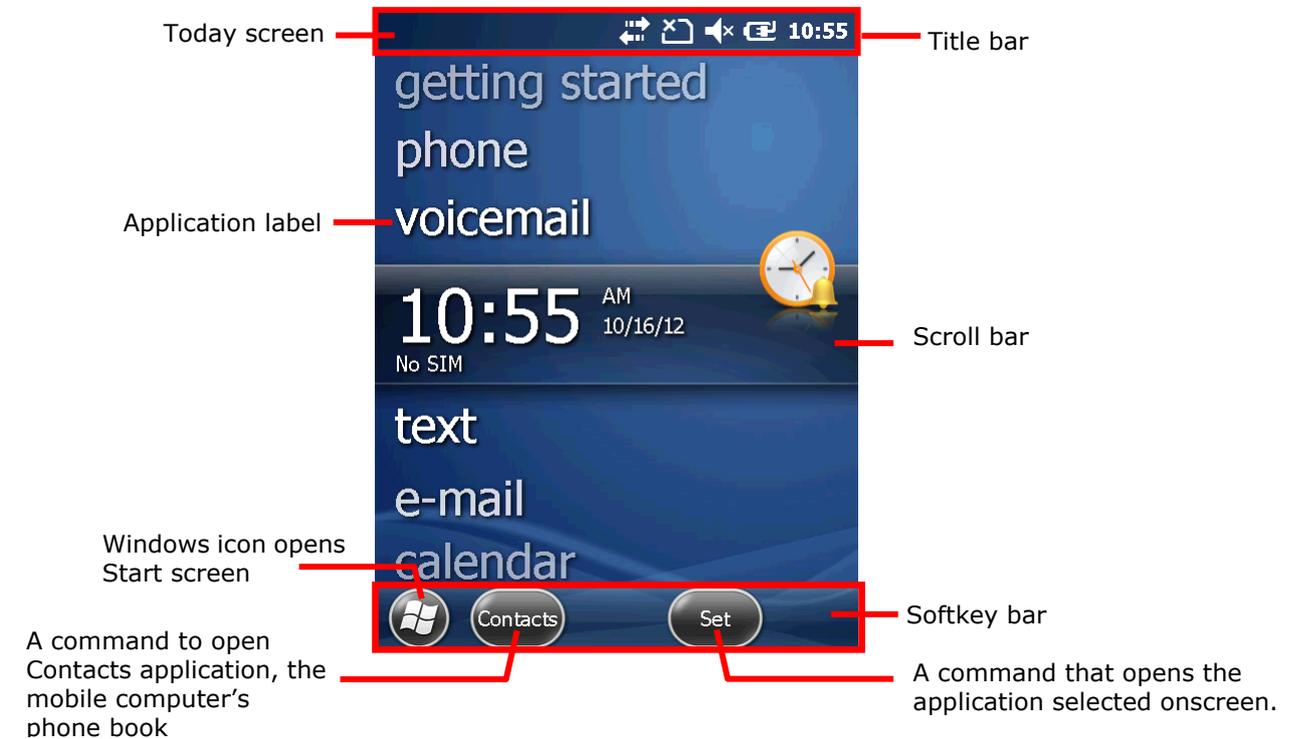

Facility	Description
Notification area	<ul style="list-style-type: none"> ▶ Shows the mobile computer's statuses such as time, radio signal strength, battery level and so on. ▶ Displays the notifications issued by OS
Scroll bar	Scrolls up and down the screen to select among the applications.
Application label	<ul style="list-style-type: none"> ▶ Delivers application name. ▶ Delivers application status when selected by scroll bar. ▶ Opens the application when selected (by scroll bar) and tapped.
Softkey bar	A horizontal rectangle bar presented at the bottom of almost every screen within the OS. It bears the commands to cause the currently active application/screen to take actions.
Command	Launch actions from the current screen or currently active application. Commands are available in context with the application selected onscreen.
Windows icon 	Opens Start screen.

3.2.1. CUSTOMIZE TODAY SCREEN

Customize Today screen to change its appearance and items presented.

To customize Today screen:


- 1) Tap Windows icon  on the softkey bar.
- 2) Tap **Settings | Home**.
Home settings open.
- 3) Select between **Appearance** and **Items** tabs.

Appearance tab page changes the background for Today screen while **Items** tab page changes the items to present.

Home Settings
- Appearance tab page
Changes the background for Today screen



Home Settings
- Items tab page
Changes the items to present on Today screen

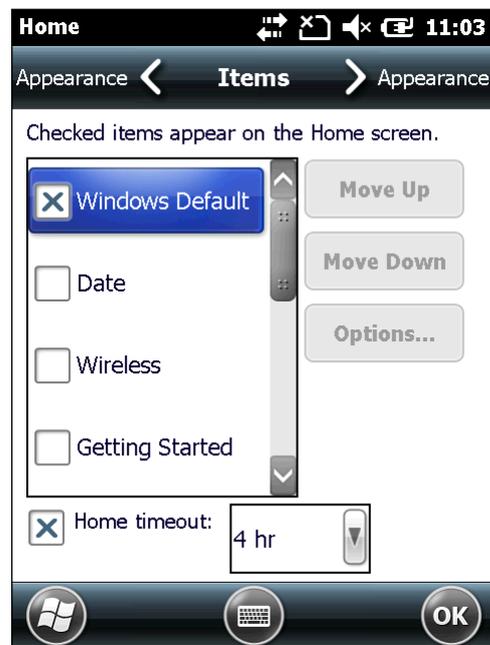

3.2.2. RETURN TO TODAY SCREEN

Tap the Home icon  on the Start screen to re-open the today screen.


3.3. START SCREEN

Start screen is where all features on the mobile computer are accessed from. This screen lays out the application icons, shortcuts and so on in a staggered manner so icons are more touchable and the number of icons allowed onscreen are increased.

Basic operations on Start screen:

- ▶ If you see the icon of the application you want to open, tap it.
- ▶ Flick the screen to scroll down and bring more application icons into view. (See also [Use Touch](#) screen.)
- ▶ Customize Start screen by changing background and the items to display. See [Customize Start Screen](#) for more details.

Take a look around Start screen:

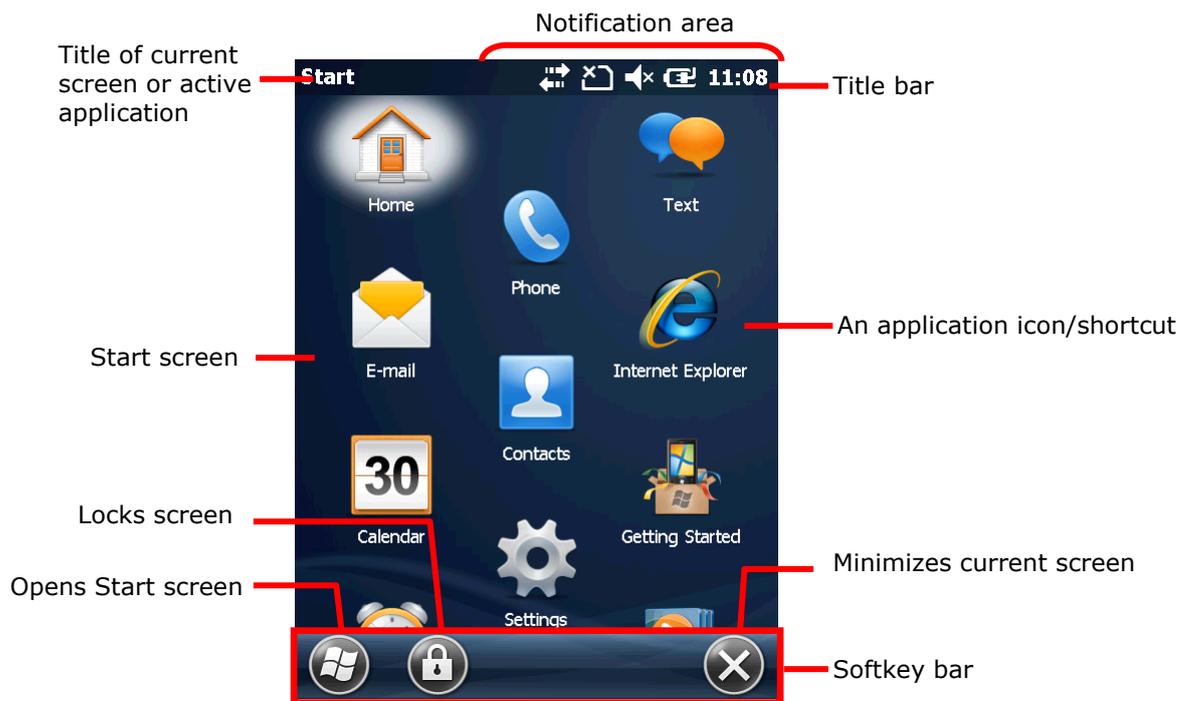

Facility	Description
Start screen	Accesses all applications and settings.
Notification area	Shows the time, radio signal strength, battery status, and other information. It also displays notification icons and status icons.
Minimize button 	Minimizes the active application or current screen.
Windows icon 	Opens Start screen. <ul style="list-style-type: none"> ▶ If the Start screen is the active screen, tapping the Windows icon will open the Today screen.
Lock icon 	Locks screen.

3.3.1. RETURN TO START SCREEN

Tap Windows icon  on the softkey bar or press the physical Windows key  to return to Start screen.

3.3.2. TITLE BAR

At the top of almost every screen is Title bar. It shows a title on the left and a notification area on the right. The title delivers the name of the current screen or currently active application while notification area shows a sequence of graphic icons delivering system statuses or notifications issued to users.



Status icons assert mobile computer's contiguous statuses such as time, radio signal strength, battery level and so on. Notification icons report the arrival of a new message, alarm, and some ongoing events. When a notification is issued, an icon comes up in the notification area, and the mobile computer produces a sound or vibrates.

A general view of the status/notification icons on the mobile computer:

STATUS & NOTIFICATION ICONS

The OS presents the following icons for users. Note there may be application-particular icons not included here.

-  External power connected
-  Battery level (See [Monitor Battery Level](#) for details.)
-  53-key keypad enters uppercase letters.
-  30-key keypad and 38-key keypad enters letters and symbols; 53-key keypad enters symbols, uppercase letters or key values engraved in blue.
-  30-key keypad and 38-key keypad are in Function mode..
-  System sound enabled
-  System sound muted
-  Vibrator on
-  No SIM card installed
-  Phone off
-  Wi-Fi on but not connected
-  WiFi available
-  WiFi connected

-  Bluetooth in use
-  Bluetooth headset in use
-  Alarm on
-  More notifications to be viewed. Tap Title bar or tap the "Notification" command on the softkey bar to view them all.
-  Email received
-  Syncing data with a Windows-based PC
-  Microsoft's appeal for customer feedback to help improve Windows Embedded Handheld software.

To learn more status icons of mobile/wireless data connections, see [Radios](#).

3.3.3. MANAGE NOTIFICATIONS

Status/notification icons are relatively small, however by tapping the Title bar, a drop-down bar will appear to provide larger icons for managing notifications.



Note there are commands that come up on the softkey bar to manage a notification.

A general view of bigger notification/status icons on Drop-down bar:

Icon	Description
	Zooms in/out of current screen.
	Leads to Wireless Manager  and Connections (Manager)  where your current mobile data can be viewed and configured.



Leads to **Wireless Manager** .



This icon signifies Wi-Fi network(s) are available. See [Use Wi-Fi](#) for how to set up a Wi-Fi connection.



Delivers current system volume and opens volume settings. See [Volume Control](#) for more details.



Opens power settings where battery level and charging status can be viewed. See [Monitor Battery Level](#).



Opens [Clock & Alarms](#) settings.



Reports customer feedback to Microsoft for improving Windows Embedded Handheld software.



Opens the reminder for an alarm or appointment.



Bluetooth A2DP profile in use. Tap it to access Bluetooth devices list.



Opens Text application.

RESPOND TO NOTIFICATIONS

- 1) Tap Title bar to open Drop-down bar.
Drop-down bar opens.
- 2) Tap the status/notification icon to manage.
Drop-down bar closes and you are taken to the application in question.

CLEAR NOTIFICATIONS

A notification won't be cleared until it is managed. Upon receiving a notification, tap Title bar to open Drop-down bar to manage it, or tap the action command which appears on the softkey bar.

3.3.4. CUSTOMIZE START SCREEN

Customize Start screen by changing the background, application shortcuts, and so on. Rearrange the application shortcuts to make the applications that you use most often easiest to access.

CHANGE BACKGROUND

Craft your Start screen and Today screen with any of your own pictures or a number of designer themes bundled with the OS.

APPLY ONE OF YOUR OWN PICTURES

- 1) On Start screen, tap **Pictures & Videos** .
Pictures & Videos opens.
- 2) Tap a picture. The picture opens. Tap the "Menu" command on the softkey bar.

OR

- Tap and hold a picture.
Context menu shows up directly.
- 3) Tap **Set as Home background**.
The picture is set as background

APPLY ONE OF THE DESIGNER THEMES

- 1) On Start screen, tap **Settings | Home**.
Appearance tab page opens.
- 2) Tap a theme from the list.
- 3) Tap the "OK" command on the softkey bar.
Change is applied to Today & Start screens.

MOVE APPLICATION SHORTCUTS ON START SCREEN

On Start screen, you can re-tile the application shortcuts (icons) as you like. For example, move your favorite applications atop others:

- 1) Tap and hold an application icon until it is hoisted by a white border.
- 2) Drag the application icon and do not release until it reaches the desired position.

ADD ITEMS TO START SCREEN

A variety of shortcuts can be added to Start screen to quick-open some files or bookmarked webpages or applications.

The mobile computer relies on File Explorer , one of the OS featured applications, to add application shortcuts to Start screen:

ADD APPLICATION SHORTCUTS

- 1) On Start screen, tap File Explorer .
File Explorer opens.
- 2) Browse to the executable file of the application to add shortcut for.

- 3) Tap and hold the executable file.
A context menu comes up.
- 4) Tap **Copy**.
- 5) Browse to **My Device\Windows\Start Menu\Programs**.
Programs folder opens.
- 6) Tap and hold any vacant spot onscreen.
Context menu comes up
- 7) Tap **Paste Shortcut**.
The application shortcut is added to Start screen.

ADD BOOKMARKED WEBPAGE SHORTCUTS

- 1) On Start screen, tap File Explorer .
File Explorer opens.
- 2) Browse to **My Device\Windows\Favorites**.
- 3) Tap and hold the bookmark to create shortcut for.
Context menu comes up.
- 4) Tap **Copy**.
- 5) Browse to **My Device\Windows\Start Menu\Programs**.
Programs folder opens.
- 6) Tap and hold any vacant spot onscreen.
Context menu comes up
- 7) Tap **Paste Shortcut**.
Shortcut to the bookmarked page is added to Start screen.

ADD FILE SHORTCUTS

- 1) On Start screen, tap File Explorer .
File Explorer opens.
- 2) Browse to the file to create shortcut for.
- 3) Tap and hold it.
Context menu comes up.
- 4) Tap **Copy**
- 5) Browse to **My Device\Windows\Start Menu\Programs**.
Programs folder opens.
- 6) Tap and hold any vacant spot onscreen.
Context menu comes up.
- 7) Tap **Paste Shortcut**.
Shortcut to the file is added to Start screen.

REMOVE ITEMS FROM START SCREEN

The mobile computer relies on File Explorer  to remove an application shortcut from Start screen:

- 1) On Start screen, tap File Explorer .
File Explorer opens.
- 2) Browse to **My Device\Windows\StartMenu\Programs**.
Programs folder opens. This is where all applications/bookmarks/file shortcuts are.
- 3) Tap and hold the shortcut to remove.
Context menu comes up.
- 4) Tap **Delete**.
The shortcut is removed from Start screen.

3.3.5. START SCREEN ICONS

Start screen presents a number of icons in a staggered pattern that makes them easily touchable. Each icon opens an application, folder or a group of settings when it is tapped. This section will give an overview of these icons.

Icon	Name	Description
	Home (Today)	Opens Today screen. See Today Screen .
	E-mail	Pens and sends emails.
	Contacts	Shows and searches for contact information stored on the mobile computer.
	Internet Explorer	Browses world wide web.
	Calendar	Creates and manages events, meetings, and appointments.
	Settings	Accesses system settings. See System Folder for details.
	Getting Started	Opens Getting Started application to set up some OS basic features.
	Alarms	Opens Clock & Alarms application to: <ul style="list-style-type: none"> ▶ Set date, time, time zone for your locale. ▶ Set and manage alarms.
	Pictures & Videos	Views pictures and plays videos downloaded or copied.
	Windows Media	Plays audio/video files.
	Messenger	Logs in to the user's Windows Live Web Messenger account.
	MSN Weather	Checks the weather of your locale and other parts of the world.
	Windows Live	Accesses Windows Live services (such as Hotmail) or searches world wide web.

	MSN Money	Checks stocks.
	Calculator	Performs mathematical calculations.
	Games	Games provided by Microsoft.
	Notes	Creates notes by typing on the physical keypad or text entering on the onscreen keypad.
	Tasks	Creates, tracks, and manages tasks.
	File Explorer	Browses and manages the files on local storage.
	ActiveSync	Synchronizes Microsoft Office Outlook data between the mobile computer and another Windows-based computer such as your PC. See Syncing Tools and subsequent sections for more details.
	Internet Sharing	Shares the mobile computer's mobile data connection with another computer through a USB cable, serial cable or Bluetooth.
	Task Manager	Monitors the active applications and CPU/memory usage on the mobile computer. See Task Manager .
	Search Phone	Searches contacts, files and other data on the mobile computer.
	Help	Accesses OS online help.
	Office Mobile 2000	Opens Microsoft Office suite applications including Excel Mobile, SharePoint Workspace Mobile, OneNote Mobile, Word Mobile, and PowerPoint Mobile.
	Remote Desktop Mobile	Connects to a remote computer.
	CipherLab Utilities	This folder contains more CipherLab-developed applications that are preinstalled on the mobile computer and which strengthen the user's system management.

3.4. SET SCREEN LOCK

For the sake of security, you may want to restrict the access to the mobile computer by a self-set password. The OS supports setting up a password to recover the access to the mobile computer.


To set up an unlock password:

- 1) On Start screen, tap **Settings | Lock** . Password setting opens.
- 2) Configure how much time the mobile computer should be left unused before locking out the screen. Set up a unique password to unlock the screen.
- 3) Tap the "OK" command on the softkey bar to apply the change and quit setting.


3.4.1. UNLOCK SCREEN

Once a screen lock is set, the screen locks out all access after the mobile computer is left idled for the defined time. To recover access to the mobile computer:

- 1) On the locked screen, tap and drag the lock icon  to the right or left. An onscreen keypad appears resembling an average phone keypad.
- 2) Enter either the password that unlocks the screen or an emergency call number.

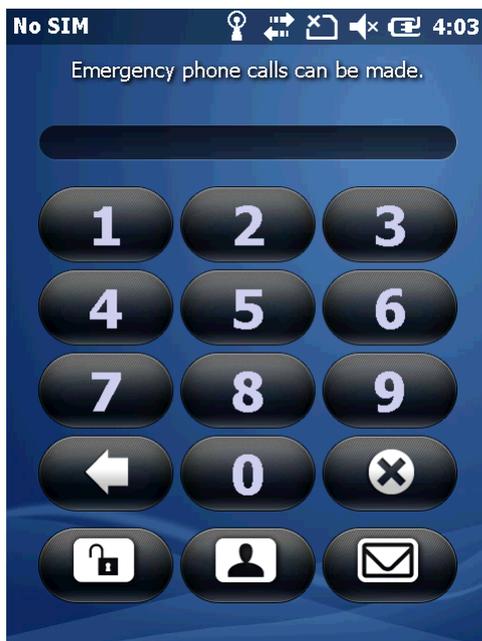

Enter the password to unlock screen.

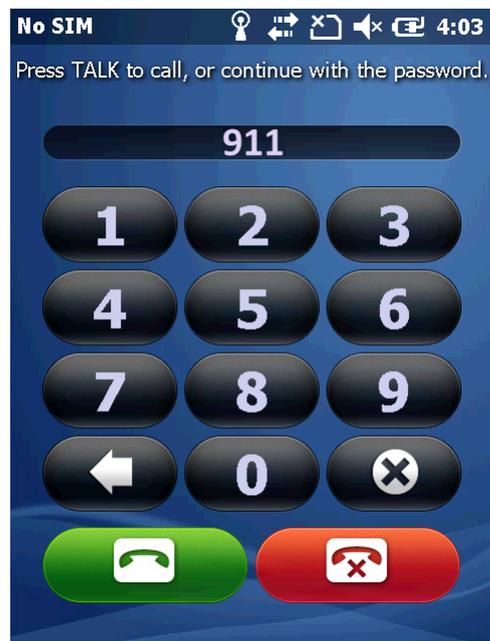


If an emergency call number is entered, the buttons to place and end calls display.

- 3) Follow onscreen instructions to proceed.

3.5. MANAGE APPLICATIONS

On Windows Embedded Handheld 6.5, Start screen is where all inherent applications of the OS are accessed from.

In the OS, when you run an application, the other applications that have been running don't shut down but keep on running whether it is music that is being played or a webpage that is being browsed.

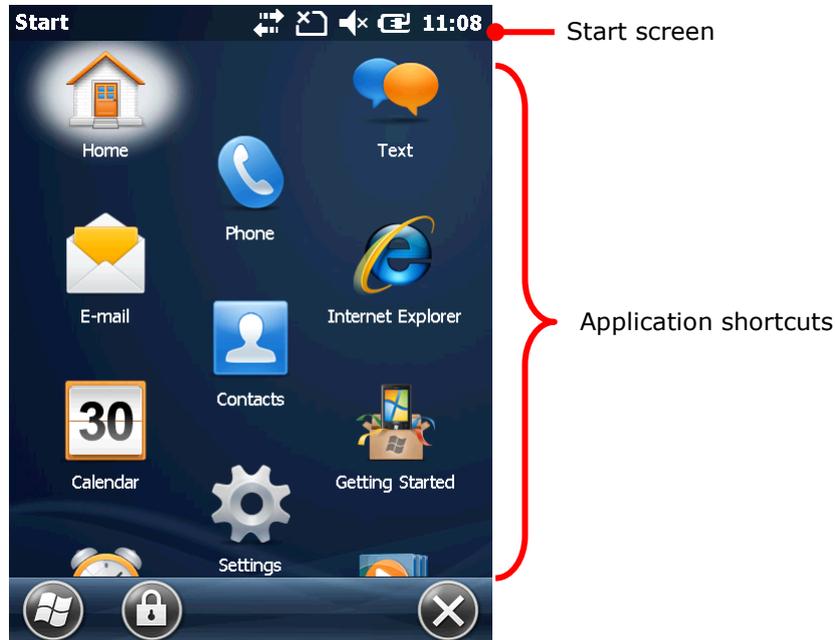

3.5.1. TASK MANAGER

The OS featured Task Manager  is a tool to monitor the memory and CPU resources consumed by each running application and cached process. Task Manager also provides an interface for users to close applications and switch between the opened applications.

LAUNCH TASK MANAGER


To launch Task Manager:

- 1) On Start screen, tap Task Manager icon .

Task Manager opens showing monitored applications.

MONITOR OPENED APPLICATIONS

Upon launch, Task Manager shows a list of all opened applications which are under monitoring:

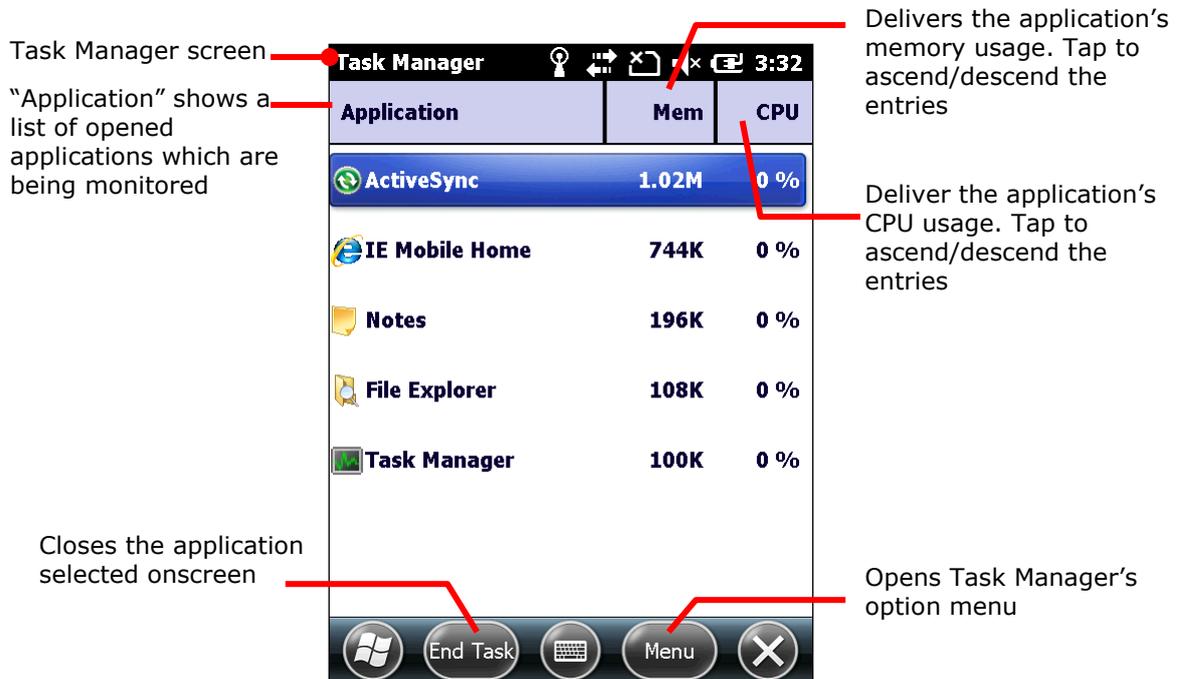

To monitor cached processes, see [Monitor Cached Processes](#).

CLOSE APPLICATIONS

Close an application when it isn't used, or when it is misbehaving. Check for any misbehaving applications by looking up its usage of memory and CPU.

In the OS, how to close an application varies. Some applications have inherent facilities to close themselves such as a GUI button or a menu command while others don't. When it is the latter case, Task Manager closes them for you.

To close an application by Task Manager:


- 1) Launch Task Manager as described in [Launch Task Manager](#).

Task Manager opens monitoring opened applications.

- 2) Tap and hold the application to close. From the context menu that comes up, tap **End Task**.

OR

Tap the application to close. The application is then highlighted onscreen. Tap the "End Task" command on the softkey bar.

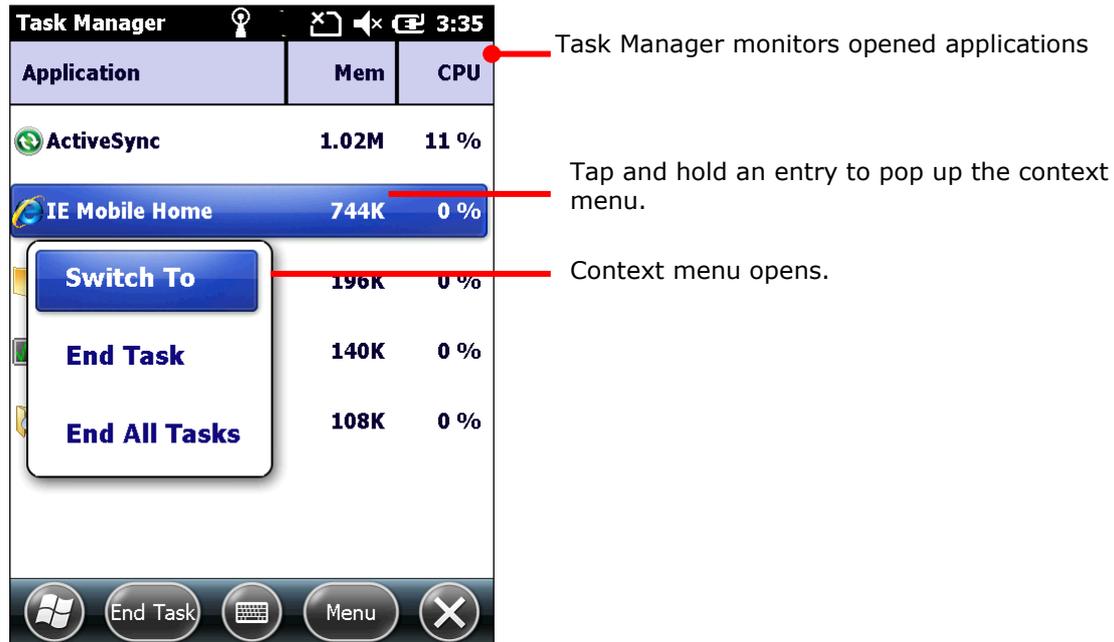

SWITCH TO ANOTHER OPENED APPLICATION

To switch to another opened application:

- 1) Launch Task Manager as described in [Launch Task Manager](#).
Task Manager opens monitoring opened applications.
- 2) Tap and hold the application to switch to.
Context menu shows up.
- 3) Tap **Switch to**.
The desired application opens onscreen.

MONITOR CACHED PROCESSES

Task Manager  also monitors how much RAM and CPU is being consumed by a cached processes.

To monitor cached processes:

- 1) Launch Task Manager as described in [Launch Task Manager](#).
Task Manager opens monitoring opened applications.
- 2) Tap the "Menu" command on the softkey bar.
Option menu opens.
- 3) Tap **View | Processes**.
Task Manager shifts to monitor processes.

Task Manager monitors cached processes.

Process	Mem	CPU
connmgr.exe	324K	0 %
cprog.exe	1.53M	0 %
device.exe	10.7M	1 %
fexplore.exe	108K	0 %
filesys.exe	14.0M	0 %
gwes.exe	5.59M	0 %
iexplore.exe	744K	0 %

Note: Stopping an application or process or service may interrupt one or more dependant functions on the mobile computer. You may need to restart the mobile computer to recover full functionality.

DOWNLOAD & INSTALL APPLICATIONS

A rich resource of applications is downloadable from the Internet to run on the OS. The executable files for installing on Windows Embedded Handheld 6.5 devices are named with the suffix ".cab", short for "cabinet". Download a ".cab" file that supports Windows Embedded Handheld 6.5.


Warning: To protect your mobile computer and personal data, always download applications from trusted sources.

As mentioned in [Add/Remove Programs](#), you can download and install an application on your PC first and offload it to the mobile computer later using ActiveSync or WMDC.


Alternatively, the OS allows you to download and install an application right from the mobile computer.

To download an application, the mobile computer needs to connect to Internet first. See [Radios](#) or [USB Pass-through Networking](#) or [Bluetooth Pass-through Networking](#) to get data connections for the mobile computer.


After download finishes, use File Explorer  to browse to the application program in the local storage. Tap the program file to run the installation.

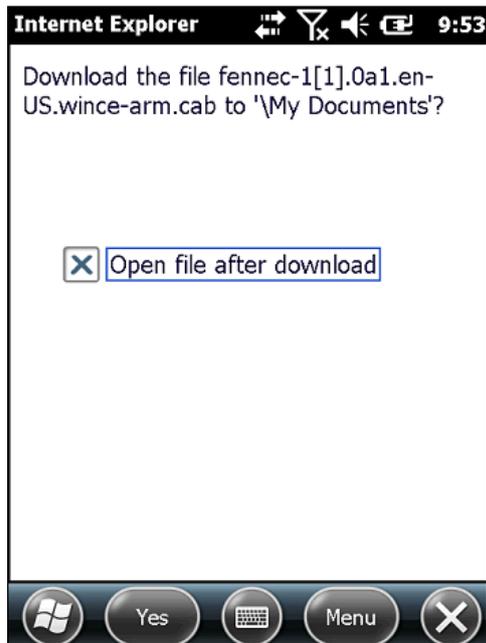


This screenshot shows downloading an application program to the mobile computer. When asked to confirm the download, tap the "Yes" command on the softkey bar.

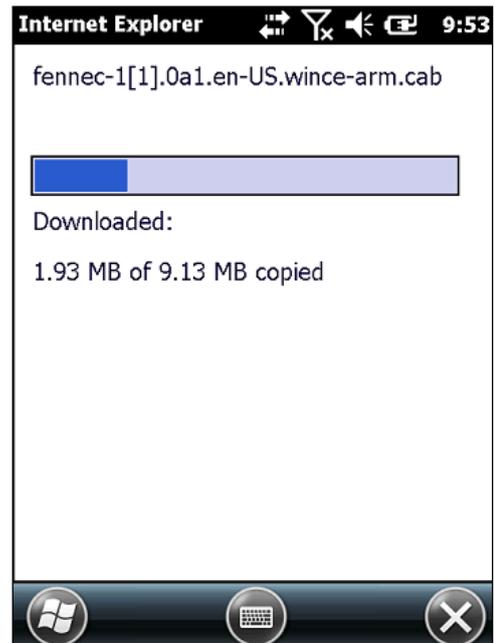


Download starts and proceeds.

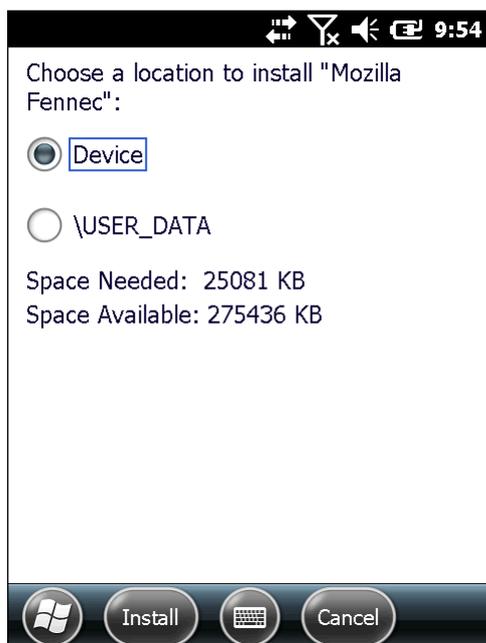

If the mobile computer is equipped with an SD card, you will be provided the option to install the application either on external or internal storage. If an SD card is not present on the mobile computer, only internal storage directories will show.

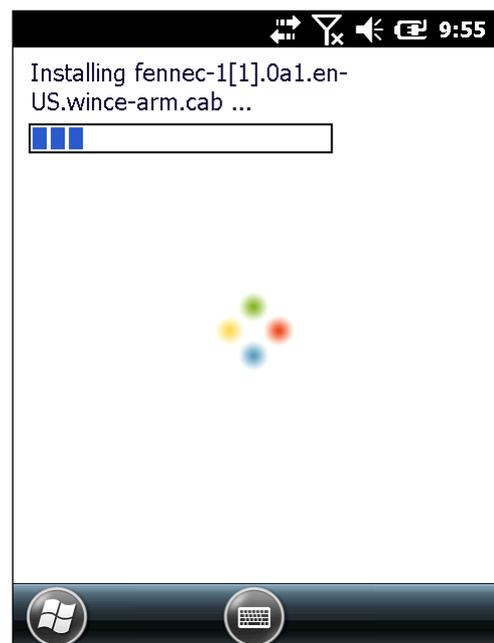

Installation begins.

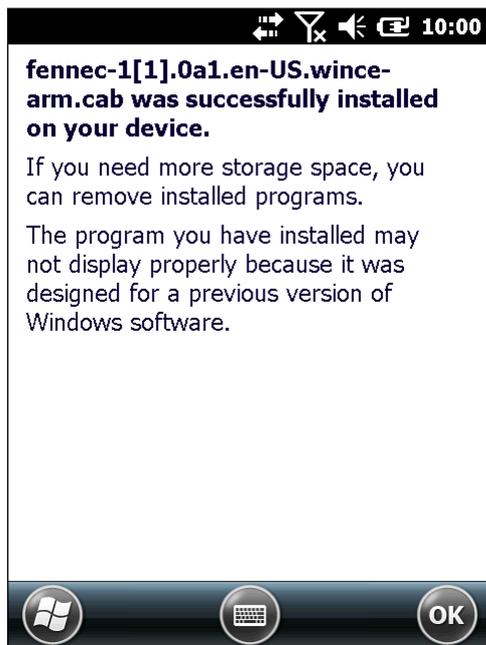

Installation is complete. Tap "OK" command to finish and quit installation.

UNINSTALL APPLICATIONS

On the mobile computer, the acquired (non-inherent) applications are subject to your manual uninstallation. To uninstall an application:

- 1) On Start screen, tap **Settings** | **System** | **Remove Programs** .

Remove Programs opens showing the applications downloaded and installed from external sources.

- 2) Tap the application to remove.
The lower-right "Remove" button becomes available.
- 3) Tap the "Remove" button to uninstall the application.
- 4) Follow onscreen instruction to complete through the uninstallation.



Currently available internal storage

3.6. SUSPEND & RESET MOBILE COMPUTER

To save from repeatedly charging and replacing batteries, suspend the mobile computer when you are not actively using it. Suspending (or “turning off”) the mobile computer holds the device from running without cutting off power. It is a “soft-off” state which enables less power consumption, and also a state which the device can quickly awake from since there is no need to restart the OS and applications.

3.6.1. SUSPEND MOBILE COMPUTER

The mobile computer can be suspended both manually and automatically.

MANUAL SUSPENSION

Press the power button for three seconds. The [Power Menu](#) opens.

- 1) Select **Suspend** in the power menu.

The mobile computer enters suspension mode.

OR

Do not select any item, and the mobile computer will automatically enter suspension in five seconds.

AUTO-SUSPENSION

Set up a power plan to suspend the mobile computer in an apt timing.

To set up a power plan:

- 1) On Start screen, tap **Settings | System | Power Information** .

Power setting opens showing **Battery** tab page.

- 2) Tap **Advanced** tab.


Advanced tab page opens.

- 3) Set a time to turn off LCD and suspend the mobile computer.

Note the following cases will also cause the mobile computer to enter suspension:

- ▶ Battery fails
- ▶ When the touch screen of the mobile computer is facing down

To get the most from the battery power, see [Power Management](#).

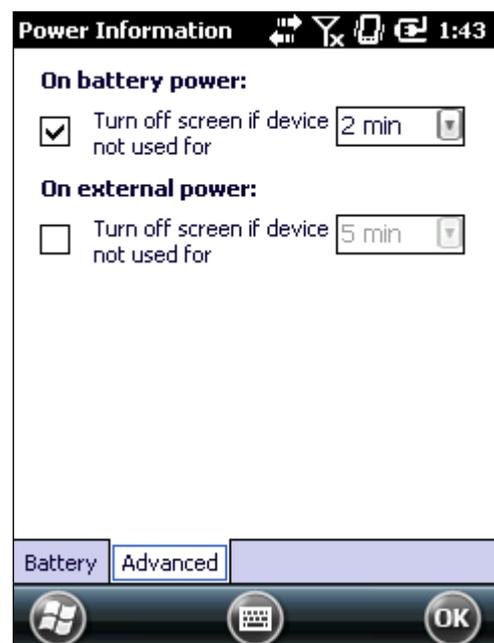

3.6.2. WAKE UP MOBILE COMPUTER

“Waking up” refers to restoring the suspended device to its previous working state. The mobile computer can be awoken both manually and automatically.

MANUAL AWAKENING

Press (without holding) the power button or central scan key to wake up the mobile computer.

AUTO-AWAKENING

The mobile computer wakes up by itself when either of the following happens:

- ▶ USB or serial cable is plugged in
- ▶ AC power cord is plugged in
- ▶ RTC alarm occurs

Note: The mobile computer cannot be awoken if the main battery and battery chamber contact pins are not perfectly in contact.


3.6.3. RESTART MOBILE COMPUTER (WARM BOOT)

When the system becomes erroneous and applications fail to respond properly, proceed to restart the mobile computer. After the mobile computer is restarted, DRAM will be initialized, and all data cached in DRAM and any unsaved tasks will be erased. However all user data, system settings and clock/calendar time will be preserved.

To restart the mobile computer:

- 1) Press and hold the power button for around three seconds.

A [Power Menu](#) shows on-screen.

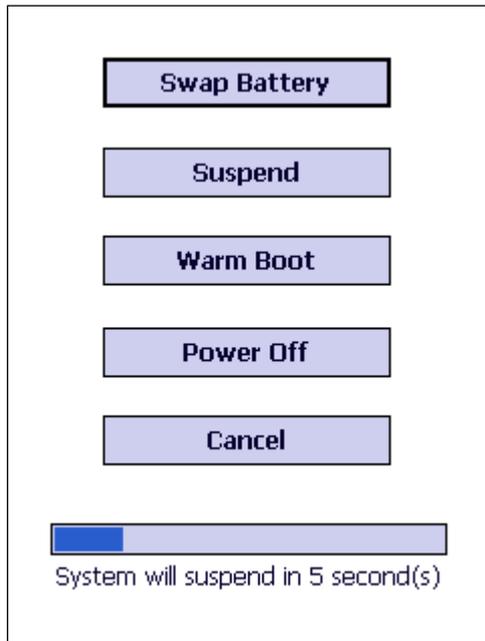

- 2) Tap **Warm Boot** in the menu. The mobile computer shuts down and then restarts to show the desktop.

RADIOS

The mobile computer is a versatile networker. It integrates Wi-Fi and Bluetooth for wireless data. With the help of these radios, the mobile computer keeps users online all the time.

In this chapter, you will learn how these radios can work for you.

IN THIS CHAPTER

4.1 Use Wi-Fi	106
4.2 Use Bluetooth	128

4.1. USE WI-FI

The mobile computer is capable of Wi-Fi, a wireless networking technology making use of an access point, also known as “hotspot”, to connect to a wireless local area network.

To use Wi-Fi, the mobile computer has to connect to a hotspot. Some hotspots are open for connection while others request a key to authenticate access. If this is the case, the authentication key must be included in the mobile computer’s Wi-Fi settings.

For authentications based on secure certificates, see Certificates.

Wi-Fi settings and power are controlled via Summit Client Utility (SCU). When Wi-Fi is not in use, turn it off to extend battery life. See [Turn On/Off Wi-Fi Power](#).

Summit Client Utility functions by the use of Wi-Fi profiles. Profiles are a set of radio and security settings that are stored in the registry. You may create, rename, edit and delete profiles, as well as alter global settings that apply to every profile or to Summit Client Utility (SCU) itself. For more details on profile settings, please visit the following websites:

<http://www.lairdtech.com/Products/Embedded-Wireless-Solutions/Documentation/LCM-Users-Guide>

4.1.1. LAUNCH SCU

Wi-Fi settings can be adjusted with Summit Client Utility. Within this application are three tab pages which allow users to select the access point for connection, create profiles for better management, perform diagnostics on connectivity, and fine-tune property settings to meet their individual requirements.

To launch SCU:


- 1) On Start screen, tap **Settings | System | SCU**  .

SCU opens showing three tab pages: **Status**, **Configuration**, and **Diagnostics**.

The following sections explicate in detail the settings on each of these pages.

4.1.2. STATUS TAB PAGE

The Status tab page provides basic information on WLAN connection and Bluetooth status. Wi-Fi settings can be configured in [Configuration Tab Page](#).

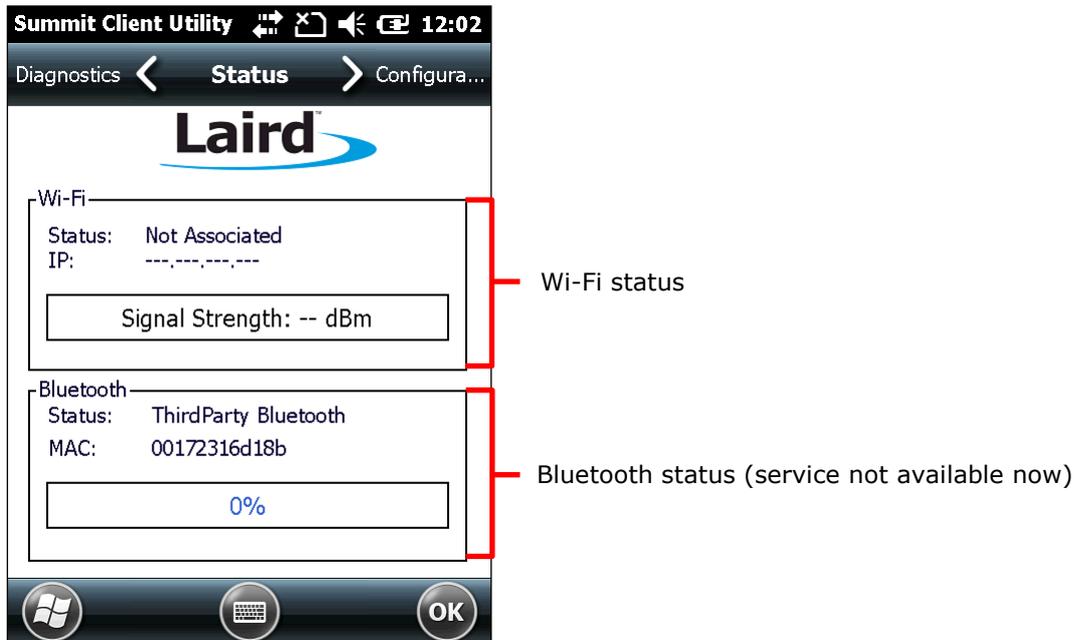

Note: SCU does not currently support viewing or configuring Bluetooth settings.

4.1.3. CONFIGURATION TAB PAGE

TURN ON/OFF WI-FI POWER

Select the Wi-Fi checkbox to turn on Wi-Fi power. Deselect it to shut down Wi-Fi.




Note:

- (1) Wi-Fi connection status will be reflected under **Wireless Manager**, which can be accessed by tapping the **Title bar | Wireless Manager** icon, or **Start | Settings | Connections | Wireless Manager**. When Wi-Fi power is off, the status will display as "No signal". When Wi-Fi power is on but no active connection is established, the status will display as "Available". When a WLAN connection is established, the status will display as "Network Card". Wireless Manager cannot be used to control Wi-Fi power.
- (2) SCU does not allow configuration of Bluetooth settings. To establish and manage Bluetooth connections, tap **Start | Settings | Bluetooth**.

ACTIVE PROFILE

A profile is a set of parameters that define the manner which a device associates to a wireless LAN (WLAN) infrastructure. A profile contains information including the System Set Identifier (SSID, the "name" of the WLAN infrastructure), means of data encryption, authentication type, and security credentials.

Select an active profile in the drop-down box on the **Configuration** tab page. To add a profile other than the "Default" profile, see [Create Wi-Fi Profile](#).

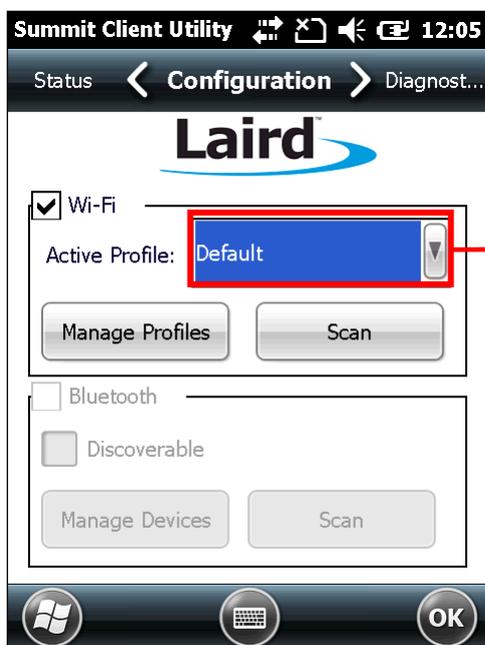


Tap to select an active profile in the drop-down bar

CREATE WI-FI PROFILE

To create a Wi-Fi Profile:


- 1) Open SCU as described in [Launch SCU](#).
- 2) Tap the **Configuration** tab to show the Configuration tab page.
- 3) Tap **Scan** to view a list of access points that are broadcasting their SSIDs. You may sort the list by tapping the column headers.

Tap **Refresh** to update the list of available access points.

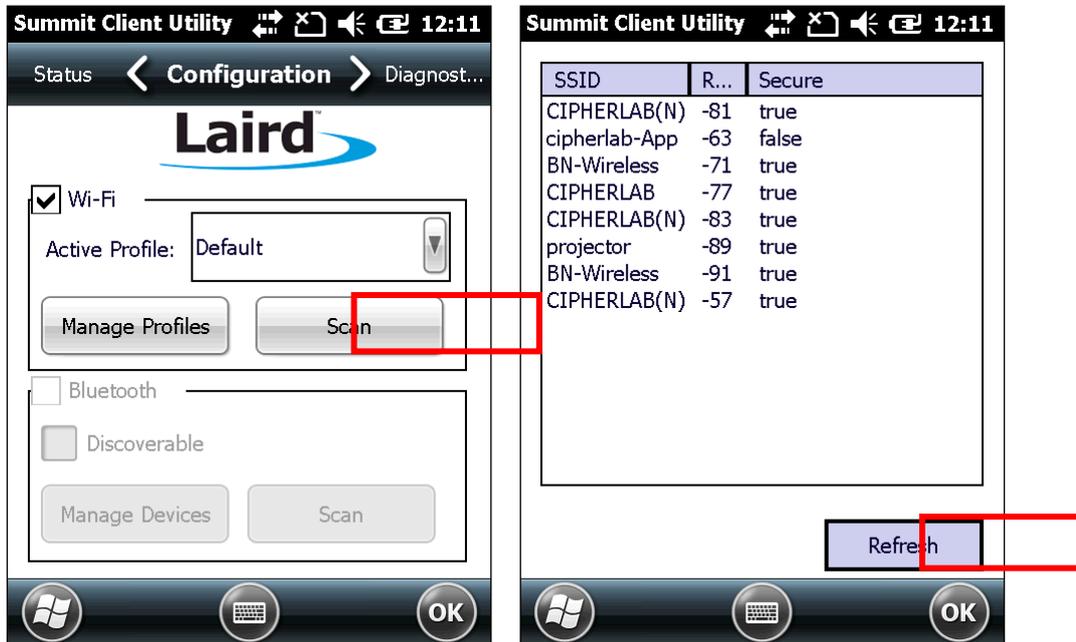


Item	Description
SSID	Service Set Identifier (SSID)
RSSI	Received Signal Strength Indication (RSSI)
Secure	Indicates whether data encryption is enabled: true or false

- 4) Tap twice on any of the access points to create a new profile for it. A prompt shows confirming whether to create a profile with the identified SSID, encryption and EAP type. Tap **Yes** to continue.

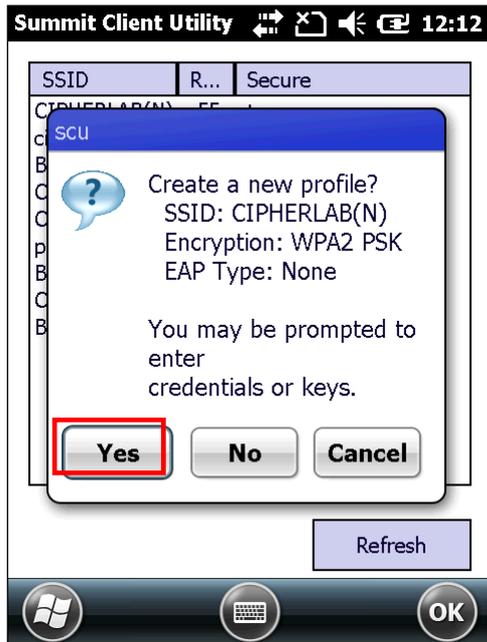

- 5) A profile settings page opens showing detailed radio settings. Tap each item and adjust its **Value** to suit your needs.

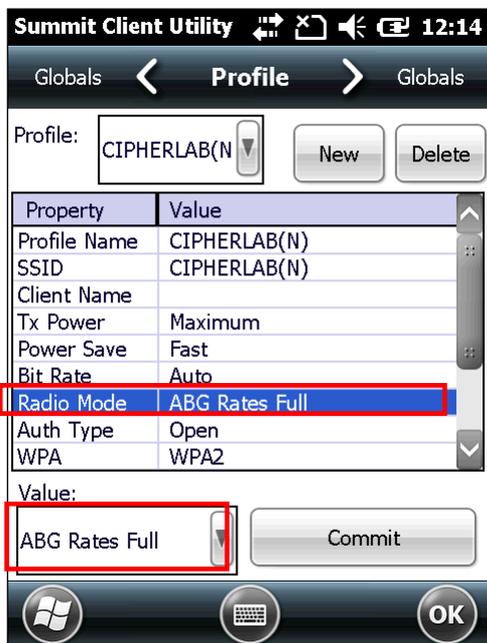

- 6) When finished fine-tuning all settings, tap **Commit** to save the profile.
- 7) Tap **OK** on the softkey bar to close Profile Settings page and return to Configuration settings.

If you would like to directly activate the newly created profile, select it as the [Active Profile](#) on the Configuration settings page.


MANAGE WI-FI PROFILE


To manage your profiles:

- 1) Open SCU's **Configuration** tab page as described in [Create Wi-Fi Profile](#).
- 2) Tap **Manage Profiles** to open the Profile settings page.



Item	Description
Profile	<p>When SCU is first launched, "Default" is the active profile. Unless it is modified, this profile does not specify an SSID, EAP type or encryption method. You can chose to do the following:</p> <ul style="list-style-type: none"> ▶ Modify the default profile ▶ Tap New to add a new profile ▶ Select an existing profile from the drop-down menu and configure

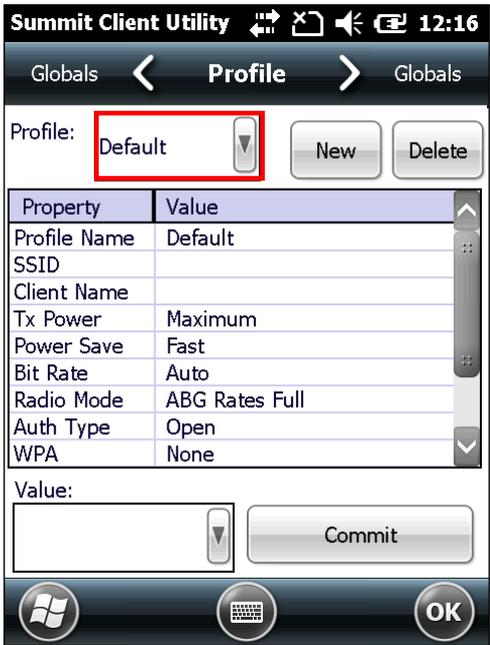
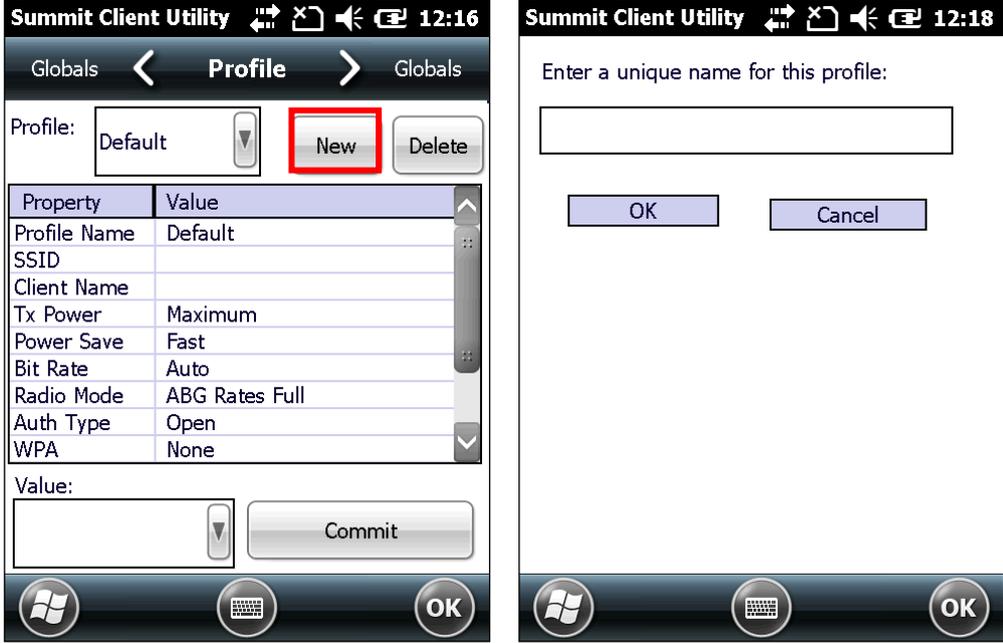
<p>New</p>	<p>Tap New and enter a unique name for the profile. Configure the Radio settings, Encryption, EAP Type, and other settings for this new profile.</p> <ul style="list-style-type: none"> ▶ The name for each profile must be unique ▶ You can define up to 20 profiles 
<p>Delete</p>	<p>Select a profile from the drop-down menu and tap Delete.</p> <ul style="list-style-type: none"> ▶ You cannot delete the Active Profile. Make sure the selected profile is not the active profile under Configuration tab page. 
<p>Radio Settings</p>	<p>After selecting a profile in the Profile drop-down bar, configure radio settings in the scrollable menu below.</p>



Property	Description				
Profile Name	Tap to rename the selected profile. Up to 32 characters allowed.				
SSID	Service Set Identifier (SSID) for the WLAN infrastructure to which the radio will connect. If no SSID is specified, the radio will only associate to an access point that broadcasts its SSID. <ul style="list-style-type: none"> ▶ Value: A string of up to 32 characters ▶ Default: None 				
Client Name	Name assigned to the mobile computer with Summit radio installed. <ul style="list-style-type: none"> ▶ Value: A string of up to 16 characters ▶ Default: None 				
Tx Power	The power of the radio in milliwatts (mW). In certain cases this value will be overwritten by the access point, which will dictate to the radio which power to use. <ul style="list-style-type: none"> ▶ Value: Maximum (Maximum power defined for the current regulatory domain) or a specified percentage 75%, 50%, 25%, 10% ▶ Default: Maximum 				
Power Save	Power save mode for the radio. Set the radio to its optimum power-consumption setting. <ul style="list-style-type: none"> ▶ Value: <table border="1"> <tbody> <tr> <td>CAM</td> <td>Constantly Awake Mode (CAM) keeps the radio powered up continuously so there is minimal lag in message response time. This mode consumes the most power but offers the highest throughput. It is recommended when AC power is in use.</td> </tr> <tr> <td>Maximum</td> <td>In Max Power Savings (Max PSP) mode, the access point buffers incoming messages for the radio, which wakes up periodically and connects to the access point to see if any</td> </tr> </tbody> </table> 	CAM	Constantly Awake Mode (CAM) keeps the radio powered up continuously so there is minimal lag in message response time. This mode consumes the most power but offers the highest throughput. It is recommended when AC power is in use.	Maximum	In Max Power Savings (Max PSP) mode, the access point buffers incoming messages for the radio, which wakes up periodically and connects to the access point to see if any
CAM	Constantly Awake Mode (CAM) keeps the radio powered up continuously so there is minimal lag in message response time. This mode consumes the most power but offers the highest throughput. It is recommended when AC power is in use.				
Maximum	In Max Power Savings (Max PSP) mode, the access point buffers incoming messages for the radio, which wakes up periodically and connects to the access point to see if any				

				buffered messages are waiting. The radio requests buffered messages and then goes back to sleep. It conserves the most power but offers the lowest throughput. It is recommended when battery power is in use.
			Fast	Power Save Mode (Fast PSP) switches between the two modes described above, depending on network traffic. This mode switches to CAM when retrieving a large number of packets and switches back to PSP (= Power Save Polling) after the packets have been retrieved. It is recommended when power consumption is a concern but you need greater throughput than that allowed by Max PSP.
			▶ Default: Fast	
	Bit Rate	The measurement of how much data is transmitted in a given amount of time from one location to another.		
		▶ Value: Auto (rate is negotiated automatically with the AP)		
		▶ Default: Auto		
	Radio Mode	Use of 802.11a/b/g/n frequencies and data rates when interacting with an AP, or the use of ad hoc to associate to a station radio.		
		▶ Value: B rates only, BG rates full, G rates only, BG LRS, A rates only, ABG rates full, BGA rates full, Ad Hoc		
		B rates only	1, 2, 5.5, and 11 Mbps.	
		BG rates full	All B and G rates, plus N rates if supported.	
		G rates only	6, 9, 12, 18, 24, 36, 48, and 54 Mbps.	
		BG LRS	1, 2, 5.5, 6, 11, 24, 36, and 54 Mbps. This should only be used with Cisco APs running IOS in autonomous mode (without controllers).	
		A rates only	6, 9, 12, 18, 24, 36, 48, and 54 Mbps, plus N rates if supported.	
		ABG rates full	All A rates and all B and G rates, with A rates (the 802.11a radio) preferred, plus N if supported.	
		BGA rates full	All B and G rates and all A rates, with B and G rates (the .11g radio) preferred, plus N rates if supported.	
		Ad Hoc	When selected, the Summit radio associates to another station radio that is in ad hoc mode and has the same SSID and, if configured, static WEP key.	
		▶ Default: ABG rates full		

Auth Type	802.11 authentication type used when associating to an AP. <ul style="list-style-type: none"> ▶ Value: Open, Shared (shared-key), LEAP (Network-EAP) ▶ Default: Open ▶ It is recommended that the default setting Open is selected. 												
WPA	WPA and WPA2 support the same authentication methods and similar key management methods; the difference is mainly in area of encryption. WPA defines TKIP as the primary encryption method, while WPA2 defines AES-CCMP as the primary encryption method. <ul style="list-style-type: none"> ▶ Value: None, WPA, WPA2 ▶ Default: None 												
Encryption	This specifies the type of key used to encrypt and decrypt transmitted data, and how that key is specified or derived. Select Encryption type in the Value drop-down box. <table border="1" data-bbox="576 779 1350 1375" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: left;">Item</th> <th style="text-align: left;">Description</th> </tr> </thead> <tbody> <tr> <td>None</td> <td>N/A</td> </tr> <tr> <td>TKIP</td> <td>The encryption method defined with WPA. TKIP uses RC4 encryption as does WEP.</td> </tr> <tr> <td>AES-CCMP</td> <td>The encryption method defined with IEEE 802.11i and certified with WPA2. AES-CCMP is stronger than RC4</td> </tr> <tr> <td>WEP</td> <td>The encryption method defined with the original IEEE 802.11 standards; encrypts transmitted data using 64-bit or 128-bit encryption.</td> </tr> <tr> <td>CKIP</td> <td>CKIP is supported for use only with static WEP. For CKIP, encryption keys need to be defined in SCU; for CKIP-EAP, encryption keys are derived dynamically from an EAP authentication.</td> </tr> </tbody> </table>	Item	Description	None	N/A	TKIP	The encryption method defined with WPA. TKIP uses RC4 encryption as does WEP.	AES-CCMP	The encryption method defined with IEEE 802.11i and certified with WPA2. AES-CCMP is stronger than RC4	WEP	The encryption method defined with the original IEEE 802.11 standards; encrypts transmitted data using 64-bit or 128-bit encryption.	CKIP	CKIP is supported for use only with static WEP. For CKIP, encryption keys need to be defined in SCU; for CKIP-EAP, encryption keys are derived dynamically from an EAP authentication.
Item	Description												
None	N/A												
TKIP	The encryption method defined with WPA. TKIP uses RC4 encryption as does WEP.												
AES-CCMP	The encryption method defined with IEEE 802.11i and certified with WPA2. AES-CCMP is stronger than RC4												
WEP	The encryption method defined with the original IEEE 802.11 standards; encrypts transmitted data using 64-bit or 128-bit encryption.												
CKIP	CKIP is supported for use only with static WEP. For CKIP, encryption keys need to be defined in SCU; for CKIP-EAP, encryption keys are derived dynamically from an EAP authentication.												
Authentication	This is the protocol used to authenticate the device and its user if the WLAN uses the Enterprise version of Wi-Fi Protected Access (WPA) and WPA2. Select Authentication type in the Value drop-down box, then enter the credentials necessary for each type in the appeared fields. <table border="1" data-bbox="576 1559 1350 1995" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: left;">Item</th> <th style="text-align: left;">Description</th> </tr> </thead> <tbody> <tr> <td>None</td> <td>N/A</td> </tr> <tr> <td>LEAP</td> <td> Credentials values for LEAP: <ul style="list-style-type: none"> ▶ User Name (up to 64 characters) ▶ Password (up to 32 characters) </td> </tr> <tr> <td>EAP-FAST</td> <td> Credentials values for EAP-FAST <ul style="list-style-type: none"> ▶ User Name (up to 64 characters) ▶ Password (up to 32 characters) ▶ PAC Filename (up to 32 characters): You may create a protected access credential (PAC) for each client device. </td> </tr> </tbody> </table>	Item	Description	None	N/A	LEAP	Credentials values for LEAP: <ul style="list-style-type: none"> ▶ User Name (up to 64 characters) ▶ Password (up to 32 characters) 	EAP-FAST	Credentials values for EAP-FAST <ul style="list-style-type: none"> ▶ User Name (up to 64 characters) ▶ Password (up to 32 characters) ▶ PAC Filename (up to 32 characters): You may create a protected access credential (PAC) for each client device. 				
Item	Description												
None	N/A												
LEAP	Credentials values for LEAP: <ul style="list-style-type: none"> ▶ User Name (up to 64 characters) ▶ Password (up to 32 characters) 												
EAP-FAST	Credentials values for EAP-FAST <ul style="list-style-type: none"> ▶ User Name (up to 64 characters) ▶ Password (up to 32 characters) ▶ PAC Filename (up to 32 characters): You may create a protected access credential (PAC) for each client device. 												


			<p>When creating a PAC manually, you must store it in the directory identified in Certs Path on the Globals settings page. To use automatic provisioning, leave this field blank.</p> <ul style="list-style-type: none"> ▶ PAC Password (up to 32 characters) <p>PEAP-MSCHAP Credentials values for PEAP-MSCHAP, PEAP-GTC, EAP-TTLS:</p> <ul style="list-style-type: none"> ▶ User Name (up to 64 characters) ▶ Password (up to 32 characters) ▶ CA Cert: Filename and extension of root certificate authority (CA) digital certificate (up to 32 characters). Specify the Certs Path in Globals settings page > Certs Path. <p>PEAP-GTC</p> <p>EAP-TTLS</p> <p>EAP-TLS Credentials values for EAP-TLS and PEAP-TLS:</p> <ul style="list-style-type: none"> ▶ User: Username or Domain/ Username (up to 64 characters) ▶ User Cert: Filename and extension of user certificate residing in the Microsoft certificate store. See Certificates. ▶ CA Cert: Filename and extension of root certificate authority (CA) digital certificate (up to 32 characters). Specify the Certs Path in Globals settings page > Certs Path. <p>PEAP-TLS</p> <p>PSK Pre-shared keys (PSK) consist of up to 256 bits entered as a string of up to 64 hexadecimal digits.</p> <p>Fast Reauth The expedited WPA key handshake used to reduce roaming time to 125 msec or less. Available for WPA TKIP and WPA2 AES-CCMP.</p> <ul style="list-style-type: none"> ▶ Value: None, CCKM ▶ Default: None
Value	<p>Use this box to change the value of a selected item. Depending on the item property, this can be done by choosing a value from a drop-down list, or entering the desired value with the on-screen or physical keypad.</p> 		
Commit	<p>After making any changes on the Profile tab page, the Commit button must be tapped in order for the settings to take effect.</p> 		

MANAGE GLOBAL SETTINGS

Global settings include radio and security settings that apply to all profiles in SCU.

To open the Global settings page:

- 1) Open SCU's Configuration tab page as described in [Create Wi-Fi Profile](#).
- 2) Tap **Manage Profiles** to open the Profile settings page.
- 3) Tap the **Globals** tab to open the Global settings page.

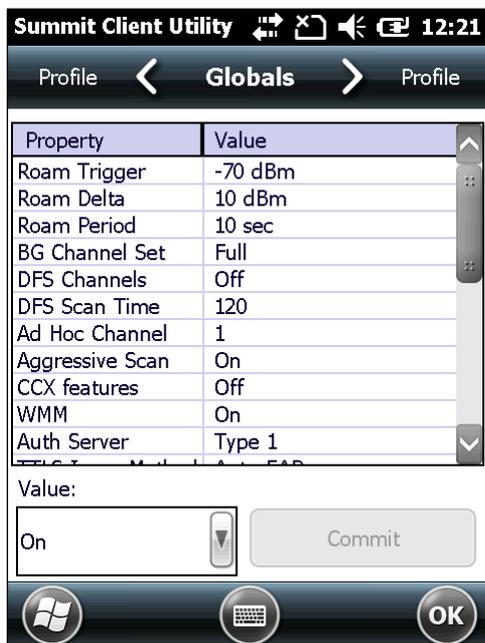

Property	Value						
Roam Trigger	<p>When the moving average RSSI from the current AP is weaker than Roam Trigger, radio does a roam scan where it probes for an AP with a signal that is at least Roam Delta dBm stronger.</p> <ul style="list-style-type: none"> ▶ Value (dBm): -50, -55, -60, -65, -70, -75, -80, -85, -90, Custom ▶ Default: -70 dBm 						
Roam Delta	<p>When Roam Trigger is met, a second AP's signal strength (RSSI) must be Roam Delta dBm stronger than the moving average RSSI for the current AP before radio will attempt to roam to the second AP.</p> <ul style="list-style-type: none"> ▶ Value (dBm): 5, 10, 15, 20, 25, 30, 35 ▶ Default: 10 dBm 						
Roam Period	<p>After association or roam scan (with no roam), radio will collect RSSI scan data from Roam Period seconds before considering roaming.</p> <ul style="list-style-type: none"> ▶ Value (sec): 5, 10, 15, 20, 25, 30, 35, 40, 45, 50, 55, 60, Custom ▶ Default: 10 (seconds) 						
BG Channel Set	<p>Defines the 2.4 GHz channels to be scanned when the radio is contemplating a roam and needs to determine what APs are available.</p> <table border="1" style="width: 100%;"> <thead> <tr> <th>Item</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Full</td> <td>All channels</td> </tr> <tr> <td>1, 6, 11</td> <td>The most commonly used 2.4 GHz channels</td> </tr> </tbody> </table>	Item	Description	Full	All channels	1, 6, 11	The most commonly used 2.4 GHz channels
Item	Description						
Full	All channels						
1, 6, 11	The most commonly used 2.4 GHz channels						

	<table border="1"> <tr> <td>1, 7, 13</td> <td>For ETSI and TELEC radios only</td> </tr> <tr> <td>Custom</td> <td>Indicates the system registry has been edited to include a value other than those available in the drop-down value</td> </tr> </table> <ul style="list-style-type: none"> ▶ Default: Full 	1, 7, 13	For ETSI and TELEC radios only	Custom	Indicates the system registry has been edited to include a value other than those available in the drop-down value
1, 7, 13	For ETSI and TELEC radios only				
Custom	Indicates the system registry has been edited to include a value other than those available in the drop-down value				
DFS Channels	<p>Indicates whether to support 5 GHz (802.11a) channels where dynamic frequency selection (DFS) is required.</p> <ul style="list-style-type: none"> ▶ Value: On, Off ▶ Default: Off 				
DFS Scan Time	<p>Enables determining the dwell (listen) time when passively scanning on a DFS channel.</p> <ul style="list-style-type: none"> ▶ Valid range of 20-500 ms configurable ▶ Default: 120 ▶ When the DFS Scan Time is changed to a value lower than default, it is recommended that the beacon period in the WLAN infrastructure is changed as well. Ideally, the dwell time should be 1.5 times than that of the beacon period. 				
Ad Hoc Channel	<p>The channel to be used for an ad hoc connection if the active profile has a Radio Mode value of "Ad Hoc".</p> <ul style="list-style-type: none"> ▶ Value: <table border="1" style="margin-left: 20px;"> <tr> <td>1~14</td> <td>One of the 2.4 GHz channels</td> </tr> <tr> <td>36, 40, 44, 48</td> <td>UNII-1 channels</td> </tr> </table> ▶ Default: 1 ▶ If a channel that is not supported is selected, then SCU will automatically apply the default channel setting (1). 	1~14	One of the 2.4 GHz channels	36, 40, 44, 48	UNII-1 channels
1~14	One of the 2.4 GHz channels				
36, 40, 44, 48	UNII-1 channels				
Aggressive Scan	<p>Aggressive scanning complements and works in conjunction with the standard scanning that is configured through the Roam Trigger, Roam Delta, and Roam Period settings. It is recommended that aggressive scanning is enabled unless there is significant co-channel interference because of overlapping coverage from APs that are on the same channel.</p> <ul style="list-style-type: none"> ▶ Value: On, Off ▶ Default: On 				
CCX features	<p>Whether to allow the use of Cisco information element (IE) and CCX version number to authorize support for CCX features.</p> <ul style="list-style-type: none"> ▶ Value: Full, Off <p>Full mode uses Cisco IE and CCX version number and enables support for all CCX features. Off mode disables all support for Cisco IE and CCX version number.</p> <ul style="list-style-type: none"> ▶ Default: Off ▶ If the radio fails to connect to an 802.11n wireless network, make sure CCX features is set as "Off" and try again. 				
WMM	<p>Whether to allow the use of Wi-Fi Multimedia (WMM) Extensions or not.</p> <ul style="list-style-type: none"> ▶ Value: On, Off ▶ Default: Off ▶ Changing this setting requires suspend/resume of the mobile computer to take effect. 				
Auth Server	<p>Type of authentication server being used for EAP authentication.</p> <ul style="list-style-type: none"> ▶ Value: <table border="1" style="margin-left: 20px;"> <tr> <td>Type 1</td> <td>Cisco Secure ACS or another server that uses</td> </tr> </table> 	Type 1	Cisco Secure ACS or another server that uses		
Type 1	Cisco Secure ACS or another server that uses				

	<table border="1"> <tr> <td></td> <td>PEAPv1 for PEAP with EAP-MSCHAPV2 (PEAP-MSCHAP)</td> </tr> <tr> <td>Type 2</td> <td>A different authentication server, such as Juniper Networks Steel Belted RADIUS, that uses PEAPv0 for PEAP-MSCHAP</td> </tr> </table> <p>▶ Default: Type 1</p>		PEAPv1 for PEAP with EAP-MSCHAPV2 (PEAP-MSCHAP)	Type 2	A different authentication server, such as Juniper Networks Steel Belted RADIUS, that uses PEAPv0 for PEAP-MSCHAP								
	PEAPv1 for PEAP with EAP-MSCHAPV2 (PEAP-MSCHAP)												
Type 2	A different authentication server, such as Juniper Networks Steel Belted RADIUS, that uses PEAPv0 for PEAP-MSCHAP												
TTLS Inner Method	<p>Authentication method used within secure tunnel created by EAP-TTLS.</p> <p>▶ Value:</p> <table border="1"> <tr> <td>Auto-EAP</td> <td>Any available EAP method</td> </tr> <tr> <td>MSCHAPV2</td> <td></td> </tr> <tr> <td>MSCHAP</td> <td></td> </tr> <tr> <td>PAP</td> <td></td> </tr> <tr> <td>CHAP</td> <td></td> </tr> <tr> <td>EAP-MSCHAPV2</td> <td></td> </tr> </table> <p>▶ Default: Auto-EAP</p>	Auto-EAP	Any available EAP method	MSCHAPV2		MSCHAP		PAP		CHAP		EAP-MSCHAPV2	
Auto-EAP	Any available EAP method												
MSCHAPV2													
MSCHAP													
PAP													
CHAP													
EAP-MSCHAPV2													
PMK Caching	<p>The type of Pairwise Master Key (PMK) caching to use with a WPA2 encryption type (alternative to WPA2 CCKM).</p> <p>▶ Value: Standard or OPMK (opportunistic PMK)</p> <p>▶ Default: Standard</p>												
TX Diversity	<p>How to handle antenna diversity when transmitting data to AP.</p> <p>▶ Value:</p> <table border="1"> <tr> <td>Main Only</td> <td>Use main antenna only</td> </tr> <tr> <td>Aux Only</td> <td>Use auxiliary antenna only</td> </tr> <tr> <td>On</td> <td>Use diversity</td> </tr> </table> <p>▶ Default: On</p>	Main Only	Use main antenna only	Aux Only	Use auxiliary antenna only	On	Use diversity						
Main Only	Use main antenna only												
Aux Only	Use auxiliary antenna only												
On	Use diversity												
RX Diversity	<p>How to handle antenna diversity when receiving data from AP.</p> <p>▶ Default: On-start on Main</p> <p>▶ This is a fixed setting; on startup, the main antenna is always used</p>												
Frag Thresh	<p>When packet size exceeds the set threshold, it becomes fragmented.</p> <p>▶ Value: 256 ~ 2346</p> <p>▶ Default: 2346 (bytes)</p>												
RTS Thresh	<p>When packet size exceeds the set threshold, RTS/CTS is required on link.</p> <p>▶ Value: 0 ~ 2347</p> <p>▶ Default: 2347 (bytes)</p>												
LED	<p>Indicates whether or not an LED is used.</p> <p>▶ Value: On, Off</p> <p>▶ Default: Off</p>												
Tray Icon	<p>Whether to enable the system tray icon or not.</p> <p>▶ Value: On, Off</p> <p>▶ Default: On</p>												
Admin Password	N/A												
Auth Timeout (s)	<p>Specifies how long it will wait for an EAP authentication request to succeed or fail. If authentication credentials are specified in the active profile and the authentication times out, then association will fail. If authentication</p>												

	<p>credentials are not specified in the active profile and the authentication times out, then the user will be required to enter credentials again.</p> <ul style="list-style-type: none"> ▶ Value: 3 ~ 60 ▶ Default: 8 (seconds)
Certs path	<p>File path where the certificate for EAP authentication is stored.</p> <ul style="list-style-type: none"> ▶ Value: A valid directory path of up to 64 characters ▶ Default: Depends on device
Supplicant	<p>The user (client) making a request to gain access to system resources through the authentication server.</p> <ul style="list-style-type: none"> ▶ Value: Summit, Third Party ▶ Default: Summit
Auto Profile	<p>Activate or deactivate automatic profile selection.</p> <ul style="list-style-type: none"> ▶ Value: On, Off ▶ Default: Off <p>When On is selected, proceed to the Profile settings page and select from the existing profiles those which you would like to add to the Auto Profile list. The number of profiles in this list is limited to 19.</p> <p>When Auto Profile is activated, the Summit radio will attempt to associate to an access point after a device startup or resume, and it will try out each listed profile in order until the radio associates to an access point. The successful profile becomes the active profile and remains active until one of the following occurs:</p> <ul style="list-style-type: none"> ▶ The device goes through suspension and resume, power-cycling, or restart, which causes the radio to go through the automatic profile selection process once more. ▶ Auto Profile is turned off and an active profile is manually selected on the SCU Configuration tab.


4.1.4. DIAGNOSTICS TAB PAGE

Perform diagnostic tests to troubleshoot connection issues when necessary.

To open the Diagnostics page:

- 1) Open SCU as described in [Launch SCU](#).
- 2) Tap the **Diagnostics** tab to show the Diagnostics page.


Diagnostics status for Wi-Fi and Bluetooth shows, along with on-screen buttons to open Advanced settings and view software version information.

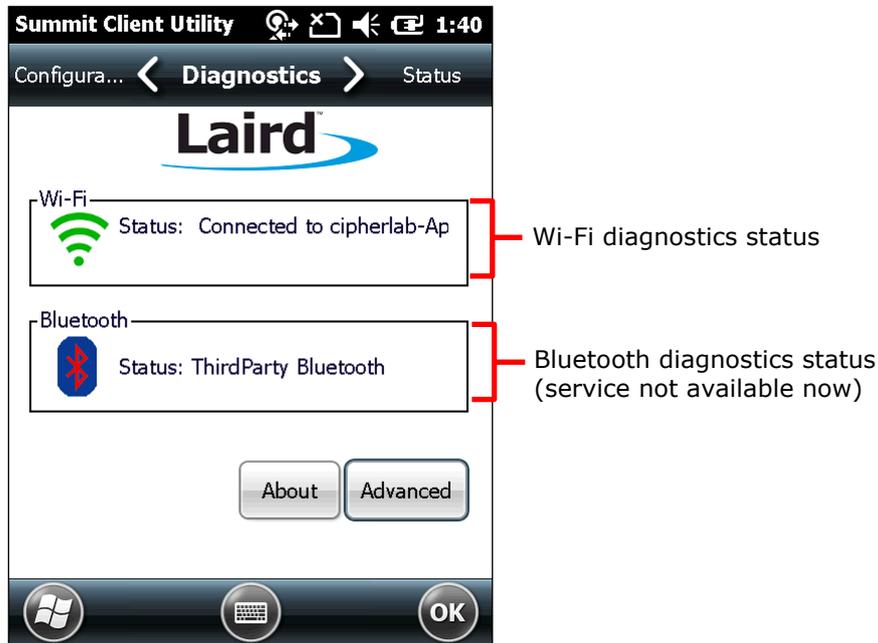

ADVANCED DIAGNOSTICS

To access Advanced diagnostics settings:

- 1) Open [Diagnostics Tab Page](#).
- 2) Tap the **Advanced** button to open advanced diagnostics settings.

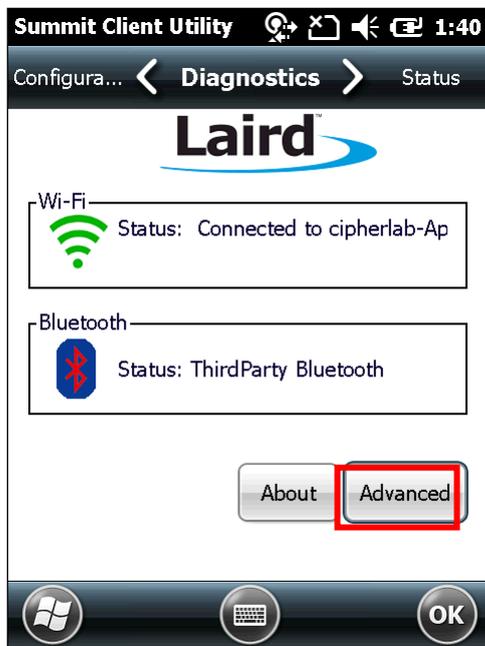

CHECK STATUS


To check diagnostics status, select **Status** in the drop-down bar.




Select **Status** to check connection details

USE PING TOOLS



To perform ping tests, select **Ping Tools** in the drop-down bar.

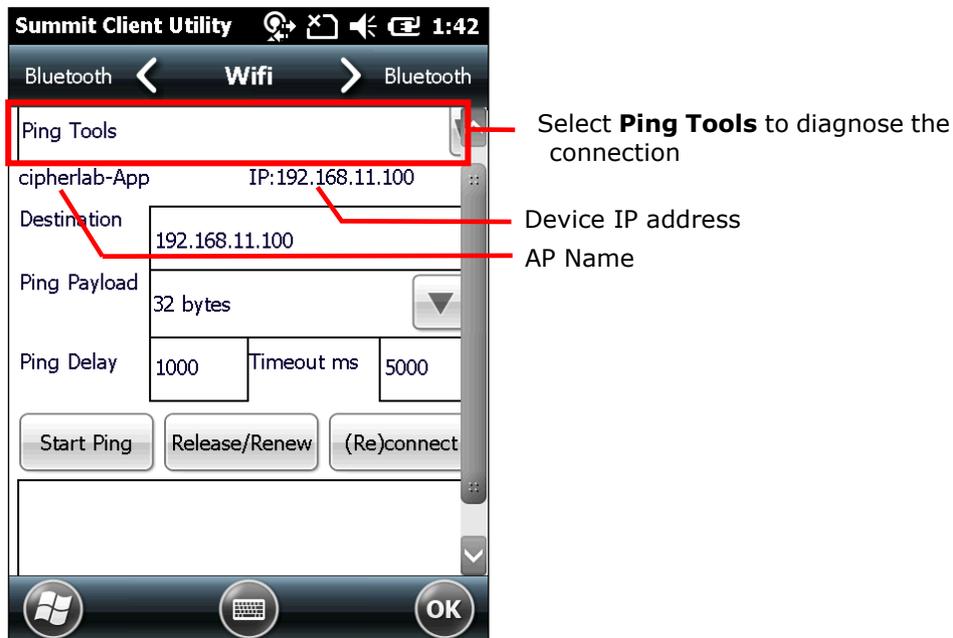

Item	Description
Destination	Enter the address to ping.
Ping Payload	The amount of data to be transmitted on a ping. <ul style="list-style-type: none"> ▶ Value: 32, 64, 128, 256, 512, 1024 ▶ Default: 32 (bytes)
Ping Delay	The amount of time that elapses between successive ping requests. <ul style="list-style-type: none"> ▶ Value: 0~7200000 ▶ Default: 1000 (milliseconds)
Timeout ms	The amount of time that elapses without a response before ping request is considered a failure. <ul style="list-style-type: none"> ▶ Value: 0~30000 ▶ Default: 5000 (milliseconds)
Start Ping	Enter the address to ping to in the Destination field and tap Start Ping . A continuous ping will begin until the following happens: Stop Ping is tapped, the application is exited, or the radio is removed. Activity status will be logged in the output box below.

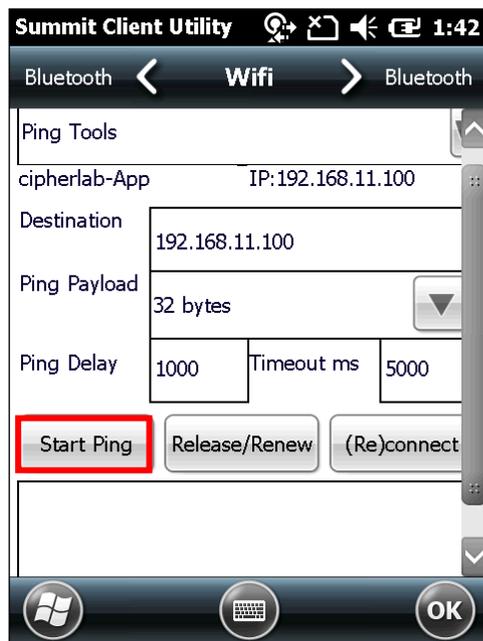

When an active ping is initiated, the screen displays a ping indicator that blinks in green (for a successful ping) or red (for an unsuccessful ping). The ping indicator is hidden when the screen is switched to a tab other than Diags or Status.

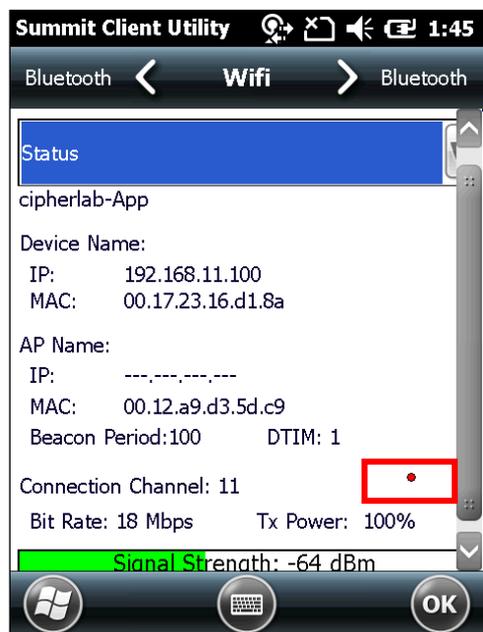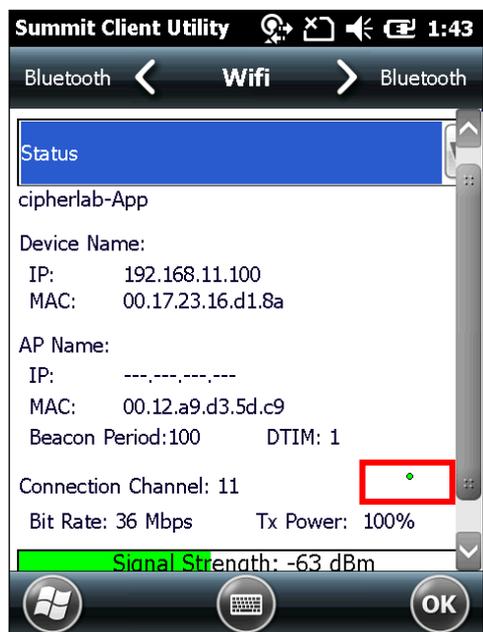


Release/Renew

Obtain a new IP address through DHCP release/renew, and log all activity in the output area at the bottom.

	 <p>The screenshot shows the Summit Client Utility interface with the 'Wifi' tab selected. The 'Ping Tools' section displays 'cipherlab-App' with IP: 192.168.11.34. The 'Destination' field is empty. 'Ping Payload' is set to 32 bytes. 'Ping Delay' is 1000 and 'Timeout ms' is 5000. Buttons for 'Start Ping', 'Release/Renew', and '(Re)connect' are visible. A message box at the bottom indicates 'Renew OS call success'.</p>
<p>(Re)connect</p>	<p>Disable and enable the radio, apply or re-apply the current profile, attempt to associate and authenticate to the wireless network, and log all activity in the output area at the bottom.</p>  <p>This screenshot is identical to the one above, but the message box at the bottom now displays 'enabling radio'.</p>

USE DEBUG TOOLS

To check debug settings, select **Debug** in the drop-down bar.

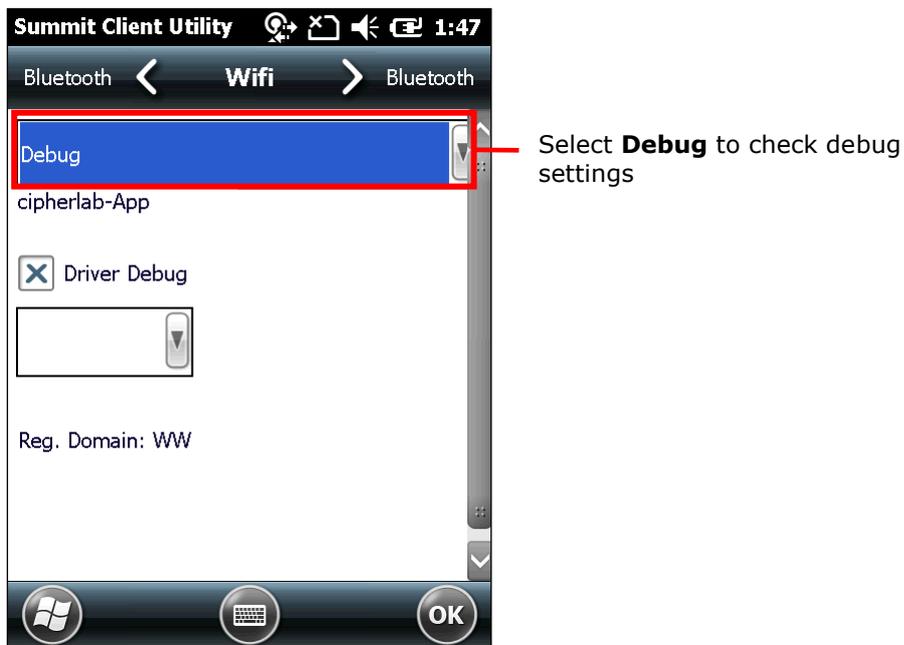



Item	Description
Driver Debug	Select whether to debug the WLAN driver, and the output mode for driver debug. <ul style="list-style-type: none"> ▶ Value: Not set, 1-Text(Low), 2-Text, 3-Text(High), 4-Serial(Low), 5-Serial, 6-Serial(High) ▶ Default: Not set ▶ When set as 1-Text(Low), 2-Text, or 3-Text(High), SCU will continue to export debug logs to the mobile computer's internal storage. Do not select any of these options unless necessary.
Reg. Domain	Indicates the regulatory domain or domains for which the radio is configured by default. Default setting is "Worldwide", which means that the radio can be used in any domain.
Dump Location...	Dumps the diagnostics results to a desired location in the form of a .txt file.
Import/Export	Imports/exports SCU settings as a profile (.sdc format). When exporting, you may select to include Global Settings, Third Party Config settings or Profile Settings. When importing, you may select to add to existing settings, or replace the set values in Global Settings, Third Party Config and Profiles.

Note: It is recommended that Driver Debug output settings are kept as default and not changed.

SOFTWARE VERSION INFORMATION

To check software version information:

- 1) Open [Diagnostics Tab Page](#).
- 2) Tap the **About** button to view information about SCU version, device driver, and software developer.

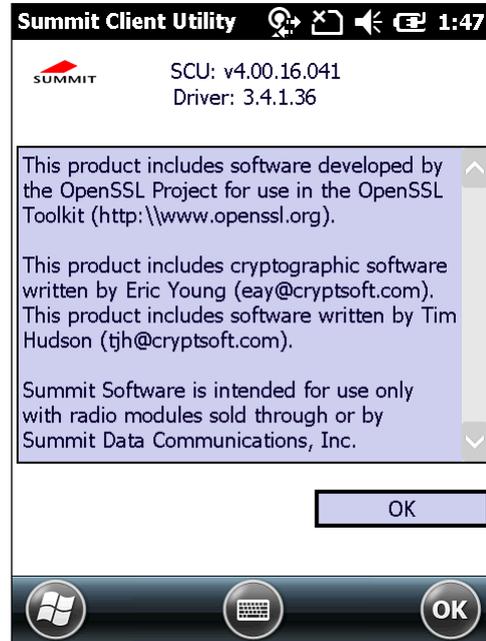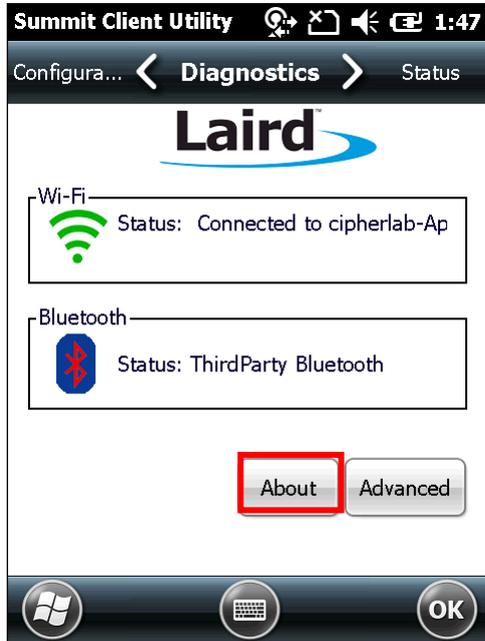

4.2. USE BLUETOOTH

The mobile computer is Bluetooth-enabled to synchronize data with other devices such as PCs, car hands-free kits, headsets, printers, PDAs, and cell phones.

Class II Bluetooth devices enable wireless connections over a short distance of around 10 meters. It is specified in IEEE 802.15.1 as a "wireless personal area network" (WPAN).

To connect a Bluetooth device for the first time, the mobile computer needs to "pair" with it. Such "pairing" involves authentication between two devices to justify their accesses to each other. After this initial pairing, the two devices can connect to each other without the need of a second pairing procedure.

4.2.1. BLUETOOTH PROFILES SUPPORTED

Bluetooth Profiles Supported		
Serial Port Profile	(SPP)	supports Server/Client
Object Push Profile	(OPP)	supports Server/Client
File Transfer Profile	(FTP)	supports Server/Client
Personal Area Networking Profile	(PAN)	
Human Interface Device Profile	(HID)	supports keyboard and mouse without cursor
Headset Profile	(HSP)	
Hands-Free Profile	(HFP)	


4.2.2. STATUS ICONS

According to the Bluetooth connection status, the following status icons will appear on the title bar:

Status Icon	Description
	Bluetooth in use (data transmission ongoing)
	Bluetooth headset in use

4.2.3. CHANGE BLUETOOTH NAME

By default, the mobile computer uses the device name for its Bluetooth name. Change the device name to make it more recognizable.

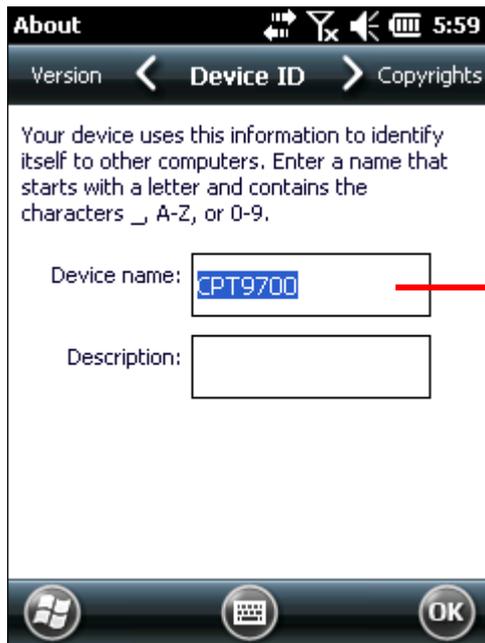

Change device name to make the mobile computer more recognizable.

To change the mobile computer's device name:

- 1) On Start screen, tap **Settings** | **System** | **About**  .
About screen opens showing Version tab page.
- 2) Tap **Device ID** tab.
Device ID tab page opens.
- 3) Enter a name following the prompted rule.
- 4) Tap the "OK" command on the softkey bar to apply the change.

4.2.4. TURN ON/OFF BLUETOOTH

To turn on/off Bluetooth power:

- 1) On Start screen, tap **Settings** | **Connections** | **Wireless Manager**  .
Wireless Manager opens.
- 2) Tap the **Bluetooth** entry.
Bluetooth power is switched on.
To turn off Bluetooth power, simply tap the **Bluetooth** entry again.

OR

- 1) On Start screen, tap **Settings** | **Bluetooth**  .
Bluetooth settings opens showing **Devices** tab page.
- 2) Tap **Mode** tab.

Mode tab page opens.

- 3) Select **Turn on Bluetooth**.
- 4) Tap the **OK** command on the softkey bar.


Bluetooth powers on.

To turn off Bluetooth power, simply deselect **Turn on Bluetooth** and tap **OK** to apply the change.

4.2.5. EXPOSE MOBILE COMPUTER

In default state, the mobile computer is hidden from other Bluetooth devices. To allow other devices to be able to find mobile computer, set the mobile computer as follows:

- 1) On Start screen, tap **Settings | Bluetooth**  .
Bluetooth settings open showing **Devices** tab page.
- 2) Tap **Mode** tab.
Mode tab page opens.
- 3) Check Turn on Bluetooth and **Make this device visible to other devices**.

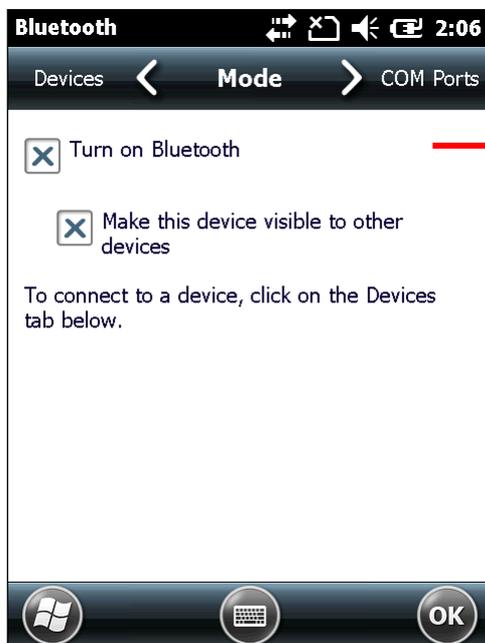

Select **Turn on Bluetooth** and **Make this device visible to other devices**.

- 4) Tap the **OK** command on the softkey bar.

Once set, the mobile computer becomes discoverable by other Bluetooth devices.

When **Settings | Connections | Wireless Manager** is opened, a "Visible" label appears under Bluetooth entry.



Bluetooth entry shows a "Visible" label on Wireless Manager screen.

4.2.6. PAIR & CONNECT BLUETOOTH DEVICES

Prior to connecting to another Bluetooth device, the mobile computer needs to pair with that device. Once they are paired, the two devices will stay paired unless they are unpaired.

To pair with and connect to a Bluetooth device:

- 1) On the mobile computer, turn on Bluetooth as described in [Turn On/Off Bluetooth](#).
- 2) On Start screen, tap **Settings | Bluetooth** .


Bluetooth settings open showing **Devices** tab page.



Devices tab page under Bluetooth settings

- 3) Tap **Add new device...**

The mobile computer scans and displays the names of all Bluetooth devices found within reach.

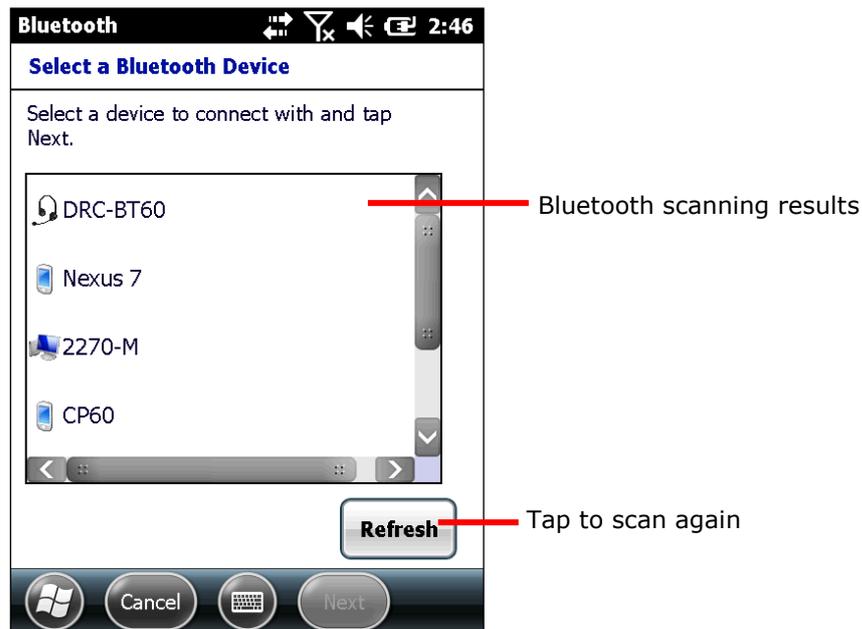

If the device to pair with is not displayed, make sure it is currently set as discoverable. If the mobile computer stops scanning before that device becomes discoverable, tap **Refresh** to repeat the scan

- 4) Tap the name of the found device that you wish to connect. Tap **Next**.

The two devices pair with each other. You may be asked for a passcode for a secure connection. Try entering "0000" or "1234" (the most common passcodes). On some occasions you may need to refer to the documentation of the Bluetooth device to obtain this code.

Once the device is paired (and connected), you are prompted by a dialog indicating that the connection is established.



5) Tap **Done** on the softkey bar.




OR

Tap the **Advanced** command on the softkey bar to configure the Bluetooth features to use with that device. Then tap **Save**.

Devices tab page re-opens listing the newly connected Bluetooth device among others.

A connected device is listed under **Connected** label. A paired but unconnected device is listed under **Disconnected** label.

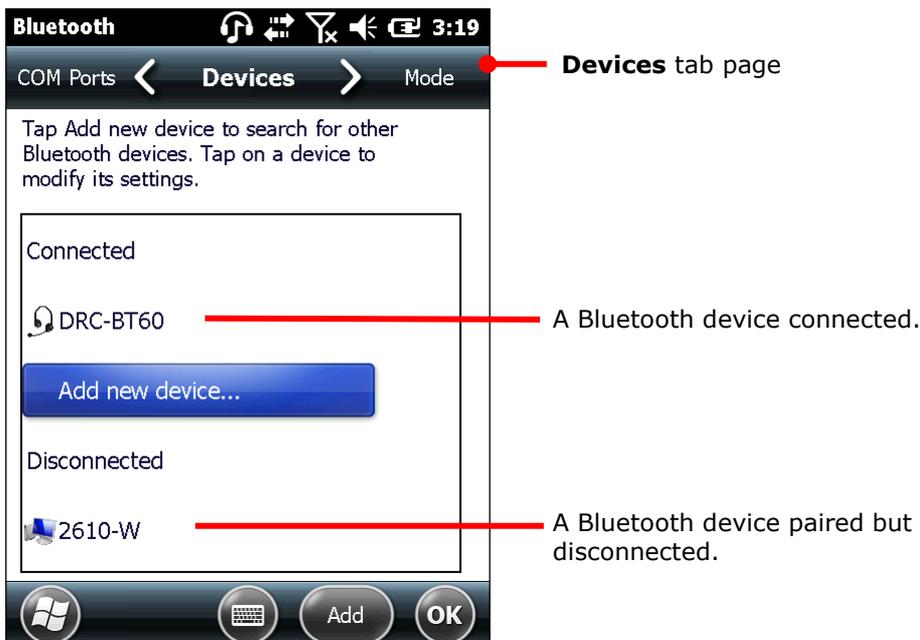

6) Tap and hold a connected device to edit its Bluetooth features to use, disconnect it or delete (unpair) it.

OR

Tap and hold a disconnected device to edit its Bluetooth features to use, reconnect it, or delete (unpair) it.

4.2.7. DISCONNECT BLUETOOTH DEVICES

To disconnect the mobile computer from a Bluetooth device, there are two approaches: Simply turn off the Bluetooth as described in [Turn On/Off Bluetooth](#). The mobile computer is disconnected from all connected Bluetooth devices.

OR

- 1) Open Bluetooth settings by tapping **Start | Settings | Bluetooth**, or **Start | Settings | Connections | Wireless Manager | Menu** on softkey bar | **Bluetooth Settings**.

Bluetooth settings open showing **Devices** tab page.

- 2) Tap and hold the device to disconnect from.

Context menu opens.

- 3) Tap **Disconnect**.

The mobile computer is disconnected from the Bluetooth device.

4.2.8. UNPAIR BLUETOOTH DEVICES

To unpair a Bluetooth device:

- 1) Open Bluetooth settings by tapping **Start | Settings | Bluetooth**.

Bluetooth settings open showing **Devices** tab page.

- 2) Tap and hold the device to unpair from.

Context menu opens.

- 3) Tap **Delete**.

The Bluetooth device is unpaired. The mobile computer needs to pair with it again to reconnect to it.

4.2.9. RECONNECT BLUETOOTH DEVICES

Before the mobile computer reconnects to a Bluetooth device, make sure the two devices are paired and placed within each other's wireless reach.

To reconnect to a Bluetooth device:

- 1) Open Bluetooth settings by tapping **Start | Settings | Bluetooth**.

Bluetooth settings open showing **Devices** tab page.

- 2) Tap and hold the device to reconnect (normally it will be under **Disconnected** label).

Context menu opens.

- 3) Tap **Connect**.

The Bluetooth device is reconnected and its name displays under **Connected** label.

4.2.10. EDIT BLUETOOTH FEATURES TO USE

A Bluetooth profile defines the features and communications supported by a Bluetooth device. For two Bluetooth devices to share files with each other, they need to both support the due profiles. Some Bluetooth devices have multiple profiles. Profiles can cover the ability to play music in stereo, to transfer files or other data and more. The mobile computer enables configuring the profiles you want to use on the mobile computer.

- 1) Open Bluetooth settings by tapping **Start | Settings | Bluetooth**.


Bluetooth settings open showing **Devices** tab page.

- 2) Tap and hold the device to configure.

Context menu opens.

- 3) Tap **Edit**.

Partnership Settings opens listing the device's available profiles.

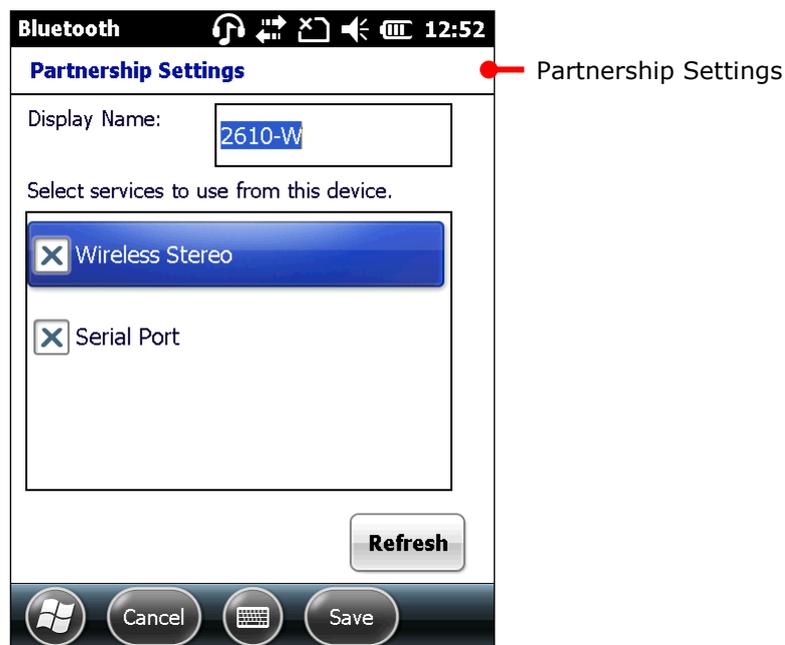

- 4) Select or deselect a profile to use it or not.


4.2.11. BLUETOOTH FILE EXCHANGE

Once connected with other devices using Bluetooth, the mobile computer can offload or download files to/from them. Basically it relies on File Explorer  to get it done.

OFFLOAD FILES

- 1) On the mobile computer, turn on Bluetooth as described in [Turn On/Off Bluetooth](#) if you haven't.
- 2) Open File Explorer .
- 3) Browse to the file to offload.
- 4) Tap and hold the file to offload.
Context menu comes up.
- 5) Tap **Beam File...**

The Bluetooth application generates a list of Bluetooth devices found.

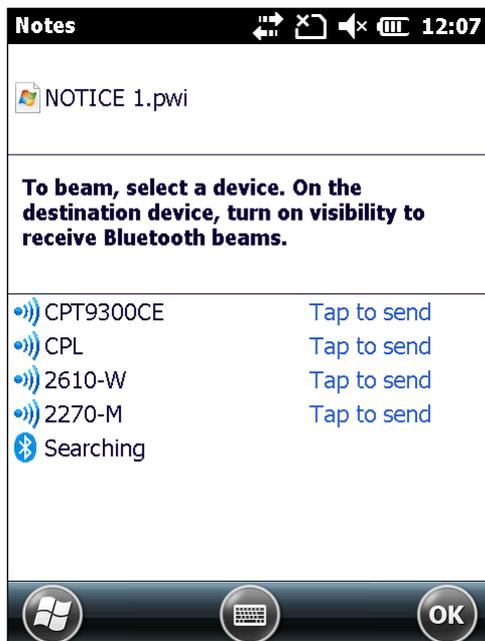

- 6) Select the device to offload the file to.
The device will receive a notification asking for confirmation to accept the file.
- 7) Confirm accept.
The device proceeds to receive it inbound.

DOWNLOAD FILES

For the mobile computer to download files from other devices using Bluetooth, "Beam mode" must be enabled first:

To enable Beam mode:

- 1) On Start screen, tap **Settings | Connections | Beam** .
- 2) Select **Receive all incoming beams**.

To download files from other devices using Bluetooth:

- 3) Enable the mobile computer's "Beam" as mentioned above.
- 4) Turn on Bluetooth as described in [Turn On/Off Bluetooth](#) if you haven't.
- 5) Make the mobile computer discoverable as mentioned in [Expose Mobile Computer](#).

The mobile computer readies to receive an inbound file with Bluetooth. The mobile computer asks if you what to accept the file when it is coming in.

- 6) Confirm **Yes** or **No**.

The file is saved to the mobile computer or rejected.

4.2.12. BLUETOOTH ACTIVESYNC

The advantage of Bluetooth ActiveSync is to save the trouble perpetually switching between multiple devices by changing cables or adapters.

Note to disable network bridging on your PC (specifically bridging to a Remote NDIS adapter) before connecting Bluetooth ActiveSync. For more information on network bridging, see Windows Help on the PC.

To use ActiveSync using Bluetooth:

- 1) Note the virtual Bluetooth COM port on your PC. If your PC doesn't have any, add one.
- 2) Run the syncing tool on your PC.

In ActiveSync, click **File | Connection Settings**.

In WMDC, click **Mobile Device Settings | Connection Settings**.

- 3) Deselect **Allow USB connection** and select **Allow connections to one of the following**.
- 4) Select the COM port you noted in step 1.
- 5) Press OK button to apply change and quit setting.
- 6) On the mobile computer, tap **ActiveSync**  from Start screen.

ActiveSync opens. If this is your first time opening it, it shows some guidelines to set up sync. Proceed as described in the following.

- 7) Tap the "Menu" command on the softkey bar.
- 8) Tap **Connect via Bluetooth**.

For 1st setup, you are prompted to set up Bluetooth partnership with your PC.

- 9) Tap **Yes** in the popup dialog inquiring if a partnership should be set up.

You are taken to Bluetooth's Mode tab page.

- 10) Turn on Bluetooth if you haven't.

11) Tap **Device** tab.

Bluetooth's Device tab page open.

12) For the 1st setup, tap **Add new device** and complete through pairing and connection as described in [Pair & Connect Bluetooth Devices](#).

OR

Select the name of your PC if it is connected before.

Once paired and/or connected, you are taken back to Device tab page.

13) Reopen **ActiveSync**  on the mobile computer.

14) Tap the "Menu" command on the softkey bar.

15) Tap **Connect via Bluetooth**.

Bluetooth connection is established within a few seconds. ActiveSync on your PC opens its **Sync Setup Wizard**.

16) Set up the sync partnership you desire. See [1st USB Sync](#) for the setting.

DISCONNECT BLUETOOTH ACTIVESYNC

To disconnect Bluetooth ActiveSync:

1) On the mobile computer, tap **ActiveSync**  from Start screen.

ActiveSync opens.

2) Tap the "Menu" command on the softkey bar.

Option menu opens.

3) Tap **Disconnect**.


Bluetooth ActiveSync is disconnected.

4.2.13. BLUETOOTH INTERNET SHARING

“Internet Sharing” or “Internet Tethering” enables a Windows-based PC to connect to the Internet using the mobile computer’s mobile data (or other dial-up). Well “Internet Sharing” is supported by Bluetooth too. To tether to Internet using Bluetooth, make the follow setting:

- 1) Set up Bluetooth connection between the mobile computer and your PC as described in [Pair & Connect Bluetooth Devices](#).
- 2) On the mobile computer, tap **Internet Sharing**  from Start screen.


Internet Sharing opens.

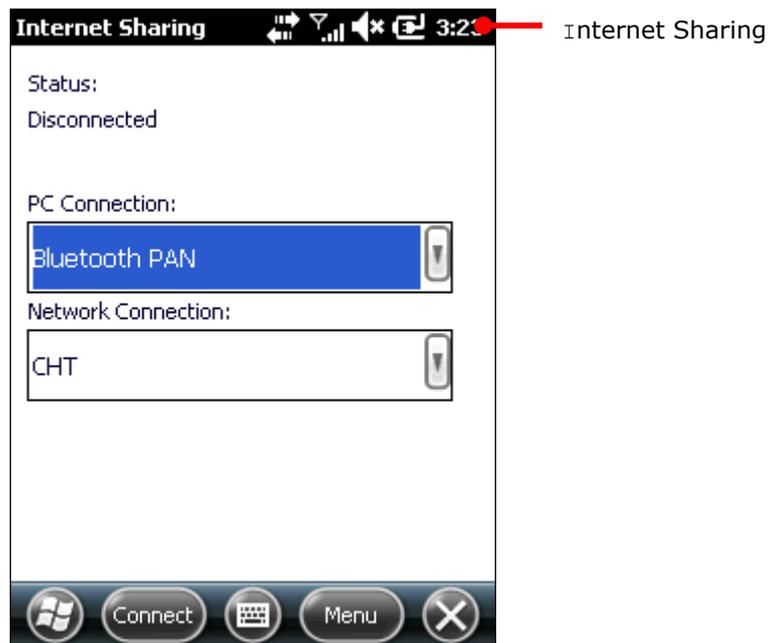

- 3) Select **Bluetooth PAN** for **PC Connection**, and select your wireless service for **Network Connection**.
- 4) Tap the “Connect” command on the softkey bar.
- 5) On your PC, set up a **Bluetooth Personal Area Network** with the mobile computer.

Setting up a Bluetooth PAN varies between different Bluetooth utilities. Consult the documentation of your Bluetooth utility or Windows Help on your PC to know about the setup.

In a few seconds Internet Sharing prompts “Connected” on the mobile computer. Your PC connects to Internet.

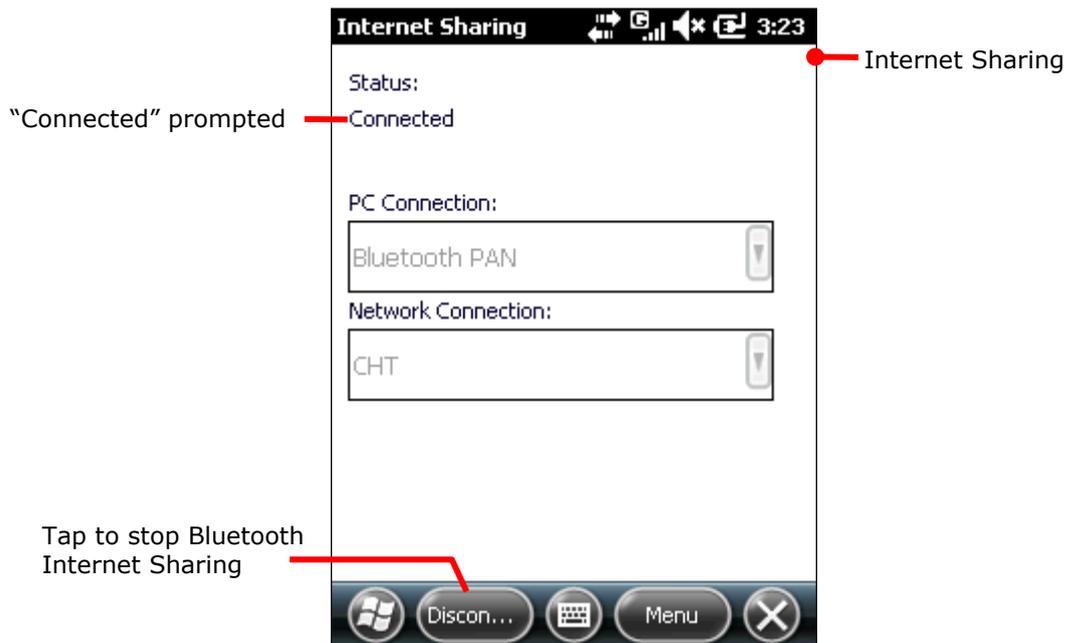

Tap the "Discon..." command on the softkey bar to stop.

4.2.14. BLUETOOTH PASS-THROUGH NETWORKING

"Pass-Through Networking" enables the mobile computer to network using your PC's data connection, as long as the two computers are synced, whether by a hardwired USB approach or wirelessly by Bluetooth.

- 1) Establish sync partnership between the mobile computer and your PC using Bluetooth as described in [Bluetooth ActiveSync](#).
- 2) In ActiveSync, select **File | Connection Settings** from the menu bar.
In WMDC, click **Mobile Device Settings | Connection Settings**.
- 3) For **This computer is connected to**, select a connection to which your PC should connect when passing through ActiveSync.
- 4) In ActiveSync, select **Open ActiveSync when my device connects**.
- 5) Press **OK** button to apply the change and quit settings.

You can proceed to network connection on the mobile computer.

For the pass-through networking with USB, see [USB Pass-through Networking](#).

MORE APPLICATIONS

Aside from the dedicated Reader Configuration which empowers the mobile computer's with a specialty in data capture as mentioned in [Data Capture](#), more manufacturer-developed applications are preinstalled to strengthen user's system management and make the mobile computer more eligible.

These applications include:

Applications	Description
Button Assignment	Assigns new functions to some physical keys.
Signature Utility	Captures, views, edits signatures.
Backup Utility	Performs backup and restore of registry and system files.
Push to Talk	Transmits real-time audio content through wireless connection.

IN THIS CHAPTER

5.1 Button Assignment.....	142
5.2 Signature Utility.....	155
5.3 Push to Talk	159

5.1. BUTTON ASSIGNMENT

Button Assignment can re-define the functions of physical keys so that they trigger different actions. Settings made to one or more keys can be saved as a profile, allowing users to switch conveniently in between different sets of settings. Key functions under Function Mode (triggered by pressing the [Function Key](#)) can also be re-defined.


5.1.1. LAUNCH BUTTON ASSIGNMENT

To launch button assignment:

- 1) On Start screen, tap **Settings | System | Button Assignment** . **Button Assignment** opens showing **Normal Mode** tab page with an additional **Function Mode** tab page.

The Normal Mode tab page consists of a table listing three columns: **Icon** column displaying the buttons available for reassignment, **Key** column showing the assigned function of each button, and **Enabled** column to enable or disable the indicated buttons in a single tap.

At the bottom of the screen is a taskbar that can be used to open additional settings, save a profile or refresh settings to the stored profile.

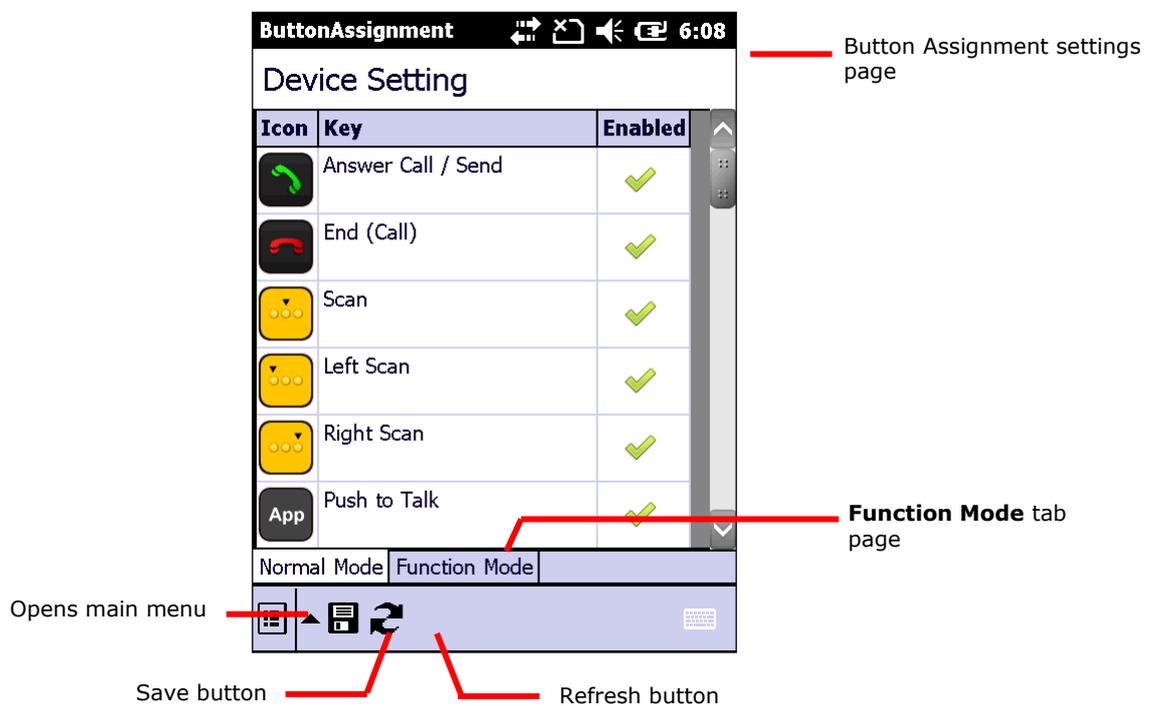

TOOLBAR


Toolbar icon	Description
	Opens Button Assignment main menu which can be used to manage profiles, reset settings to default, obtain version information, or exit the application.
	Saves current settings as a new profile, or saves changes made to the profile currently opened.
	Refreshes the screen to profile settings as stored.
	Opens onscreen keypad.

5.1.2. REDEFINE KEYS

To assign a new function for a re-definable key:

- 1) Launch Button Assignment as described in [Launch Button Assignment](#).
- 2) Scroll to the button you would like to re-define, and tap twice on the icon or text.

Settings page for that button will open showing four options to set button function.

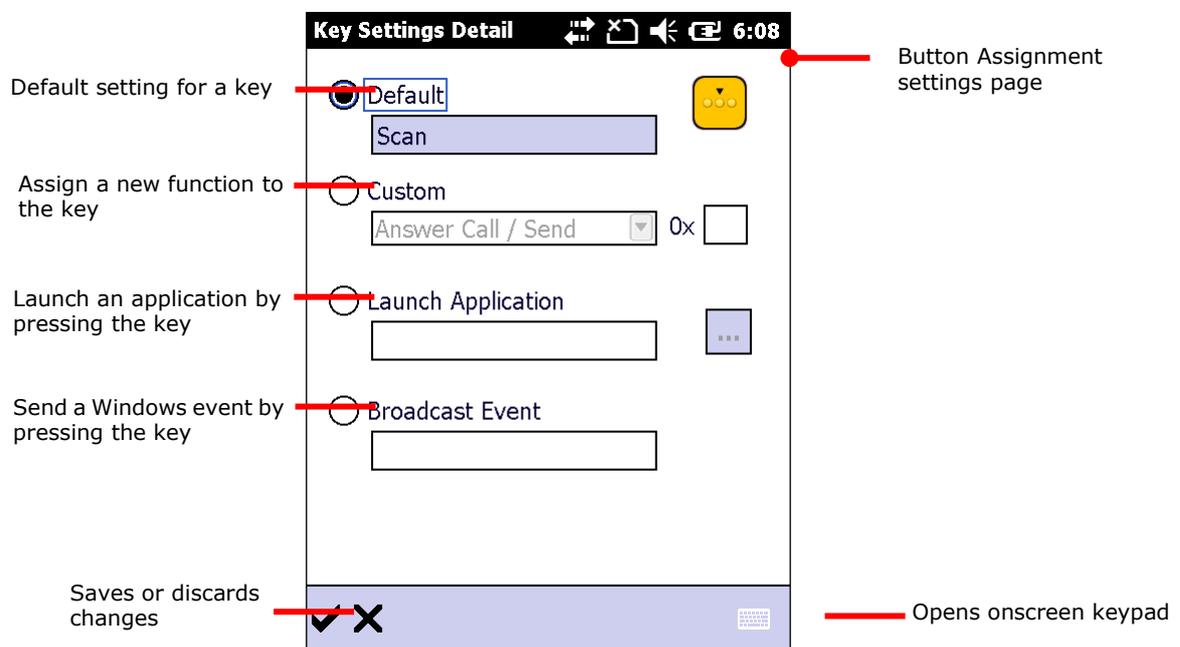


Item	Value
Default	Sets the key function back to factory default.
Custom	Provides a drop-down list to select the preferred function for the specific key. (Options available differ with the key.) Either select a pre-defined function, or select "User define" and enter a valid Microsoft Virtual-Key Codes in the text box.
Launch Application	Opens an application by pressing the specific key. Browse to the .exe file of the desired application.
Broadcast Event	Input a Windows message event which will be triggered each time the button is pressed.

- 3) Re-assign the button as desired, and tap ✓ to save, or ✗ to cancel.
- 4) Open the Button Assignment main menu and tap **Write to device** to apply changes.


DISABLE/ENABLE KEY FUNCTION

The last column in the Device Setting list gives an overview of key status. Users can disable or enable a key by giving a single tap on this column. By disabling keys, keys are "locked" as no actual function will take place when they are pressed.

Enabled items will display as ✓ while disabled items will appear as ⛔.

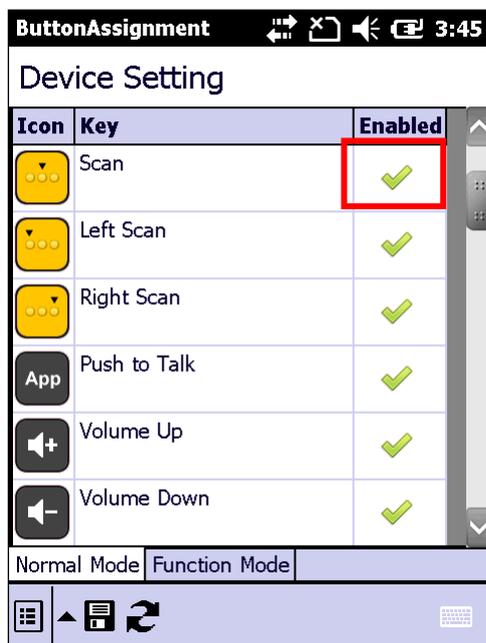

Tap the "Enabled" column to enable or disable the indicated function.

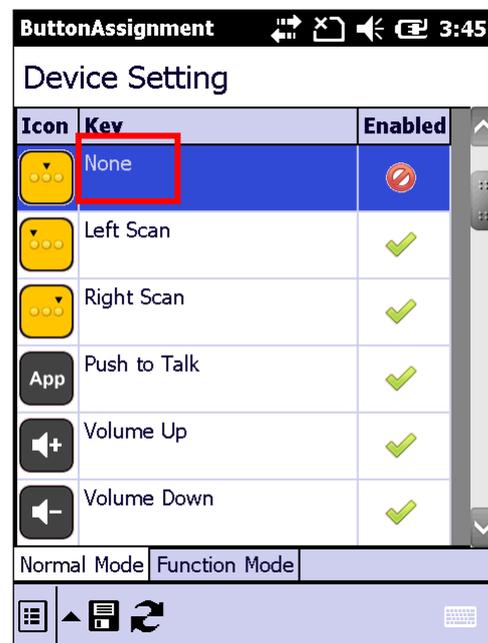

Once keys are disabled, the icon changes and the function for that key will appear as "None".

Note:

- (1) To access the settings page for a key, its status needs to be set as "Enabled".
- (2) When a key is disabled and then enabled, its function will return to default settings.

5.1.3. MAIN MENU

When the main menu button  is tapped, an option menu opens providing the following functions:

Item	Description												
User Profile	<p>Displays the existing profiles (not including default settings), and a toolbar to manage profiles:     </p> <table border="1"> <thead> <tr> <th>Toolbar icon</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td></td> <td>Applies the selected profile.</td> </tr> <tr> <td></td> <td>Returns to the previous page.</td> </tr> <tr> <td></td> <td>Deletes the selected profile.</td> </tr> <tr> <td></td> <td>Imports a previously exported profile.</td> </tr> <tr> <td></td> <td>Exports the selected profile as an .xml file.</td> </tr> </tbody> </table>	Toolbar icon	Description		Applies the selected profile.		Returns to the previous page.		Deletes the selected profile.		Imports a previously exported profile.		Exports the selected profile as an .xml file.
Toolbar icon	Description												
	Applies the selected profile.												
	Returns to the previous page.												
	Deletes the selected profile.												
	Imports a previously exported profile.												
	Exports the selected profile as an .xml file.												
Read from device	<p>Reads and displays the current settings on the mobile computer. This should be done:</p> <ul style="list-style-type: none"> ▶ Before creating a new profile ▶ To check the current environment on the mobile computer. 												
Write to device	<p>Applies the currently displayed settings to the mobile computer. Button functions on the device will not alter until Write to device is tapped. This should be done:</p> <ul style="list-style-type: none"> ▶ After creating a new profile ▶ After changing an existing profile ▶ After settings are reset to default ▶ After the active profile has been deleted, and the user wishes to replace previous settings on the device. <p>Only by tapping this option will the displayed settings come into action.</p>												
Reset to default	Resets the displayed settings to default. For default settings to take effect on the mobile computer, Write to device must be tapped.												
About	Displays copyright and version information.												
Exit	Exits the application.												

MANAGE PROFILES

CREATE PROFILE

To create a new profile:

- 1) Load factory default settings, or read current settings from device first.
- 2) Modify the settings directly according to your needs, then tap  to open a page where you can enter a name for the new profile.
- 3) Tap  to save, or  to cancel.

EDIT PROFILE

To edit an existing profile:

- 1) Tap the main menu button  and tap **User Profile** in the option menu.
- 2) Select the profile you wish to edit, then tap .

The selected profile opens.

- 3) Modify the profile according to your needs, then tap .
- 4) In the dialog box that appears, tap **Yes** to proceed, or **No** to cancel.

DELETE PROFILE


To delete an existing profile:

- 1) Tap the main menu button  and tap **User Profile** in the option menu.
- 2) Select the profile you wish to delete, then tap .
- 3) In the dialog box that appears, tap **Yes** to proceed, or **No** to cancel.

IMPORT/EXPORT PROFILE


Profile settings can be exported as an independent .xml file, which may be transferred to other devices so they can share identical button assignment settings.

- 1) Open the main menu button  and tap **User Profile** in the option menu.
- 2) Tap  to import a previously exported profile.

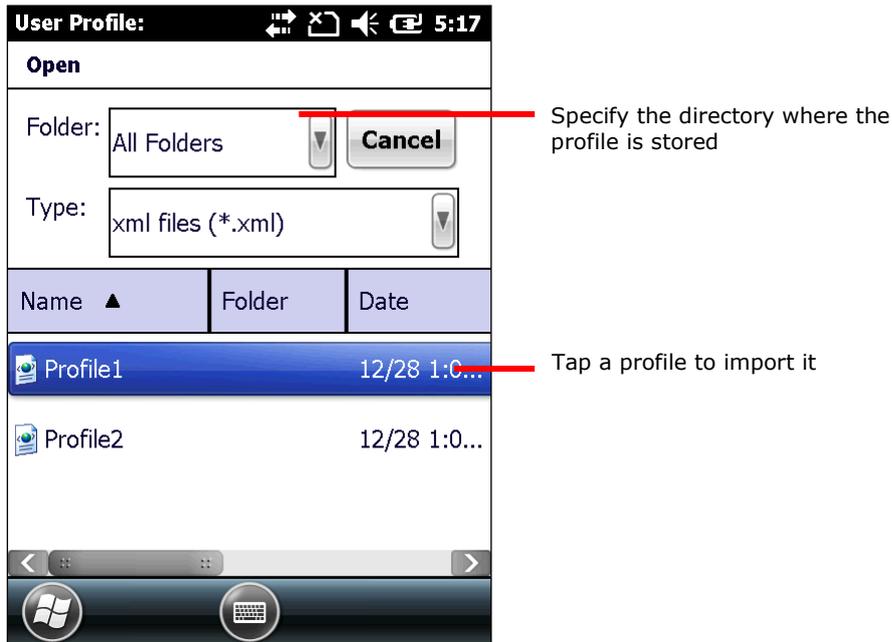

OR

Select the profile you wish to export, then tap  to enter export settings.

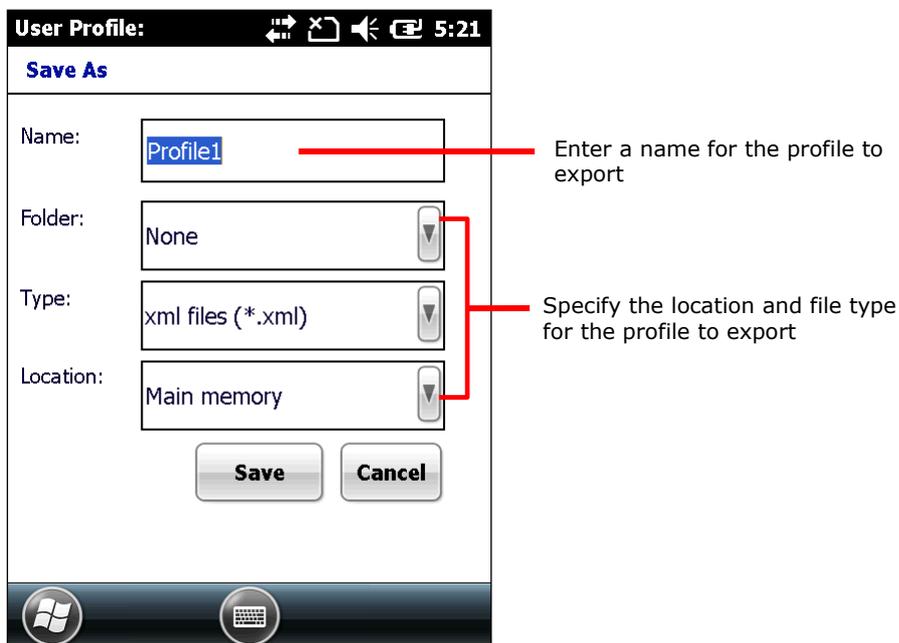


Note: The **All Folders** directory refers to all folders under **My Device\My Documents**. If no subfolder is selected upon export, the exported file will be stored directly under this directory.

3) In the dialog box that appears, tap **Yes** to proceed, or **No** to cancel.


READ/WRITE SETTINGS

Use **Read from device** and **Write to device** to read the current settings on the device, or write the newly changed settings to the device in order for them to take effect. See [Main Menu](#) for when to use these options.

When Button Assignment application is launched, tapping **Read from device** will get the settings currently active on the device, which may be either default settings, a saved profile, or settings previously written to the device. Regardless of where the active settings derive from, they will be presented as "Device Setting" as denoted at the top of the page.

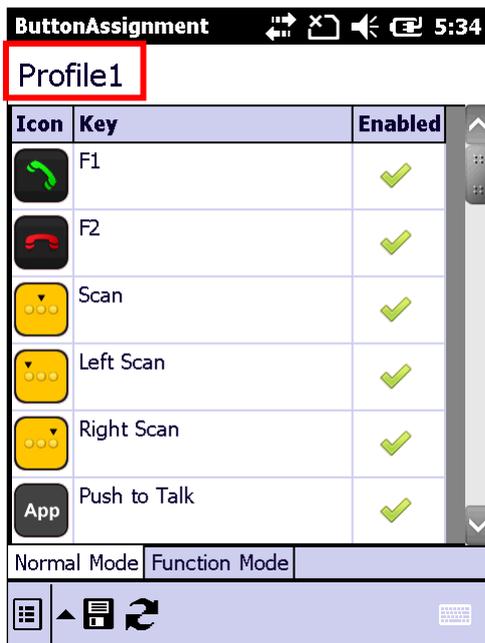

When a new profile is created and saved, the profile name will appear at the top left of the page.

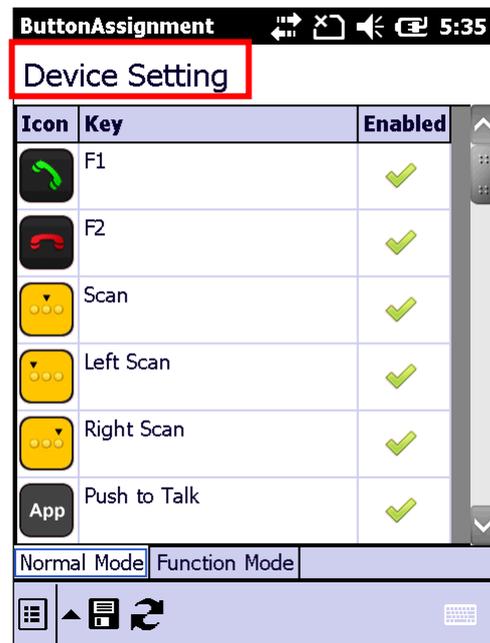

After the profile is written to the device, the profile name will be replaced with "Device Setting" the next time the application is opened, or when **Read from device** is tapped.

RESET TO DEFAULT

Tapping **Reset to default** in the option menu will display default settings. This can be followed by the steps below.

- ▶ To apply default settings to the mobile computer, tap **Write to device** in the option menu.
- ▶ To create a new profile from default settings, make changes directly and tap the save button .

5.1.4. KEYPAD MODES

The 30-key numeric keypad and 38-key numeric & function keypad provide two different modes for Button Assignment, normal mode and function mode. To enable function mode, simply press the [Function Key](#).

On the 53-key alphanumeric keypad, only normal mode is available.

30-KEY KEYPAD

Button	Normal mode	Function mode	Key Options	Special Options (Normal mode)
	F14	F14	Answer Call / Send End (Call)	
	F15	F15	Start OK	
	Scan	N/A	Home End	Push to Talk
	Left Scan	N/A	Left Right	Push to Talk
	Right Scan	N/A	Up Down Page Up	Push to Talk
	Left	Home	Page Down Volume Down	
	Up	Page Up	Volume Up Increase Backlight Brightness	
	Down	Page Down	Decrease Backlight Brightness	
	Right	End	Backspace Enter	
	Esc	Esc	Esc Tab	
	Space	Start	Shift	
	Backspace	Keypad Lock	- .*	
	Enter	Enter	# !	
	[.] Period key	N/A	@ \$	
	[1] Number key	F9	% ^ &	
	[2] Number key	F10	()	

3	[3] Number key	F11	1, 2, 3.....9, 0 F1-24
4	[4] Number key	F12	User Define
5	[5] Number key	Increase Backlight Brightness	
6	[6] Number key	Volume Up	
7	[7] Number key	N/A	
8	[8] Number key	Decrease Backlight Brightness	
9	[9] Number key	Volume Down	
0	[0] Number key	N/A	
F1	F1	F5	
F2	F2	F6	
F3	F3	F7	
F4	F4	F8	

38-KEY KEYPAD

Button	Normal mode	Function mode	Key Options	Special Options (Normal mode)
	F14	F14	Answer Call / Send End (Call)	
	F15	F15	Start OK	
	Scan	N/A	Home End	Push to Talk
	Left Scan	N/A	Left Right	Push to Talk
	Right Scan	N/A	Up Down	Push to Talk
	Left	Home	Page Up Page Down Volume Down	
	Up	Page Up	Volume Up Increase Backlight Brightness	
	Down	Page Down	Decrease Backlight Brightness	
	Right	End	Backspace	
	Esc	Esc	Enter Esc	
	Space	Start	Tab Shift	
	Backspace	Keypad Lock	- . *	
	Enter	Enter	# !	
	[,] Comma key		@ \$	
	[.] Period key	N/A	% ^	
	Keys 1, 2, 39, 0	--	& () 1, 2, 3.....9, 0 F1-24 User Define	
				
				
				
				
				
				
				
	F1	F11		
	F2	F12		

F3	F3	F13	
F4	F4	F14	
F5	F5	N/A	
F6	F6	Increase Backlight Brightness	
F7	F7	Volume Up	
F8	F8	N/A	
F9	F9	Decrease Backlight Brightness	
F10	F10	Volume Down	

53-KEY KEYPAD

Button	Normal mode	Key Options	Special Options
	F14	Answer Call / Send End (Call)	
	F15	Start OK	
	Scan	Home End	Push to Talk
	Left Scan	Left Right	Push to Talk
	Right Scan	Up Down	Push to Talk
	Left	Page Up Page Down	
	Up	Volume Down Volume Up	
	Down	Increase Backlight Brightness	
	Right	Decrease Backlight Brightness	
	Left	Backspace	
	Esc	Enter Esc	
	Space	Tab Shift	
	Backspace	- .*	
	Enter	# !	
	[*] Asterisk key	@ \$	
	[.] Period key	% ^ &	
	Keys A-Z	() 1, 2, 3.....9, 0 F1-24 User Define	



Keys 1, 2, 3.....9,
0

Note: Under normal mode, the scan key and side trigger keys (left/right scan key) can be assigned as the Push to Talk trigger key.

5.2. SIGNATURE UTILITY

Signature utility captures, views and edits signature files.

5.2.1. LAUNCH SIGNATURE UTILITY

To launch Signature utility:

- 1) On Start screen, tap **Signature** .

Signature utility opens showing a toolbar along the top and a signing area within its window.



TOOLBAR & SIGNING AREA


Toolbar features a few icons to launch actions from the utility.

Toolbar icon	Description
	Creates a new file.
	Loads a signature image.
	Saves the affixed signature to an image file (BMP, JPG or Locus format).
	Clears signing area.
	Opens preferences settings.
	Views utility info including developer and software version.

5.2.2. CAPTURE SIGNATURE

To capture a signature:

- 1) Launch Signature utility as described in [Launch Signature Utility](#).
Signature utility launches.
- 2) Use the stylus to sign a name in the signing area.

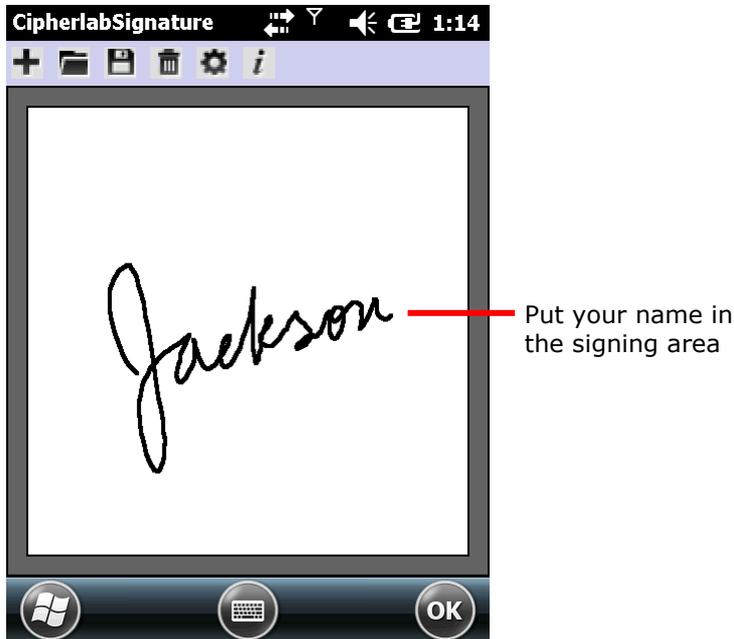

- 3) Tap  icon to save the signature as an image in BMP, JPG or Locus format.

OR

- Tap  icon to discard the signature and sign again.
- 4) Tap the "OK" command on the softkey bar to quit Signature utility.

5.2.3. VIEW OR EDIT EXISTING SIGNATURES

To view the existing signature(s) on the storage of the mobile computer:

- 1) Launch Signature utility as described in [Launch Signature Utility](#).

Signature utility launches.

- 2) Tap  icon on toolbar.

The utility opens a screen allowing users to select the location and file type of the signature to view.

- 3) Browse to the folder where the signature is stored, and select which file type of signature to view.

All signature files meeting the requirements are listed.

- 4) Tap the signature file to view.

The file opens on-screen overlaid by a dialog asking if you want to modify the opened signature file.

- 5) Confirm **Yes** if you want to change the opened signature.

OR

Confirm **No** if you only want to view it.

Note:

- (1) Signature utility loads images of maximum 640 x 480 pixels. If it tries to load an image beyond this limit, an error message will prompt and the image cannot be opened.
 - (2) The **All Folders** directory refers to all folders under **My Device\My Documents**.
-

5.2.4. PREFERENCES

The utility supports preferences settings which change the utility's behaviors when it is used. Users are able to change the size and color of the signing pen stroke, and customize the background color of the signing area.


To access the utility's preferences settings:

- 1) Launch Signature utility as described in [Launch Signature Utility](#).

Signature utility launches.

- 2) Tap  icon on toolbar.

Preferences settings open showing **Pen Width** tab page.

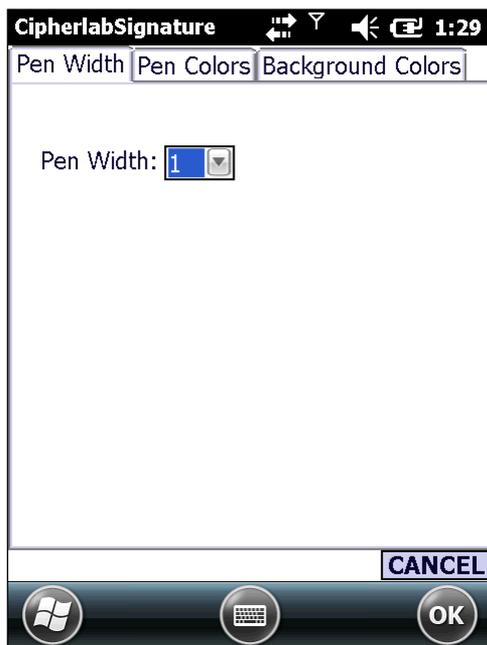

- 3) Select between **Pen Width**, **Pen Colors** and **Background Colors** tabs to customize signing preferences.
- 4) Tap the "OK" command to save changes, or tap **CANCEL** label to quit settings without saving changes.

5.3. PUSH TO TALK

CipherLab Push to Talk is a walkie-talkie service that allows users of an active talk group to communicate with all other members of the group instantaneously with a simple push of a button.


5.3.1. LAUNCH PUSH TO TALK

Once Push to Talk is launched for the first time on the mobile computer, it will be continuously running in the background to enable real-time communication.

To launch Push to Talk for the first time:

- 1) Tap **Start | CipherLab Utilities | Push to Talk** .

Push to Talk opens showing a **PUSH** button in the middle and a menu bar at the top.

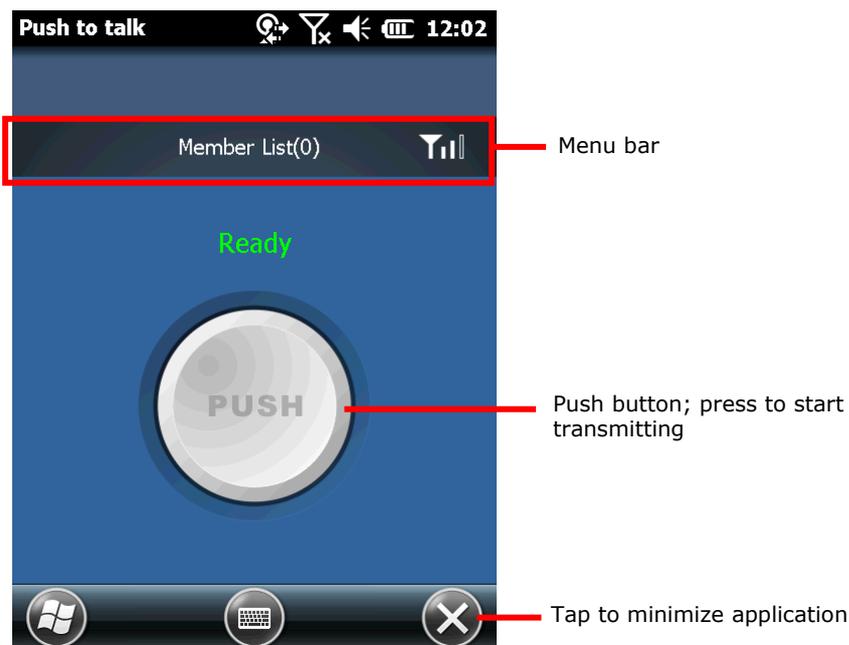

OPERATION MODE

According to the operation mode selected in [PTT Configuration](#), Push to Talk will either remain on the screen after it is launched, or become minimized and run in the background.

Available operation modes include:

Mode	Description
Normal Mode	When launched, Push to Talk opens and stays on-screen.
Auto-hide	When launched, Push to Talk is minimized; however, it opens on-screen when the physical Push button is pressed, and is automatically minimized once the Push button is released.
Always Hide	When launched, Push to Talk is minimized, and stays minimized at all times.

5.3.2. COMMUNICATE WITH GROUP MEMBERS

Push to Talk functions through group communication, meaning that when an audio transmission is initiated on one device, all other devices in that group will receive the audio message. Groups are established by Wi-Fi connection under a specific subnetwork (subnet). All devices that are currently running Push to Talk and are connected within a certain wireless subnet will be automatically incorporated as a group member.


A mobile computer can communicate with group members either by sending out audio content, or by receiving it. When a member in the group initiates an audio content, all other members turn into recipients and will automatically receive the audio content on their mobile computer.

Note: For optimized performance, the Wi-Fi signal strength should be stronger than -60 dB.


SENDING AUDIO CONTENT

To send audio content to other devices:

- 1) Have all devices you would like to communicate with connect to a specific (or several specific) access point(s) as described in [Use Wi-Fi](#). Make sure these access points belong to the same subnet.
- 2) On all of the devices, launch Push to Talk as described in [Launch Push to Talk](#). Push to Talk opens in voice reception mode.

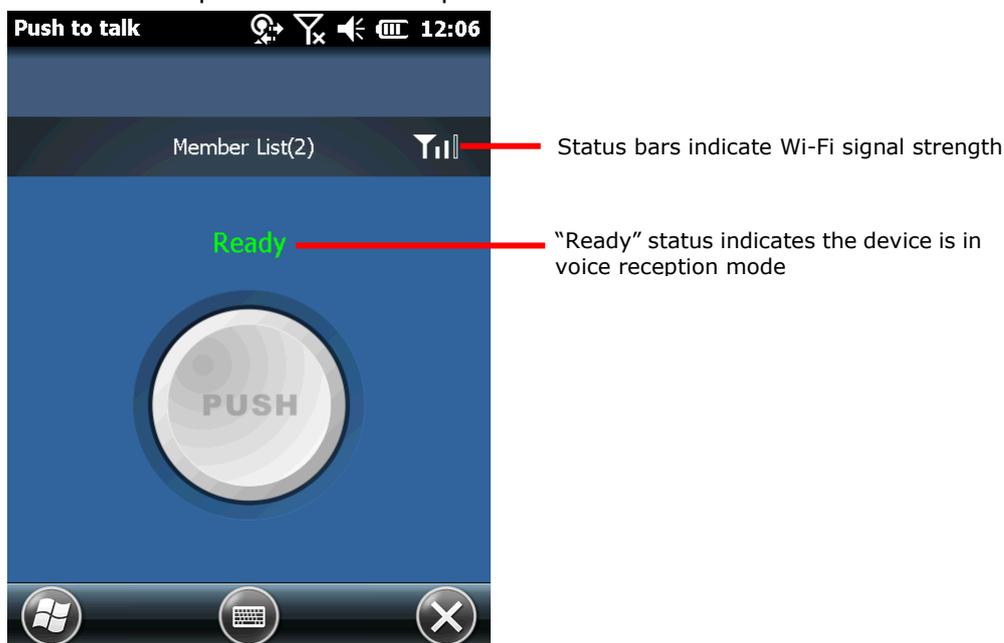

- 3) Tap and hold the **PUSH** button. The button will turn red to indicate the device is ready for transmission. You can start talking into the receiver to transmit your message to all other devices in the group.

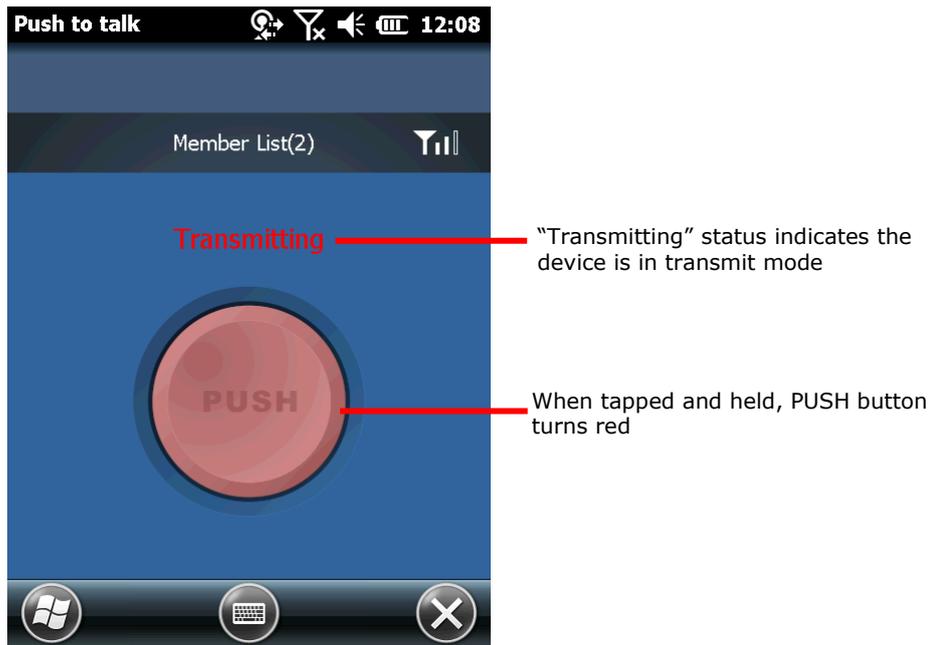


When finished transmitting the audio message, let go of the **PUSH** button. The button will return to gray and the mobile computer will switch back to voice reception mode.

RECEIVING AUDIO CONTENT

To receive audio content from group members:

- 1) Have all devices you would like to communicate with connect to a specific (or several specific) access point(s) as described in [Use Wi-Fi](#). Make sure these access points belong to the same subnet.
- 2) On all of the devices, launch Push to Talk as described in [Launch Push to Talk](#). Push to Talk opens in voice reception mode.

When another device in the group is sending out audio content, the **PUSH** button will become deactivated, and the device name currently transmitting the audio message will be shown on-screen.

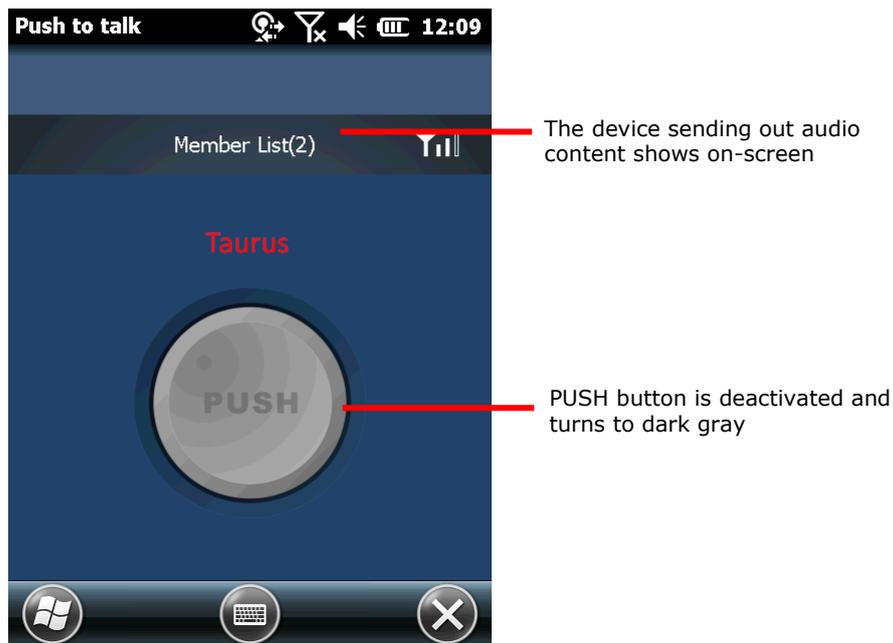

- 3) As long as Push to Talk is running on the system, it is still open to receive audio messages from other devices even if it is not the active application on-screen. If you are working on other tasks or applications, the mobile computer will still receive audio messages once they are transmitted.

Note: The mobile computer will not be able to receive audio content when the system is under suspension, or when Wi-Fi has been disconnected.

ASSIGNING OTHER KEYS AS PUSH BUTTON

By default, communication can be done by tapping and holding the **PUSH** button on-screen. Alternatively you may assign a physical key to function as the **PUSH** button. The keys available for assignment are:

- ▶ Scan key
- ▶ Side triggers (Left and right scan keys)
- ▶ Application key

See [Button Assignment](#) for how to re-assign the above physical keys.


MANAGING MEMBER LIST

The Member List will show all other devices (not including the device under operation) that have connected to the wireless subnet and are currently running the Push to Talk application.

OPEN MEMBER LIST

- 1) Launch Push to Talk as described in [Launch Push to Talk](#).
- 2) Tap **Member List** on the Push to Talk menu bar to view all members in the current group.

The number of devices connected to the group will be shown on the Member List label.

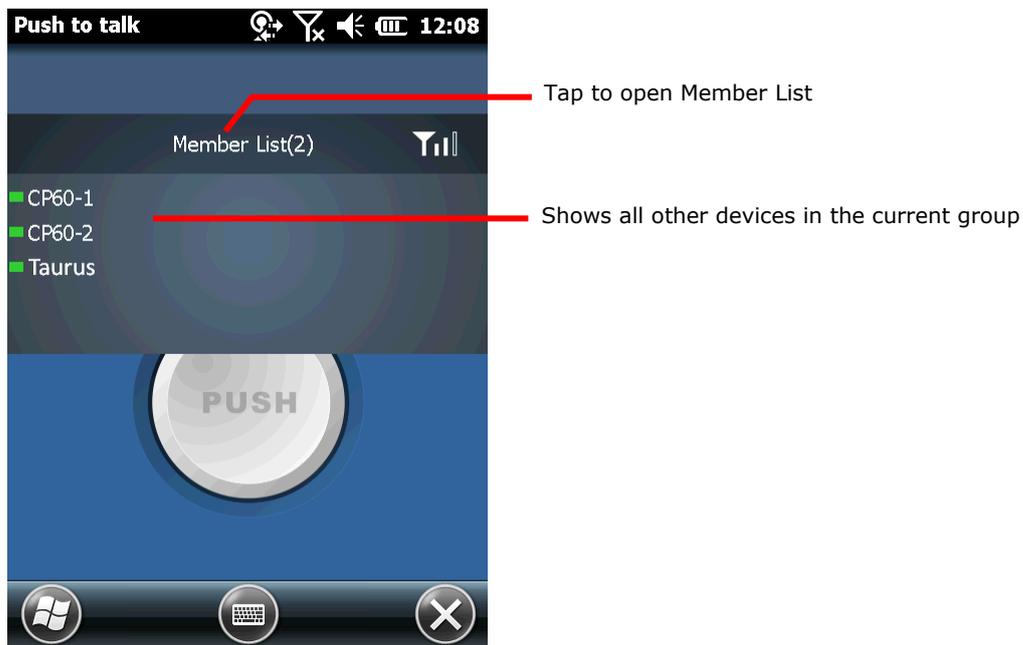

Tap **Member List** again to close the list.

CHECK MEMBER STATUS

In the Member List, a short bar in front of the device name will change its color to indicate the status of that device. Possible colors are:

Status	Mode	Meaning
Green	Voice reception mode	Device is connected to the wireless subnet and is currently running Push to Talk.
Red	Active transmit mode	Device is transmitting audio message to other devices.
Yellow	Passive transmit mode	Device is receiving audio message from another device.
Gray	Disconnected	Device has been disconnected from the group. Make sure device has Wi-Fi access, the system hasn't shut down or entered suspension, and is still running the Push to Talk application.

VOICE RECEPTION MODE

When Push to Talk is opened, devices will be in voice reception mode and are ready to receive audio content. The status bar before the device name appears in green.



ACTIVE AND PASSIVE TRANSMIT MODES


When one of the devices in the group is sending out audio content, the status bar before that device name will change to red. The status bar for all other devices will change to yellow.

Note that in a certain group, only one device can be sending out audio content at a time. A separate transmission session can only be initiated when all devices have returned to voice reception (green) mode.



DEVICE DISCONNECTED

When one or more of the devices in the group is disconnected, the status bar before the device name will change to gray. The **Member List** label will be updated to reflect the remaining number of connected devices. When this occurs, check the Wi-Fi connection status on that specific device, make sure the mobile computer is powered on and not in suspension, and the Push to Talk application is currently running.

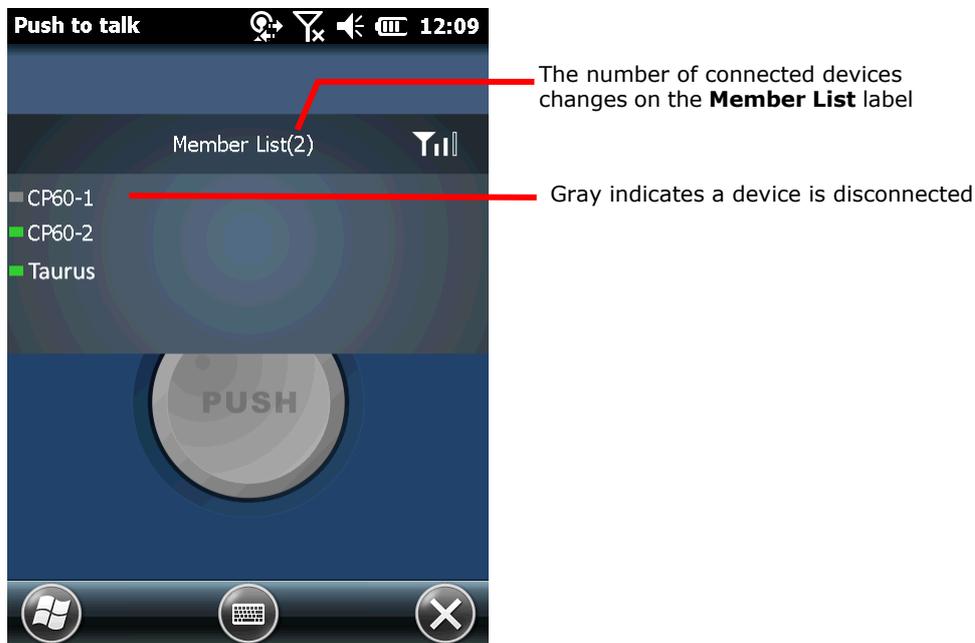

CHANGING DEVICE NAME

In the member list, device names will appear as individually set under **Start | Settings | System | About | Device ID** tab page. If you have a number of devices in the same group, modify the device names on some or all of them in order to distinguish between them.

Note: After changing the device name on one or more of the devices, have all the other devices in the group shut down Push to Talk and re-open it again. This will update the device names shown in the member list.

MANAGE MOBILE COMPUTER

This chapter guides you to the system settings featured by the OS. Access these settings to define how the mobile computer looks, sounds, stores/secure your data, manages the applications, or exchanges data with your networks or other devices.

This chapter also includes the process for updating the OS image.

IN THIS CHAPTER

6.1 Update Hidden Partition	167
6.2 System Settings	171

6.1. UPDATE HIDDEN PARTITION & OS IMAGE


Hidden partition & OS image upgrade helps optimize the mobile computer’s performance and functionality. There are two approaches for updating, through CipherLab **Mobile Deployment System**, or with the use of an SD card.

6.1.1. UPDATE VIA MOBILE DEPLOYMENT SYSTEM


The CipherLab **Mobile Deployment System** will load the selected OS image and the hidden partition files onto the mobile computer. The Mobile Deployment System tool, the hidden partition file (with the .clh extension) and the OS image file (with the .clp extension) of the latest version are required for update.

To update the mobile computer’s operating system:

- 1) Obtain the CipherLab **Mobile Deployment System** tool and install it on your PC.
- 2) Open Mobile Deployment System, and select an existed project from the Project Name list to open. Or create a **New Project** and fill in all necessary fields and click **“Create”**.

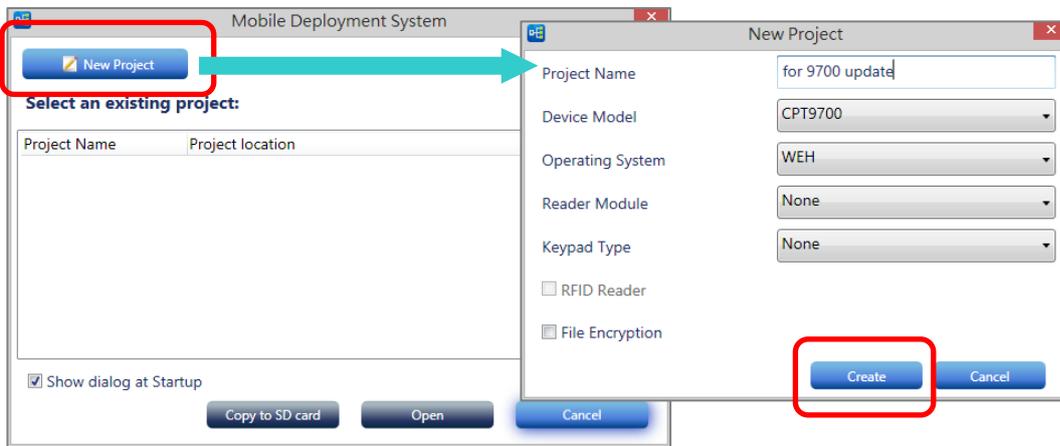


- 3) On the main menu, tick **“Update OS image”** and **“Update Hidden Partition”** under **“Specify your deployment task(s)”** and click **“Browse”** buttons to select the OS image and hidden partition files respectively from your PC client.

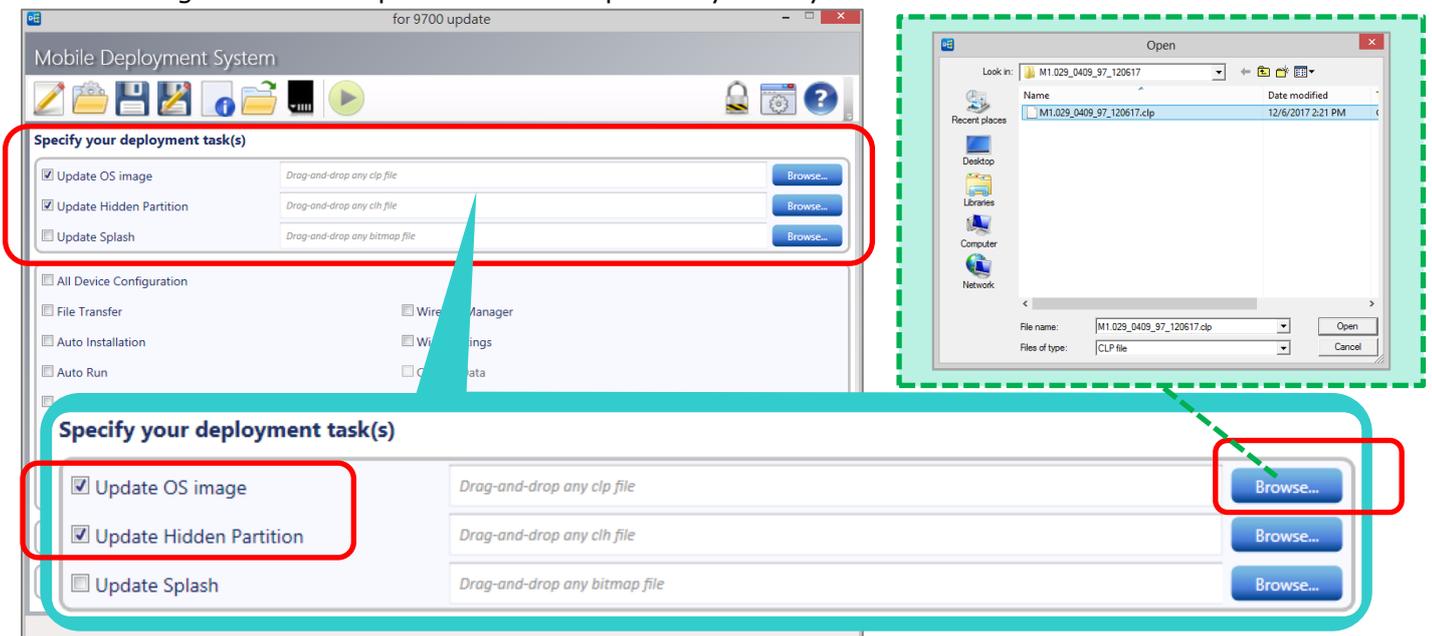


- 4) Power on the mobile computer and connect it to your PC through a Snap-on Cable or Cradle. Once **"Deploy"** button on the taskbar changes from  to  , the device is successfully connected.

- 5) Tap the **"Deploy"** button  to proceed OS image upgrade.

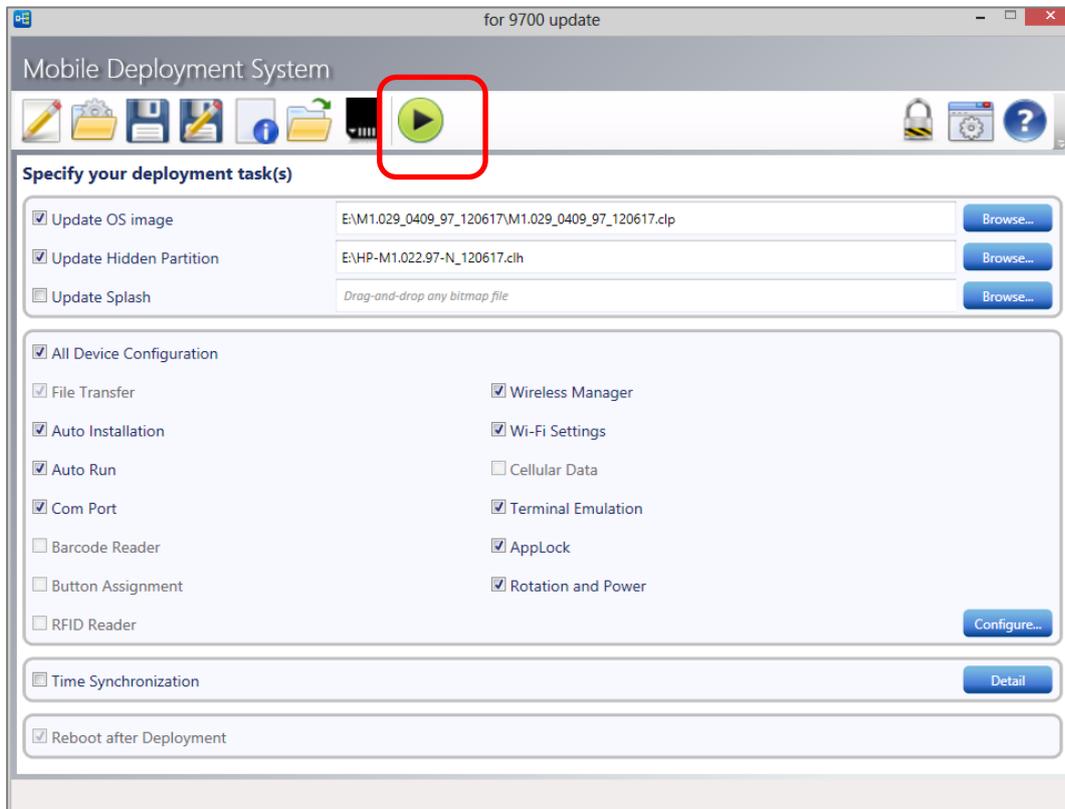


- 6) After update is complete, the mobile computer will restart to show the calibration screen. Complete the calibration steps to display the desktop.

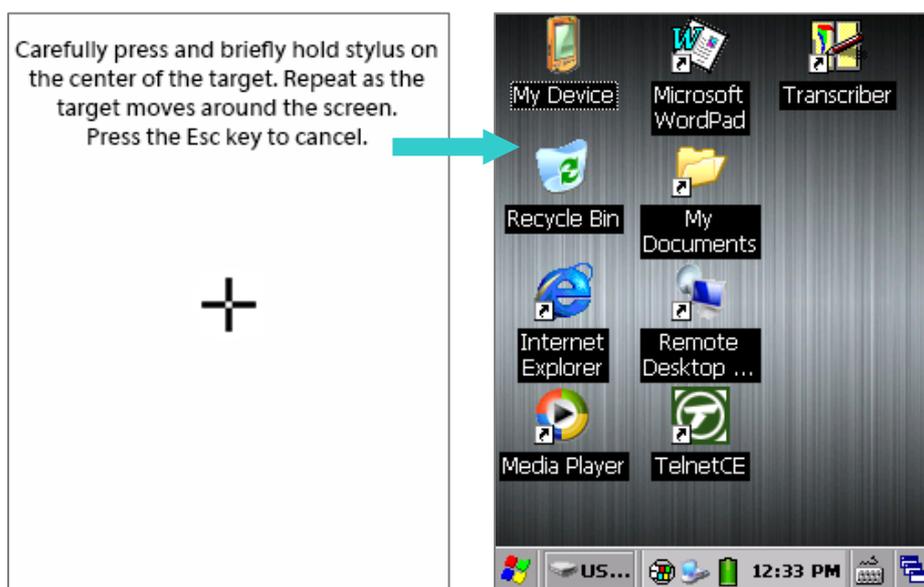


6.1.2. UPDATE WITH MEMORY CARD

You may also upgrade with the use of an SD card and the OS image and hidden partition files.


- 1) On your PC, insert a microSD card of at least 4GB and formatted to FAT32.
- 2) Open **Mobile Deployment System**, and select an existed project from **Project Name** list to open. Or create a **New Project** and fill in all necessary fields and click "**Create**".

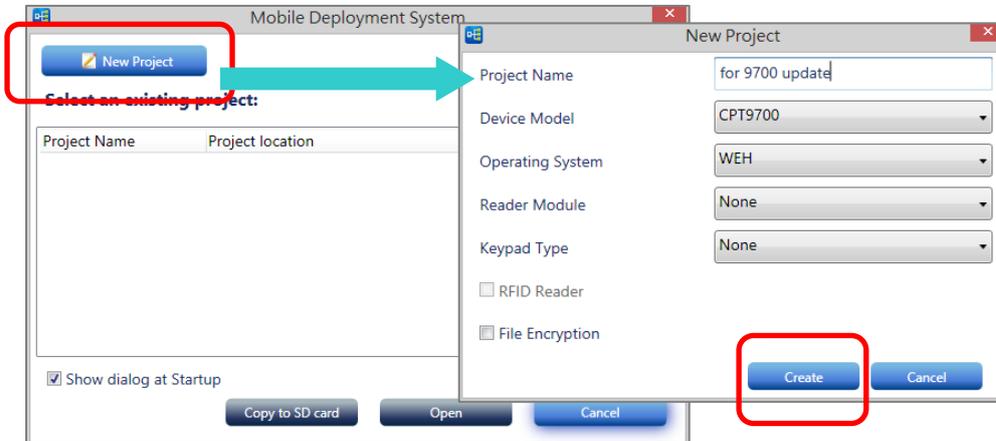


- 3) On the main menu, tick "**Update OS image**" and "**Update Hidden Partition**" under "**Specify your deployment task(s)**" and click "**Browse**" buttons to select the OS image and hidden partition files respectively from your PC client.
- 4) Tap "**Save current project to SD card**" button  to save the files to the microSD card.

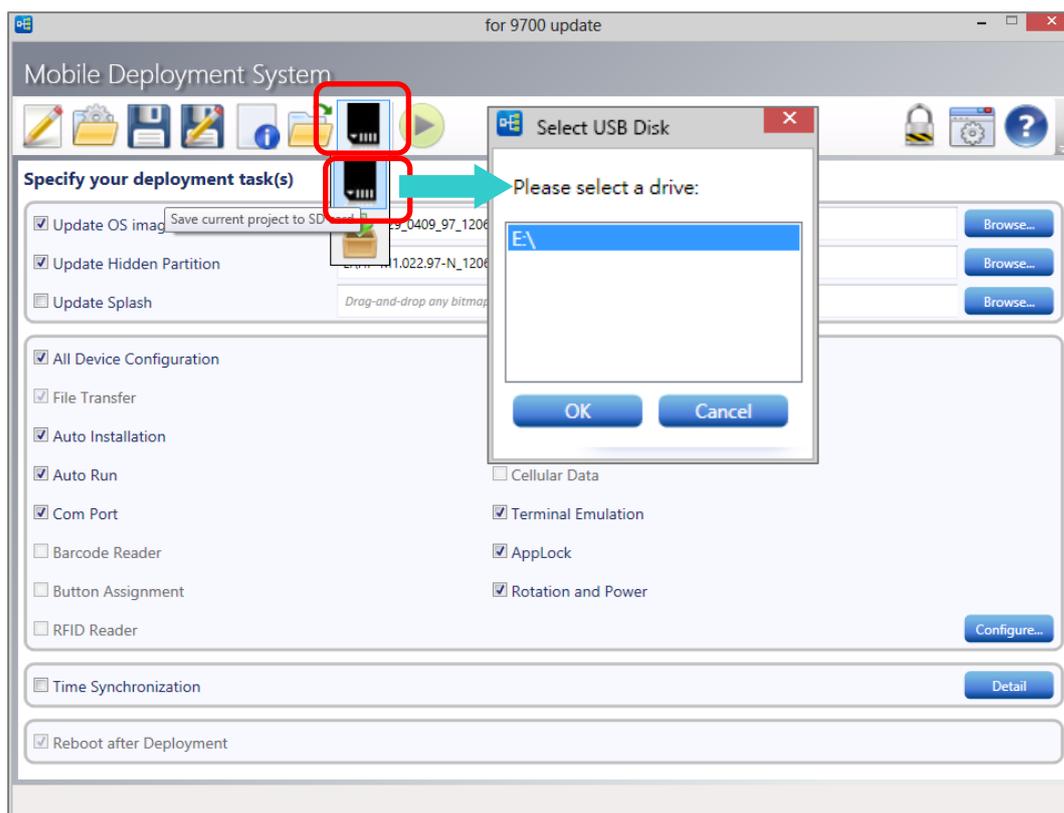


- 5) Eject the microSD card from the PC, and insert it into the card slot as described in [Insert SD Card](#).
- 6) Power on the mobile computer, and click **“Update Agent”** in **“Storage Card”**.

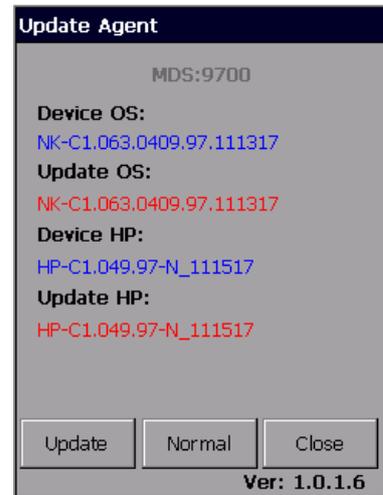

- 7) Click **“Update”** to update directly, or click **“Normal”** to select the option you need.

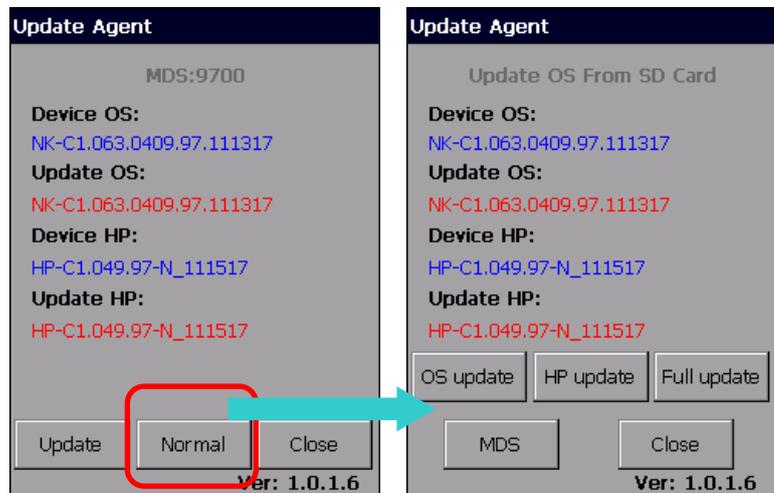

- 8) Once the update progress is completed, the mobile computer will restart to show the calibration screen. Complete the calibration steps to display the desktop. Then the update task is done.

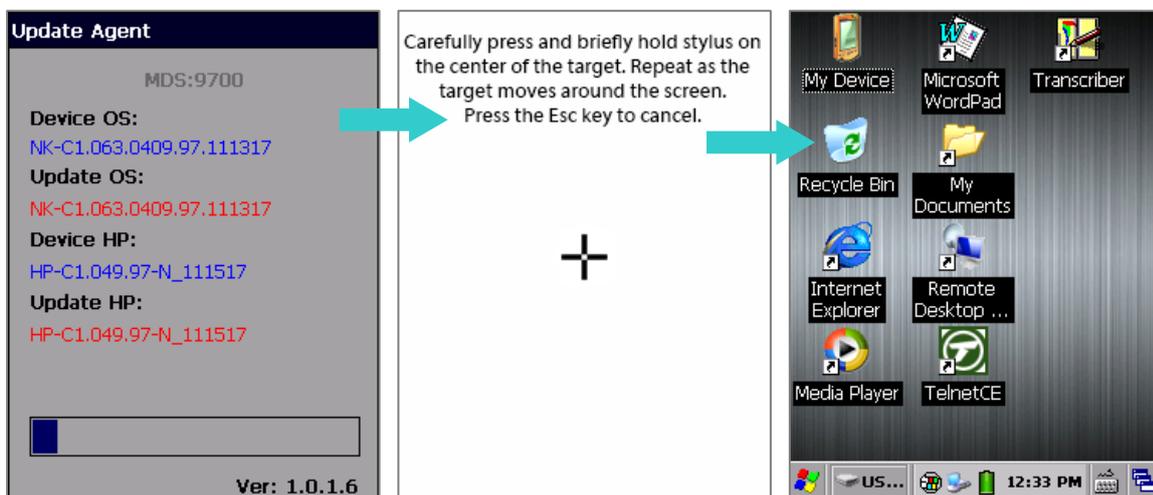

6.2. SYSTEM SETTINGS

This section guides to Windows Embedded Handheld 6.5 system settings. Access these settings to define how the mobile computer looks, sounds, stores/secures data, manages applications, or exchanges data with networks or other devices.

To access system settings:

Open Start screen, tap **Settings** icon . System settings open:



BLUETOOTH

Configures Bluetooth data connection. See [Use Bluetooth](#).



CLOCK & ALARMS

Sets RTC time, calendar, time zone, and up to three alarms which can serve as reminders.

Note: RTC time can be reserved for approximately 60 days on the mobile computer after the main battery pack has been removed.



HOME (TODAY)

Customizes the background and items displayed on Today screen. See also [Customize Today Screen](#).



LOCK

Sets up a screen lock mechanism to limit access to the mobile computer. See also [Set Screen Lock](#).



POWER

- ▶ Battery tab: View the current main battery level.
- ▶ Advanced tab: Configure to turn off the display panel when it is idle for a specific period of time, either on battery or external power.



SOUNDS & NOTIFICATIONS

Configures the mobile computer's sound upon tapping onscreen commands or physical buttons, how a notification or system event is received, how an alarm sounds, and related settings.

Note Sounds & Notifications doesn't turn on/off the audio from music, videos, and other media. This audio broadcast should be silenced in the applications that run them.

Sounds & Notifications features two tab pages, **Sounds** and **Notifications**:

Tabbed page	Description
Sounds	Mutes/unmutes the sounds for system events, programs, screen taps, and physical key pressing.
Notifications	Configures the ring type for a number of system events such as established or disconnected connections and so on.



CONNECTIONS FOLDER

Leads to the settings for radios, connection status and others. See also [Connections Folder](#).



PERSONAL

Accesses phone settings and assigns a program to a button. Users can also record information about the owner of the mobile computer.



SYSTEM

Leads to [System Folder](#), where the hardware and software on the mobile computer can be configured and their info can be viewed.

6.2.1. CONNECTIONS FOLDER

This section guides to applications available in **Connections Folder** under System Settings.

Open Start screen, tap **Settings | Connections** .

Connections folder opens:



BEAM

For Windows Mobile and Windows Embedded Handheld, “beam” is typically known as data sharing between handheld devices through infrared or Bluetooth.

Open **Beam** application and select **Receive all incoming beams** to enable Bluetooth-based data exchange with other devices.



CONNECTIONS (MANAGER)

Sets mobile data connection with two tab pages – Tasks and Advanced.

Page	Description				
Tasks tab page	<p>Sets where mobile data connects to, to Internet (My ISP), or to an internal network (intranet) or a VPN (My Work Network).</p> <table border="1"> <thead> <tr> <th>Setting</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>My ISP</td> <td> <p>Sets up mobile data connection to the Internet. It provides two links – Add a new modem connection and Manage existing connection. The latter is only available after a connection is set up.</p> <ul style="list-style-type: none"> ▶ Add a new modem connection <p>Creates a mobile data connection to Internet. Request your mobile carriers for the information</p> </td> </tr> </tbody> </table>	Setting	Description	My ISP	<p>Sets up mobile data connection to the Internet. It provides two links – Add a new modem connection and Manage existing connection. The latter is only available after a connection is set up.</p> <ul style="list-style-type: none"> ▶ Add a new modem connection <p>Creates a mobile data connection to Internet. Request your mobile carriers for the information</p>
Setting	Description				
My ISP	<p>Sets up mobile data connection to the Internet. It provides two links – Add a new modem connection and Manage existing connection. The latter is only available after a connection is set up.</p> <ul style="list-style-type: none"> ▶ Add a new modem connection <p>Creates a mobile data connection to Internet. Request your mobile carriers for the information</p>				

		<p>needed.</p> <ul style="list-style-type: none"> ▶ Manage existing connections <p>Edits existing mobile data connection to Internet.</p>								
	My Work Network	<p>Creates mobile data connection to an internal network (intranet) or a VPN. For enterprise network to access Internet, proxy server setting which is usually required is supported.</p> <ul style="list-style-type: none"> ▶ Add a new modem connection <p>Creates a mobile data connection to internal network (intranet) or VPN. Request network administrator for the information needed.</p> <ul style="list-style-type: none"> ▶ Add a new VPN server connection <p>Sets up a VPN connection. Request your VPN administrator for the details required.</p> <p>After a VPN is set up, Add a new VPN server connection changes to Edit my VPN servers.</p> <ul style="list-style-type: none"> ▶ Set up my proxy server <p>Sets up the proxy server by which an enterprise network connects to Internet.</p> <p>After a proxy server is set up, Set up my proxy server changes to Edit my proxy server.</p> <ul style="list-style-type: none"> ▶ Manage existing connections <p>Edits existing mobile data connection to internal network (intranet) or VPN. Request your network administrator for the related information.</p>								
Advanced tab page	<p>Featured settings are:</p> <table border="1"> <thead> <tr> <th>Setting</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Select Networks</td> <td>Sets which network to auto use when accessing Internet or a private network.</td> </tr> <tr> <td>Dialing Rules...</td> <td>Sets where you are dialing from so you don't have to create a new connection on a different location.</td> </tr> <tr> <td>Exceptions...</td> <td>Enters the address of the intranet to access in case it includes a period.</td> </tr> </tbody> </table>		Setting	Description	Select Networks	Sets which network to auto use when accessing Internet or a private network.	Dialing Rules...	Sets where you are dialing from so you don't have to create a new connection on a different location.	Exceptions...	Enters the address of the intranet to access in case it includes a period.
Setting	Description									
Select Networks	Sets which network to auto use when accessing Internet or a private network.									
Dialing Rules...	Sets where you are dialing from so you don't have to create a new connection on a different location.									
Exceptions...	Enters the address of the intranet to access in case it includes a period.									



DOMAIN ENROLL

Connects to a SCMDM (System Center Mobile Device Manager) server with an enrollment ID and password. SCMDM enables the management of multiple mobile computers.



USB TO PC

Enables/disables RNDIS (Remote Network Driver Interface Specification). Open USB to PC and deselect Enable advanced network functionality to disable RNDIS and enable PPP.


Note deselecting Enable advanced network functionality will disable USB Internet Sharing.



WI-FI

Opens the Network Cards page that features Network Adapters settings.

- ▶ Modifies network card settings such as static IP connection, setups server connection, and configures where the network cards connect to, Internet or your work network.

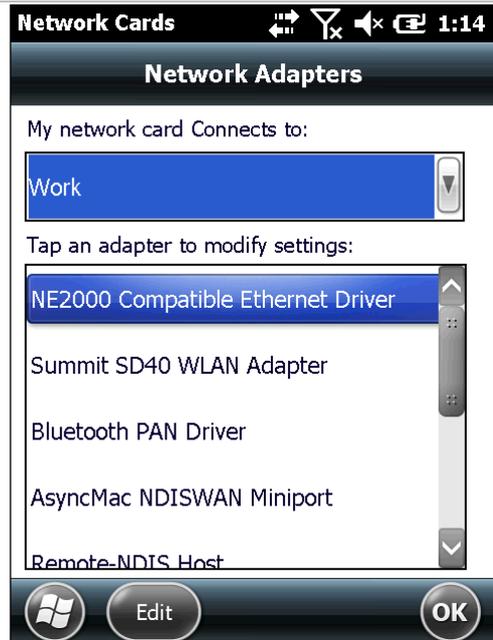

WIRELESS MANAGER

The Wireless Manager page shows the following items:

- ▶ **All:** Turns on/off all the radios on the mobile computer.
- ▶ **Wi-Fi:** Turns on/off Bluetooth. Check [Use Wi-Fi](#) to configure Bluetooth settings
- ▶ **Bluetooth:** Turns on/off Bluetooth. Check [Use Bluetooth](#) to configure Bluetooth settings.

Tap the "Menu" command on the softkey bar to disconnect cellular data or access Wi-Fi Settings and Bluetooth Settings.


Setting	Description
Wi-Fi Settings	Opens Network Cards page in Wi-Fi .
Bluetooth Settings	<p>Bluetooth settings feature three tabs – Devices, Mode and COM Ports.</p> <p>Devices tab page:</p> <ul style="list-style-type: none"> - Searches for devices and selects devices to connect. - Edits, disconnects from, and unpairs from connected devices. - Edits, reconnects to, and unpairs from disconnected devices. <p>Mode tab page:</p> <ul style="list-style-type: none"> - Turns on/off Bluetooth. - Hides/reveals the mobile computer from/to other Bluetooth devices. <p>COM Ports tab page:</p> <ul style="list-style-type: none"> - Sets up COM ports for a paired device. - Edits an existing port.

6.2.2. PERSONAL FOLDER

This section guides to **Personal Folder** .

Open Start screen, tap **Settings | Personal**.

Personal folder opens:

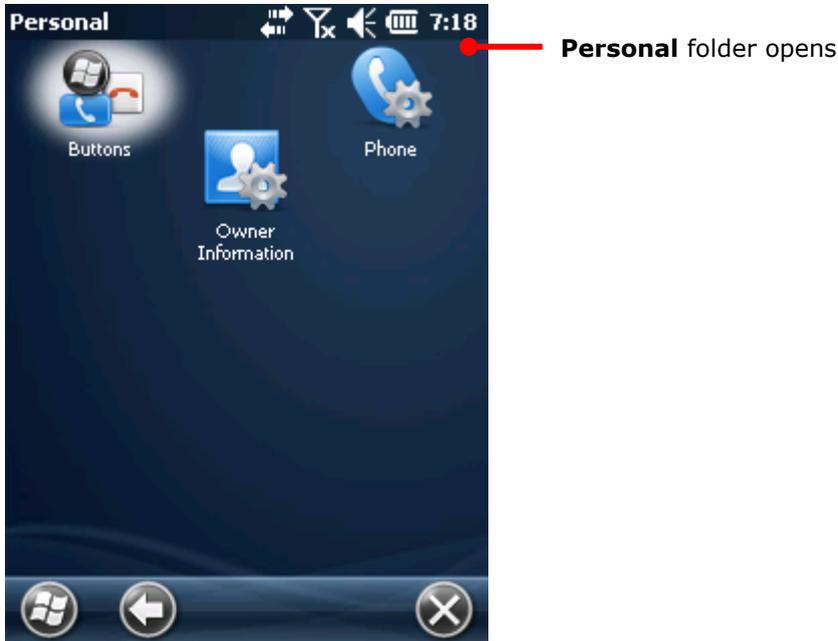

BUTTONS

Provides two tabs – **Program Buttons** and **Up/Down Control**.

Tab Page	Description
Program Buttons	Assigns a button to quick launch an application.
Up/Down Control	An up-down control is a pair of arrow buttons that users tap to increase or decrease a value such as a scroll position or a number displayed in a companion control (called a buddy window). Use this page to customize the delay before repeat and the repeat rate for up/down controls.



OWNER INFORMATION

Creates contact info about the owner of the mobile computer and also some notes.



PHONE

Accesses phone settings. (Reserved)

6.2.3. SYSTEM FOLDER

This section guides to **System Folder** .

Open Start screen, tap **Settings | System**.

System folder opens:



ABOUT

Views OS information. It features three tabs – **Version**, **Device ID** and **Copyright**.

Tab Page	Description
Version	Displays OS version details, and shows brief descriptions of major hardware units.
Device ID	Sets a name and description for the mobile computer, making it easy for other devices to identify it. Change this information if you need to discriminate between different devices of the same model type.
Copyright	Displays legal information of the OS.



BACKLIGHT SETTING

Sets screen and keypad timeout and brightness. Four tabs are featured – **Brightness**, **Battery Power**, **External Power**, and **Profile**.

Tab Page	Description
Brightness	<p>Selects whether to allow manual adjustment of the screen and keypad backlights.</p> <ul style="list-style-type: none"> ▶ Adjust the screen to the dimmest comfortable brightness to save power. See also Adjust Backlight.

Battery Power	<p>Sets the screen backlight timeout on battery power and whether to trigger screen/keypad light-up upon pressing a key.</p> <table border="1"> <thead> <tr> <th>Option</th> <th>Default Settings</th> </tr> </thead> <tbody> <tr> <td>Turn off LCD backlight if device is not used for:</td> <td>Checked; 2 min</td> </tr> <tr> <td>Turn off keypad backlight if device is not used for:</td> <td>Checked; 10 sec</td> </tr> <tr> <td>Turn on LCD backlight when a button is pressed or the screen is tapped</td> <td>Checked</td> </tr> <tr> <td>Turn on keypad backlight when a button is pressed</td> <td>Checked</td> </tr> </tbody> </table>	Option	Default Settings	Turn off LCD backlight if device is not used for:	Checked; 2 min	Turn off keypad backlight if device is not used for:	Checked; 10 sec	Turn on LCD backlight when a button is pressed or the screen is tapped	Checked	Turn on keypad backlight when a button is pressed	Checked
Option	Default Settings										
Turn off LCD backlight if device is not used for:	Checked; 2 min										
Turn off keypad backlight if device is not used for:	Checked; 10 sec										
Turn on LCD backlight when a button is pressed or the screen is tapped	Checked										
Turn on keypad backlight when a button is pressed	Checked										
External Power	<p>Sets the screen backlight timeout on external power and whether to trigger screen/keypad light up upon pressing a key.</p> <table border="1"> <thead> <tr> <th>Option</th> <th>Default Settings</th> </tr> </thead> <tbody> <tr> <td>Turn off LCD backlight if device is not used for:</td> <td>Checked; 2 min</td> </tr> <tr> <td>Turn off keypad backlight if device is not used for:</td> <td>Unchecked</td> </tr> <tr> <td>Turn on LCD backlight when a button is pressed or the screen is tapped</td> <td>Checked</td> </tr> <tr> <td>Turn on keypad backlight when a button is pressed</td> <td>Checked</td> </tr> </tbody> </table>	Option	Default Settings	Turn off LCD backlight if device is not used for:	Checked; 2 min	Turn off keypad backlight if device is not used for:	Unchecked	Turn on LCD backlight when a button is pressed or the screen is tapped	Checked	Turn on keypad backlight when a button is pressed	Checked
Option	Default Settings										
Turn off LCD backlight if device is not used for:	Checked; 2 min										
Turn off keypad backlight if device is not used for:	Unchecked										
Turn on LCD backlight when a button is pressed or the screen is tapped	Checked										
Turn on keypad backlight when a button is pressed	Checked										
Profile	Sets backlight profiles or restores them back to default.										



BUTTON ASSIGNMENT

Redefines key functions under keypad's normal and function mode. See [Button Assignment](#) for more details.



CERTIFICATES

Views or deletes the digital certificates used by some applications to access some secured networks.



COM PORT MAPPING

Changes the function each COM port serves. COM1 to 4 and 6 to 9 are re-assignable. Default settings are as follows:

COM port	Default Settings
COM1	Scanner (Laser or 2D)
COM2	Bluetooth hardware port
COM3	EXTUART
COM4~9	N/A

Warning: By default, COM1~3 are assigned to inherent functions on the mobile computer. If the settings of any of these COM ports are changed to N/A, the original function will be disabled!

- ▶ **Default** button restores all COM port settings back to factory default.
- ▶ Upon system reboot, the mobile computer checks whether there is a registry entry for Bluetooth Serial Port Profile (SPP) or Dial-up Profile (DUN). These profiles (if existent) are assigned to fixed ports and cannot be re-assigned.
- ▶ Check if any COM ports are occupied by Bluetooth SPP before editing COM port function.
- ▶ After editing COM port settings, tap **OK** command on the softkey bar. A prompt will appear warning that the system needs to reboot in order to apply settings. Tap **OK** to reboot, or **Cancel** to discard changes.
- ▶ If two ports are assigned the same function, a pop up dialog appears when **OK** is tapped to warn that one of these ports must be changed.



CONTRAST

Provides a sidebar to set the contrast for the screen display.

- ▶ Along with [Adjust Backlight](#), make adjustments to the screen to achieve a most comfortable display mode.



CUSTOMER FEEDBACK

Submits feedback about Windows Embedded Handheld 6.5 to help Microsoft improve the software for this platform.



ENCRYPTION

Encrypts the files placed on the storage card so the encrypted files are only readable on that specific mobile computer.



ERROR REPORTING

Enables/disables the mobile computer to auto-collect and report errors to Microsoft to help them improve products.



EXTERNAL GPS

Configures external GPS receiver in use by the mobile computer. Three tabs are featured – **Access**, **Programs** and **Hardware**.

Tab Page	Description
Access	Enables/disables the system's access to the external GPS device.
Programs	Sets the software port for GPS software and location-aware applications to stream GPS data.
Hardware	Sets the hardware COM port and Baud rate for the external GPS receiver.



MANAGED PROGRAMS

Views the applications remotely installed by your domain's system administrator.



MEMORY

Delivers how the internal/external memories are used. See also [Check Storage](#).



POWER INFORMATION

Displays battery level and sets up power plans. Two tabs are featured – **Battery** and **Advanced**.

Tab Page	Description						
Battery	Delivers main battery type and remaining power of both main & backup batteries.						
Advanced	<p>Sets the screen power off time when on battery power and external power. See also Monitor Battery Level.</p> <table border="1"> <thead> <tr> <th>Option</th> <th>Default Settings</th> </tr> </thead> <tbody> <tr> <td>(On battery power) Turn off screen if device is not used for</td> <td>Checked; 2 min</td> </tr> <tr> <td>(On external power) Turn off screen if device is not used for</td> <td>Unchecked</td> </tr> </tbody> </table>	Option	Default Settings	(On battery power) Turn off screen if device is not used for	Checked; 2 min	(On external power) Turn off screen if device is not used for	Unchecked
Option	Default Settings						
(On battery power) Turn off screen if device is not used for	Checked; 2 min						
(On external power) Turn off screen if device is not used for	Unchecked						



PTT CONFIGURATION

PTT Configuration sets the operation mode of the [Push to Talk](#) utility.

- ▶ **Normal Mode:** Under this mode, Push to Talk appears on-screen when launched and stays on-screen.
- ▶ **Auto-hide:** Under this mode, Push to Talk is minimized directly when it is launched. The application opens on-screen when the physical Push button is pressed, and is automatically minimized once more when the Push button is released. Minimization of the utility does not affect voice receiving. When another device in the group initiates a transmission session, you will still receive it on your device as long as Push to Talk is running.
- ▶ **Always Hide:** Under this mode, Push to Talk is minimized directly when it is launched, and operates in the background at all times. Press the physical Push button to initiate a voice transmission session. Voice receiving also functions normally; when another device in the group initiates a transmission session, you will still receive it on your device as long as Push to Talk is running.

If **Auto-hide** or **Always Hide** is selected, use [Button Assignment](#) to assign a physical key as the Push to Talk button.



READER CONFIGURATION

Allows users to set scanner preferences, data output format and destination, symbology settings, and read barcodes.



REGIONAL SETTINGS

Controls how to display numbers, currency, date, time, etc on the mobile computer. Featured tabs are – **Region, Number, Currency, Time** and **Date**.

Tab Page	Description
Region	Sets the region of your locale to display numbers, amount of money, time/date and other info.
Number	Sets how to display numbers.
Currency	Sets how to display currency symbols and amount of money.
Time	Sets how to display time.
Date	Sets how to display date.



REMOVE PROGRAMS

Views and removes the acquired (non-inherent) applications. See also [Uninstall Applications](#).



SCREEN

Delivers three tabs to set how content is to be displayed on the screen.

Tab Page	Description
General	Switches the mobile computer between portrait and landscape mode. Also calibrates the touchscreen.
ClearType	Smoothens the edge of screen fonts.
Text Size	Adjusts text size.



SCREEN ROTATION

Selects the modes to enable for screen orientation, and whether to suspend the mobile computer when it is facing down.

Tap each of the following labels to enable/disable the given screen rotation mode.

- ▶ Portrait mode
- ▶ Landscape mode
- ▶ Signature mode

Tap the following label to enable/disable suspension of the mobile computer when it is turned over and the screen is facing downwards.

- ▶ Suspend when face down



SCU

Summit Client Utility (SCU) allows changing Wi-Fi settings on the mobile computer, including radio type, access point, encryption and more. Settings are displayed among three tabs:

Tab Page	Description
Status	Displays AP information, device IP, connection status and signal strength.
Configuration	Disables/Enables radio and switches the active profile. Also opens profile settings and global settings.
Diagnostics	Performs diagnostic tests to check connection, and shows information about SCU version.



SENSOR CALIBRATION

Shows a round ball which fixes at the center of a set of circles when the mobile computer is placed on a level surface, and dislocates when the mobile computer is tilted. Place the mobile computer on a flat surface before calibration, and tap **Calibrate**.



STORAGE INFORMATION

Provides storage status of the internal storage (which is divided into System files and User data) and external storage on the mobile computer.

Label	Description
System	Shows total size and available size of storage under the System directory.
USER_DATA	Shows total size and available size of storage under the USER_DATA directory.
Storage Card	Shows total size and available size of storage under the Storage Card directory.



SYSTEM INFORMATION

Displays some of the mobile computer's info such as manufacturer, firmware version, MAC address, memory capacity and so on. Tap each node to expand the tree structure list and view data about the given items.

This page also displays the mobile computer's Device ID, a sequence of digits that deliver information about the hardware integrated on the mobile computer. The coding rule is tabulated as below:



Digit Pair	Hardware	Code
1 st	Barcode Reader	0: None: 1: Laser 2: Laser 3: 2D imager 4: Long range laser 5: 2D imager for DPM 7: Near/far 2D imager 8: Extended range laser
2 nd	--	N/A
3 rd	Bluetooth	0: None 1: Bluetooth
4 th	Wi-Fi	0: None 1: Wi-Fi
5 th	--	N/A
6 th	Keypad	0: None 3: Numeric (30-key) 4: Numeric & Function (38-key) 5: Alphanumeric (VT, 53-key) 6: Alphanumeric (TN5250, 53-key) 7: Alphanumeric (TN3270, 53-key)
7 th	LCD	0: None 3: QVGA
8 th	--	N/A
9 th	--	N/A
10 th	Touch panel	0: None 1: 3.5" QVGA Transflective
11 th	--	N/A




TASK MANAGER

Monitors the memory and CPU resources consumed by each running application and cached process. It also closes applications and switches the screen between opened applications. See also [Task Manager](#).



TIME SYNCHRONIZATION

Synchronizes the mobile computer's time with an NTP server, either automatically or manually. Users can also select the time period for auto-synchronization. Synchronized time will be written to RTC and system time will be updated.

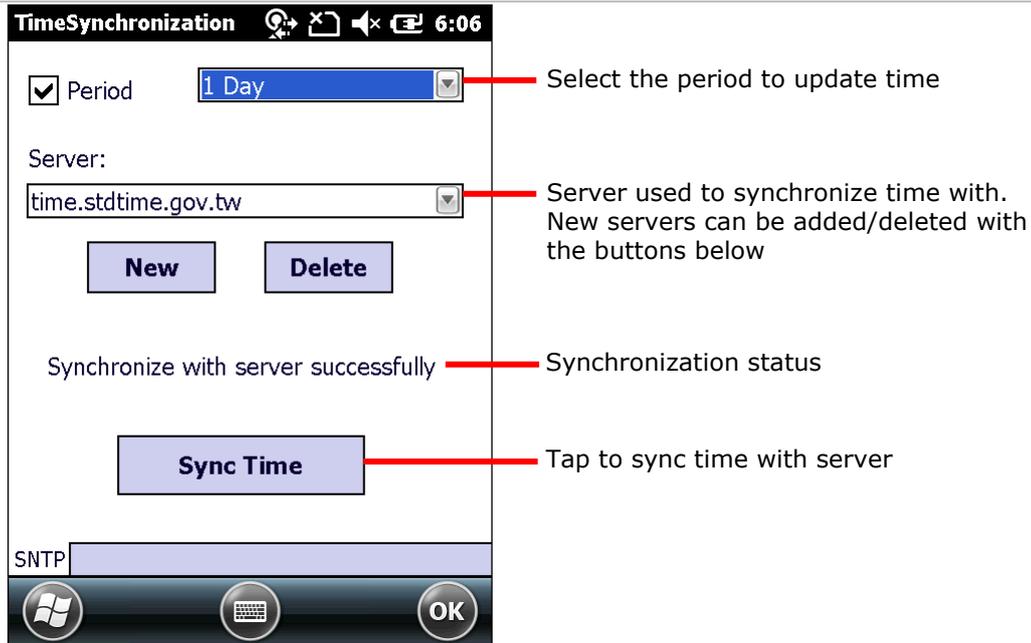

Check Internet connection status if the following synchronization status shows: "Cannot get time information through SNTP".

Note: For auto-synchronization to function properly, Time Synchronization application should be shut down. Close the application when you are finished adjusting the settings.



USB CONNECTION

Sets the type of USB connection without re-plugging the USB cable.

- ▶ **ActiveSync Advanced Network Mode:** Sets up ActiveSync or WMDC connection with PC through RNDIS protocol. This is the default setting.
- ▶ **ActiveSync Serial Mode:** Sets up ActiveSync or WMDC connection with PC through serial protocol.
- ▶ **Mass Storage – SD Card:** Presents the mobile computer with an SD card installed as a storage device. If no SD card is installed, the directory on the PC will be blank.

Note: Selection of ActiveSync Advanced Network Mode or ActiveSync Serial Mode will be synchronized with settings under **Settings | System | USB to PC**.



VERSION VIEWER

Lists version information of the applications and drivers installed on the mobile computer.

SPECIFICATIONS

PLATFORM, PROCESSOR & MEMORY

Operating System & CPU

OS Version	Microsoft Windows Embedded Handheld 6.5
CPU	TI OMAP3730 1GHz Processor

Memory

RAM	512MB DDR SDRAM
Flash	4GB Flash ROM
Expansion Slot	One expansion slot, supports MicroSDHC up to 32GB

COMMUNICATIONS & DATA CAPTURE

Communications

USB Host/Client	USB 2.0
WPAN	Built-in module for Bluetooth version 2.1 + EDR Class II connectivity
WLAN	Built-in Cisco® CCX v4 certified module for 802.11 a/b/g/n networking

Data & Image Capture

Barcode Reader	Ordering options include	STANDARD READER UNIT <ul style="list-style-type: none">▶ Laser (Symbol SE9x5)▶ 2D imager (Symbol SE4500 / 4750SR) LARGE READER UNIT <ul style="list-style-type: none">▶ 2D imager with decoder board (Symbol SE4500+PL4507)▶ Extended range laser (Symbol SE1524)▶ Near/far 2D imager (Intermec EX25)
----------------	--------------------------	--

ELECTRICAL CHARACTERISTICS

Batteries

Main Battery Pack	Standard capacity battery: 3.7V, 3600 mAh Large capacity battery: 3.7V, 5400 mAh Rechargeable Li-ion battery Charging time: approximately 4 hours for standard battery / 6 hours for large capacity battery
Backup Battery	3.6V, 15 mAh Rechargeable NiMH battery (charged via main battery) Data retention for 30 minutes Charging time: approximately 36 hours

Power Adapter

Power Supply Cord for	Input	AC 100~240V, 50/60 Hz
Snap-on Cable	Output	DC 5V, 4A
Power Supply Cord for Cradle	Input	AC 100~240V, 50/60 Hz
	Output	DC 12V, 3.3A

Operating Time

Minimum 13 hours for standard capacity battery/19 hours for large capacity battery performing scanning once per 20 seconds, with LCD at 50% backlight and speaker on (at default volume) at 25°C, Bluetooth off and IEEE 802.11 a/b/g/n on.

PHYSICAL CHARACTERISTICS

Color Tap Screen Display

Display	3.5" Transflective TFT-LCD, 65K colors, sunlight readable
Resolution	QVGA 240 (W) x 320 (H)

Keypad

Layout	Numeric keypad (30-key), Numeric & Function keypad (38-key), or Alphanumeric keypad (53-key)
Backlight	White LED backlight for display and keypad

Notifications

Status LED	Three LEDs for showing scanning good read, radio connection status and battery charging status
Audio	<ul style="list-style-type: none"> ▶ Integrated with speaker and microphone ▶ 2.5mm 4-ring headset jack ▶ Bluetooth headset supported
Vibrator	0.45G force

Sensors

Built-in Sensors	G-sensor
------------------	----------

Enclosures

Materials	Plastic & metal
Dimensions	214 mm (L) x 87 mm (W) x 47 mm (H) with battery
Weight	447g with 3600mAh battery; 478g with 5400mAh battery

ENVIRONMENTAL CHARACTERISTICS**Temperature**

Operating ^{Note}	-20 °C to 50 °C / -4°F to 122°F
Storage	-30 °C to 70 °C / -22°F to 158°F (without battery) -30 °C to 60 °C / -22°F to 140°F (with battery)
Charging	0 °C to 35 °C / 32°F to 95°F (with battery)

Humidity

Operating	5% to 95%, non-condensing (Max 60°C / 140°F)
Storage	5% to 95%, non-condensing (Max 60°C / 140°F)

Resistance

Impact Resistance	Multiple 1.8 m (5.9 ft.) drops to concrete, meets and exceeds applicable MIL-STD 810G specifications
Tumble Test	500 tumbles (1,000 drops) at 1 m (1.6 ft) and 1,000 tumbles (2,000 drops) at 0.5 m (0.8 ft.) per applicable IEC tumble specifications
Splash/Dust Resistance	IP65 per applicable IEC 60529 sealing specs
Electrostatic Discharge	± 15 kV air discharge, ± 8 kV direct/indirect contact discharge

Note: CipherLab will not be held responsible for the mobile computer's malfunction incurred by the operation outside operating temperature range.

PROGRAMMING SUPPORT**Development Environment & Tools**

Integrated Development Environment	Visual Studio 2008 Visual Studio 2005
Software Development Kit	Microsoft SDK System API (DLL) for system configuration Reader API (DLL) for reader configuration

Software & Utilities

CipherLab software package	<ul style="list-style-type: none">▶ Reader Config▶ Button Assignment▶ Signature Capture▶ Backup Utility▶ Push to Talk▶ SPB SmartShell (optional)▶ AppLock▶ MIRROR Browser for web application▶ Terminal Emulation
Third-party software	<ul style="list-style-type: none">▶ SOTI MobiControl for remote device control▶ Wavelink Avalanche™ for remote device control▶ Wavelink TE Terminal emulator and industrial web browser▶ Naurtech CETerm – Terminal emulator (3270, 5250, VT) and industrial web browser▶ SYSDEV Kalipso for mobile application generation

ACCESSORIES

Accessory Options

- ▶ Snap-on Charging and Communication Cable (USB or RS-232)
- ▶ Charging & Communication Cradle
- ▶ Pistol Grip
- ▶ Snap-on Car Charger
- ▶ 4-Slot Battery Charger
- ▶ 4-Slot Terminal Cradle
- ▶ Belt Holster

SCAN ENGINE SETTINGS

9700 Series Mobile Computer supports the following reader types. Reader availability depends on the hardware integrated on the mobile computer.

Scan Engine		ID
1D	Laser	SE9x5
1D	Extended Range Laser (ER Laser)	SE1524
2D	2D Imager	SE4500 / 4750SR
		SE4500 + PL4507
2D	Near/far 2D Imager (N/F 2D)	EX25

Reader combination allowed is either 1D or 2D. When you hit a physical scan key, the mobile computer reads a printed barcode which is in position.

Note: 1D and 2D scan engines don't coexist on the mobile computer because they are both barcode readers and the mobile computer allows only one barcode reader on board.

IN THIS CHAPTER

Symbologies Supported..... 190

SYMBOLOGIES SUPPORTED

Depending on the scan engine integrated on the mobile computer, supported symbologies will differ as listed below.

		Laser	ER Laser	2D	N/F 2D
Codabar		✓	✓	✓	✓
Code 11		✓	✗	✓	✓
Code 39	Code 39	✓	✓	✓	✓
	Trioptic Code 39	✓	✓	✓	✓
	Italian Pharmacode (Code 32)	✓	✓	✓	✗
Code 93		✓	✓	✓	✓
Code 128	Code 128	✓	✓	✓	✓
	GS1-128 (EAN-128)	✓	✓	✓	✓
	ISBT 128	✓	✓	✓	✓
Code 2 of 5	Chinese 25	✓	✗	✓	✗
	Industrial 25 (Discrete 25)	✓	✓	✓	✓
	Interleaved 25	✓	✓	✓	✓
	Convert Interleaved 25 to EAN-13	✓	✓	✓	✗
	Matrix 25	✗	✗	✓	✓
Composite Code	Composite CC-A/B	✗	✗	✓	✓
	Composite CC-C	✗	✗	✓	✓
	Composite TLC 39	✗	✗	✓	✗
GS1 DataBar (RSS)	GS1 DataBar-14 (RSS-14)	✓	✓	✓	✓
	GS1 DataBar Limited (RSS Limited)	✓	✓	✓	✓
	GS1 DataBar Expanded (RSS Expanded)	✓	✓	✓	✓
	Convert to UPC/EAN	✓	✓	✓	✗
Inverse	Inverse 1D barcodes	✗	✗	✓	✗
Korean 3 of 5		✗	✗	✓	✗
MSI		✓	✓	✓	✓
Postal Codes	Australian Postal	✗	✗	✓	✓

	Japan Postal	x	x	✓	✓
	Netherlands KIX Code	x	x	✓	✓
	US Postnet	x	x	✓	✓
	US Planet	x	x	✓	✓
	UK Postal	x	x	✓	x
EAN/UPC	EAN-8	✓	✓	✓	✓
	EAN-8 Extend	✓	✓	✓	x
	EAN-13	✓	✓	✓	✓
	Bookland EAN (ISBN)	✓	✓	✓	✓
	ISSN EAN	x	x	✓	✓
	UPC-A	✓	✓	✓	✓
	UPC-E	✓	✓	✓	✓
	Convert UPC-E to UPC-A	✓	✓	✓	✓
	UPC-E1	✓	✓	✓	✓
Convert UPC-E1 to UPC-A	✓	✓	✓	✓	
2D Symbologies	Aztec	x	x	✓	✓
	Data Matrix	x	x	✓	✓
	Maxicode	x	x	✓	✓
	MicroPDF417	x	x	✓	✓
	MicroQR	x	x	✓	x
	PDF417	x	x	✓	✓
	QR Code	x	x	✓	✓

LASER (SE9X5)

The tables below list the symbology settings for the 1D laser scan engine (SE9x5).

SYMBOLGY SETTINGS

Symbology	Description	Default
CODABAR		
CodaBar		Enable
Codabar	Checkbox to enable Codabar decoding.	Enable
Length option	Sets the length of the Codabar symbols to decode. <ul style="list-style-type: none"> ▶ One Fixed length (Length 1) ▶ Two Fixed lengths (Length 1>Length 2) ▶ Max / Min Length (range: 0-55; Length 1<Length 2) ▶ Any Length 	Max / Min Length (4-55)
CLSI Editing	When applied, the CLSI editing strips the start/stop characters and inserts a space after the first, fifth, and tenth characters of a 14-character Codabar barcode. <ul style="list-style-type: none"> ▶ The 14-character barcode length does not include start/stop characters. 	Disable
NOTIS Editing	Sets whether to include start/stop characters in the transmitted data. <ul style="list-style-type: none"> ▶ NOTIS Editing is to strip the start/stop characters, i.e. to disable "Transmit Start/Stop Characters". 	Disable
CODE 11		
Code 11		Enable
Code 11	Checkbox to enable Code 11 decoding.	Enable
Check Digit Option	Sets whether to verify check digits according to the selected option. If the check digits are incorrect, the barcode will not be accepted. <ul style="list-style-type: none"> ▶ Disable ▶ One Check Digit ▶ Two Check Digits 	Disable
Transmit Check Digit	Selects whether to include check digits in the transmitted data. <ul style="list-style-type: none"> ▶ Check Digit Option" must be enabled. 	Disable
Length option	Sets the length of the Code 11 symbols to decode. <ul style="list-style-type: none"> ▶ One Fixed length (Length 1) ▶ Two Fixed lengths (Length 1>Length 2) ▶ Max / Min Length (range: 0-55; Length 1<Length 2) ▶ Any Length 	Max / Min Length (4-55)

CODE 39		
Code 39		Enable
Code 39	Checkbox to enable Code 39 decoding.	Enable
Trioptic Code 39	Selects whether to decode Trioptic Code 39. ▶ Trioptic Code 39 is a variant of Code 39 used in the marking of computer tape cartridges. It always contains six characters.	Disable
Convert to Code 32	Selects whether to convert decoded data to Italian Pharmacode.	Disable
Code 32 Prefix	Prefix character "A" to Code 32 barcodes. ▶ "Convert to Code 32" must be enabled for this to function properly.	Disable
Verify Check Digit	Selects whether to verify the Modulo 43 check digit. If the check digit is incorrect, the barcode will not be accepted.	Disable
Transmit Check Digit	Decide whether to include the check digit in the data to transmit. ▶ "Verify Check Digit" must be enabled.	Disable
Support Full ASCII	Selects whether to enable Code 39 Full ASCII decoding. Characters are paired to encode the full ASCII character set.	Disable
Length option	Sets the length of the Code 39 symbols to decode. ▶ One Fixed length (Length 1) ▶ Two Fixed lengths (Length 1>Length 2) ▶ Max / Min Length (range: 0-55; Length 1<Length 2) ▶ Any Length	Max / Min Length (4-55)
CODE 93		
Code 93		Enable
Code 93	Checkbox to enable Code 93 decoding.	Enable
Length option	Sets the length of the Code 93 symbols to decode. ▶ One Fixed length (Length 1) ▶ Two Fixed lengths (Length 1>Length 2) ▶ Max / Min Length (range: 0-55; Length 1<Length 2) ▶ Any Length	Max / Min Length (4-55)
CODE 128		
Code 128		Enable
GS1-128		Enable
ISBT 128		Enable
CODE 2 OF 5		
Chinese 25		Enable
Discrete 25		Enable
Discrete 25	Checkbox to enable Discrete 25 decoding.	Enable

Length option	Sets the length of the Discrete 2 of 5 symbols to decode. <ul style="list-style-type: none"> ▶ One Fixed length (Length 1) ▶ Two Fixed lengths (Length 1>Length 2) ▶ Max / Min Length (range: 0-55; Length 1<Length 2) ▶ Any Length 	Max / Min Length (4-55)
Interleaved 25		Enable
Interleaved 25	Checkbox to enable Interleaved 2 of 5 decoding.	Enable
Length option	Sets the length of the Interleaved 2 of 5 symbols to decode. <ul style="list-style-type: none"> ▶ One Fixed length (Length 1) ▶ Two Fixed lengths (Length 1>Length 2) ▶ Max / Min Length (range: 0-55; Length 1<Length 2) ▶ Any Length 	Max / Min Length (4-55)
Verify Check Digit	Decide whether to verify the check digit. If desired, select one of the algorithms below. If the check digit is incorrect, the barcode will not be accepted. <ul style="list-style-type: none"> ▶ Disable ▶ USS Check Digit ▶ OPCC Check Digit 	Disable
Transmit Check Digit	Decide whether to include the check digit in the data being transmitted.	Disable
Convert To EAN-13	Convert a 14-character Interleaved 25 barcode into EAN-13 if the following requirements are met: The barcode must have a leading 0 and a valid EAN-13 check digit.	Disable
GS1 DATABAR		
GS1 DataBar-14		Enable
GS1 DataBar Limited		Enable
GS1 DataBar Expanded		Enable
GS1 DataBar Convert to UPC/EAN		Disable
MSI		
MSI		Enable
MSI	Checkbox to enable MSI decoding.	Enable
Length option	Sets the length of the MSI symbols to decode. <ul style="list-style-type: none"> ▶ One Fixed length (Length 1) ▶ Two Fixed lengths (Length 1>Length 2) ▶ Max / Min Length (range: 0-55; Length 1<Length 2) ▶ Any Length 	Max / Min Length (4-55)
Check Digit Option	One check digit is mandatory for decoding MSI barcodes. Select whether a second check digit should be verified. If the check digits are incorrect, the barcode will not be accepted. <ul style="list-style-type: none"> ▶ One Check Digit ▶ Two Check Digits 	One Check Digit
Transmit Check Digit	Decide whether to include the check digit in the data being transmitted.	Disable

Algorithm	When two check digits are set for verification, two choices are available for the pair of check digits. <ul style="list-style-type: none"> ▶ Modulo10 / Modulo11 ▶ Double Modulo 10 	Double Modulo 10
UPC/EAN		
EAN-8		Enable
EAN-8	Checkbox to enable EAN-8 decoding.	Enable
EAN-8 Extend	Checkbox to enable converting EAN-8 to EAN-13 format.	Disable
EAN-13		Enable
EAN-13	Checkbox to enable EAN-13 decoding.	Enable
Bookland EAN	Checkbox to enable ISBN decoding. If enabled, select Bookland ISBN Format in the drop-down box below.	Enable
Bookland ISBN Format	Select to decode Bookland data starting with 978 as 10-digit format along with the Bookland check digit, or decode Bookland data starting with 978/979 as EAN-13 format.	Bookland ISBN-10
Transmit Check Digit	Decide whether to include the EAN-13 check digit (the last character in the barcode) in the data being transmitted.	Enable
UPC-A		Enable
UPC-A	Checkbox to enable UPC-A decoding.	Enable
Preamble	Decide whether to include the UPC-A/UPC-E/UPC-E1 preamble System Character (and Country Code) in the data being transmitted. <ul style="list-style-type: none"> ▶ No transmit: transmits none of the above ▶ Transmit System Character: transmits system number only ▶ Transmit Sys. Character and Country Code: transmits system number and country code 	Transmit System Character
Transmit Check Digit	Decide whether to include the UPC-A check digit (the last character in the barcode) in the data being transmitted.	Enable
UPC-E		Enable
UPC-E	Checkbox to enable UPC-E decoding.	Enable
Preamble	Decide whether to include the UPC-A/UPC-E/UPC-E1 preamble System Character (and Country Code) in the data being transmitted. <ul style="list-style-type: none"> ▶ No transmit: transmits none of the above ▶ Transmit System Character: transmits system number only ▶ Transmit Sys. Character and Country Code: transmits system number and country code 	Transmit System Character
Convert to UPC-A	The UPC-E barcode will be expanded into UPC-A format, and the next process will follow the settings configured for UPC-A.	Disable
Transmit Check Digit	Decide whether to include the UPC-E1 check digit (the last character in the barcode) in the data being transmitted.	Enable
UPC-E1		Disable
UPC-E1	Checkbox to enable UPC-E1 decoding.	Disable

Preamble	Decide whether to include the UPC-A/UPC-E/UPC-E1 preamble System Character (and Country Code) in the data being transmitted. <ul style="list-style-type: none"> ▶ No transmit: transmits none of the above ▶ Transmit System Character: transmits system number only ▶ Transmit Sys. Character and Country Code: transmits system number and country code 	Transmit System Character										
Convert to UPC-A	The UPC-E1 barcode will be expanded into UPC-A format, and the next process will follow the settings configured for UPC-A.	Disable										
Transmit Check Digit	Decide whether to include the UPC-E1 check digit (the last character in the barcode) in the data being transmitted.	Enable										
UPC/EAN General Preference												
Support Coupon Code	Reads UPC-A barcodes starting with "5", EAN-13 barcodes starting with "99", and UPC-A/EAN-128 Coupon Codes. <ul style="list-style-type: none"> ▶ UPC-A, EAN-13, and GS1-128 must be enabled first! ▶ Use "Addon Redundancy" to control auto-discrimination of the GS1-128 (right half) of a coupon code. 	Disable										
UPC/EAN Addon Option	Decide whether to decode EAN-8, EAN-13, UPC-E0, UPC-E1 or UPC-A with addons (including Addon 2 and 5). <ul style="list-style-type: none"> ▶ Ignore Addon ▶ Decode only with addons ▶ Auto-discriminate 	Ignore Addon										
UPC/EAN Addon Redundancy	When "Auto-discriminate" is applied, decide the number of times of supplementary decoding the same barcode to count as a valid read. Configurable between 2 and 30.	10										
UPC/EAN Security Level	Sets the security level to ensure decoding accuracy considering the printed quality of the barcodes such as Code 128, Code 93, and UPC/EAN. The higher the level is, the more security is ensured. Options are: <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: left;">Level</th> <th style="text-align: left;">Description</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>With this default, the scan engine is aggressive enough to decode most "in-spec" barcodes.</td> </tr> <tr> <td>1</td> <td>Select this level if misdecodes have occurred. It fixes most misdecodes.</td> </tr> <tr> <td>2</td> <td>Select this level if Level 1 should fail to eliminate misdecodes.</td> </tr> <tr> <td>3</td> <td>Select this level if Security Level 2 should fail to prevent misdecodes. However, as this level actually impairs the decoding ability of scan engine, it'd be better to improve the barcode's print quality if this level should be needed.</td> </tr> </tbody> </table>	Level	Description	0	With this default, the scan engine is aggressive enough to decode most "in-spec" barcodes.	1	Select this level if misdecodes have occurred. It fixes most misdecodes.	2	Select this level if Level 1 should fail to eliminate misdecodes.	3	Select this level if Security Level 2 should fail to prevent misdecodes. However, as this level actually impairs the decoding ability of scan engine, it'd be better to improve the barcode's print quality if this level should be needed.	Level 2
Level	Description											
0	With this default, the scan engine is aggressive enough to decode most "in-spec" barcodes.											
1	Select this level if misdecodes have occurred. It fixes most misdecodes.											
2	Select this level if Level 1 should fail to eliminate misdecodes.											
3	Select this level if Security Level 2 should fail to prevent misdecodes. However, as this level actually impairs the decoding ability of scan engine, it'd be better to improve the barcode's print quality if this level should be needed.											

MISCELLANEOUS

Laser Engine	Description	Default
Miscellaneous Options		
Transmit AIM Code ID	Decide whether to include AIM Code ID in the data. Each AIM Code ID contains a three-character string "]cm ": <ul style="list-style-type: none"> ▶] = Flag Character (ASCII 93) ▶ c = Code Character (see below) ▶ m = Modifier Character (see below) 	Disable

AIM CODE ID – CODE CHARACTERS

Code Character	Code Type
A	Code 39, Code 39 Full ASCII, Code 32
C	Code 128, Coupon (Code 128 portion)
d	Data Matrix
E	UPC/EAN, Coupon (UPC portion)
e	GS1 DataBar (RSS)
F	Codabar
G	Code 93
H	Code 11
I	Interleaved 25
L	PDF417, Macro PDF417, Micro PDF417
M	MSI
Q	QR Code, MicroQR
S	Industrial 25 (Discrete 25), IATA 2 of 5
U	Maxicode
X	Code 39 Trioptic, Bookland EAN, Matrix 25, US Postnet, US Planet, UK Postal, Japan Postal, Australian Postal, Dutch Postal
z	Aztec

AIM CODE ID – MODIFIER CHARACTERS

Code Type	Option Value	Option
Code 39	0	No check character or Full ASCII processing.
	1	Check digit has been verified.
	3	Check digit has been verified and stripped.
	4	Full ASCII conversion has been performed.
	5	Result of option values 4 and 1.
	7	Result of option values 4 and 3.

Code 128	0	Standard data packet. No Function Code 1 "FNC1" in the first character position.
	1	Function Code 1 "FNC1" in the first character position.
	2	Function Code 1 "FNC1" in the second character position.
Interleaved 25	0	No check digit processing.
	1	Check digit has been verified.
	3	Check digit has been verified and stripped.
Codabar	0	No check digit processing.
Code 93	0	Always transmit 0.
MSI	0	Modulo 10 check digit verified and transmitted.
	1	Modulo 10 check digit verified but not transmitted.
Industrial 25 (Discrete 25)	0	Always transmit 0.
UPC/EAN	0	Standard data packet in full EAN country code format, which is 13 digits for UPC-A and UPC-E (not including addons).
	3	Standard data packet with two-digit or five-digit addons.
	4	EAN-8 data packet.
	A UPC-A with Addon 2 barcode, 012345678905-10, is transmitted to the host as a 18-character string, 1e3001234567890510.	
Bookland EAN	0	Always transmit 0.
Trioptic Code 39	0	Always transmit 0.
Code 11	0	Single check digit (has been verified.)
	1	Two check digits (has been verified.)
	3	Check digit has been verified but not transmitted.
GS1 DataBar (RSS)	0	Always transmit 0.
	RSS-14 and RSS Limited will be transmitted with an Application Identifier "01". For example, an RSS-14 barcode, 10012345678902, is transmitted as 1e00110012345678902.	

Note: In EAN-128 emulation mode, RSS is transmitted using Code 128 rules (= "]C1").

EAN.UCC Composites (RSS, EAN-128, 2D portion of UPC composite)	Native mode transmission	
	0	Standard data packet
	1	Data packet containing the data following an encoded symbol separator character.
	2	Data packet containing the data following an escape mechanism character. The data packet does not support the ECI protocol.
	3	Data packet containing the data following an escape mechanism character. The data packet supports the ECI protocol.
EAN-128 emulation		

	1	Data packet is a EAN-128 barcode (= data is preceded with "JJC1").
--	---	--

Note: UPC portion of composite is transmitted using UPC rules.

PDF417, Micro PDF417	0	Scan engine is set to conform to protocol defined in 1994 PDF417 symbology specifications. ▶ When this option is transmitted, the receiver cannot reliably determine whether ECIs have been invoked or whether data byte 92 _{DEC} has been doubled in transmission.
	1	Scan engine is set to follow the ECI protocol (Extended Channel Interpretation). All data characters 92 _{DEC} are doubled.
	2	Scan engine is set for Basic Channel operation (no escape character transmission protocol). Data characters 92 _{DEC} are not doubled. ▶ When decoders are set to this mode, unbuffered Macro symbols and symbols requiring the decoder to convey ECI escape sequences cannot be transmitted.
	3	The barcode contains a EAN-128 symbol, and the first codeword is 903-907, 912, 914, 915.
	4	The barcode contains a EAN-128 symbol, and the first codeword is in the range 908-909.
	5	The barcode contains a EAN-128 symbol, and the first codeword is in the range 910-911.
	A PDF417 barcode, ABCD, with no transmission protocol enabled, is transmitted as]L2ABCD.	
Data Matrix	0	ECC 000-140, not supported.
	1	ECC 200.
	2	ECC 200, FNC1 in first or fifth position.
	3	ECC 200, FNC1 in second or sixth position.
	4	ECC 200, ECI protocol implemented.
	5	ECC 200, FNC1 in first or fifth position, ECI protocol implemented.
	6	ECC 200, FNC1 in second or sixth position, ECI protocol implemented.
Maxicode	0	Mode 4 or 5
	1	Mode 2 or 3
	2	Mode 4 or 5, ECI protocol implemented.
	3	Mode 2 or 3, ECI protocol implemented in secondary message.
QR Code	0	Model 1
	1	Model 2 / MicroQR ECI protocol not implemented.
	2	Model 2, ECI protocol implemented.

	3	Model 2, ECI protocol not implemented, FNC1 implied in first position.
	4	Model 2, ECI protocol implemented, FNC1 implied in first position.
	5	Model 2, ECI protocol not implemented, FNC1 implied in second position.
	6	Model 2, ECI protocol implemented, FNC1 implied in second position
Aztec	0	Aztec symbol.
	C	Aztec Rune symbol.

Note: For JPEG files, these BPP settings are ignored for it always uses 8 bits per pixel!

EXTENDED RANGE LASER (SE1524)

The tables below list the symbology settings for the 1D extended range laser scan engine (SE1524).

SYMBOLGY SETTINGS

Symbology	Description	Default
CODABAR		
CodaBar		Enable
Codabar	Checkbox to enable Codabar decoding.	Enable
Length option	Sets the length of the Codabar symbols to decode. <ul style="list-style-type: none"> ▶ One Fixed length (Length 1) ▶ Two Fixed lengths (Length 1>Length 2) ▶ Max / Min Length (range: 0-55; Length 1<Length 2) ▶ Any Length 	Max / Min Length (4-55)
CLSI Editing	When applied, the CLSI editing strips the start/stop characters and inserts a space after the first, fifth, and tenth characters of a 14-character Codabar barcode. <ul style="list-style-type: none"> ▶ The 14-character barcode length does not include start/stop characters. 	Disable
NOTIS Editing	Sets whether to include start/stop characters in the transmitted data. <ul style="list-style-type: none"> ▶ NOTIS Editing is to strip the start/stop characters, i.e. to disable "Transmit Start/Stop Characters". 	Disable
CODE 39		
Code 39		Enable
Code 39	Checkbox to enable Code 39 decoding.	Enable
Trioptic Code 39	Selects whether to decode Trioptic Code 39. <ul style="list-style-type: none"> ▶ Trioptic Code 39 is a variant of Code 39 used in the marking of computer tape cartridges. It always contains six characters. 	Disable
Convert to Code 32	Selects whether to convert decoded data to Italian Pharmacode.	Disable
Code 32 Prefix	Prefix character "A" to Code 32 barcodes. <ul style="list-style-type: none"> ▶ "Convert to Code 32" must be enabled for this to function properly. 	Disable
Verify Check Digit	Selects whether to verify the Modulo 43 check digit. If the check digit is incorrect, the barcode will not be accepted.	Disable
Transmit Check Digit	Decide whether to include the check digit in the data to transmit. <ul style="list-style-type: none"> ▶ "Verify Check Digit" must be enabled. 	Disable

Support Full ASCII	Selects whether to enable Code 39 Full ASCII decoding. Characters are paired to encode the full ASCII character set.	Disable
Length option	Sets the length of the Code 39 symbols to decode. <ul style="list-style-type: none"> ▶ One Fixed length (Length 1) ▶ Two Fixed lengths (Length 1>Length 2) ▶ Max / Min Length (range: 0-55; Length 1<Length 2) ▶ Any Length 	Max / Min Length (4-55)
CODE 93		
Code 93		Enable
Code 93	Checkbox to enable Code 93 decoding.	Enable
Length option	Sets the length of the Code 93 symbols to decode. <ul style="list-style-type: none"> ▶ One Fixed length (Length 1) ▶ Two Fixed lengths (Length 1>Length 2) ▶ Max / Min Length (range: 0-55; Length 1<Length 2) ▶ Any Length 	Max / Min Length (4-55)
CODE 128		
Code 128		Enable
ISBT 128		Enable
GS1-128		Enable
CODE 2 OF 5		
Discrete 25		Enable
Discrete 25	Checkbox to enable Discrete 2 of 5 decoding.	Enable
Length option	Sets the length of the Discrete 2 of 5 symbols to decode. <ul style="list-style-type: none"> ▶ One Fixed length (Length 1) ▶ Two Fixed lengths (Length 1>Length 2) ▶ Max / Min Length (range: 0-55; Length 1<Length 2) ▶ Any Length 	Max / Min Length (4-55)
Interleaved 25		Enable
Interleaved 25	Checkbox to enable Interleaved 2 of 5 decoding.	Enable
Length option	Sets the length of the Interleaved 2 of 5 symbols to decode. <ul style="list-style-type: none"> ▶ One Fixed length (Length 1) ▶ Two Fixed lengths (Length 1>Length 2) ▶ Max / Min Length (range: 0-55; Length 1<Length 2) ▶ Any Length 	Max / Min Length (4-55)
Verify Check Digit	Decide whether to verify the check digit. If desired, select one of the algorithms below. If the check digit is incorrect, the barcode will not be accepted. <ul style="list-style-type: none"> ▶ Disable ▶ USS Check Digit ▶ OPCC Check Digit 	Disable
Transmit Check Digit	Decide whether to include the check digit in the data being transmitted.	Disable

Convert To EAN-13	Convert a 14-character Interleaved 25 barcode into EAN-13 if the following requirements are met: The barcode must have a leading 0 and a valid EAN-13 check digit.	Disable
GS1 DATABAR		
GS1 DataBar-14		Enable
GS1 DataBar Limited		Enable
GS1 DataBar Expanded		Enable
GS1 DataBar Convert to UPC/EAN		Disable
MSI		
MSI		Enable
MSI	Checkbox to enable MSI decoding.	Enable
Length option	Sets the length of the MSI symbols to decode. <ul style="list-style-type: none"> ▶ One Fixed length (Length 1) ▶ Two Fixed lengths (Length 1>Length 2) ▶ Max / Min Length (range: 0-55; Length 1<Length 2) ▶ Any Length 	Max / Min Length (4-55)
Check Digit Option	One check digit is mandatory for decoding MSI barcodes. Select whether a second check digit should be verified. If the check digits are incorrect, the barcode will not be accepted. <ul style="list-style-type: none"> ▶ One Check Digit ▶ Two Check Digits 	One Check Digit
Transmit Check Digit	Decide whether to include the check digit in the data being transmitted.	Disable
Algorithm	When two check digits are set for verification, two choices are available for the pair of check digits. <ul style="list-style-type: none"> ▶ Modulo10 / Modulo11 ▶ Double Modulo 10 	Double Modulo 10
UPC/EAN		
EAN-8		Enable
EAN-8	Checkbox to enable EAN-8 decoding.	Enable
EAN-8 Extend	Checkbox to enable converting EAN-8 to EAN-13 format.	Disable
EAN-13		Enable
EAN-13	Checkbox to enable EAN-13 decoding.	Enable
Bookland EAN	Checkbox to enable ISBN decoding. If enabled, select Bookland ISBN Format in the drop-down box below.	Enable
Bookland ISBN Format	Select to decode Bookland data starting with 978 as 10-digit format along with the Bookland check digit, or decode Bookland data starting with 978/979 as EAN-13 format.	Bookland ISBN-10
Transmit Check Digit	Decide whether to include the EAN-13 check digit (the last character in the barcode) in the data being transmitted.	Enable
UPC-A		Enable
UPC-A	Checkbox to enable UPC-A decoding.	Enable

Preamble	Decide whether to include the UPC-A/UPC-E/UPC-E1 preamble System Character (and Country Code) in the data being transmitted. <ul style="list-style-type: none"> ▶ No transmit: transmits none of the above ▶ Transmit System Character: transmits system number only ▶ Transmit Sys. Character and Country Code: transmits system number and country code 	Transmit System Character
Transmit Check Digit	Decide whether to include the UPC-A check digit (the last character in the barcode) in the data being transmitted.	Enable
UPC-E		Enable
UPC-E	Checkbox to enable UPC-E decoding.	Enable
Preamble	Decide whether to include the UPC-A/UPC-E/UPC-E1 preamble System Character (and Country Code) in the data being transmitted. <ul style="list-style-type: none"> ▶ No transmit: transmits none of the above ▶ Transmit System Character: transmits system number only ▶ Transmit Sys. Character and Country Code: transmits system number and country code 	Transmit System Character
Convert to UPC-A	The UPC-E barcode will be expanded into UPC-A format, and the next process will follow the settings configured for UPC-A.	Disable
Transmit Check Digit	Decide whether to include the UPC-E1 check digit (the last character in the barcode) in the data being transmitted.	Enable
UPC-E1		Disable
UPC-E1	Checkbox to enable UPC-E1 decoding.	Disable
Preamble	Decide whether to include the UPC-A/UPC-E/UPC-E1 preamble System Character (and Country Code) in the data being transmitted. <ul style="list-style-type: none"> ▶ No transmit: transmits none of the above ▶ Transmit System Character: transmits system number only ▶ Transmit Sys. Character and Country Code: transmits system number and country code 	Transmit System Character
Convert to UPC-A	The UPC-E1 barcode will be expanded into UPC-A format, and the next process will follow the settings configured for UPC-A.	Disable
Transmit Check Digit	Decide whether to include the UPC-E1 check digit (the last character in the barcode) in the data being transmitted.	Enable
UPC/EAN General Preference		
Support Coupon Code	Reads UPC-A barcodes starting with "5", EAN-13 barcodes starting with "99", and UPC-A/EAN-128 Coupon Codes. <ul style="list-style-type: none"> ▶ UPC-A, EAN-13, and GS1-128 must be enabled first! ▶ Use "Addon Redundancy" to control auto-discrimination of the GS1-128 (right half) of a coupon code. 	Disable

UPC/EAN Addon Option	Decide whether to decode EAN-8, EAN-13 with addons (including Addon 2 and 5). <ul style="list-style-type: none"> ▶ Ignore Addon ▶ Decode only with addons ▶ Auto-discriminate 	Ignore Addon										
UPC/EAN Addon Redundancy	When "Auto-discriminate" is applied, decide the number of times of supplementary decoding the same barcode to count as a valid read. Configurable between 2 and 30.	10										
UPC/EAN Security Level	Sets the security level to ensure decoding accuracy considering the printed quality of the barcodes such as Code 128, Code 93, and UPC/EAN. The higher the level is, the more security is ensured. Options are: <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: left;">Level</th> <th style="text-align: left;">Description</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>With this default, the scan engine is aggressive enough to decode most "in-spec" barcodes.</td> </tr> <tr> <td>1</td> <td>Select this level if misdecodes have occurred. It fixes most misdecodes.</td> </tr> <tr> <td>2</td> <td>Select this level if Level 1 should fail to eliminate misdecodes.</td> </tr> <tr> <td>3</td> <td>Select this level if Security Level 2 should fail to prevent misdecodes. However, as this level actually impairs the decoding ability of scan engine, it'd be better to improve the barcode's print quality if this level should be needed.</td> </tr> </tbody> </table>	Level	Description	0	With this default, the scan engine is aggressive enough to decode most "in-spec" barcodes.	1	Select this level if misdecodes have occurred. It fixes most misdecodes.	2	Select this level if Level 1 should fail to eliminate misdecodes.	3	Select this level if Security Level 2 should fail to prevent misdecodes. However, as this level actually impairs the decoding ability of scan engine, it'd be better to improve the barcode's print quality if this level should be needed.	Level 2
Level	Description											
0	With this default, the scan engine is aggressive enough to decode most "in-spec" barcodes.											
1	Select this level if misdecodes have occurred. It fixes most misdecodes.											
2	Select this level if Level 1 should fail to eliminate misdecodes.											
3	Select this level if Security Level 2 should fail to prevent misdecodes. However, as this level actually impairs the decoding ability of scan engine, it'd be better to improve the barcode's print quality if this level should be needed.											

MISCELLANEOUS

Laser Engine	Description	Default
Miscellaneous Options		
Transmit AIM Code ID	Decide whether to include AIM Code ID in the data. Each AIM Code ID contains a three-character string "]cm ": <ul style="list-style-type: none"> ▶] = Flag Character (ASCII 93) ▶ c = Code Character (see below) ▶ m = Modifier Character (see below) 	Disable

2D IMAGER (SE4500 / 4750SR)

The tables below list the symbology settings for the 2D imager (SE4500 / 4750SR).

SYMBOLGY SETTINGS

1D SYMBOLOGIES

Symbology	Description	Default
CODABAR		
CodaBar		Enable
Codabar	Checkbox to enable Codabar decoding.	Enable
Length option	Sets the length of the Codabar symbols to decode. <ul style="list-style-type: none"> ▶ One Fixed length (Length 1) ▶ Two Fixed lengths (Length 1>Length 2) ▶ Max / Min Length (range: 0-55; Length 1<Length 2) ▶ Any Length 	Max / Min Length (4-55)
CLSI Editing	When applied, the CLSI editing strips the start/stop characters and inserts a space after the first, fifth, and tenth characters of a 14-character Codabar barcode. <ul style="list-style-type: none"> ▶ The 14-character barcode length does not include start/stop characters. 	Disable
NOTIS Editing	Sets whether to include start/stop characters in the transmitted data. <ul style="list-style-type: none"> ▶ NOTIS Editing is to strip the start/stop characters, i.e. to disable "Transmit Start/Stop Characters". 	Disable
CODE 11		
Code 11		Enable
Code 11	Checkbox to enable Code 11 decoding.	Enable
Check Digit Option	Sets whether to verify check digits according to the selected option. If the check digits are incorrect, the barcode will not be accepted. <ul style="list-style-type: none"> ▶ Disable ▶ One Check Digit ▶ Two Check Digits 	Disable
Transmit Check Digit	Selects whether to include check digits in the transmitted data. <ul style="list-style-type: none"> ▶ Check Digit Option" must be enabled. 	Disable
Length option	Sets the length of the Code 11 symbols to decode. <ul style="list-style-type: none"> ▶ One Fixed length (Length 1) ▶ Two Fixed lengths (Length 1>Length 2) ▶ Max / Min Length (range: 0-55; Length 1<Length 2) ▶ Any Length 	Max / Min Length (4-55)

CODE 39		
Code 39		Enable
Code 39	Checkbox to enable Code 39 decoding.	Enable
Trioptic Code 39	Selects whether to decode Trioptic Code 39. ▶ Trioptic Code 39 is a variant of Code 39 used in the marking of computer tape cartridges. It always contains six characters.	Disable
Convert to Code 32	Selects whether to convert decoded data to Italian Pharmacode.	Disable
Code 32 Prefix	Prefix character "A" to Code 32 barcodes. ▶ "Convert to Code 32" must be enabled for this to function properly.	Disable
Verify Check Digit	Selects whether to verify the Modulo 43 check digit. If the check digit is incorrect, the barcode will not be accepted.	Disable
Transmit Check Digit	Decide whether to include the check digit in the data to transmit. ▶ "Verify Check Digit" must be enabled.	Disable
Support Full ASCII	Selects whether to enable Code 39 Full ASCII decoding. Characters are paired to encode the full ASCII character set.	Disable
Length option	Sets the length of the Code 39 symbols to decode. ▶ One Fixed length (Length 1) ▶ Two Fixed lengths (Length 1>Length 2) ▶ Max / Min Length (range: 0-55; Length 1<Length 2) ▶ Any Length	Max / Min Length (4-55)
CODE 93		
Code 93		Enable
Code 93	Checkbox to enable Code 93 decoding.	Enable
Length option	Sets the length of the Code 93 symbols to decode. ▶ One Fixed length (Length 1) ▶ Two Fixed lengths (Length 1>Length 2) ▶ Max / Min Length (range: 0-55; Length 1<Length 2) ▶ Any Length	Max / Min Length (4-55)
CODE 128		
Code 128		Enable
GS1-128		Enable
ISBT-128		Enable
ISBT 128	Checkbox to enable ISBT 128 decoding.	Enable

Concatenation	Sets whether to enable decoding ISBT-128 by performing concatenation of ISBT data <ul style="list-style-type: none"> ▶ Disable: Does not perform concatenation ▶ Enable: Performs concatenation on all ISBT-128 barcodes. ▶ Auto-discriminate: Auto-discriminates between the ISBT-128 barcodes which require concatenation and those which do not need concatenation. 	Disable
Concatenation Redundancy	When "Auto-discriminate" is applied, decide the number of times of supplementary decoding the same barcode to count as a valid read. Configurable between 2 and 20	10
CODE 2 OF 5		
Chinese 25		Enable
Discrete 25		Enable
Discrete 25	Checkbox to enable Discrete 2 of 5 decoding.	Enable
Length option	Sets the length of the Discrete 2 of 5 symbols to decode. <ul style="list-style-type: none"> ▶ One Fixed length (Length 1) ▶ Two Fixed lengths (Length 1>Length 2) ▶ Max / Min Length (range: 0-55; Length 1<Length 2) ▶ Any Length 	Max / Min Length (4-55)
Interleaved 25		Enable
Interleaved 25	Checkbox to enable Interleaved 2 of 5 decoding.	Enable
Length option	Sets the length of the Interleaved 2 of 5 symbols to decode. <ul style="list-style-type: none"> ▶ One Fixed length (Length 1) ▶ Two Fixed lengths (Length 1>Length 2) ▶ Max / Min Length (range: 0-55; Length 1<Length 2) ▶ Any Length 	Max / Min Length (4-55)
Verify Check Digit	Decide whether to verify the check digit. If desired, select one of the algorithms below. If the check digit is incorrect, the barcode will not be accepted. <ul style="list-style-type: none"> ▶ Disable ▶ USS Check Digit ▶ OPCC Check Digit 	Disable
Transmit Check Digit	Decide whether to include the check digit in the data being transmitted.	Disable
Convert To EAN-13	Convert a 14-character Interleaved 25 barcode into EAN-13 if the following requirements are met: <ul style="list-style-type: none"> ▶ The barcode must have a leading 0 and a valid EAN-13 check digit. 	Disable
Matrix 25		Enable
Matrix 25	Checkbox to enable Matrix 2 of 5 decoding.	Enable
Length option	Sets the length of the Matrix 2 of 5 symbols to decode. <ul style="list-style-type: none"> ▶ One Fixed length (Length 1) ▶ Two Fixed lengths (Length 1>Length 2) ▶ Max / Min Length (range: 0-55; Length 1<Length 2) ▶ Any Length 	Max / Min Length (4-55)
Redundancy	Sets read redundancy	Disable

Verify Check Digit	Select whether to verify the check digit, which is the last character of the barcode. If the check digit is incorrect, the barcode will not be accepted.	Disable
Transmit Check Digit	Decide whether to include the check digit in the data being transmitted.	Disable
COMPOSITE		
Composite CC-A/B		Disable
Composite CC-C		Enable
Composite TLC 39		Disable
Composite General Preference		Enable
UPC Composite Mode	<p>UPC barcodes can be "linked" with a 2D barcode during transmission as if they were one barcode.</p> <p>UPC Never Linked</p> <p>Transmit UPC barcodes regardless of whether a 2D barcode is detected.</p> <p>UPC Always Linked</p> <p>Transmit UPC barcodes and the 2D portion. If the 2D portion is not detected, the UPC barcode will not be transmitted.</p> <p>▶ CC-A/B or CC-C must be enabled.</p> <p>Auto-discriminate</p> <p>Transmit UPC barcodes as well as the 2D portion if present.</p>	UPC always Linked
GS1-128 Emulation Mode	Sets GS1-128 emulation mode for UCC/EAN Composite Codes.	Disable
GS1 DATABAR		
GS1 DataBar-14		Enable
GS1 DataBar Limited		Enable
GS1 DataBar Expanded		Enable
GS1 DataBar Convert to UPC/EAN		Disable
KOREAN 3 OF 5		
Korean 3 of 5		Disable
INVERSE		
Inverse		Disable
MSI		
MSI		Enable
MSI	Checkbox to enable MSI decoding.	Enable

Length option	Sets the length of the MSI symbols to decode. <ul style="list-style-type: none"> ▶ One Fixed length (Length 1) ▶ Two Fixed lengths (Length 1>Length 2) ▶ Max / Min Length (range: 0-55; Length 1<Length 2) ▶ Any Length 	Max / Min Length (4-55)
Check Digit Option	One check digit is mandatory for decoding MSI barcodes. Select whether a second check digit should be verified. If the check digits are incorrect, the barcode will not be accepted. <ul style="list-style-type: none"> ▶ One Check Digit ▶ Two Check Digits 	One Check Digit
Transmit Check Digit	Decide whether to include the check digit in the data being transmitted.	Disable
Algorithm	When two check digits are set for verification, two choices are available for the pair of check digits. <ul style="list-style-type: none"> ▶ Modulo10 / Modulo11 ▶ Double Modulo 10 	Double Modulo 10
POSTAL CODE		
Australian Postal		Enable
Japan Postal		Enable
Netherlands KIX Code		Enable
US Postnet		Enable
US Planet		Enable
UK Postal		Enable
Postal General Preference		Enable
US Postal Check Digit	Decide whether to transmit check digit for US Postnet or US Planet.	Enable
UK Postal Check Digit	Decide whether to transmit check digit for UK Postal.	Enable
UPC/EAN		
EAN-8		Enable
EAN-8	Checkbox to enable EAN-8 decoding.	Enable
EAN-8 Extend	Checkbox to enable converting EAN-8 to EAN-13 format.	Disable
EAN-13		Enable
EAN-13	Checkbox to enable EAN-13 decoding.	Enable
Bookland EAN	Checkbox to enable ISBN decoding. If enabled, select Bookland ISBN Format in the drop-down box below.	Enable
Bookland ISBN Format	Decodes Bookland data starting with 978 in 10-digit format along with the Bookland check digit, or Bookland data starting with 978/979 as EAN-13 format.	Bookland ISBN-10
Transmit Check Digit	Decide whether to include the EAN-13 check digit (the last character in the barcode) in the data being transmitted.	Enable
ISSN EAN	Checkbox to enable ISSN EAN decoding.	Disable
UPC-A		Enable

UPC-A	Checkbox to enable UPC-A decoding.	Enable
Preamble	Decide whether to include the UPC-A/UPC-E/UPC-E1 preamble System Character (and Country Code) in the data being transmitted. <ul style="list-style-type: none"> ▶ No transmit: transmits none of the above ▶ Transmit System Character: transmits system number only ▶ Transmit Sys. Character and Country Code: transmits system number and country code 	Transmit System Character
Transmit Check Digit	Decide whether to include the UPC-A check digit (the last character in the barcode) in the data being transmitted.	Enable
UPC-E		Enable
UPC-E	Checkbox to enable UPC-E decoding.	Enable
Preamble	Decide whether to include the UPC-A/UPC-E/UPC-E1 preamble System Character (and Country Code) in the data being transmitted. <ul style="list-style-type: none"> ▶ No transmit: transmits none of the above ▶ Transmit System Character: transmits system number only ▶ Transmit Sys. Character and Country Code: transmits system number and country code 	Transmit System Character
Convert to UPC-A	The UPC-E barcode will be expanded into UPC-A format, and the next process will follow the settings configured for UPC-A.	Disable
Transmit Check Digit	Decide whether to include the UPC-E1 check digit (the last character in the barcode) in the data being transmitted.	Enable
UPC-E1		Disable
UPC-E1	Checkbox to enable UPC-E1 decoding.	Disable
Preamble	Decide whether to include the UPC-A/UPC-E/UPC-E1 preamble System Character (and Country Code) in the data being transmitted. <ul style="list-style-type: none"> ▶ No transmit: transmits none of the above ▶ Transmit System Character: transmits system number only ▶ Transmit Sys. Character and Country Code: transmits system number and country code 	Transmit System Character
Convert to UPC-A	The UPC-E1 barcode will be expanded into UPC-A format, and the next process will follow the settings configured for UPC-A.	Disable
Transmit Check Digit	Decide whether to include the UPC-E1 check digit (the last character in the barcode) in the data being transmitted.	Enable
UPC/EAN General Preference		
Support Coupon Code	Reads UPC-A barcodes starting with "5", EAN-13 barcodes starting with "99", and UPC-A/EAN-128 Coupon Codes. <ul style="list-style-type: none"> ▶ UPC-A, EAN-13, and GS1-128 must be enabled first! ▶ Use "Addon Redundancy" to control auto-discrimination of the GS1-128 (right half) of a coupon code. 	Disable

UPC/EAN Addon Option	Decide whether to decode EAN-8, EAN-13 with addons (including Addon 2 and 5). <ul style="list-style-type: none"> ▶ Ignore Addon ▶ Decode only with addons ▶ Auto-discriminate 	Ignore Addon
UPC/EAN Addon Redundancy	When "Auto-discriminate" is applied, decide the number of times of supplementary decoding the same barcode to count as a valid read. Configurable between 2 and 30.	10
Separator Character (FNC1)		
Enable separator char	Enable the function code character separator, which is used to separate data fields of variable length and application identifiers of subsequent data fields in concatenated data strings. <ul style="list-style-type: none"> ▶ Applicable for EAN-128/GS1-128, Coupon code, GS1 DataBar, Composite Component barcodes 	Disable
Separator char replace by	Tap the keyboard icon to open a mapping table for selecting a separator character to replace with. <ul style="list-style-type: none"> ▶ Enable separator char must be selected 	None

2D SYMBOLOGIES

Symbology	Description	Default						
Aztec		Enable						
Aztec	Selects whether to enable Aztec decoding.	Enable						
Aztec Inverse	Decide whether to decode Aztec Inverse. <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="padding: 2px;">Regular only</td> </tr> <tr> <td style="padding: 2px;">Decode regular Aztec barcodes only.</td> </tr> <tr> <td style="padding: 2px;">Inverse only</td> </tr> <tr> <td style="padding: 2px;">Decode inverse Aztec barcodes only.</td> </tr> <tr> <td style="padding: 2px;">Inverse Auto-detect</td> </tr> <tr> <td style="padding: 2px;">Decode both regular and inverse Aztec barcodes.</td> </tr> </table>	Regular only	Decode regular Aztec barcodes only.	Inverse only	Decode inverse Aztec barcodes only.	Inverse Auto-detect	Decode both regular and inverse Aztec barcodes.	Regular only
Regular only								
Decode regular Aztec barcodes only.								
Inverse only								
Decode inverse Aztec barcodes only.								
Inverse Auto-detect								
Decode both regular and inverse Aztec barcodes.								
Data Matrix		Enable						
Data Matrix	Selects whether to enable Data Matrix decoding.	Enable						

Data Matrix Inverse	Decide whether to decode Data Matrix Inverse. Regular Only Decode regular Data Matrix barcodes only. Inverse Only Decode inverse Data Matrix barcodes only. Auto Detect Decode both regular and inverse Data Matrix barcodes.	Regular Only
Decode Mirror Image	Selects whether to enable decode mirror images. Never Does not decode Data Matrix barcodes that are mirror images. Always Decodes Data Matrix barcodes that are mirror images. Auto Decodes both mirrored and unmirrored Data Matrix barcodes.	Never
Maxicode		Enable
MicroPDF417		Disable
MicroPDF417	Selects whether to enable MicroPDF417 decoding.	Disable
Code 128 Emulation	Transmit data from certain Micro PDF 417 barcodes as if it was encoded in Code 128 barcodes. ▶ Transmit AIM code ID character in Miscellaneous options must be enabled first. When applied, the MicroPDF417 barcodes are transmitted with one of these prefixes: The first codeword of MicroPDF417 is 903-905: The original Code ID "]L3" will be changed to "]C1". The first codeword of MicroPDF417 is 908 or 909: The original Code ID "]L4" will be changed to "]C2". The first codeword of MicroPDF417 is 910 or 911: The original Code ID "]L5" will be changed to "]C0".	Disable
MicroQR		Enable
PDF417		Enable
QR Code		Enable
QR Code	Selects whether to enable QR Code decoding.	Enable

QR Code Inverse	<p>Decide whether to decode QR Code Inverse.</p> <hr/> <p>Regular Only</p> <hr/> <p>Decodes regular QR Code only.</p> <hr/> <p>Inverse Only</p> <hr/> <p>Decodes inverse QR Code only.</p> <hr/> <p>Inverse Auto-detect</p> <hr/> <p>Decodes both regular and inverse QR Codes.</p>	Regular Only
-----------------	--	--------------

MISCELLANEOUS

2D Engine	Description	Default
Miscellaneous Options		
Transmit AIM Code ID	<p>Decide whether to include AIM Code ID in the data. Each AIM Code ID contains a three-character string "]cm":</p> <ul style="list-style-type: none"> ▶] = Flag Character (ASCII 93) ▶ c = Code Character ▶ m = Modifier Character ▶ Refer to AIM Code ID – Code Characters. 	Disable

NEAR/FAR 2D IMAGER (EX25)

The tables below list the symbology settings for the near/far 2D imager (EX25).

SYMBOLGY SETTINGS

1D SYMBOLOGIES

Symbology	Description	Default
CODABAR		
CodaBar		Disable
Codabar	Checkbox to enable Codabar decoding.	Disable
Length option	Sets the length of the Codabar symbols to decode. <ul style="list-style-type: none"> ▶ One Fixed length (Length 1) ▶ Two Fixed lengths (Length 1>Length 2) ▶ Max / Min Length (range: 0-55; Length 1<Length 2) ▶ Any Length 	Two Fixed Length (6-0)
CLSI Editing	When applied, the CLSI editing strips the start/stop characters and inserts a space after the first, fifth, and tenth characters of a 14-character Codabar barcode. <ul style="list-style-type: none"> ▶ The 14-character barcode length does not include start/stop characters. 	Disable
NOTIS Editing	Sets whether to include start/stop characters in the transmitted data. <ul style="list-style-type: none"> ▶ NOTIS Editing is to strip the start/stop characters, i.e. to disable "Transmit Start/Stop Characters". 	Not transmitted
CODE 11		
Code 11		Disable
Code 11	Checkbox to enable Code 11 decoding.	Disable
Check Digit Option	Sets whether to verify check digits according to the selected option. If the check digits are incorrect, the barcode will not be accepted. <ul style="list-style-type: none"> ▶ Disable ▶ One Check Digit ▶ Two Check Digits 	Disable
Transmit Check Digit	Selects whether to include check digits in the transmitted data. <ul style="list-style-type: none"> ▶ Check Digit Option" must be enabled. 	Disable

Length option	<p>Sets the length of the Code 11 symbols to decode.</p> <ul style="list-style-type: none"> ▶ One Fixed length (Length 1) ▶ Two Fixed lengths (Length 1>Length 2) ▶ Max / Min Length (range: 0-55; Length 1<Length 2) ▶ Any Length <p>When setting data length for Code 11, you must include both check digits in the specified string length for the reader to decode successfully.</p>	Any Length (0-0)
CODE 39		
Code 39		Enable
Code 39	Checkbox to enable Code 39 decoding.	Enable
Trioptic Code 39	<p>Selects whether to decode Trioptic Code 39.</p> <ul style="list-style-type: none"> ▶ Trioptic Code 39 is a variant of Code 39 used in the marking of computer tape cartridges. It always contains six characters. ▶ When a Trioptic Code 39 barcode is decoded, the code type will be displayed as Code 39. 	Disable
Convert to Code 32	(Reserved)	--
Code 32 Prefix	(Reserved)	--
Verify Check Digit	Selects whether to verify the Modulo 43 check digit. If the check digit is incorrect, the barcode will not be accepted.	Disable
Transmit Check Digit	<p>Decide whether to include the check digit in the data to transmit.</p> <ul style="list-style-type: none"> ▶ "Verify Check Digit" must be enabled. 	Disable
Support Full ASCII	<p>Selects whether to enable Code 39 Full ASCII decoding. Characters are paired to encode the full ASCII character set.</p> <ul style="list-style-type: none"> ▶ When a Code 39 full ASCII barcode is decoded, the code type will be displayed as Code 39. 	Disable
Length option	<p>Sets the length of the Code 39 symbols to decode.</p> <ul style="list-style-type: none"> ▶ One Fixed length (Length 1) ▶ Two Fixed lengths (Length 1>Length 2) ▶ Max / Min Length (range: 0-55; Length 1<Length 2) ▶ Any Length 	Any Length (0-0)
CODE 93		
Code 93		Disable
Code 93	Checkbox to enable Code 93 decoding.	Disable
Length option	<p>Sets the length of the Code 93 symbols to decode.</p> <ul style="list-style-type: none"> ▶ One Fixed length (Length 1) ▶ Two Fixed lengths (Length 1>Length 2) ▶ Max / Min Length (range: 0-55; Length 1<Length 2) ▶ Any Length 	Any Length (0-0)
CODE 128		
Code 128		Enable
GS1-128		Enable
ISBT 128		Disable

ISBT 128	Checkbox to enable ISBT 128 decoding. ▶ When enabled, the reading range of Code 128 barcodes will decrease from 10m to 6-7m.	Disable
Concatenation	Sets whether to enable decoding ISBT-128 by performing concatenation of ISBT data ▶ Disable: Does not perform concatenation ▶ Enable: Performs concatenation on all ISBT-128 barcodes. ▶ Auto-discriminate: Auto-discriminates between the ISBT-128 barcodes which require concatenation and those which do not need concatenation.	Disable
Concatenation Redundancy	(Reserved)	--
CODE 2 OF 5		
Discrete 25		Disable
Discrete 25	Checkbox to enable Discrete 25 decoding.	Disable
Length option	Sets the length of the Discrete 25 symbols to decode. ▶ One Fixed length (Length 1) ▶ Two Fixed lengths (Length 1>Length 2) ▶ Max / Min Length (range: 0-55; Length 1<Length 2) ▶ Any Length	Two Fixed Length (6-0)
Interleaved 25		Disable
Interleaved 25	Checkbox to enable Interleaved 2 of 5 decoding.	Disable
Length option	Sets the length of the Interleaved 25 symbols to decode. ▶ One Fixed length (Length 1) ▶ Two Fixed lengths (Length 1>Length 2) ▶ Max / Min Length (range: 0-55; Length 1<Length 2) ▶ Any Length	Two Fixed Length (6-0)
Verify Check Digit	Decide whether to verify the check digit. If desired, select one of the algorithms below. If the check digit is incorrect, the barcode will not be accepted. ▶ Disable ▶ USS Check Digit ▶ OPCC Check Digit	Disable
Transmit Check Digit	Decide whether to include the check digit in the data being transmitted.	Disable
Convert to EAN-13	(Reserved)	--
Matrix 25		Disable
Matrix 25	Checkbox to enable Matrix 2 of 5 decoding.	Disable
Length option	Sets the length of the Matrix 25 symbols to decode. ▶ One Fixed length (Length 1) ▶ Two Fixed lengths (Length 1>Length 2) ▶ Max / Min Length (range: 0-55; Length 1<Length 2) ▶ Any Length	Two Fixed Length (6-0)
Redundancy	(Reserved)	--
Verify Check Digit	(Reserved)	--

Transmit Check Digit	(Reserved)	--
COMPOSITE		
Composite CC-A/B		Disable
Composite CC-C		Disable
GS1 DATABAR		
GS1 DataBar-14		Disable
GS1 DataBar Limited		Disable
GS1 DataBar Expanded		Disable
MSI		
MSI		Disable
MSI	Checkbox to enable MSI decoding.	Disable
Length option	Sets the length of the MSI symbols to decode. <ul style="list-style-type: none"> ▶ One Fixed length (Length 1) ▶ Two Fixed lengths (Length 1>Length 2) ▶ Max / Min Length (range: 0-55; Length 1<Length 2) ▶ Any Length 	Two Fixed Length (6-0)
Check Digit Option	One check digit is mandatory for decoding MSI barcodes. Select whether a second check digit should be verified. If the check digits are incorrect, the barcode will not be accepted. <ul style="list-style-type: none"> ▶ One Check Digit ▶ Two Check Digits 	One Check Digit
Transmit Check Digit	Decide whether to include the check digit in the data being transmitted.	Enable
Algorithm	(Reserved)	--
POSTAL CODE		
Australian Postal		Disable
Japan Postal		Disable
Netherlands KIX Code		Disable
US Postnet		Disable
US Planet		Disable
Postal General Reference		
US Postal Check Digit	Decide whether to transmit check digit for US Postnet or US Planet.	Enable
UK Postal Check Digit	(Reserved)	--
UPC/EAN		
EAN-8		Enable
EAN-13		Enable
EAN-13	Checkbox to enable EAN-13 decoding.	Enable
Bookland EAN	Checkbox to enable ISBN decoding. If enabled, select Bookland ISBN Format in the drop-down box below.	Disable
Bookland ISBN Format	(Reserved)	--

Transmit Check Digit	(Reserved)	--
ISSN EAN	Checkbox to enable ISSN EAN decoding.	Disable
UPC-A		Enable
UPC-A	Checkbox to enable UPC-A decoding.	Enable
Preamble	Decide whether to include the UPC-A preamble System Character (and Country Code) in the data being transmitted. <ul style="list-style-type: none"> ▶ Enable ▶ Disable 	Enable
Transmit Check Digit	Decide whether to include the UPC-A check digit (the last character in the barcode) in the data being transmitted.	Enable
UPC-E		Enable
UPC-E	Checkbox to enable UPC-E/UPC-E1 decoding.	Enable
Preamble	Decide whether to include the UPC-E/UPC-E1 preamble System Character (and Country Code) in the data being transmitted. <ul style="list-style-type: none"> ▶ Enable ▶ Disable 	Enable
Convert to UPC-A	The UPC-E/UPC-E1 barcode will be expanded into UPC-A format, and the next process will follow the settings configured for UPC-A.	Disable
Transmit Check Digit	Decide whether to include the UPC-E/UPC-E1 check digit (the last character in the barcode) in the data being transmitted.	Enable
Separator Character (FNC1)		Enable
Enable separator char	Enable the function code character separator, which is used to identify and separate fields for variable length application identifiers. <ul style="list-style-type: none"> ▶ Applicable for EAN-128/GS1-128, Coupon code, GS1 DataBar, Composite Component barcodes. 	Disable
Separator char replace by	Tap the keyboard icon to open a mapping table for selecting a separator character. <ul style="list-style-type: none"> ▶ Enable separator char must be selected 	None

2D SYMBOLOGIES

Symbology	Description	Default						
Aztec		Disable						
	<ul style="list-style-type: none"> Detection of inverse Aztec barcodes is enabled automatically when <i>enableAztec</i> is enabled. 							
Data Matrix		Enable						
	<ul style="list-style-type: none"> Detection of inverse DataMatrix barcodes is enabled automatically when <i>enableDataMatrix</i> is enabled. 							
Maxicode		Disable						
MicroPDF417		Disable						
MicroPDF417	Selects whether to enable MicroPDF417 decoding.	Disable						
Code 128 Emulation	<p>Transmit data from certain Micro PDF 417 barcodes as if it was encoded in Code 128 barcodes.</p> <ul style="list-style-type: none"> Transmit AIM code ID character in Miscellaneous options must be enabled first. <p>When applied, the MicroPDF417 barcodes are transmitted with one of these prefixes:</p> <table border="1" data-bbox="491 965 1198 1317"> <tbody> <tr> <td>The first codeword of MicroPDF417 is 903-905:</td> </tr> <tr> <td>The original Code ID "]L3" will be changed to "]C1".</td> </tr> <tr> <td>The first codeword of MicroPDF417 is 908 or 909:</td> </tr> <tr> <td>The original Code ID "]L4" will be changed to "]C2".</td> </tr> <tr> <td>The first codeword of MicroPDF417 is 910 or 911:</td> </tr> <tr> <td>The original Code ID "]L5" will be changed to "]C0".</td> </tr> </tbody> </table>	The first codeword of MicroPDF417 is 903-905:	The original Code ID "]L3" will be changed to "]C1".	The first codeword of MicroPDF417 is 908 or 909:	The original Code ID "]L4" will be changed to "]C2".	The first codeword of MicroPDF417 is 910 or 911:	The original Code ID "]L5" will be changed to "]C0".	Disable
The first codeword of MicroPDF417 is 903-905:								
The original Code ID "]L3" will be changed to "]C1".								
The first codeword of MicroPDF417 is 908 or 909:								
The original Code ID "]L4" will be changed to "]C2".								
The first codeword of MicroPDF417 is 910 or 911:								
The original Code ID "]L5" will be changed to "]C0".								
PDF417		Enable						
QR Code		Disable						

MISCELLANEOUS

2D Engine	Description	Default
Miscellaneous Options		
Transmit AIM Code ID	<p>Decide whether to include AIM Code ID in the data. Each AIM Code ID contains a three-character string "]cm":</p> <ul style="list-style-type: none">] = Flag Character (ASCII 93) c = Code Character m = Modifier Character Refer to AIM Code ID – Code Characters. 	Disable

PHYSICAL KEYPAD REFERENCE TABLE

NUMERIC KEYPAD (30 KEYS)

Numeric keypad layout:



USING ALPHA, SHIFT & FN KEYS

Key	Normal Mode	[α] Mode				[α] + ⬆ Mode				[Fn] Mode
		1 st press	2 nd press	3 rd press	4 th press	1 st press	2 nd press	3 rd press	4 th press	
1	1	@	;	:		@	;	:		F9
2	2	a	b	c		A	B	C		F10
3	3	d	e	f		D	E	F		F11
4	4	g	h	i		G	H	I		F12
5	5	j	k	l		J	K	L		Backlight Increase
6	6	m	n	o		M	N	O		Volume Up
7	7	p	q	r	s	P	Q	R	S	-
8	8	t	u	v		T	U	V		Backlight Decrease
9	9	w	x	y	z	W	X	Y	Z	Volume Down
0	0	,	\	/		,	\	/		0
Up	Up	Up				Highlight Up				Page Up
Down	Down	Down				Highlight Down				Page Down
Left	Left	Left				Highlight Left				Home

Right	Right	Right	Highlight Right	End
Enter	Enter	Enter	Enter	Enter
Backspace	Backspace	Backspace	Backspace	Keypad Lock
Esc	Esc	Esc	Esc	Esc
.	.	Shift	Shift	.
Space	Space	Space	Space	Windows
Ctrl	Ctrl	Ctrl	Ctrl	Alt
Green	F14	F14	F14	F14
Red	F15	F15	F15	F15
F1	F1	F1	Shift+F1	F5
F2	F2	F2	Shift+F2	F6
F3	F3	F3	Shift+F3	F7
F4	F4	F4	Shift+F4	F8

Note: Although keys 0-9 allow up to four presses to input different values, the function of Ctrl and Alt can only be delivered to the value entered at the first press of each key. For instance, the keypad can deliver the functions Ctrl+a and Alt+a, but not Ctrl+c and Alt+c, since the letter "c" will require three presses of the number key "2".

NUMERIC & FUNCTION KEYPAD (38 KEYS)

Numeric and Function keypad layout:



USING ALPHA, SHIFT & FN KEYS


Key	Normal Mode	[α] Mode	[α] + ↑ Mode	↑ Mode	[Fn] Mode
1	1	e	E	Shift+1	1
2	2	f	F	Shift+2	2
3	3	g	G	Shift+3	3
4	4	h	H	Shift+4	4
5	5	i	I	Shift+5	5
6	6	j	J	Shift+6	6
7	7	k	K	Shift+7	7
8	8	l	L	Shift+8	8
9	9	m	M	Shift+9	9
0	0	o	O	Shift+0	0
Up	Up	b	B	Highlight Up	Page Up
Down	Down	c	C	Highlight Down	Page Down
Left	Left	a	A	Highlight Left	Home
Right	Right	d	D	Highlight Right	End
Enter	Enter	Enter	Enter	Enter	Enter
Backspace	Backspace	Backspace	Backspace	Backspace	Keypad Lock
Esc	Esc	Esc	Esc	Esc	Esc
.	.	n	N	.	.
/	/	p	P	/	/
Space	Space	Space	Space	Space	Windows
Ctrl	Ctrl	Ctrl	Ctrl	Ctrl	Alt
Green	F14	F14	Shift+F14	Shift+F14	F14
Red	F15	F15	Shift+F15	Shift+F15	F15
F1	F1	q	Q	Shift+F1	F11
F2	F2	r	R	Shift+F2	F12

Key	Normal Mode	[α] Mode	[α] + ↑ Mode	↑ Mode	[Fn] Mode
1	1	e	E	Shift+1	1
2	2	f	F	Shift+2	2
3	3	g	G	Shift+3	3
4	4	h	H	Shift+4	4
5	5	i	I	Shift+5	5
6	6	j	J	Shift+6	6
7	7	k	K	Shift+7	7
8	8	l	L	Shift+8	8
9	9	m	M	Shift+9	9
0	0	o	O	Shift+0	0
Up	Up	b	B	Highlight Up	Page Up
Down	Down	c	C	Highlight Down	Page Down
Left	Left	a	A	Highlight Left	Home
Right	Right	d	D	Highlight Right	End
Enter	Enter	Enter	Enter	Enter	Enter
Backspace	Backspace	Backspace	Backspace	Backspace	Keypad Lock
Esc	Esc	Esc	Esc	Esc	Esc
.	.	n	N	.	.
,	,	p	P	,	,
Space	Space	Space	Space	Space	Windows
Ctrl	Ctrl	Ctrl	Ctrl	Ctrl	Alt
Green	F14	F14	Shift+F14	Shift+F14	F14
Red	F15	F15	Shift+F15	Shift+F15	F15
F1	F1	q	Q	Shift+F1	F11
F2	F2	r	R	Shift+F2	F12

F3	F3	s	S	Shift+F3	F13
F4	F4	t	T	Shift+F4	F14
F5	F5	u	U	Shift+F5	F5
F6	F6	v	V	Shift+F6	Backlight Increase
F7	F7	w	W	Shift+F7	Volume Up
F8	F8	x	X	Shift+F8	F8
F9	F9	y	Y	Shift+F9	Backlight Decrease
F10	F10	z	Z	Shift+F10	Volume Down
Shift	Shift	Shift	Shift	N/A	Shift

ALPHANUMERIC KEYPAD (53 KEYS)

Alphanumeric keypad layout:

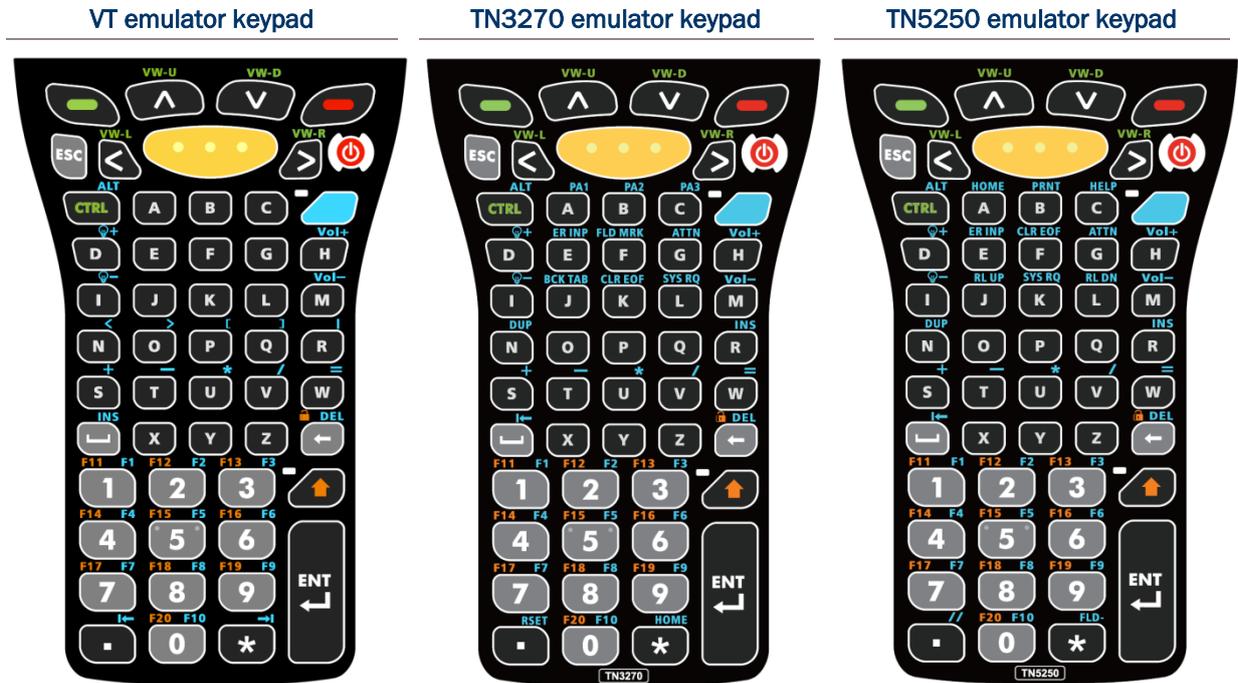

Note: All three configurations of the 53-key keypad deliver the same functions. However, certain key functions may differ according to the application in use, for instance when terminal emulation software is running.

USING ALPHA, SHIFT & FN KEYS

Key	Normal	↑ Mode	[α] Mode	[Ctrl] Mode
1	1	Shift+1	F1(VK_F1)	Ctrl+1
2	2	Shift+2	F2(VK_F2)	Ctrl+2
3	3	Shift+3	F3(VK_F3)	Ctrl+3
4	4	Shift+4	F4(VK_F4)	Ctrl+4
5	5	Shift+5	F5(VK_F5)	Ctrl+5
6	6	Shift+6	F6(VK_F6)	Ctrl+6
7	7	Shift+7	F7(VK_F7)	Ctrl+7
8	8	Shift+8	F8(VK_F8)	Ctrl+8
9	9	Shift+9	F9(VK_F9)	Ctrl+9
0	0	Shift+0	F10(VK_F10)	Ctrl+0
*	*	*	Page Down (VK_NEXT)	Ctrl+^ ^^
Up	Up	Highlight Up	UP	Ctrl+Up
Down	Down	Highlight Down	DOWN	Ctrl+Down
Left	Left	Highlight Left	LEFT	Ctrl+Left
Right	Right	Highlight Right	RIGHT	Ctrl+Right
Enter	Enter	Enter	INSERT	Enter

Key	Normal	⇧ Mode	[α] Mode	[Ctrl] Mode
1	1	Shift+1	F1(VK_F1)	Ctrl+1
2	2	Shift+2	F2(VK_F2)	Ctrl+2
3	3	Shift+3	F3(VK_F3)	Ctrl+3
4	4	Shift+4	F4(VK_F4)	Ctrl+4
5	5	Shift+5	F5(VK_F5)	Ctrl+5
6	6	Shift+6	F6(VK_F6)	Ctrl+6
7	7	Shift+7	F7(VK_F7)	Ctrl+7
8	8	Shift+8	F8(VK_F8)	Ctrl+8
9	9	Shift+9	F9(VK_F9)	Ctrl+9
0	0	Shift+0	F10(VK_F10)	Ctrl+0
*	*	*	Page Down (VK_NEXT)	Ctrl+ ^ ^^
Up	Up	Highlight Up	UP	Ctrl+Up
Down	Down	Highlight Down	DOWN	Ctrl+Down
Left	Left	Highlight Left	LEFT	Ctrl+Left
Right	Right	Highlight Right	RIGHT	Ctrl+Right
Enter	Enter	Enter	INSERT	Enter

Appendix VI Physical Keypad Reference Table

Backspace	Backspace	Keylock	END	Ctrl+\ ^\ Esc
Esc	Esc	Esc	Esc	Esc
.	.	>	Page Up (VK_PRIOR)	Ctrl+] ^]
Space	Space	Space	TAB	Ctrl+_ ^_
Ctrl	Ctrl	Ctrl	Alt	N/A
Shift	Shift	N/A	Shift	N/A
Green	F14	Shift+F14	F14(VK_F14)	N/A
Red	F15	Shift+F15	F15(VK_F15)	N/A
A	a	A	, (COMMA)	Ctrl+a
B	b	B	. (PERIOD)	Ctrl+b
C	c	C	` (VK_APOSTROPHE)(0xDE)	Ctrl+c
D	d	D	Backlight +	Ctrl+d
E	e	E	[(VK_LBRACKET)(0xDB)	Ctrl+e
F	f	F] (VK_RBRACKET)(0xDD)	Ctrl+f
G	g	G	\ (VK_BACKSLASH)(0xDC)	Ctrl+g
H	h	H	Vol+	Ctrl+h
I	i	I	Backlight -	Ctrl+i
J	j	J	0xC0	Ctrl+j
K	k	K	F12(VK_F12)	Ctrl+k
L	l	L	F11(VK_F11)	Ctrl+l
M	m	M	Vol -	Ctrl+m
N	n	N	- (VK_HYPHEN)(0xBD)	Ctrl+n
O	o	O	F13(VK_F13)	Ctrl+o
P	p	P	F14(VK_F14)	Ctrl+p
Q	q	Q	F15(VK_F15)	Ctrl+q
R	r	R	;(VK_SEMICOLON)(0xBA)	Ctrl+r
S	s	S	+ (VK_ADD)	Ctrl+s
T	t	T	-(VK_SUBTRACT)	Ctrl+t
U	u	U	* (VK_MULTIPLY)	Ctrl+u
V	v	V	/ (VK_SLASH)	Ctrl+v
W	w	W	= (VK_EQUAL)	Ctrl+x
X	x	X	: (VK_COLON)	Ctrl+w
Y	y	Y	Y (VK_Y)	Ctrl+y
Z	z	Z	N/A	Ctrl+z